


Instrument Cluster Finish Panel


 [Ford Ecat Electronic Parts Catalog](#)

Removal and Installation

1. Apply the parking brake.
2. Place the selector lever in the 1 position.
3. Position the steering wheel downward.

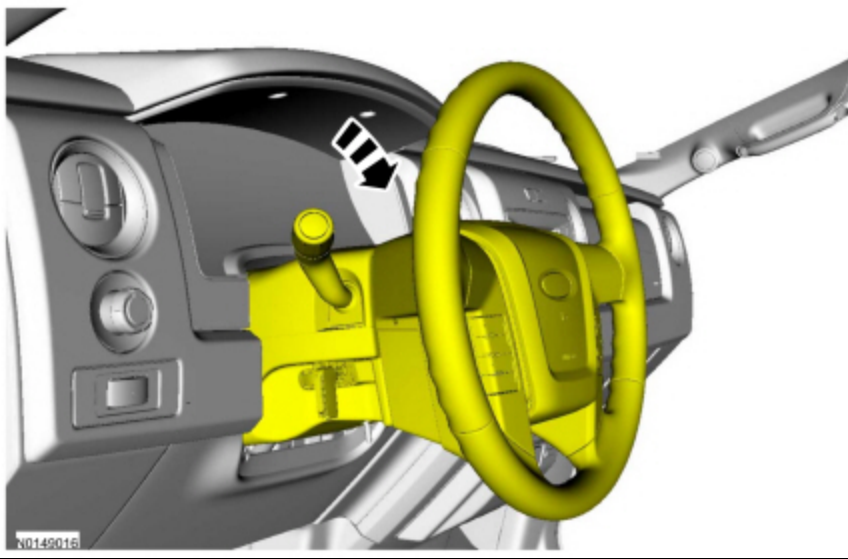

4. Remove the 2 instrument cluster finish panel screws and remove the instrument cluster finish panel.
 - Release the gap hider retainers.
 - Pull the instrument cluster finish panel toward the rear of the vehicle to release the retaining clips.

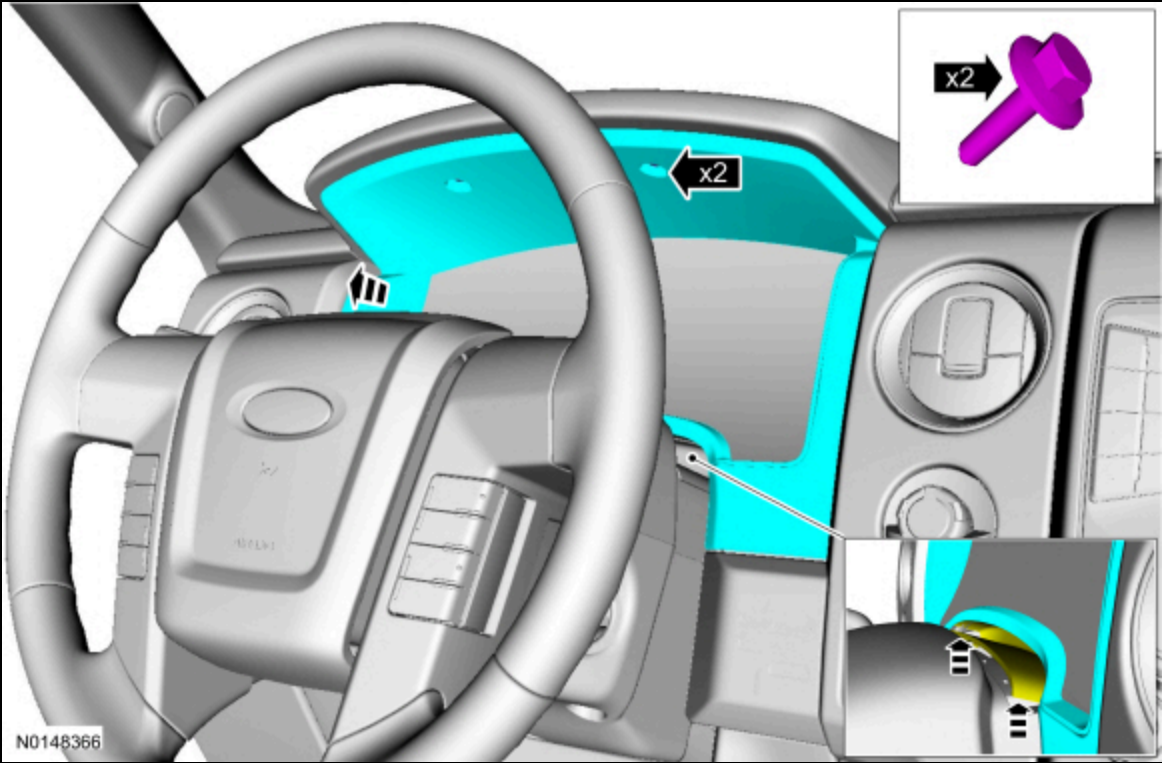

5. To install, reverse the removal procedure.