


Door Ajar Switch — Rear, SuperCab


 [Ford Ecat Electronic Parts Catalog](#)

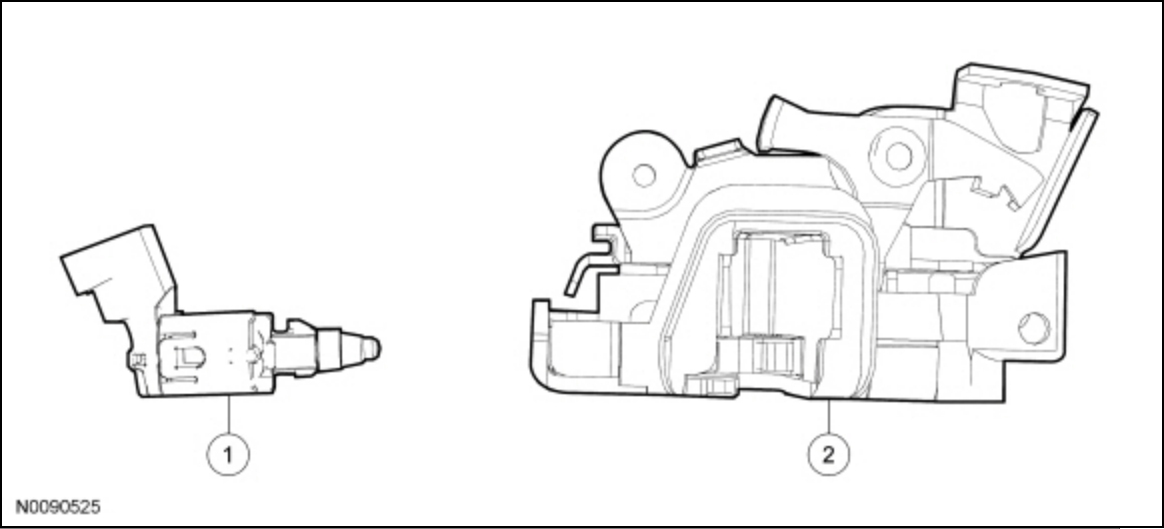

Item	Part Number	Description
1	18265B29 18265B29	Door ajar switch
2	18264A01 18264A01 / 18264A00/ 18264A00	Lower door latch (LH/RH)

Removal and Installation

1. Remove the lower rear door latch. For additional information, refer to Rear Door Latch — Lower, SuperCab in this section.
2. Insert a screwdriver or suitable tool into the opening on the door latch and push up on the tab.

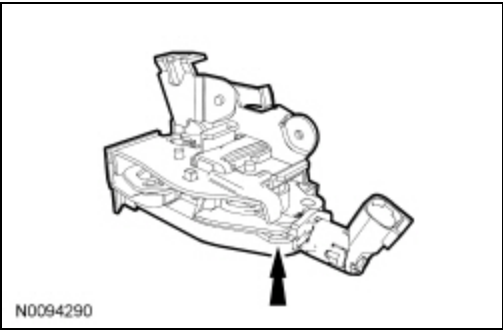

3. Rotate the door ajar switch and remove from the door latch.
4. To install, reverse the removal procedure.