


Passenger Airbag Deactivation (PAD) Indicator

 [Ford Ecat Electronic Parts Catalog](#)

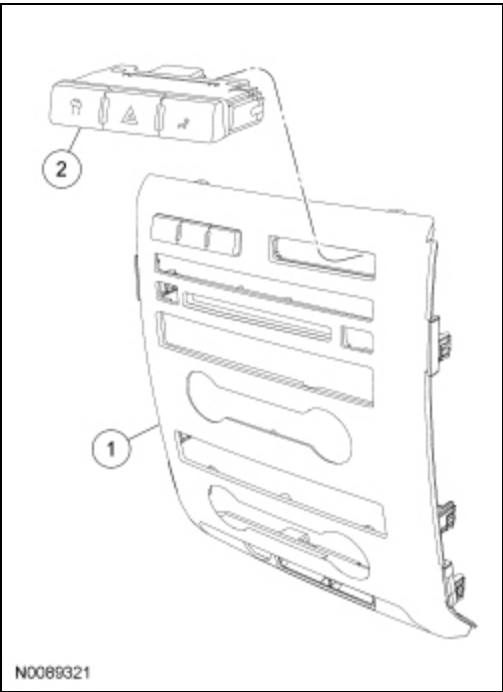

Item	Part Number	Description
1	0430204302	Instrument panel center finish panel
2	1335013350	Passenger Air Bag Deactivation (PAD) indicator

NOTE: The Passenger Air Bag Deactivation (PAD) indicator is part of the hazard/ traction control switch.

1. **NOTE:** Ignition must be OFF when disconnecting the PAD indicator electrical connector. Otherwise, a DTC will be set in the Restraints Control Module (RCM) memory and must be cleared before releasing the vehicle.

Turn the ignition OFF and wait at least one minute.

2. Remove the instrument panel center finish panel. For additional information, refer to Section 501-12.
3. Disconnect the PAD indicator electrical connector.
4. Press the 2 tabs inward and remove the PAD indicator.
5. To install, reverse the removal procedure.