

Adhesives



Material

Item	Specification
Clear Silicone Rubber TA-32	ESB-M4G92-A
Metal Bonding Adhesive TA-1	—
Plastic Bonding Adhesive TA-9	—
Trim and Weatherstrip Adhesive TA-14-A	—

Adhesives are used in a variety of applications. Typical uses for adhesives include roof panels, door skins and quarter panels. Trim applications include body side mouldings, emblems, stationary glass and weatherstripping. Combination sealer/adhesives are also used. Surface preparation is critical to a high quality repair. Following the label instructions for the product is essential.

Work in a well-ventilated area and protect adjacent surfaces when working with adhesives. The use of eye protection and protective clothing is also recommended when working with adhesives. Carry out a trial fit, mark and align the surfaces before bonding the materials together.

Seam sealers and corrosion protection may be necessary once the adhesive(s) has cured, depending on the application. The following is a list of adhesives recommended for certain types of applications:

- Metal Bonding Adhesive — For bonding cold-rolled steel, galvanized steel, aluminum and correctly prepared E-coat. It is used for door skin and roof panel replacement and OEM structural adhesive replacement.
- Plastic Bonding Adhesive — For bonding a variety of plastics to plastics and plastics to primed, painted or E-coated metals. Also for general purpose bonding of trim components.
- Trim and Weatherstrip Adhesive — For use on body side moulding, emblems, trim, bumper impact strips and carpeting.
- Clear Silicone Rubber — Used for sealing water leaks, noise concerns, remounting trim and repairing torn weatherstripping.

Structural Adhesive

WARNING: Always wear protective equipment including eye protection with side shields, and a dust mask when sanding or grinding. Failure to follow these instructions may result in serious personal injury.

WARNING: Always refer to Material Safety Data Sheet (MSDS) when handling chemicals and wear protective equipment as directed. Examples may include but are not limited to respirators and chemically resistant gloves. Failure to follow these instructions may result in serious personal injury.

NOTICE: Observe the prescribed welding procedures when carrying out sheet metal repairs. Refer to Weld-Bonding in this section.

NOTE: Ford Motor Company does not approve or recognize structural repair procedures using anything but genuine Ford parts.

Structural repairs (frames, rails, aprons and body panels) carried out using other than Ford Motor Company parts have not been tested. In addition, structural equivalence and corrosion protection cannot be assured.

Returning a vehicle to pre-accident condition can only be assured if repair procedures are carried out by skilled technicians using genuine Ford Motor Company parts and approved methods.

Structural component repair procedures approved by Ford using genuine parts have been validated through testing by Ford Motor Company engineers. Should alternative structural component repair procedures and/or parts be used, repairers should be aware of the potential liability they incur.


NOTE: Factory spot welds may be substituted with either Squeeze-Type Resistance Spot Welding (STRW) or Metal Inert Gas (MIG) plug welds. Spot/plug welds should equal factory welds in both location and quantity. Do not place a new spot weld directly over an original weld location. Plug weld hole should equal 8 mm (0.31 in) diameter.

NOTE: Remove the outer body sheet metal from the affected area prior to carrying out any reinforcing panel replacement. Refer to Sectioning Guidelines in this section.


NOTE: The following illustrations show the application and location of structural adhesives.

NOTE: Arrows indicate adhesive application locations.


Dash Panel

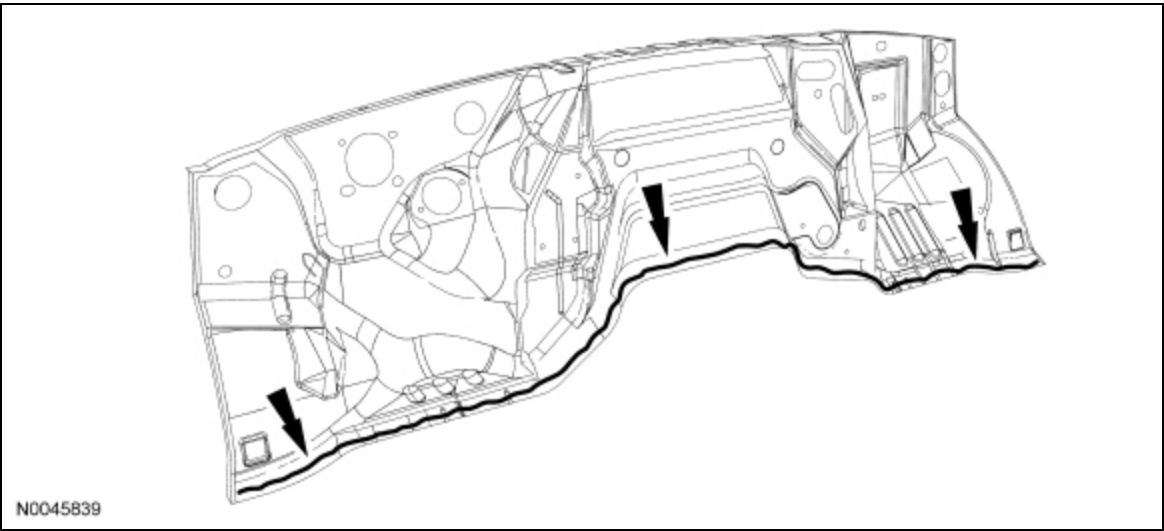

Door Outer Panel-to-Door Assembly — All Vehicles

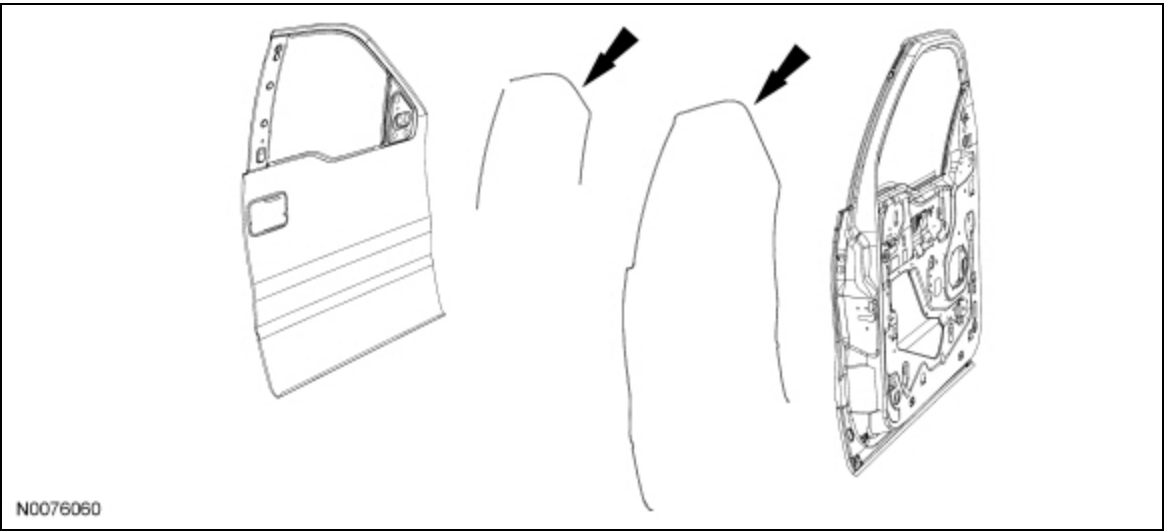


Door Frame Opening — Regular Cab, SuperCab

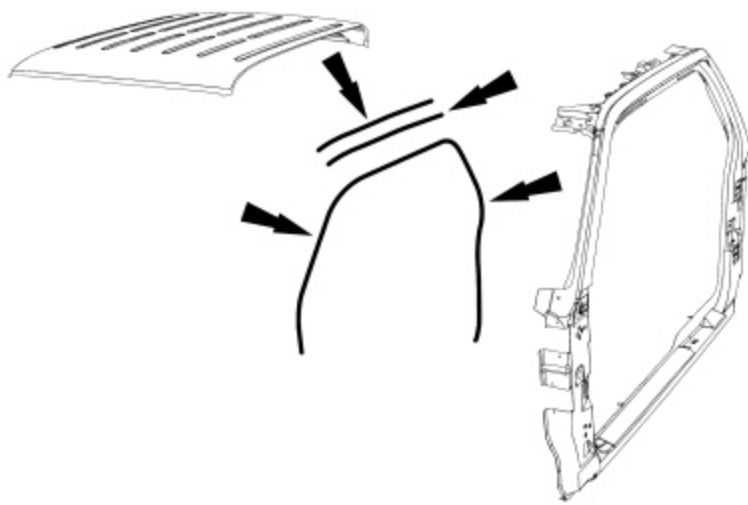

N0093864


Door Frame Opening — SuperCrew

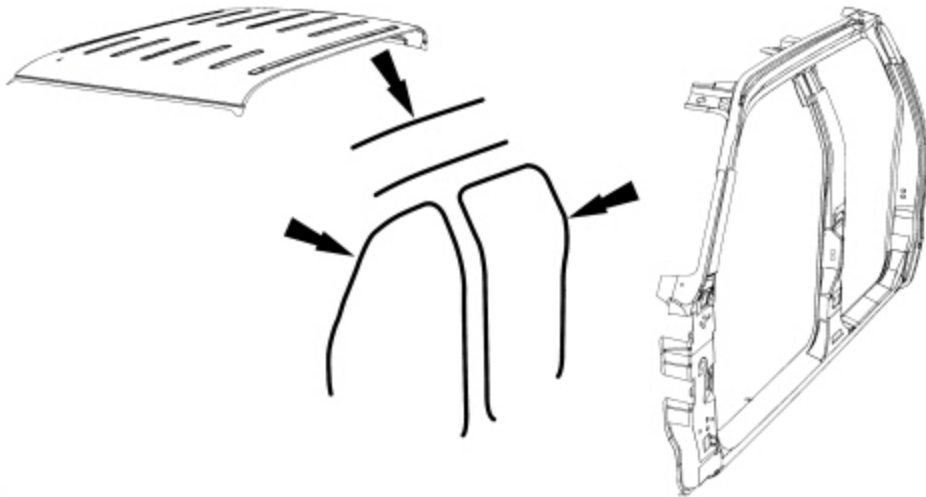

N0087875


Cab Structure

NOTE: *SuperCrew shown, SuperCab and regular cab similar.*

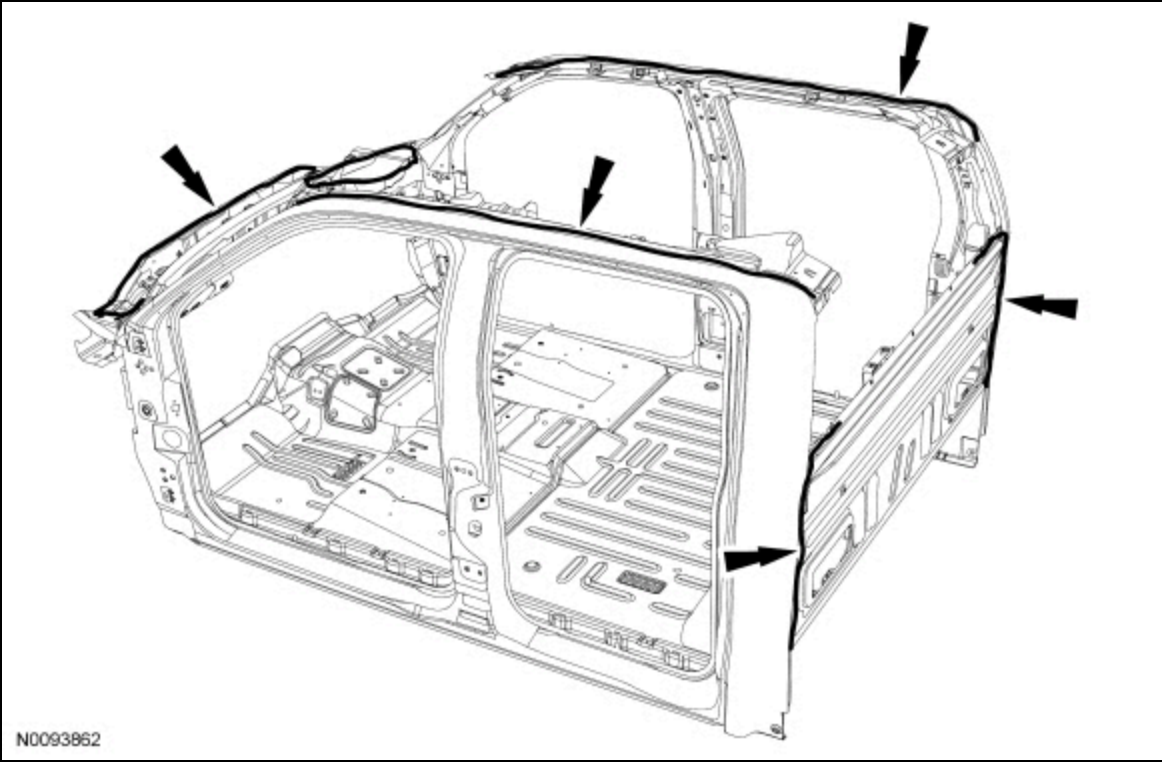


Cab Back Panel Reinforcement

NOTE: *Panel inner view indicated.*

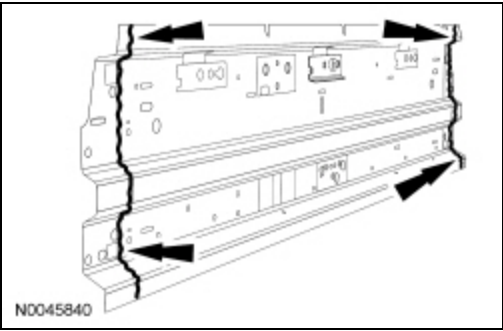


Floor Side Member

NOTE: *Adhesive applied between side member and floor side.*

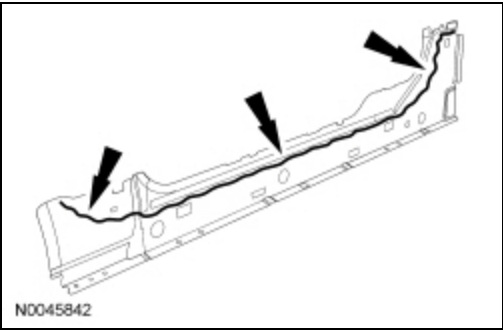

Floor Reinforcements — Regular Cab


NOTE: *Bold lines indicate adhesive bead locations.*

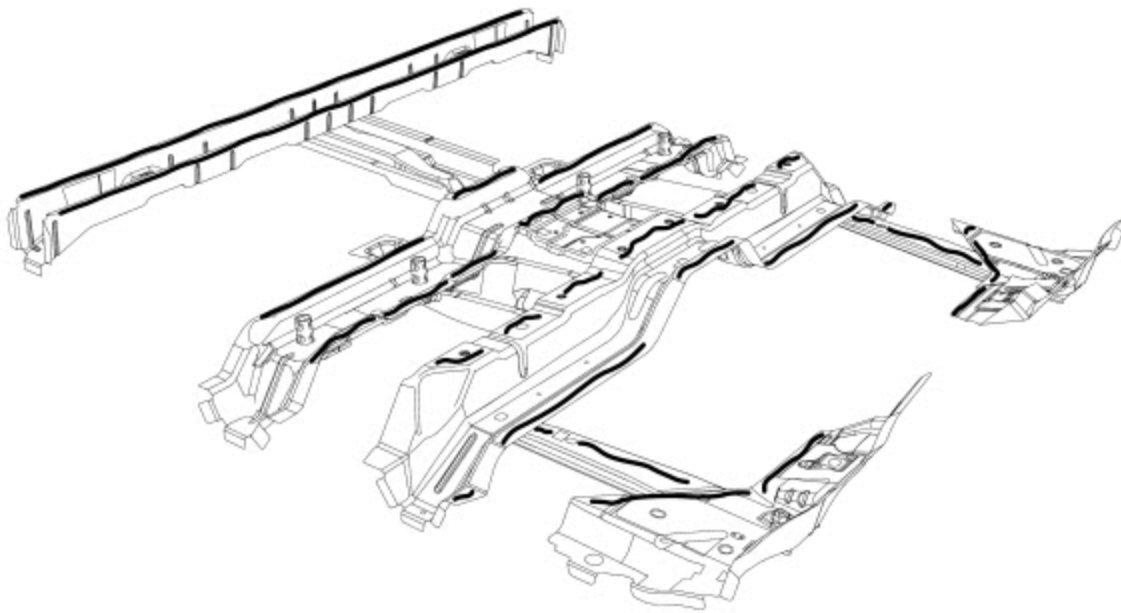

N0093503

Floor Reinforcements — SuperCab


NOTE: *Bold lines indicate adhesive bead locations.*

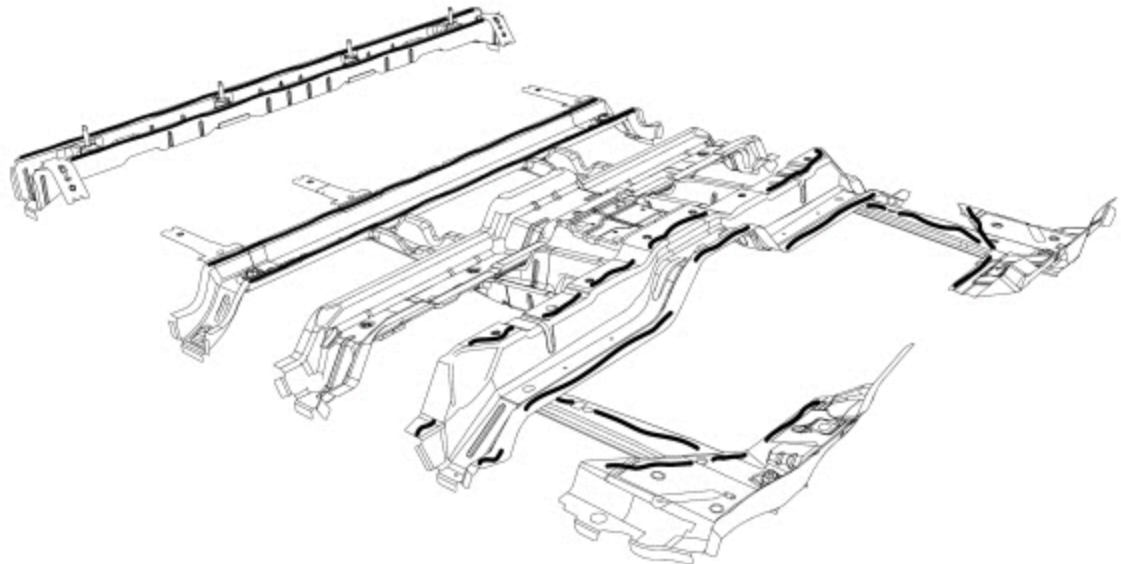

N0093504

Floor Reinforcements — SuperCrew Cab


NOTE: *Bold lines indicate adhesive bead locations.*

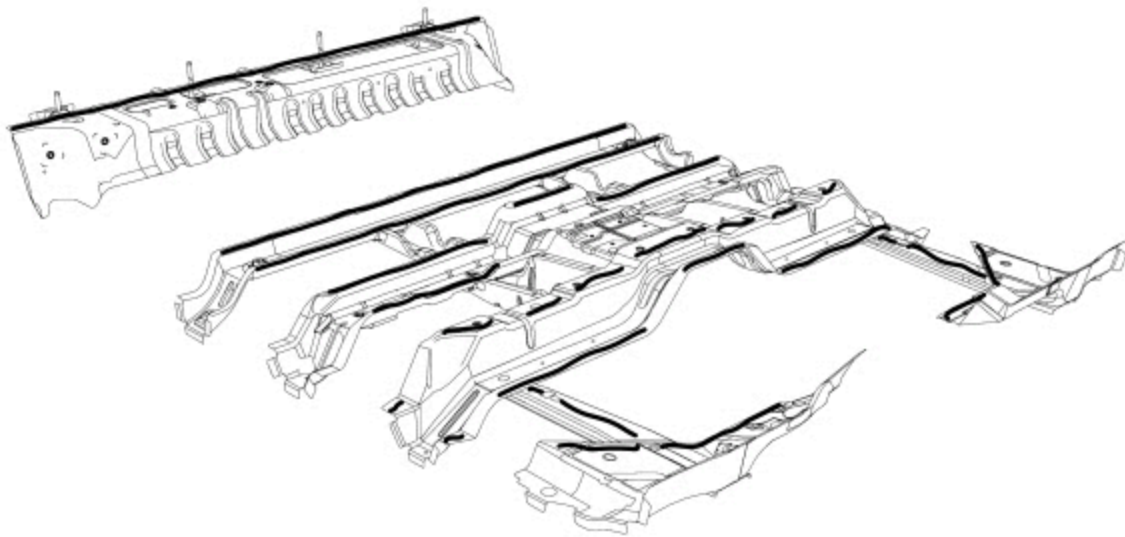

N0093505


Pickup Box Underbody

NOTE: *Adhesive applied on right and left ends of floor reinforcements.*

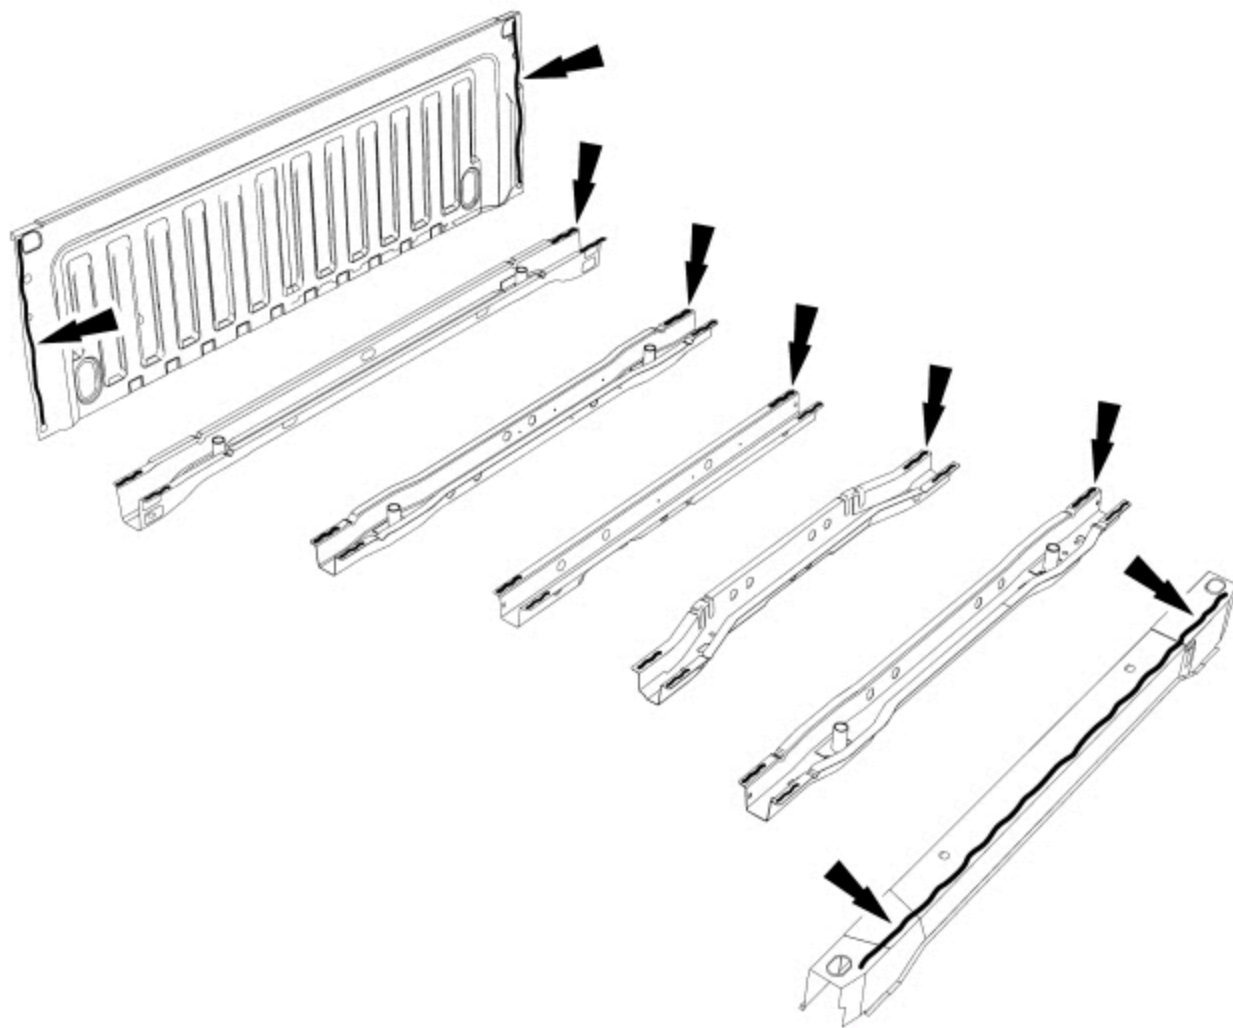

N0045845

Wheelhouse Panel — Styleside Pickup Box

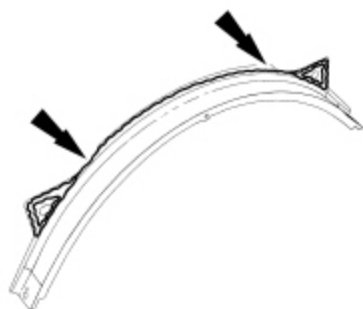

N0045872