

Sound Deadeners and Insulators



WARNING: Always refer to Material Safety Data Sheet (MSDS) when handling chemicals and wear protective equipment as directed. Examples may include but are not limited to respirators and chemically resistant gloves. Failure to follow these instructions may result in serious personal injury.

NOTICE: Mastic is made of a combustible material and should be removed prior to carrying out welding procedures to the area. Heat zones from welding near the mastic can cause the mastic material to burn.


NOTICE: Corrosion protection must be restored to the area **AFTER** the mastic material is applied. Corrosion protection products may be wax based and loss of adhesion may occur.

NOTE: The following illustrations serve as a reference to indicate mastic patch (butyl pad) locations. Additional insulators and sound deadeners are used beyond those indicated in the illustration.

NOTE: To restore the vehicle to design intent, missing or damaged sound deadeners and insulators should be replaced with the equivalent service replacement component. In instances where pumpable material is applied when manufactured and can not be duplicated, cut-to-fit mastic material is an acceptable replacement.


Regular Cab

NOTE: Floor pan interior view.

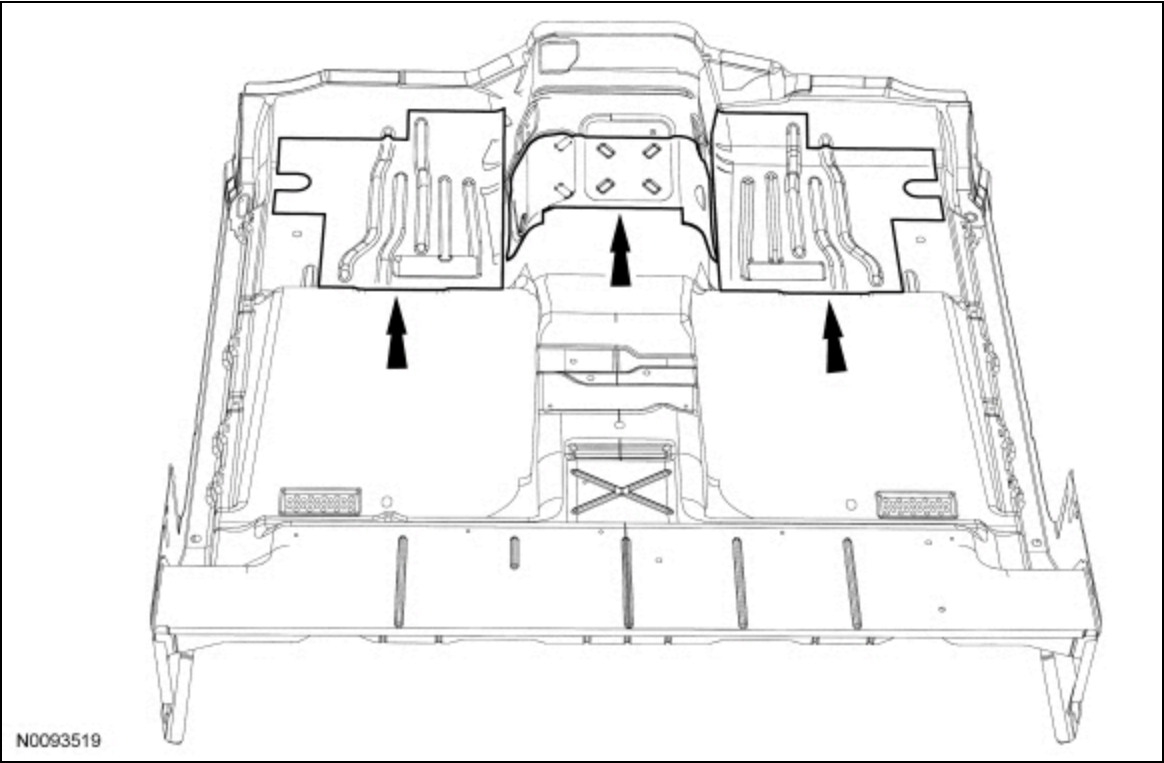

SuperCab


NOTE: Floor pan interior view.

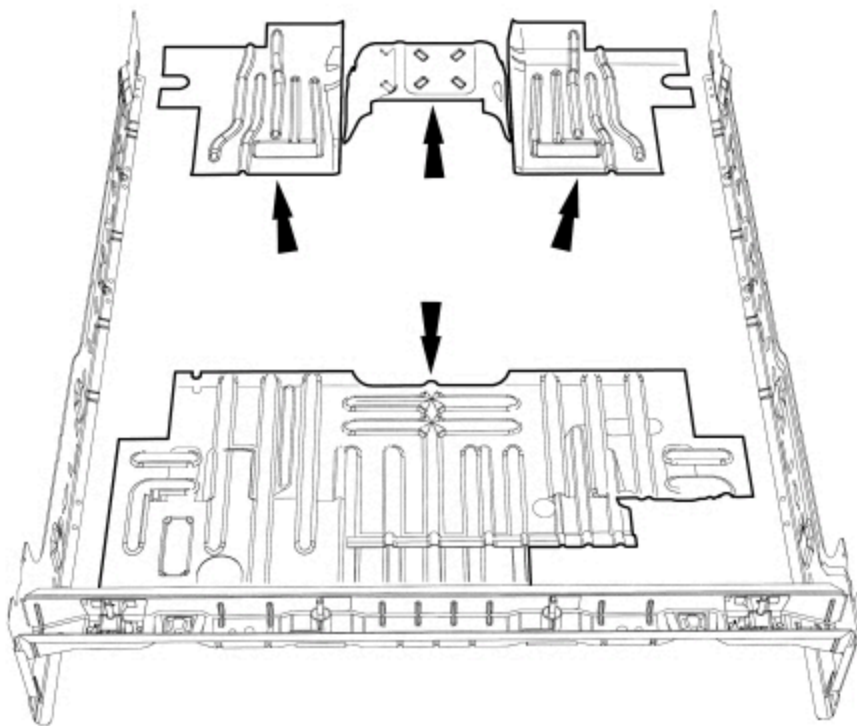

N0093520

SuperCrew Cab


NOTE: *Floor pan interior view.*

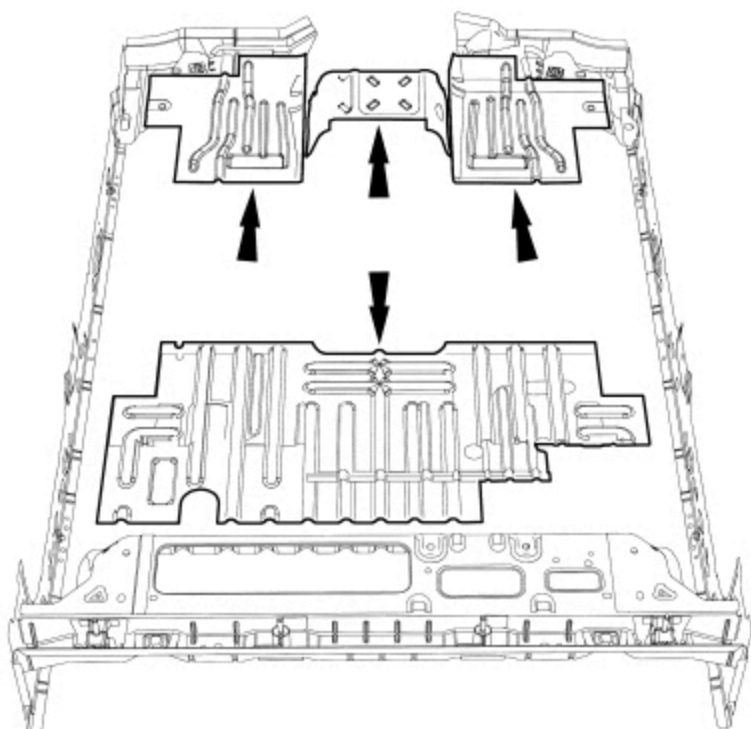

N0093521

Door

NOTE: *Front door shown, rear door(s) similar.*

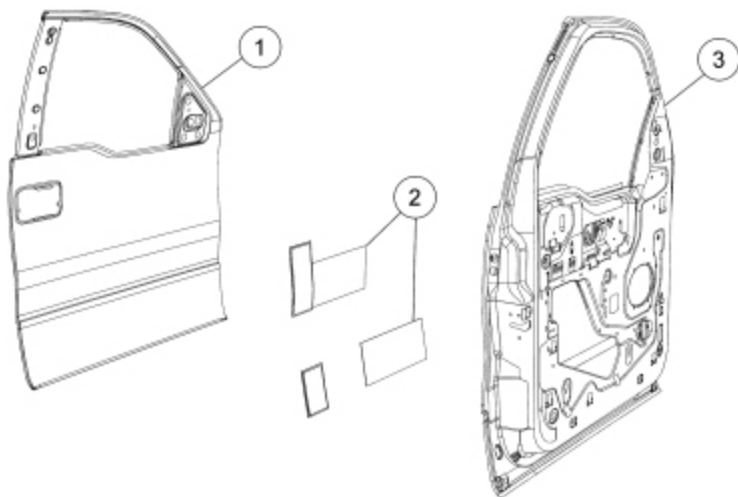

N0075143

Item	Part Number	Description
1	20201 20201 LH/ 20200 RH LH/ 20200 RH	Door outer panel
2	99P30A2 99P30A2	Mastic material
3	20125 20125 LH/ 20124 RH LH/ 20124 RH	Door assembly

1. Whenever replacement of an existing mastic insulator is carried out, the surface must be thoroughly cleaned to make sure correct adhesion will occur. The surface should be 10°C (50°F) or greater before applying the mastic. The use of a heat gun to warm the metal surface will aid in adhesion.