

Restoring Corrosion Protection Following Repair

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST3049-A	Rust Inhibitor Installation Kit 286-00002
 ST3048-A	Undercoating Spray Gun 286-00001

Material

Item	Specification
Motorcraft® Bug and Tar Remover ZC-42	—
Motorcraft® Metal Surface Prep ZC-31-B	—
Premium Undercoating ValuGard™ VG101, VG101A (aerosol)	—
Rust Inhibitor ValuGard™ VG104, VG104A (aerosol)	—

WARNING: Always refer to Material Safety Data Sheet (MSDS) when handling chemicals and wear protective equipment as directed. Examples may include but are not limited to respirators and chemically resistant gloves. Failure to follow these instructions may result in serious personal injury.

WARNING: Always wear protective equipment including eye protection with side shields, and a dust mask when sanding or grinding. Failure to follow these instructions may result in serious personal injury.

NOTICE: Drilling access holes in body panels is not recommended. Drilling holes will break the original paint finish and promote corrosion.

NOTE: Corrosion protection needs to be restored whenever it is necessary to sand or grind through painted surfaces or E-coat, or when bare metal repairs are made.

NOTE: Refer to product label for preparation and handling instructions.

1. The surfaces must be free of oil, dirt and other foreign material. Carry out the process in the following sequence.
 1. Thoroughly clean and degrease metal surfaces using metal surface prep to remove wax and grease.
 2. For best results, the vehicle should be at room temperature. Attach the rust inhibitor canister to the Rust Inhibitor Installation Kit 286-00002.
 3. Rust inhibitor should be applied after the welding and refinishing process. Product cannot be welded through.
 4. Air pressure setting for applicator gun is 448-517 kPa (65-75 psi).


- Use the long wand when spraying enclosed areas. The spray nozzle provides a 360-degree spray pattern. Insert the wand as far as possible into the access hole, pull the trigger and wait 2-3 seconds and slowly pull the wand out of the access hole.
- The short, hook-shaped wand sprays in one direction and must be rotated to provide complete coverage.
- Apply the material in light mist coats.
- Material displaces moisture.

5. Clean up any overspray with a mild solvent such as Motorcraft® Bug and Tar Remover or mineral spirits.

NOTE: The following illustrations provide typical applications of body seams and spot welded flanges and are not vehicle specific.


2. NOTE: Door assembly lower view.

Apply rust inhibitor as shown to the inside of the door shell on all the interior metal surfaces using the most suitable applicator wand. Apply material to the exposed edges after carrying out the welding process. Make sure horizontal surfaces are well protected as they are more susceptible to corrosion. Keep door drain holes clear to prevent moisture buildup.

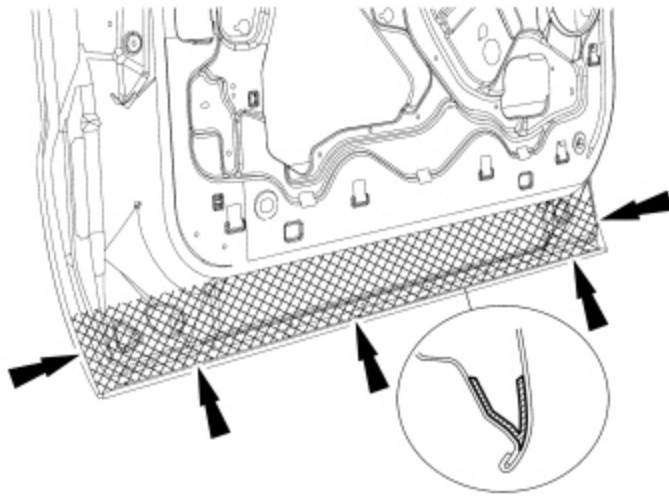


3. NOTE: Quarter panel inner view.

Apply rust inhibitor to the closed channel portion of the spot weld flange areas using the short, hook-shaped wand. Apply material to the exposed edges after carrying out the welding process. Make sure horizontal surfaces are well protected as they are more susceptible to corrosion.

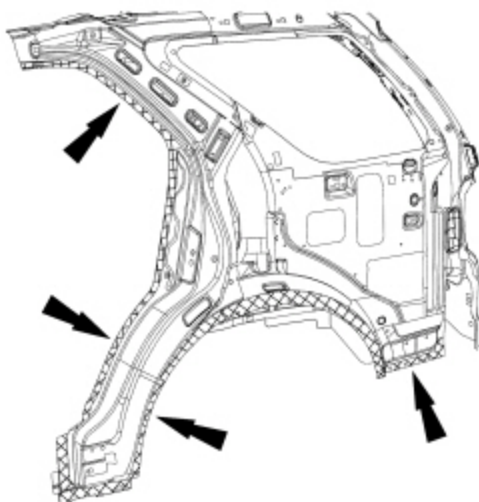

4. NOTE: Door frame opening view.

Apply rust inhibitor to the closed channel portion of the spot weld flange areas using the short, hook-shaped wand. Make sure horizontal surfaces are well protected as they are more susceptible to corrosion.

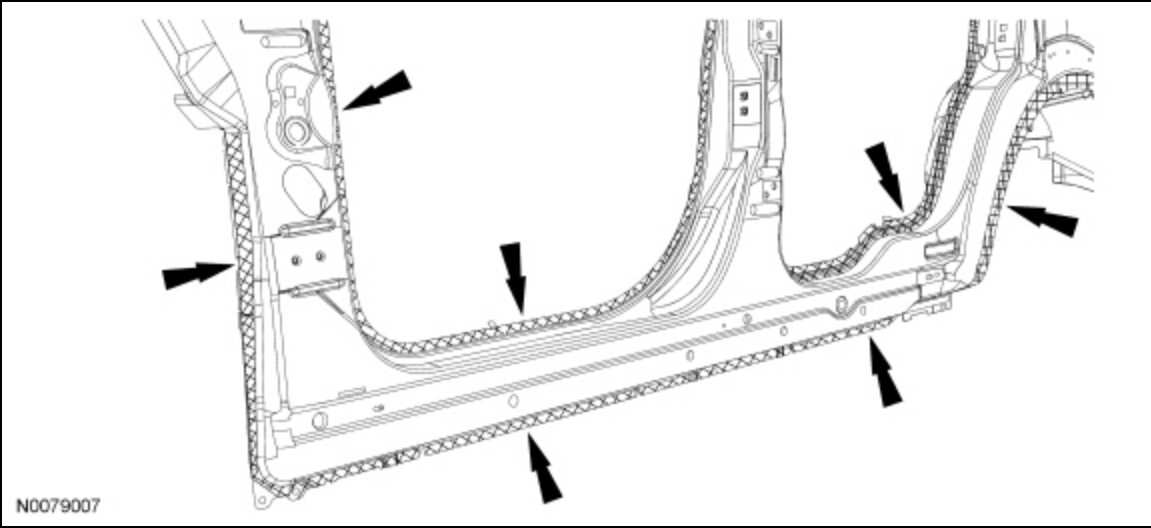

Body and Frame Undercoating

- 1. WARNING:** Always refer to Material Safety Data Sheet (MSDS) when handling chemicals and wear protective equipment as directed. Examples may include but are not limited to respirators and chemically resistant gloves. Failure to follow these instructions may result in serious personal injury.

WARNING: Always wear protective equipment including eye protection with side shields, and a dust mask when sanding or grinding. Failure to follow these instructions may result in serious personal injury.

NOTICE: Do not allow undercoating on powertrain components. Failure to follow these instructions may result in incorrect operation of these components.

NOTE: Refer to product label for preparation and handling instructions.

NOTE: Avoid high-pressure water spray cleaning to treated underbody area for 24 hours.


Wire brush the area and make sure the surfaces are free of oil, dirt and other foreign material. Carry out the undercoating process in the following sequence.

1. Thoroughly clean and degrease metal surfaces using metal surface prep to remove wax and grease.
2. For best results, the vehicle should be at room temperature.
 - Canister attaches directly to the dispensing gun. Attach the undercoating canister to the Undercoating Spray Gun 286-00001.
3. Undercoat should be applied after the welding and refinishing process. Product cannot be welded through.
4. Air pressure setting for applicator gun is 552-621 kPa (80-90 psi).
 - Apply light mist coats, applicator sprays in fogging pattern.
 - Material displaces moisture.
5. Clean up any overspray with a mild solvent such as Motorcraft® Bug and Tar Remover or mineral spirits.

NOTE: The following illustrations provide typical applications to frame rails and are not vehicle specific.


- 2. NOTE:** Frame rail exterior spot-weld flange view.

Apply undercoat material to the exterior exposed edges after carrying out the welding and refinishing process.

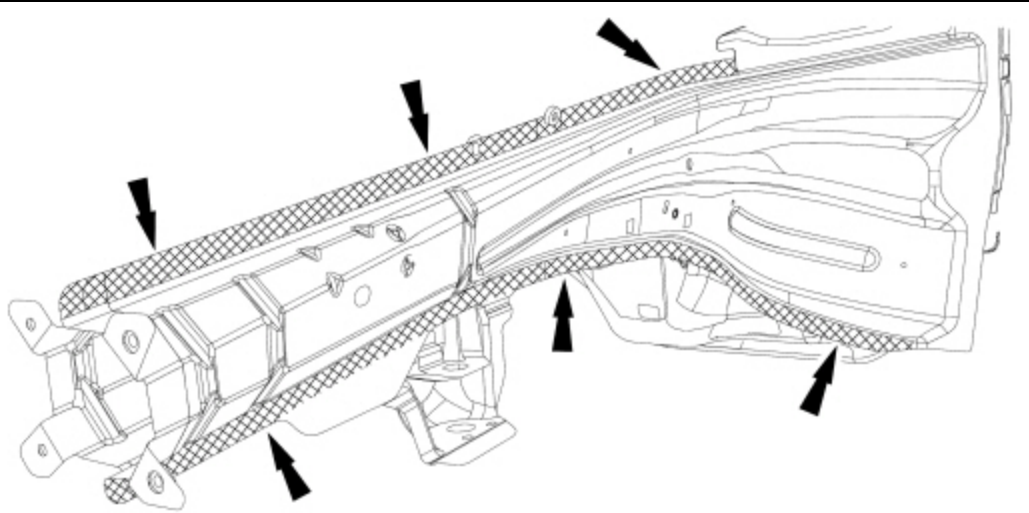

3. **NOTE:** *Cross section view of typical unibody frame rail shown.*

Apply rust inhibitor to the inner surfaces of the rail after carrying out welding process. Use the long wand and insert as far as possible, depress trigger and wait 2-3 seconds and slowly pull the wand to make sure the area is completely fogged.

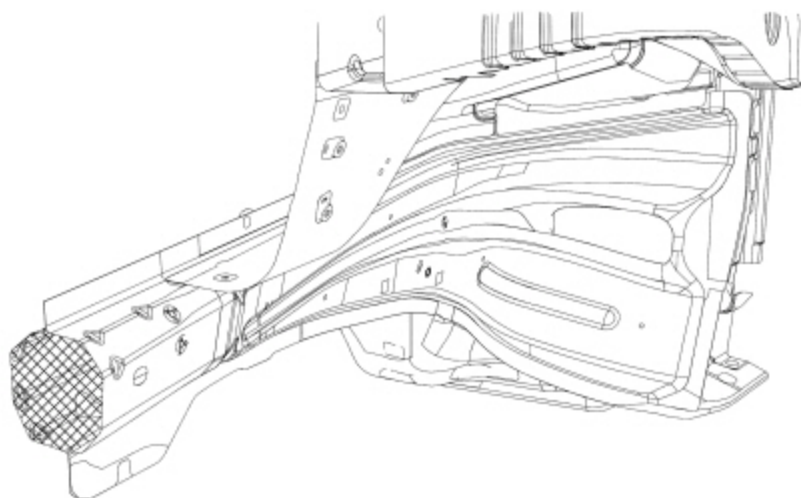

4. **NOTE:** *Full frame vehicle, front rail-to-mid rail section repair shown.*

Apply undercoat material to the exposed surfaces after carrying out the welding process. Make sure to completely cover any bare metal areas.

