


# Upper Intake Manifold

 [Ford Ecat Electronic Parts Catalog](#)

Upper Intake Manifold (View 1 of 2)

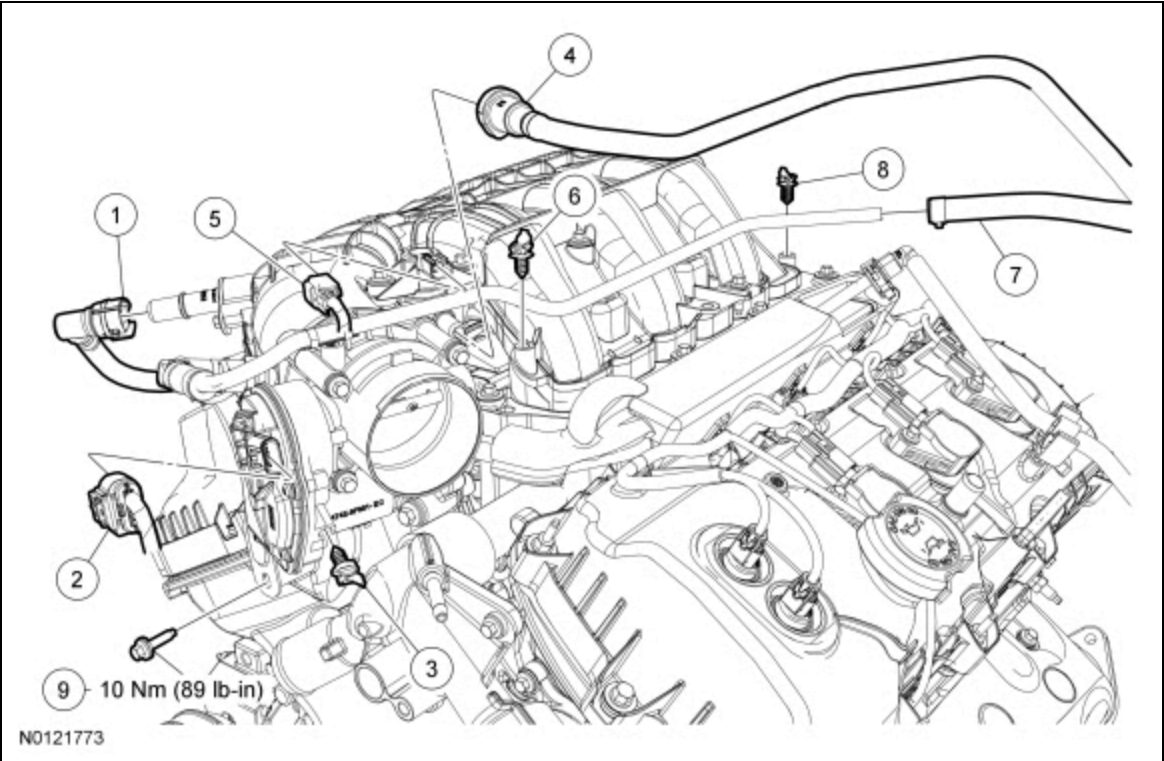


| Item | Part Number                     | Description                                                                                      |
|------|---------------------------------|--------------------------------------------------------------------------------------------------|
| 1    | 6A664 <a href="#">6A664</a>     | PCV tube quick connect coupling                                                                  |
| 2    | —                               | Throttle Body (TB) electrical connector (part of 14A411)                                         |
| 3    | —                               | TB electrical connector wiring harness pin-type retainer (part of 14A411)                        |
| 4    | 9J280 <a href="#">9J280</a>     | Evaporative Emission (EVAP) tube                                                                 |
| 5    | —                               | EVAP canister purge valve electrical connector (part of 14A411)                                  |
| 6    | —                               | EVAP canister purge valve electrical connector wiring harness pin-type retainer (part of 14A411) |
| 7    | —                               | Brake booster vacuum hose (part of 9C482)                                                        |
| 8    | —                               | Wiring harness pin-type retainer (part of 14A411)                                                |
| 9    | W503275 <a href="#">W503275</a> | Upper intake manifold support bracket bolt                                                       |

Upper Intake Manifold (View 2 of 2)

**NOTE:** [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

**NOTE:** [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

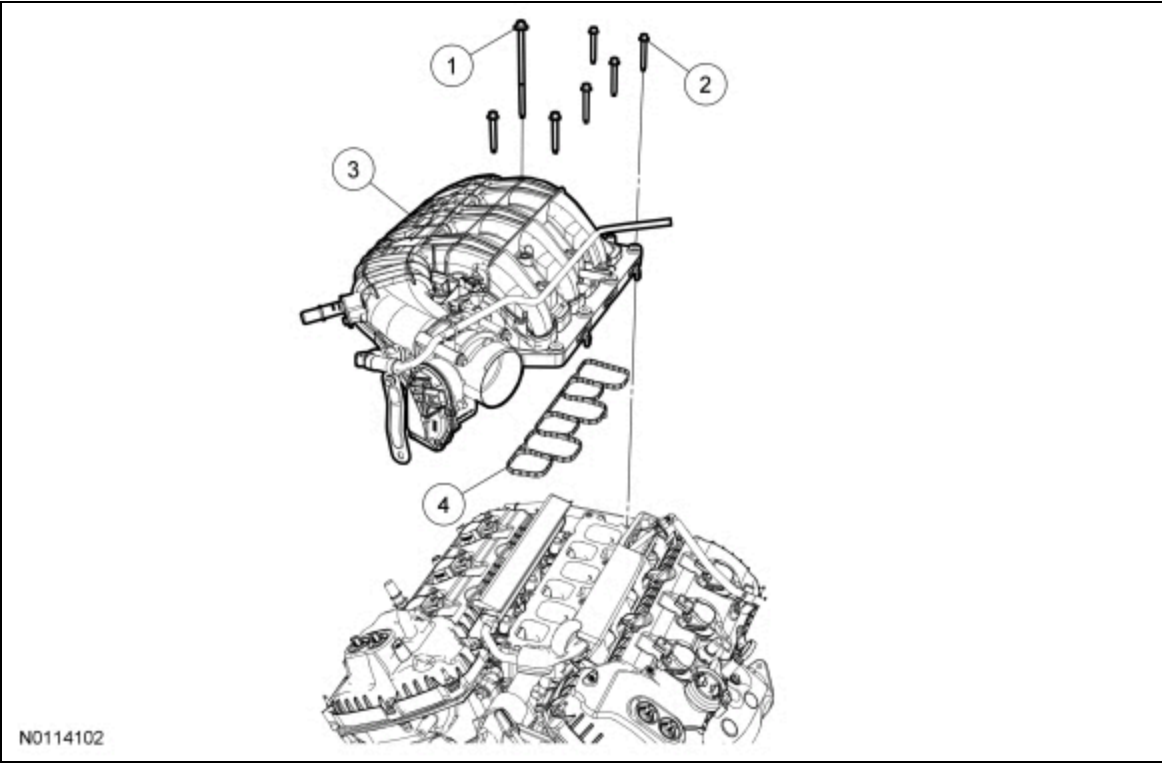

| Item | Part Number                     | Description                             |
|------|---------------------------------|-----------------------------------------|
| 1    | W715096 <a href="#">W715096</a> | Upper intake manifold bolt              |
| 2    | 9Y450 <a href="#">9Y450</a>     | Upper intake manifold bolt (6 required) |
| 3    | 9424 <a href="#">9424</a>       | Upper intake manifold                   |
| 4    | 9H486 <a href="#">9H486</a>     | Upper intake manifold gasket            |

**Removal**


1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
2. Disconnect the PCV tube quick connect coupling from the intake manifold. For additional information, refer to Section 310-00.
3. Disconnect the Throttle Body (TB) electrical connector.
  - Detach the ~~T.B.~~ electrical connector wiring harness pin-type retainer from the ~~T.B.~~ .
4. Disconnect Evaporative Emission (EVAP) tube from the ~~EVAP~~ canister purge valve. For additional information, refer to Section 310-00.
  - Detach the ~~EVAP~~ hose retainer from the intake manifold.
5. Disconnect the ~~EVAP~~ canister purge valve electrical connector.
  - Detach the ~~EVAP~~ canister purge valve electrical connector wiring harness pin-type retainer.
6. Disconnect the brake booster vacuum hose from the engine.
7. Detach the wiring harness pin-type retainer from the rear of the upper intake manifold.
8. Remove the upper intake manifold support bracket bolt from the front of the RH cylinder head.
9. Loosen the 7 bolts and remove the upper intake manifold.
  - Remove and discard the gaskets.
  - Clean and inspect all of the sealing surfaces of the upper and lower intake manifold.

## Installation

1. **NOTICE: If the engine is repaired or replaced because of upper engine failure, typically including valve or piston damage, check the intake manifold for metal debris. If metal debris is found, install a new intake manifold. Failure to follow these instructions can result in engine damage.**

Using new gaskets, install the upper intake manifold and tighten the 7 bolts in the sequence shown in 2 stages.

- Stage 1: Tighten to 10 Nm (89 lb-in).
- Stage 2: Tighten an additional 45 degrees.

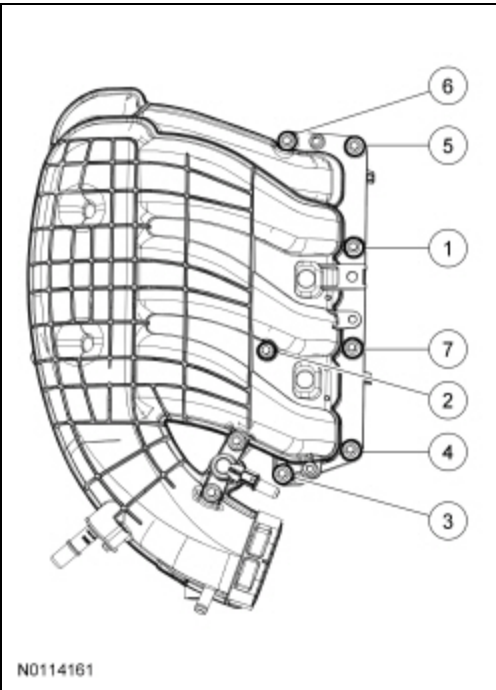

2. Install the upper intake manifold support bracket bolt to the RH cylinder head.
  - Tighten to 10 Nm (89 lb-in).
3. Attach the wiring harness pin-type retainer to the rear of the upper intake manifold.
4. Connect the brake booster vacuum hose to the engine.
5. Connect the EVAP canister purge valve electrical connector.
  - Attach the EVAP canister purge valve electrical connector wiring harness pin-type retainer.
6. Connect EVAP tube to the EVAP canister purge valve. For additional information, refer to Section 310-00.
  - Attach the EVAP hose retainer to the intake manifold.
7. Connect the T.B. electrical connector.
  - Attach the T.B. electrical connector wiring harness pin-type retainer to the T.B. .
8. Connect the PCV tube quick connect coupling to the intake manifold. For additional information, refer to Section 310-00.
9. Install the ACL outlet pipe. For additional information, refer to Section 303-12.