


Coolant Pump — 3.5L GTDI, 3.7L

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

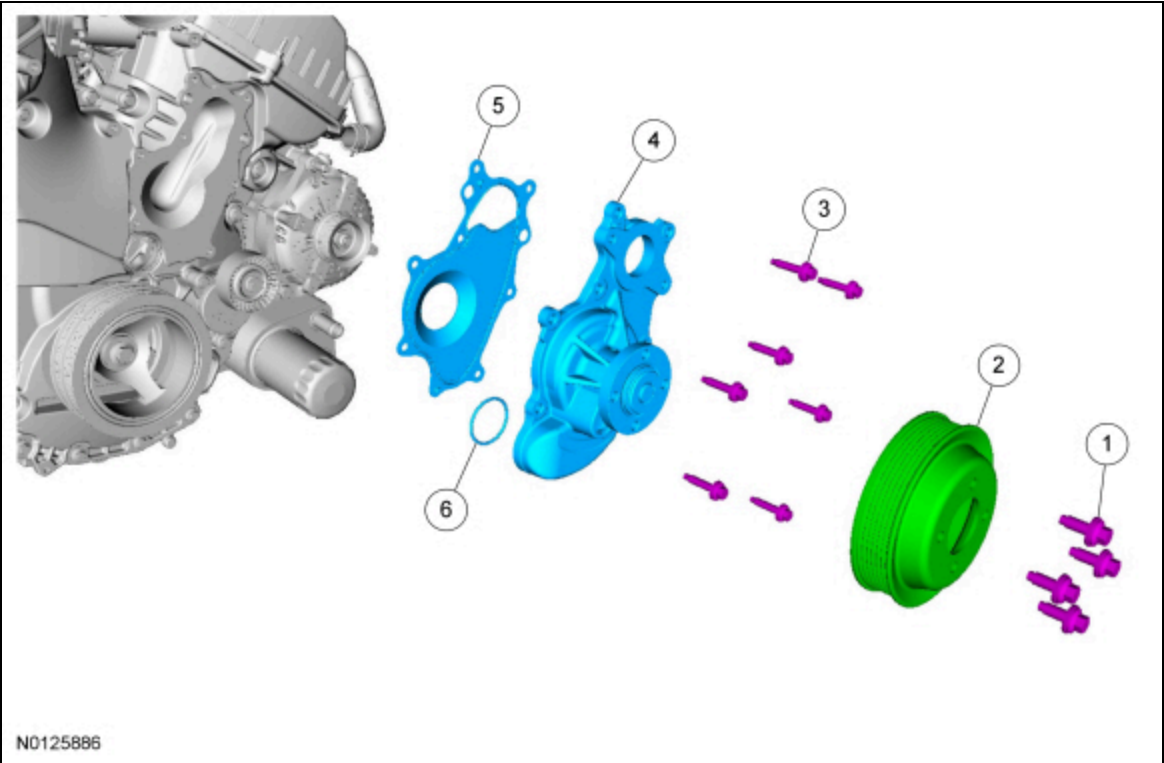

Item	Part Number	Description
1	W503291 W503291	Coolant pump pulley bolt - 25 Nm (18 lb-ft) (4 required)
2	8A5288 8A528	Coolant pump pulley
3	W503278 W503278	Coolant pump bolt (7 required)
4	8501 8501	Coolant pump
5	8507 8507	Coolant pump gasket (part of 8501)
6	8565 8565	Coolant pump O-ring seal (part of 8501)

Removal

1. Remove the air cleaner outlet pipe. For additional information, refer to Section 303-12.
2. Loosen the 4 coolant pump pulley bolts.
3. Remove the accessory drive belt. For additional information, refer to Section 303-05.


4. NOTICE: Cover the A/C compressor belt to prevent coolant contamination of the belt.

Completely cover the A/C compressor belt with waterproof plastic.

5. Remove the thermostat housing. For additional information, refer to Thermostat Housing — 3.5L GTDI or Thermostat Housing — 3.7L in this section.
6. Remove the 4 bolts and the coolant pump pulley.
7. Remove the 7 bolts and the coolant pump.
 - Remove and discard the gasket and the O-ring seal in the coolant pump.

Installation

1. Install a new O-ring seal in the coolant pump and lubricate it with clean engine coolant.
2. Position a new gasket, press the coolant pump over the channel cover plate snout protruding from the engine front cover and install the 7 bolts finger tight.
3. Tighten the coolant pump bolts in the sequence shown in 2 stages.
 - Stage 1: Tighten to 10 Nm (89 lb-in).
 - Stage 2: Tighten an additional 45 degrees.

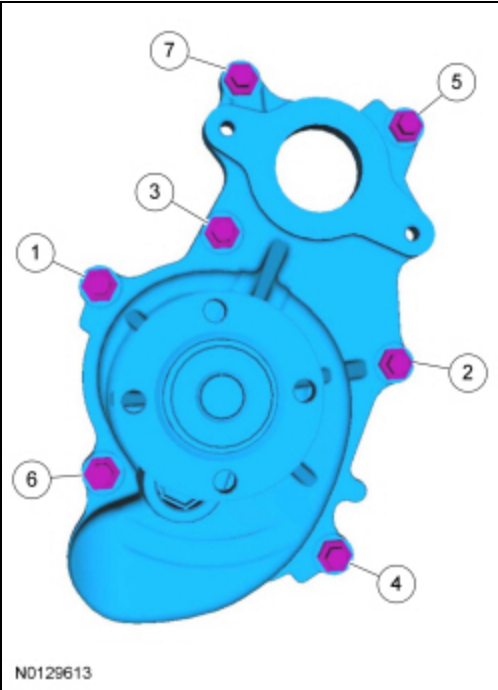

4. Position the coolant pump pulley and install the 4 bolts finger tight.
5. Install the thermostat housing. For additional information, refer to Thermostat Housing — 3.5L GTDI or Thermostat Housing — 3.7L in this section.
6. Remove the plastic from the A/C compressor belt.
7. Install the accessory drive belt. For additional information, refer to Section 303-05.
8. Tighten the 4 coolant pump pulley bolts.
 - Tighten to 25 Nm (18 lb-ft).
9. Install the air cleaner outlet pipe. For additional information, refer to Section 303-12.
10. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.