


Radiator Hose


 [Ford Ecat Electronic Parts Catalog](#)

3.5L GTDI and 3.7L Engines

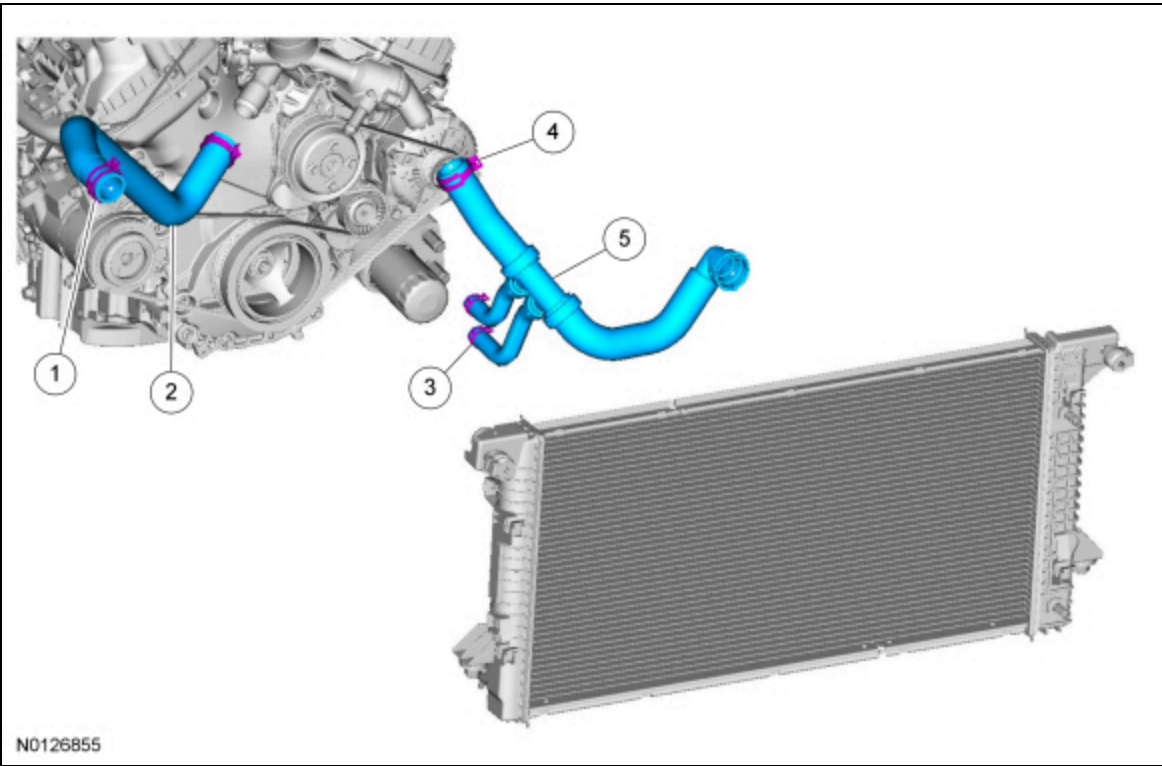

Item	Part Number	Description
1	—	Upper radiator hose clamp (2 required) (part of 8260)
2	8260 8260	Upper radiator hose
3	—	Oil cooler hose clamp (2 required) (part of 8286)
4	—	Lower radiator hose clamp (part of 8286)
5	8286 8286	Lower radiator hose


5.0L Engine

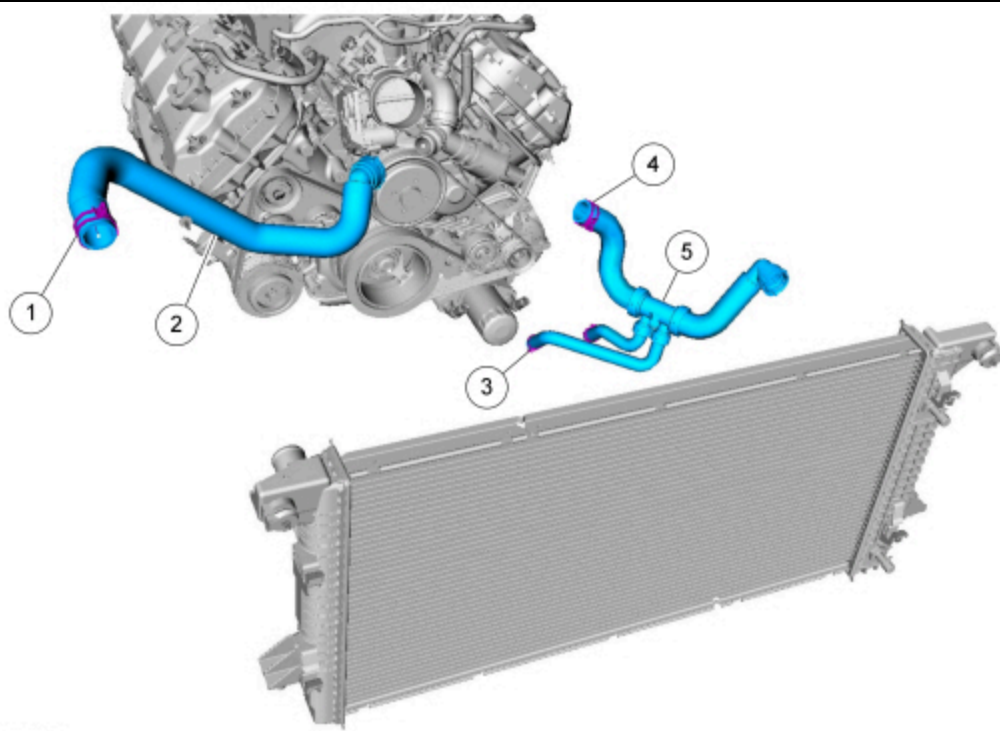

N0126856

Item	Part Number	Description
1	—	Upper radiator hose clamp (2 required) (part of 8260)
2	8260 8260	Upper radiator hose
3	—	Oil cooler hose clamp (2 required) (part of 8286)
4	—	Lower radiator hose clamp (part of 8286)
5	8286 8286	Lower radiator hose

6.2L Engine

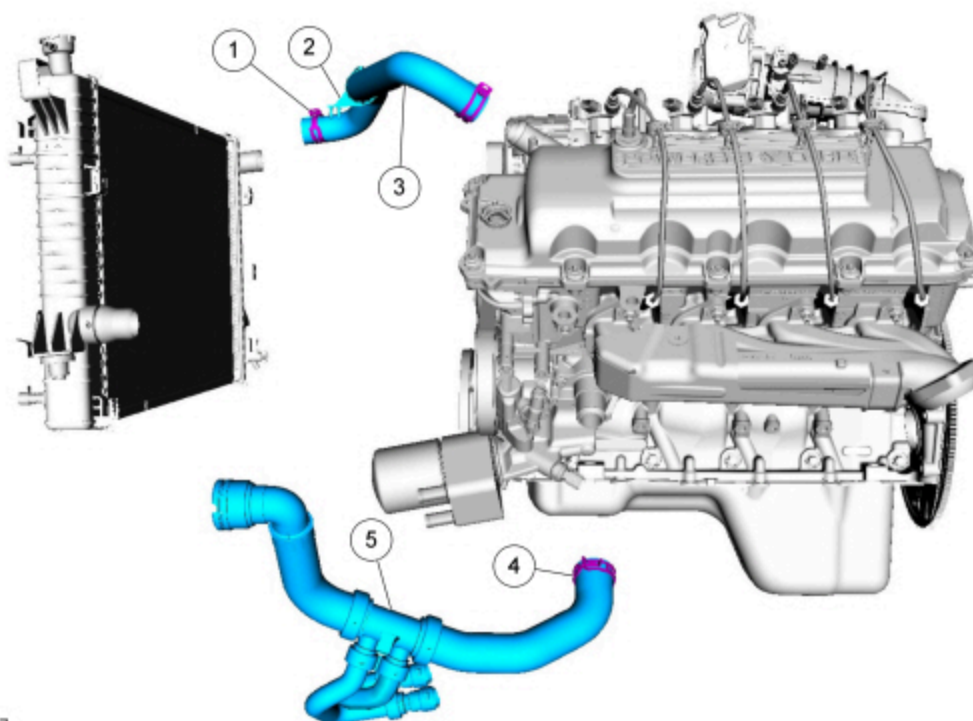

N0126857

Item	Part Number	Description
------	-------------	-------------

1	—	Upper radiator hose clamp (2 required) (part of 8260)
2	8W287 8W287	Upper radiator hose retainer (part of 8286)
3	8260 8260	Upper radiator hose
4	—	Lower radiator hose clamp (part of 8286)
5	8286 8286	Lower radiator hose

1. **NOTICE:** Cover the accessory drive belts to prevent coolant contamination of the belts.

For 3.5L GTDI, 3.7L and 5.0L engines, completely cover the accessory drive belts with waterproof plastic.

2. **NOTE:** *The quick connect coupling illustrated is to show the spring clip release location only. The quick connect coupling on the hose may differ.*

For radiator hose quick connect couplings, pull the radiator hose spring clip up until the end of the clip is in the detent on the quick connect coupling and disconnect the radiator hose.

- To install, push the spring clip in place and connect the radiator hose quick connect coupling, making sure the coupling is secure.

