


Thermostat — 3.5L GTDI

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

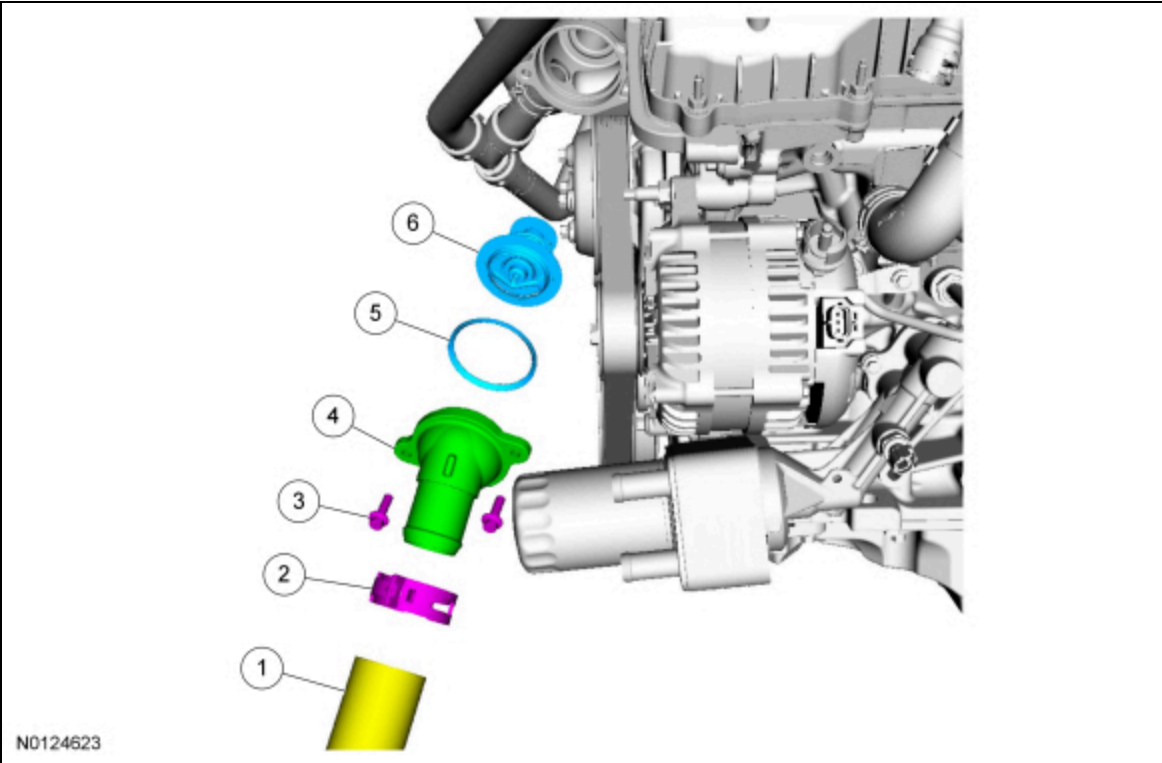

Item	Part Number	Description
1	8286 8286	Lower radiator hose
2	—	Lower radiator hose clamp (part of 8286)
3	W500014 W500014	Coolant inlet connector bolt - 10 Nm (89 lb-in) (2 required) (part of 8592)
4	—	Coolant inlet connector (part of 8592)
5	8255 8255	Thermostat O-ring seal (part of 8592)
6	8575 8575	Thermostat (part of 8592)

Removal and Installation

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.

3. NOTICE: Cover the accessory drive belts to prevent coolant contamination of the belts.

Completely cover the accessory drive belts with waterproof plastic.

4. If installing a new coolant connector, release the clamp and disconnect the lower radiator hose.
5. Remove the bolts and detach the coolant inlet connector.
 - To install, tighten to 10 Nm (89 lb-in).
6. Remove the thermostat and the O-ring seal.
 - Discard the O-ring seal.
7. To install, reverse the removal procedure.
 - Install a new O-ring seal and lubricate it with clean engine coolant.
8. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.