


Thermostat — 5.0L



Material

Item	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

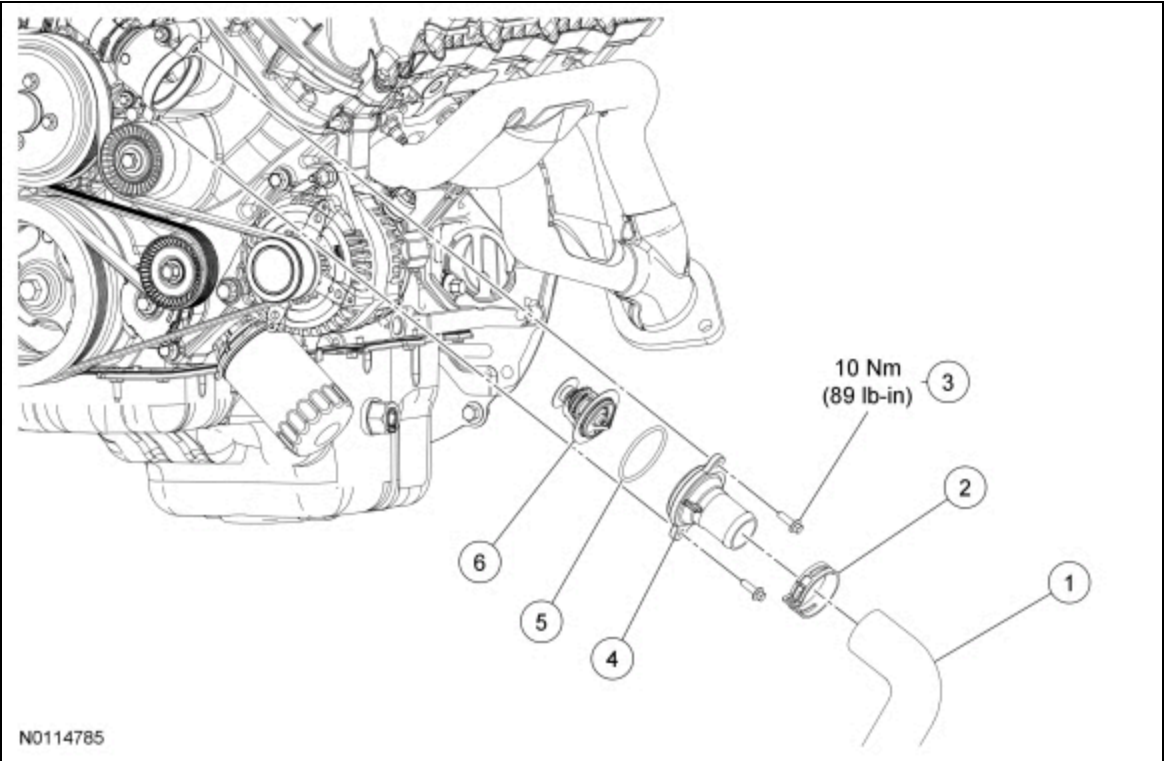

Item	Part Number	Description
1	8286 8286	Lower radiator hose
2	15161 15161	Lower radiator hose clamp
3	W500014 W500014	Coolant inlet connection bolt (2 required) (part of 8A586)
4	8K5288 8K528	Coolant inlet connection (part of 8592)
5	8255 8255	Thermostat O-ring seal (part of 8592)
6	8575 8575	Thermostat (part of 8592)

Removal and Installation

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the air cleaner outlet pipe. For additional information, refer to Section 303-12.

3. NOTICE: Remove the accessory drive belt to prevent coolant contamination of the belt.

Remove the accessory drive belt. For additional information, refer to Section 303-05.

- To install, rinse off any coolant from the accessory drive pulleys using clear water.

4. NOTICE: Cover the A/C compressor drive belt to prevent coolant contamination of the belt.

Completely cover the A/C compressor drive belt with waterproof plastic.

5. If installing a new coolant inlet connection, release the clamp and disconnect the lower radiator hose.

6. Remove the bolts and the coolant inlet connection.

- To install, tighten to 10 Nm (89 lb-in).

7. Remove the thermostat and the O-ring seal.

- Discard the O-ring seal.

8. To install, reverse the removal procedure.

- Use a new O-ring seal and lubricate it with clean engine coolant.

9. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.