


Throttle Body

 [Ford Ecat Electronic Parts Catalog](#)

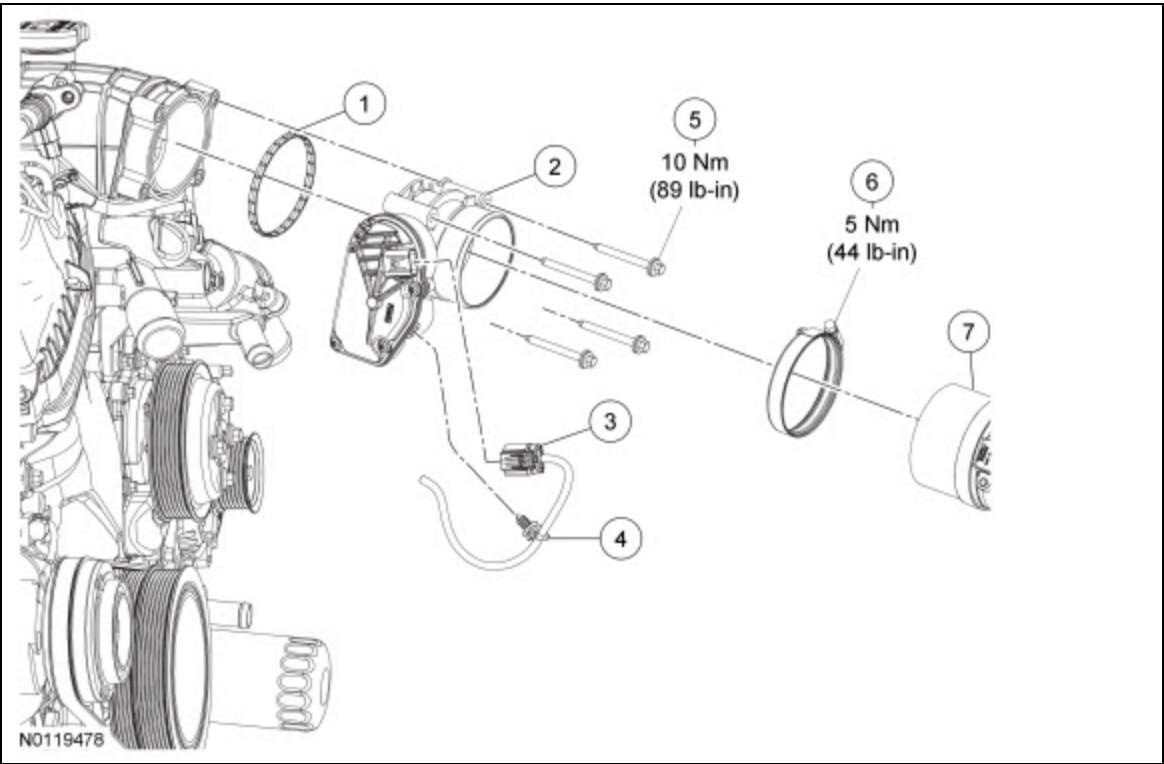

Item	Part Number	Description
1	9E936 9E936	Throttle Body (TB) gasket
2	9E926 9E926	TB
3	—	TB electrical connector (part of 12A581)
4	—	TB wiring harness retainer (part of 12A581)
5	W713443 W713443	TB bolt (4 required)
6	—	Charge Air Cooler (CAC) outlet pipe-to-TB clamp (part of 6F073)
7	6F073 6F073	CAC outlet pipe

Removal and Installation

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
2. Disconnect the Throttle Body (TB) electrical connector.
3. Loosen the clamp and disconnect the Charge Air Cooler (CAC) outlet pipe-to-TB .
 - To install, tighten to 5 Nm (44 lb-in).
4. Remove the 4 bolts and the TB .
 - Discard the TB gasket.
 - To install, tighten to 10 Nm (89 lb-in).

5. **NOTE:** *Install a new TB gasket.*

To install, reverse the removal procedure.