


Throttle Body

 [Ford Ecat Electronic Parts Catalog](#)

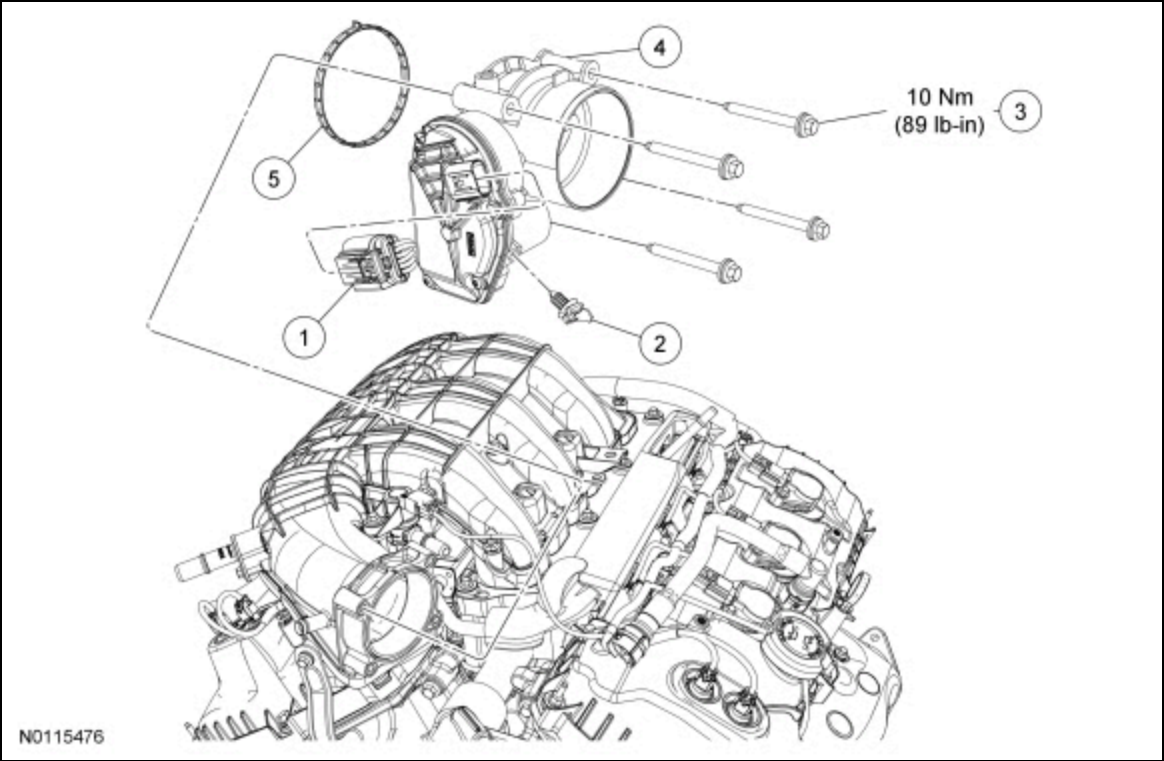

Item	Part Number	Description
1	—	Electronic throttle control electrical connector (part of 14A411)
2	—	Electronic throttle control electrical connector wiring harness pin-type retainer (part of 14A411)
3	W713443 W713443	Throttle Body (TB) bolt (4 required)
4	9F991 9F991	TB
5	9E936 9E936	TB gasket

Removal and Installation

1. Remove the engine Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
2. Remove the bolt for the intake manifold vacuum tube.
 - Detach the intake manifold vacuum tube pin-type retainer from the Throttle Body (TB) .
 - To install, tighten to 10 Nm (89 lb-in).



3. Disconnect the electronic throttle control electrical connector.
 - Detach the electronic throttle control electrical connector wiring harness pin-type retainer.
 4. Remove the 4 bolts and the TB .
 - Discard the TB gasket.
 - To install, tighten to 10 Nm (89 lb-in).
 5. **NOTE:** *Install a new TB gasket.*
- To install, reverse the removal procedure.