

Intake Air System Components — Exploded View




3.7L Air Cleaner (ACL) Assembly

NOTICE: Fully seat the Air Cleaner (ACL) element into the ACL housing. Failure to do so will result in unusual engine noise.

NOTE: Disconnect the crankcase vent hose quick connect coupling from the air cleaner outlet pipe as necessary. Refer to Section 310-00.

NOTE: Securely seal the ACL outlet pipe to prevent unmetered air from entering the engine.

NOTE: The ACL housing is part of the degas bottle assembly. Refer to Section 303-03.

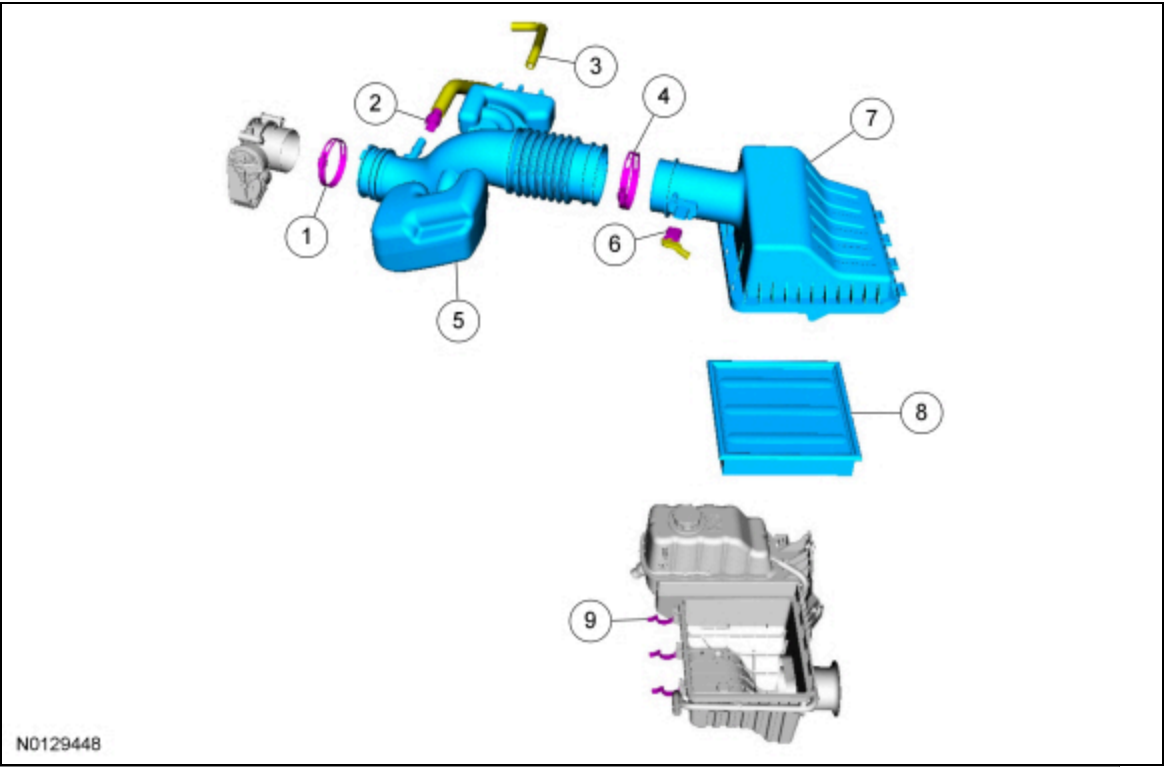

Item	Part Number	Description
1	—	Air Cleaner (ACL) outlet pipe-toThrottle Body (TB) clamp - 4 Nm (35 lb-in) (part of 9B659)
2	—	Crankcase vent hose quick connect coupling (part of 6758)
3	9C4909C490	Vacuum hose
4	—	ACL -to-ACL outlet pipe clamp - 4 Nm (35 lb-in) (part of 9B659)
5	9B6599B659	ACL outlet pipe
6	—	Mass Air Flow (MAF) sensor electrical connector (part of 12A581)
7	96619661	ACL upper tray

8	9601 9601	ACL element
9	9628 9628	Air cleaner tray retaining clips (3 required)


5.0L Air Cleaner (ACL) Assembly

NOTICE: Fully seat the Air Cleaner (ACL) element into the ACL housing. Failure to do so will result in unusual engine noise.

NOTE: Disconnect the crankcase vent hose quick connect coupling from the air cleaner outlet pipe as necessary. Refer to Section 310-00.

NOTE: Securely seal the ACL outlet pipe to prevent unmetered air from entering the engine.

NOTE: The ACL housing is part of the degas bottle assembly. Refer to Section 303-03.

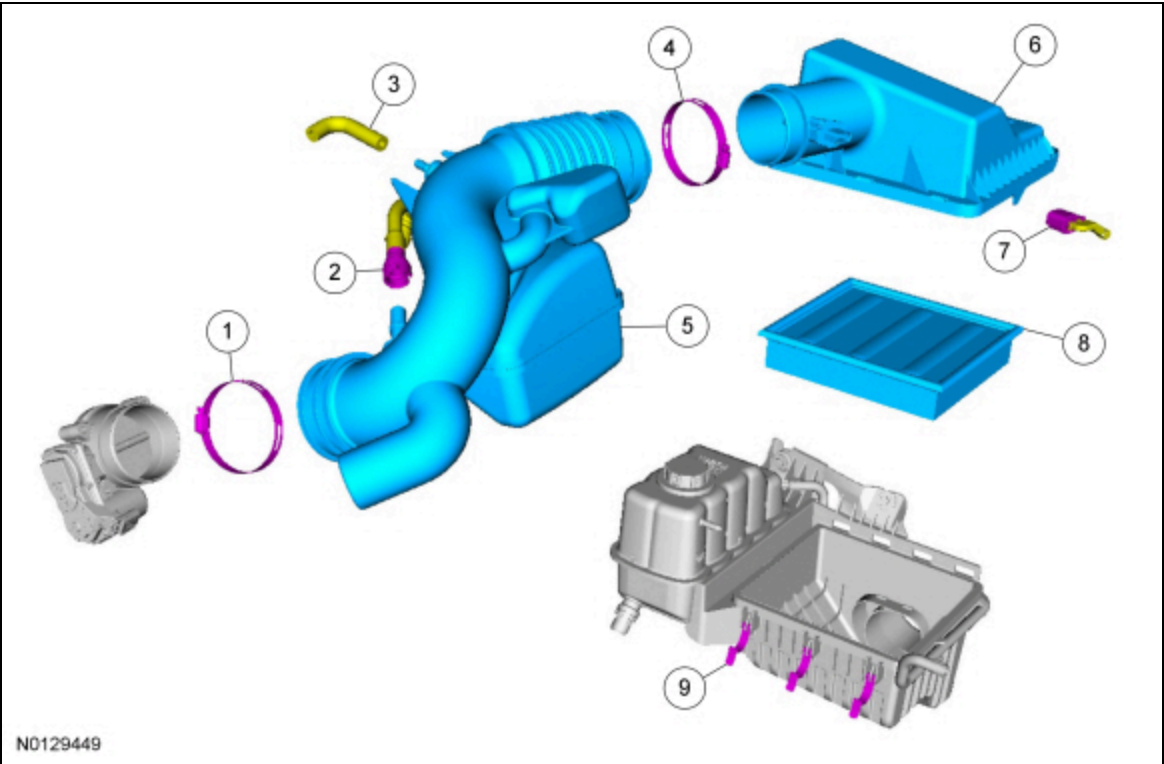

Item	Part Number	Description
1	—	Air Cleaner (ACL) outlet pipe-to-Throttle Body (TB) clamp - 4 Nm (35 lb-in) (part of 9B659)
2	6758 6758	Crankcase vent hose
3	9C490 9C490	Vacuum hose
4	—	ACL -to-ACL outlet pipe clamp - 4 Nm (35 lb-in) (part of 9B659)
5	9B659 9B659	ACL outlet pipe
6	9661 9661	ACL upper tray
7	—	Mass Air Flow (MAF) sensor electrical connector (part of 12A581)
8	9601 9601	ACL element
9	9628 9628	Air cleaner tray retaining clips (3 required)


6.2L Air Cleaner (ACL) Assembly

NOTICE: Fully seat the Air Cleaner (ACL) element into the ACL housing. Failure to do so will result in unusual engine noise.

NOTE: Disconnect the crankcase vent hose quick connect coupling from the resonator as necessary. Refer to Section 310-00.

NOTE: Securely seal the ACL outlet pipe to prevent unmetered air from entering the engine.

NOTE: The ACL housing is part of the coolant expansion tank assembly. Refer to Section 303-03.

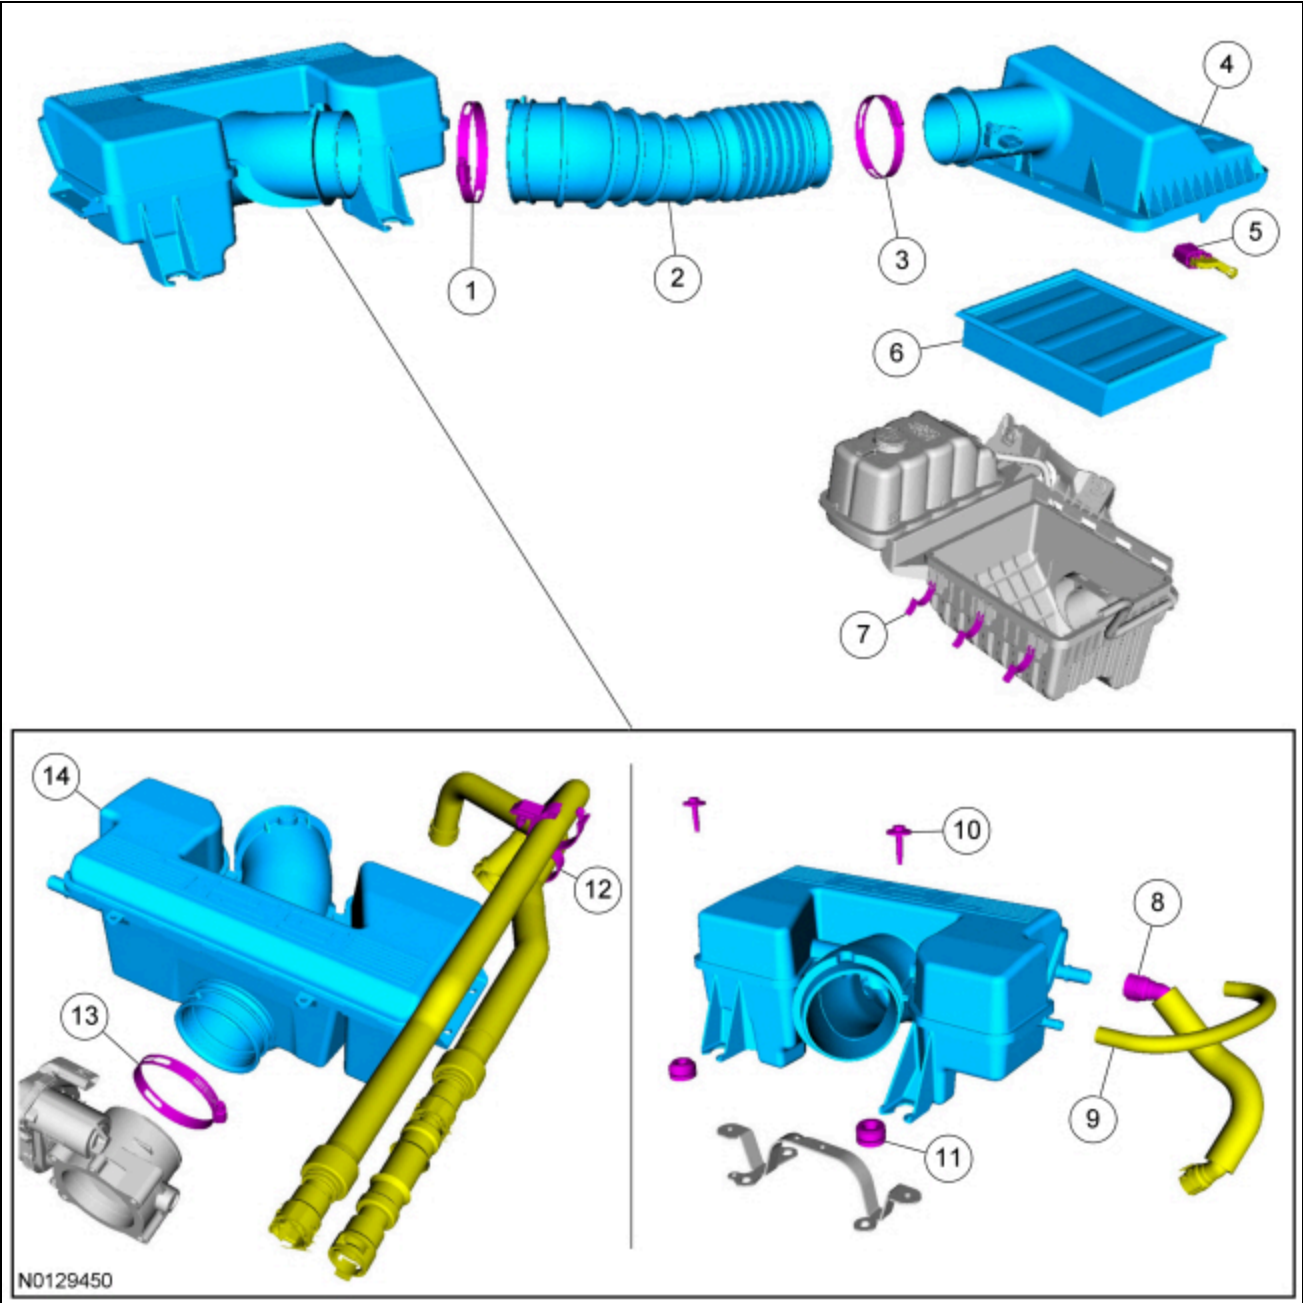

Item	Part Number	Description
1	—	Air Cleaner (ACL) outlet pipe-to-resonator clamp - 4 Nm (35 lb-in) (part of 9B659)
2	9B6599B659	ACL outlet pipe




3	—	ACL -to-ACL outlet pipe clamp - 4 Nm (35 lb-in) (part of 9B659)
4	9661 9661	ACL upper tray
5	—	Mass Air Flow (MAF) sensor electrical connector (part of 12A581)
6	9601 9601	ACL element
7	9628 9628	Air cleaner tray retaining clips (3 required)
8	—	Crankcase ventilation tube quick connect coupling (part of 6758)
9	9C490 9C490	Brake booster vacuum hose
10	W707522 W707522	Resonator bolts - 10 Nm (89 lb-in)
11	9P686 9P686	Resonator insulator
12	8W278 8W278	Heater hose retainer
13	—	Resonator-to-throttle body clamp - 4 Nm (35 lb-in) (part of 9F763)
14	9F763 9F763	Resonator

3.5L G.TDI Air Cleaner (ACL) Assembly and ACL Outlet Pipes

NOTE: Disconnect the fuel vapor management hose and the crankcase vent hose quick connect couplings from the LH ACL pipe-to-turbocharger pipe as necessary. Refer to Section 310-00.

NOTE: Securely seal the ACL outlet pipe and the turbocharger pipes to prevent unmetered air from entering the engine.

NOTE: The ACL housing is part of the coolant expansion tank assembly. Refer to Section 303-03.

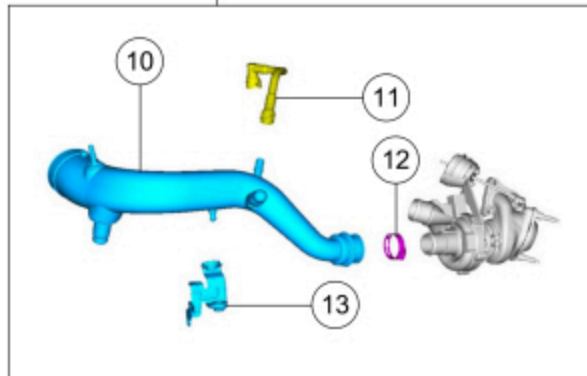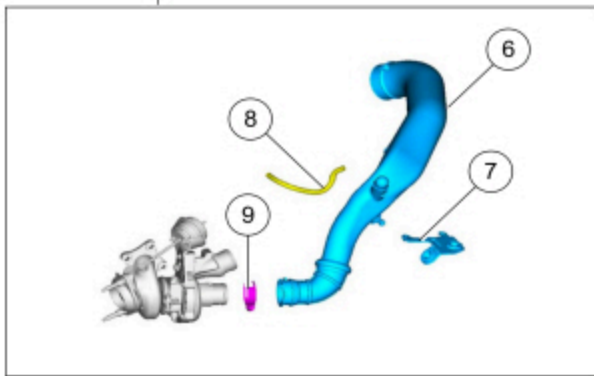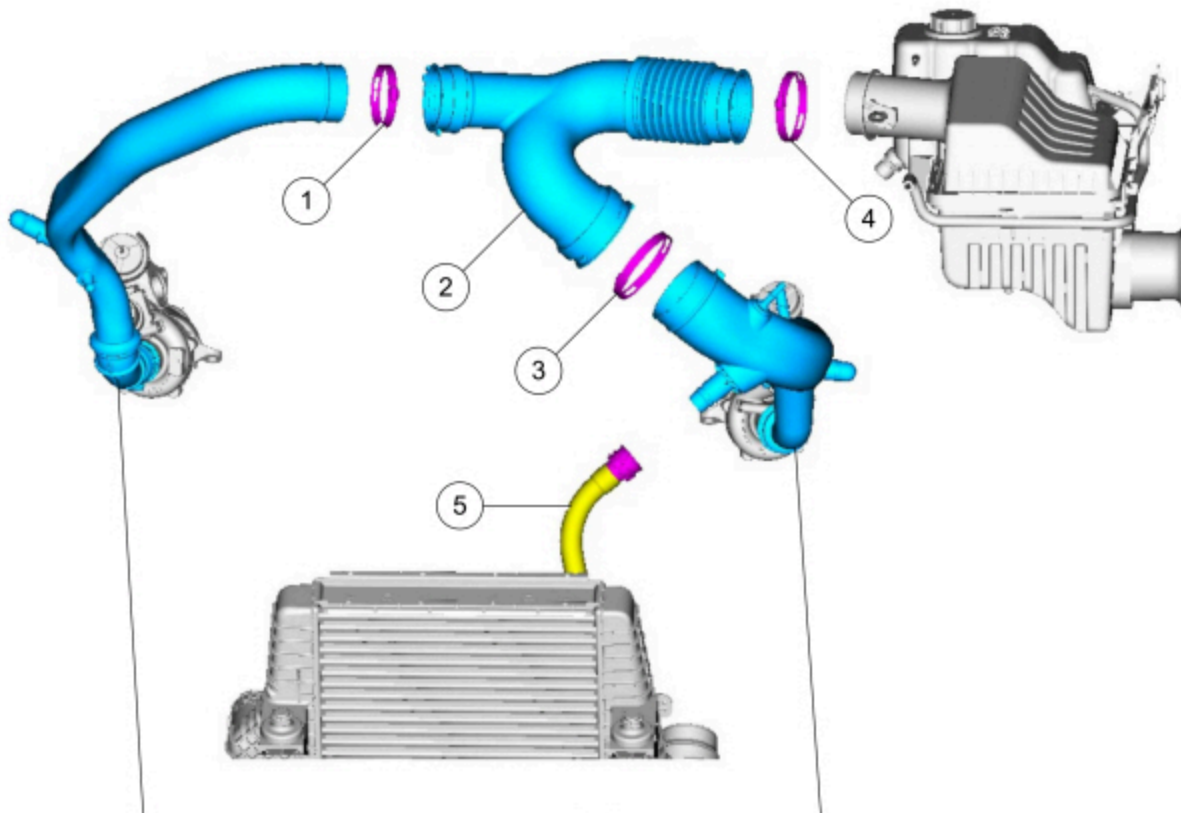


N0150867

Item	Part Number	Description
1	—	ACL outlet pipe clamp - 5 Nm (44 lb-in) (part of 9C623)
2	9C6239C623	ACL outlet pipe
3	—	ACL outlet pipe clamp - 5 Nm (44 lb-in) (part of 9C623)
4	—	ACL outlet pipe clamp - 5 Nm (44 lb-in) (part of 9C623)
5	9J4789J478	Air bypass hose assembly
6	9B6599B659	RH ACL pipe-to-turbocharger pipe
7	96479647	RH ACL and CAC pipe bracket
8	9E4999E499	Vacuum hose
9	—	RH ACL pipe-to-turbocharger pipe clamp - 5 Nm (44 lb-in) (part of 9B659)
10	—	LH ACL pipe-to-turbocharger pipe (part of 9C623)
11	3E6753E675	Crankcase vent tube assembly
12	—	LH ACL pipe-to-turbocharger pipe - 5 Nm (44 lb-in) (part of 9C623)

13	96479647	LH ACL and CAC pipe bracket
----	----------	-----------------------------

3.5L GTDI Charge Air Cooler (CAC) and Tubes

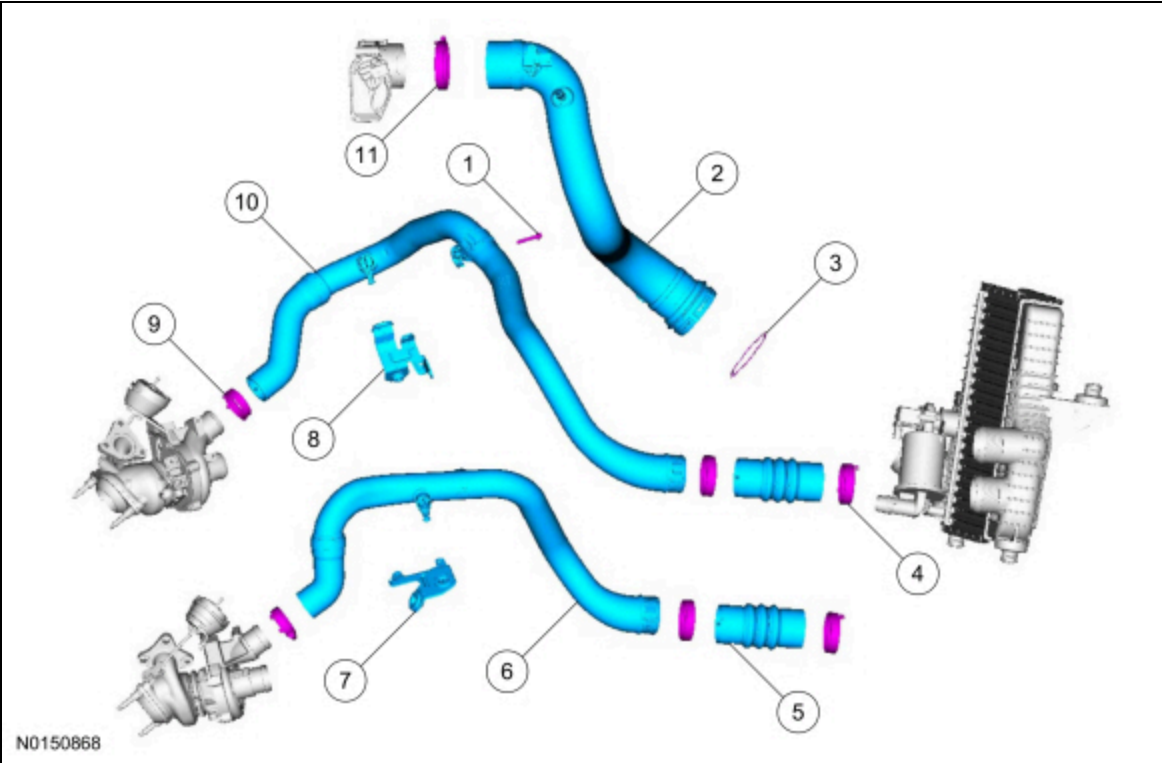

Item	Part Number	Description
1	W503280W503280	LH turbocharger-to-CAC pipe bracket bolt - 6 Nm (53 lb-in)
2	6F0736F073	CAC -to-Throttle Body (TB) pipe
3	—	CAC -to-TB pipe spring clip (part of 6F073)
4	—	CAC pipe clamp - 5 Nm (44 lb-in) (part of 6C646) (4 required)
5	—	CAC tube flex joint (part of 6C646) (4 required)
6	6C6466C646	LH turbocharger-to-CAC pipe
7	96479647	RH ACL and CAC pipe bracket
8	96479647	LH ACL and CAC pipe bracket
9	—	Turbocharger-to-CAC pipe clamp - 5 Nm (44 lb-in) (part of 9C623) (2 required)
10	6C6466C646	RH turbocharger-to-CAC pipe
11	—	CAC -to-TB pipe clamp - 5 Nm (44 lb-in) (part of 6F073)

1. Refer to the procedures and/or exploded views in this section for any Warnings, Notices, Notes, Materials, Specifications, and Special Tools. Items in the exploded views may not be listed in order of removal.