


Lower Arm

Ford Ecat Electronic Parts Catalog

Special Tool(s)

 ST2945-A	Separator, Ball Joint 204-592
--	----------------------------------

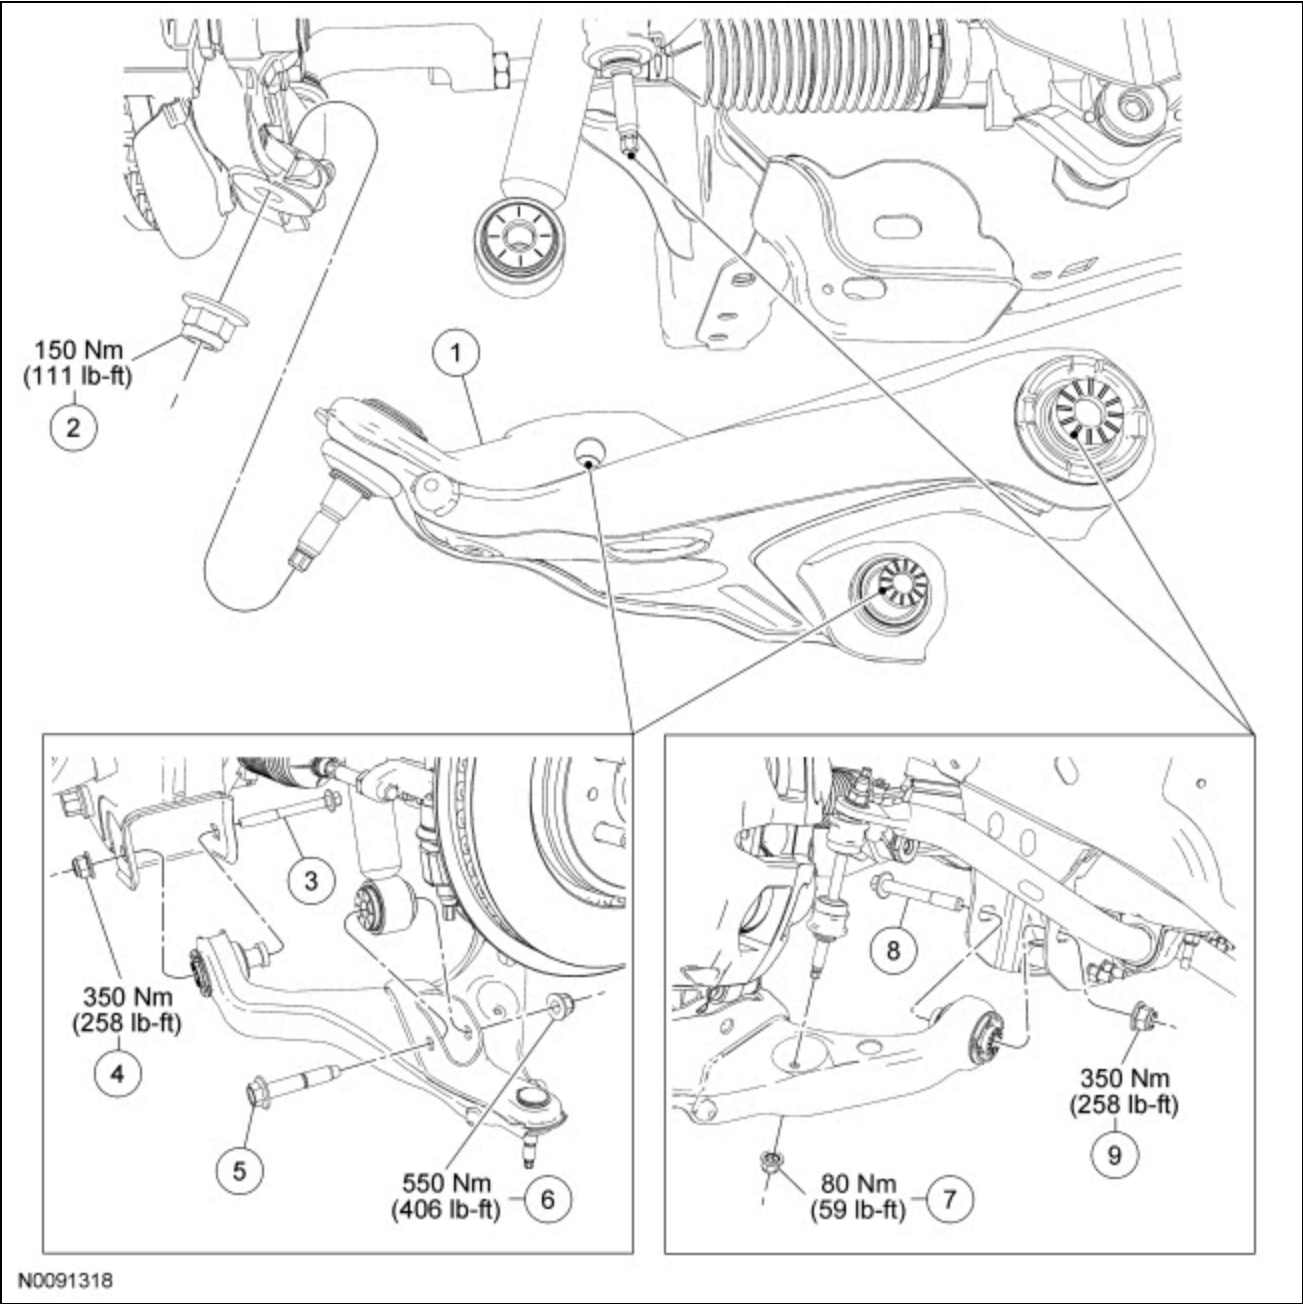


Item	Part Number	Description
1	30513051 LH/ 3042 RH LH/ 3042 RH	Lower arm

2	W707254 W707254	Lower ball joint nut
3	W711399 W711399	Lower arm forward bolt
4	W711310 W711310	Lower arm forward nut
5	W712682 W712682	Shock absorber lower bolt
6	W520217 W520217	Shock absorber lower nut
7	N807144 N807144	Stabilizer bar link lower nut
8	W709877 W709877	Lower arm rearward bolt
9	W711310 W711310	Lower arm rearward nut

Removal

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

1. Measure the distance from the center of the hub to the lip of the fender with the vehicle in a level, static ground position (curb height).

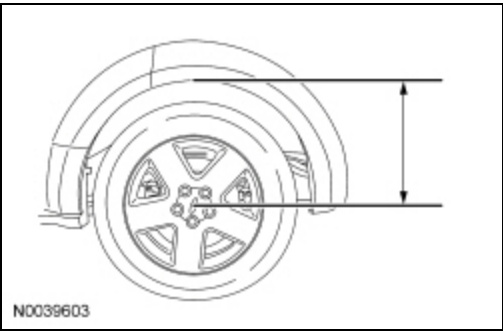


2. Remove the wheel and tire. For additional information, refer to Section 204-04.
3. **NOTE:** Use the hex-holding feature to prevent the stud from turning while removing the nut.

Remove and discard the stabilizer bar link lower nut.

4. Remove and discard the lower ball joint nut.
5. **NOTICE:** Make sure to use the Ball Joint Separator when separating the lower ball joint from the knuckle to prevent damage to the ball joint boot.

Using the Ball Joint Separator, separate the ball joint from the knuckle.

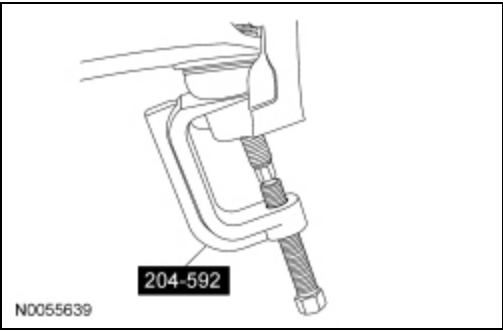


6. Remove and discard the lower arm rearward nut and bolt.
7. Remove and discard the lower arm forward nut and bolt.

8. Remove the shock absorber lower nut, bolt and the lower arm.
 - Discard the shock absorber lower nut and bolt.

Installation

1. Position the lower arm and loosely install the new shock absorber lower bolt and nut.
2. Loosely install the new lower arm forward nut and bolt.
3. Loosely install the new lower arm rearward nut and bolt.
4. Position the lower ball joint into the wheel knuckle and install the new lower ball joint nut.
 - Tighten to 150 Nm (111 lb-ft).
5. Install the new stabilizer bar link lower nut.
 - Tighten to 80 Nm (59 lb-ft).
6. Use a suitable jack to raise the suspension until the distance between the center of the hub and the lip of the fender is equal to the measurement taken in Step 1 (curb height).

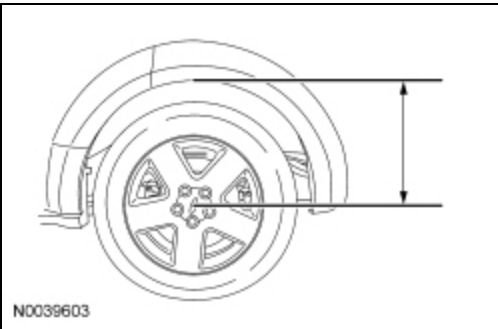

7. **NOTE:** Use a crowfoot wrench to tighten the lower arm rearward nut.

Tighten the lower arm rearward nut to 350 Nm (258 lb-ft).

8. Tighten the lower arm forward nut to 350 Nm (258 lb-ft).
9. Tighten the shock absorber lower nut to 550 Nm (406 lb-ft).
10. Install the wheel and tire. For additional information, refer to Section 204-04.
11. Check and, if necessary, align the front end. For additional information, refer to Section 204-00.