


Shock Absorber


 [Ford Ecat Electronic Parts Catalog](#)

All Except SVT Raptor

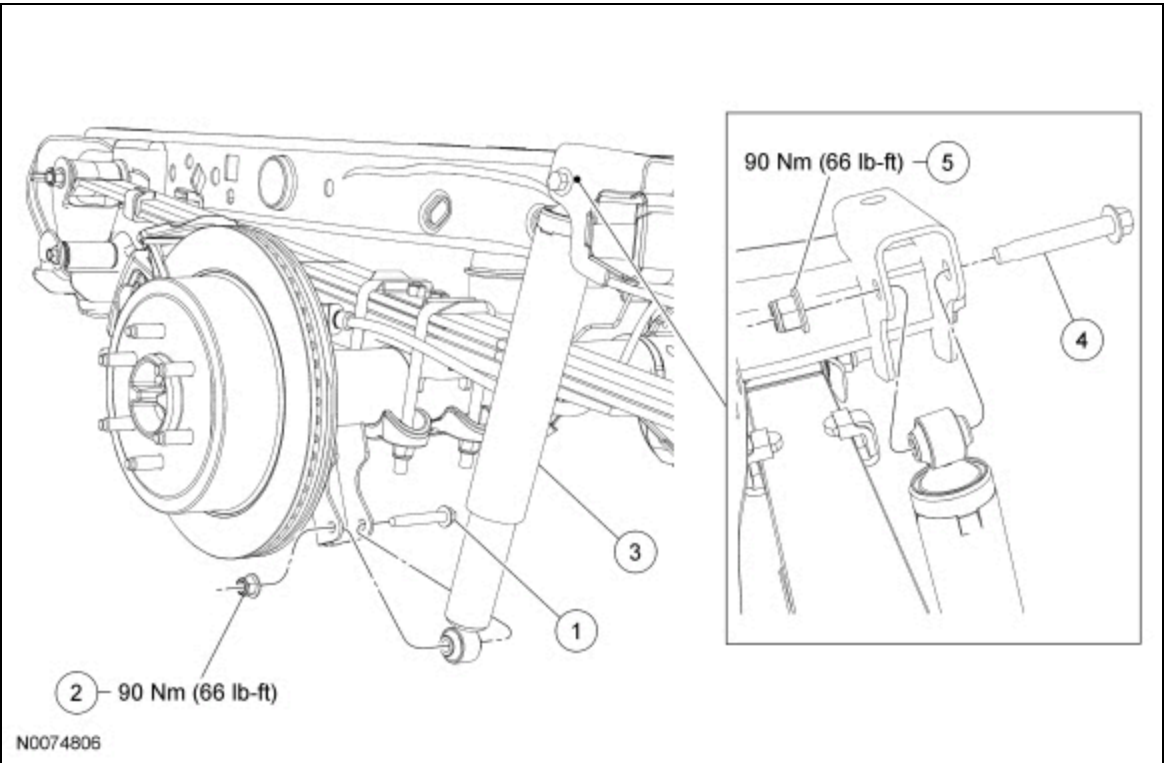

Item	Part Number	Description
1	W506545 W506545	Shock absorber lower bolt
2	W520214 W520214	Shock absorber lower nut
3	18125 18125	Shock absorber
4	W506545 W506545	Shock absorber upper bolt
5	W520214 W520214	Shock absorber upper nut

SVT Raptor

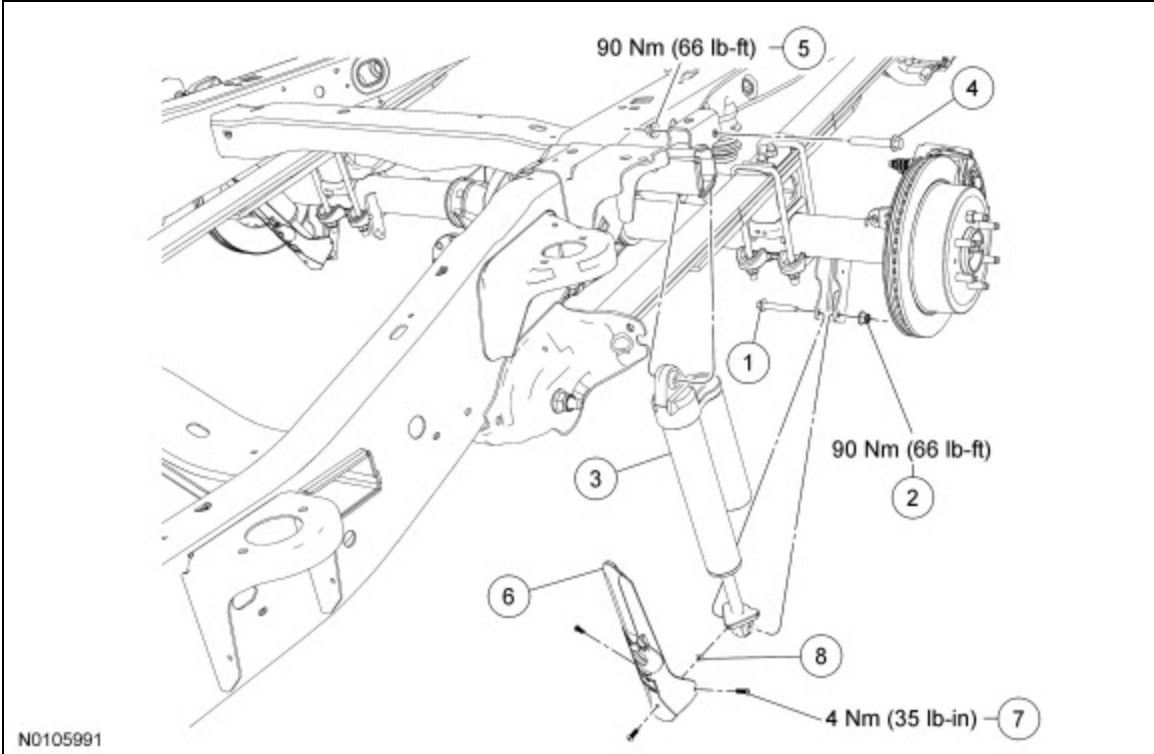

Item	Part Number	Description
1	W506545 W506545	Shock absorber lower bolt
2	W520214 W520214	Shock absorber lower nut
3	18080 18080	Shock absorber
4	W506545 W506545	Shock absorber upper bolt
5	W520214 W520214	Shock absorber upper nut
6	18159 18159	Shock absorber shield
7	18A149 18A149 -B-B	Shock absorber shield bolt (3 required)
8	18A149 18A149 -C-C	Shock absorber shield washer

WARNING: Do not apply heat or flame to the shock absorber or strut tube. The shock absorber and strut tube are gas pressurized and could explode if heated. Failure to follow this instruction may result in serious personal injury.

WARNING: Keep all body parts clear of shock absorbers or strut rods. Shock absorbers or struts can extend unassisted. Failure to follow this instruction may result in serious personal injury.

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

All Vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Using a suitable jack, support the axle.

SVT Raptor

3. **NOTE:** Chase the threads in the shock prior to installing the screws. This is needed to prevent potential breaking the screws or reaching torque prior to full run-down.

Remove the shock absorber shield.

- Remove and discard the three shield bolts and remove the shield.
- To install, tighten the three new bolts to 4 Nm (25 lb-in).

All Vehicles

4. Remove and discard the shock absorber upper nut and bolt.
 - To install, tighten the new nut to 90 Nm (66 lb-ft).
5. Remove the shock absorber lower nut, lower bolt and the shock absorber.
 - Discard the nut and bolt.
 - To install, tighten the new nut to 90 Nm (66 lb-ft).
6. To install, reverse the removal procedure.