

Parking Brake Shoes



Material	
Item	Specification
Molykote® M77 8U7Z-19A506-A	—


Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: Axle shaft removed from illustrations for clarity.

NOTE: One parking brake shoe kit contains the linings required for both the LH and RH side.


1. Release the parking brake cable tension. For additional information, refer to Parking Brake Cable Tension Release in this section.
2. Remove the rear brake disc. For additional information, refer to Section 206-04.
- 3.

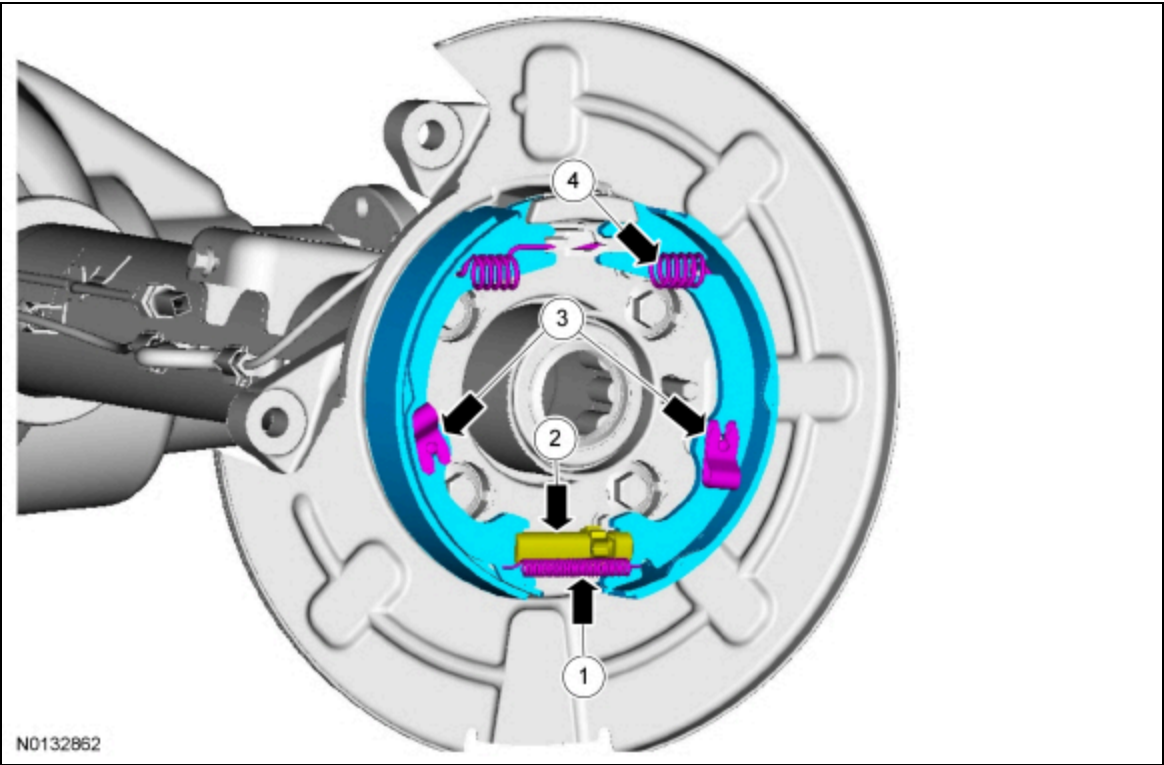

Installation

1. **NOTE:** Using specified grease, lubricate the parking brake shoes where the shoe contacts the actuator lever and the support bracket.

Apply the substance from the specified tube.

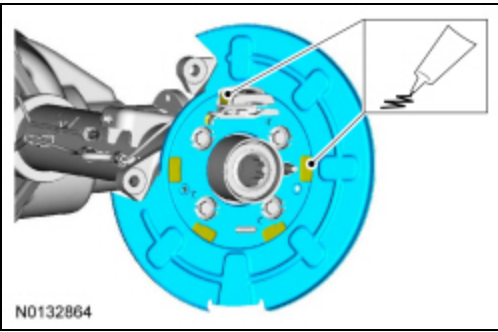

2. **NOTE:** *Completely retract the parking brake adjusting screw before installation.*

To install, reverse the removal procedure.

3. Adjust the parking brake shoe. For additional information, refer to Parking Brake Shoe Adjustment in this section.
4. Reload the tension on the parking brake cable. For additional information, refer to Parking Brake Cable Tension Release in this section.