


Power Steering Fluid Reservoir

 [Ford Ecat Electronic Parts Catalog](#)

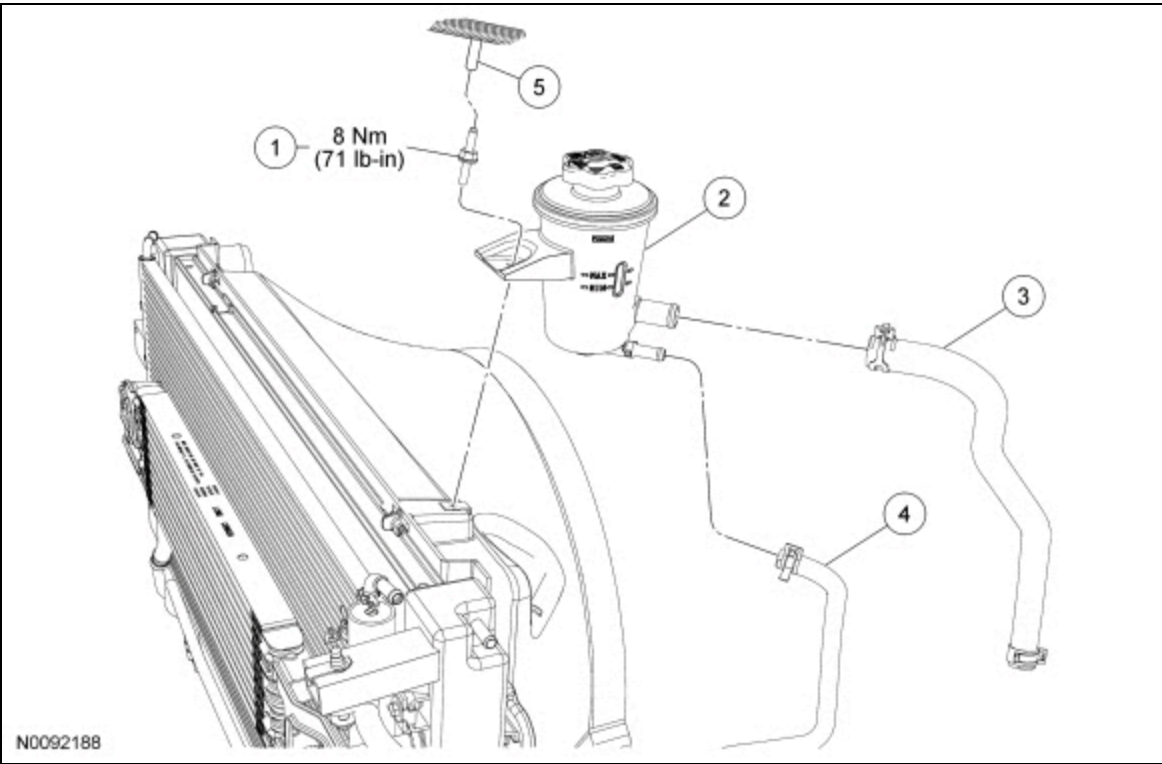

Item	Part Number	Description
1	W710897 W710897	Power steering fluid reservoir stud bolt
2	3E764 3E764	Power steering fluid reservoir
3	3691 3691	Power steering fluid reservoir-to-pump supply hose
4	3A7133 3A713	Power steering fluid cooler-to-power steering fluid reservoir hose
5	—	Wiring harness retainer (part of 14A067)

Removal and Installation

1. **NOTICE:** While repairing the power steering system, care should be taken to prevent the entry of foreign materials or failure of the power steering components may result.
- Using a suitable suction device, remove the power steering fluid from the fluid reservoir.
2. Detach the wiring harness retainer from the power steering fluid reservoir stud bolt and position the wiring harness aside.
3. Release the clamp and disconnect the power steering fluid reservoir-to-pump supply hose.
4. Release the clamp and disconnect the power steering fluid cooler-to-power steering fluid reservoir hose.
5. Remove the power steering fluid reservoir stud bolt and the power steering fluid reservoir.
 - To install, tighten to 8 Nm (71 lb-in).

6. To install, reverse the removal procedure.

7. Fill the power steering system. For additional information, refer to Section 211-00B.