


Master window control switch - Super crew, Super cab

Schematic

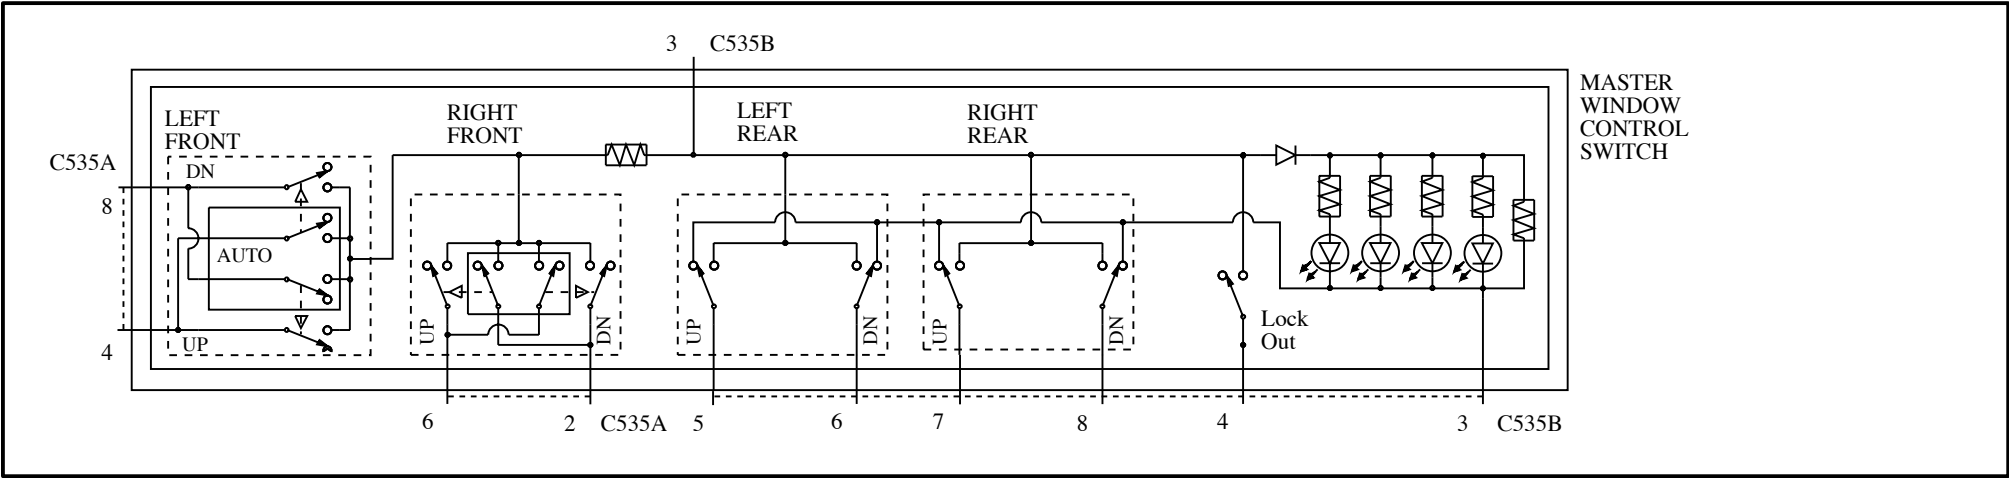

Component testing procedure

Circuit to test	Connect self-powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Switch lock	C535B 1 and C535B 4	Lock Off	Closed circuit
		Lock On	Open circuit
Left front window circuit	C535B 1 and C535A 4	Up	Closed circuit
	C535B 1 and C535A 8	Down	Closed circuit
	C535B 1, C535A 4 and C535A 8	One-Touch Up/Down	Closed circuit
Right front window circuit	C535B 1 and C535A 6	Up	Closed circuit
	C535B 1 and C535A 2	Down	Closed circuit
Left rear window circuit	C535B 1 and C535B 5	Up	Closed circuit
	C535B 1 and C535B 6	Down	Closed circuit
Right rear window circuit	C535B 1 and C535B 7	Up	Closed circuit
	C535B 1 and C535B 8	Down	Closed circuit

Terminals

