


Transmission Connector Layouts




Transmission Vehicle Harness

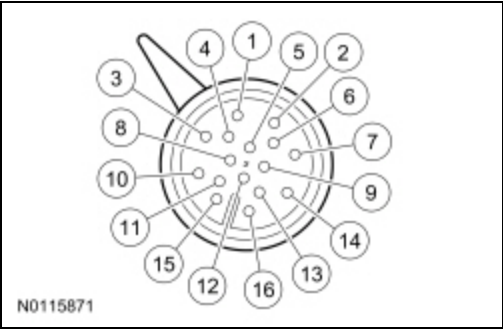

Item	Description
1	Turbine Shaft Speed (TSS) sensor
2	NOT USED
3	TCC control
4	Transmission Range (TR) sensor
5	Signal return
6	Transmission Fluid Temperature (TFT) sensor power
7	Ignition voltage
8	Shift Solenoid E (SSE) control
9	Shift Solenoid A (SSA) control
10	Shift Solenoid D (SSD) control
11	TR sensor signal return
12	Battery voltage
13	Shift Solenoid C (SSC) control
14	Shift Solenoid B (SSB) control
15	Output Shaft Speed (OSS) sensor
16	LPC solenoid control


Transmission Leadframe Connector

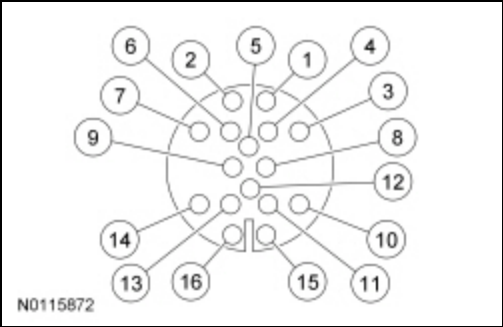

Item	Description
1	Turbine Shaft Speed (TSS) sensor
2	NOT USED
3	TCC control
4	Transmission Range (TR) sensor
5	Signal return
6	Transmission Fluid Temperature (TFT) sensor power
7	Ignition voltage
8	Shift Solenoid E (SSE) control
9	Shift Solenoid A (SSA) control
10	Shift Solenoid D (SSD) control
11	TR sensor signal return
12	Battery voltage
13	Shift Solenoid C (SSC) control
14	Shift Solenoid B (SSB) control
15	Output Shaft Speed (OSS) sensor
16	LPC solenoid control

Molded Leadframe

NOTE: Terminal 7 of the transmission leadframe connector is the common power feed to the solenoids listed in the following chart.

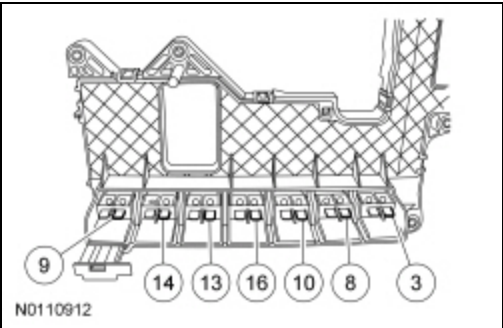

Item	Description
3	Torque Converter Clutch (TCC) control
8	Shift Solenoid E (SSE) control
10	Shift Solenoid D (SSD) control
16	LPC solenoid control
13	Shift Solenoid C (SSC) control
14	Shift Solenoid B (SSB) control
9	Shift Solenoid A (SSA) control