

Transmission Cooling



The transmission fluid cooling system without an auxiliary transmission fluid cooler consists of the following:

- An in-tank transmission fluid cooler inlet tube
- A non-repairable in-tank transmission fluid cooler
- An in-tank transmission fluid cooler outlet tube

The transmission fluid cooling system with an auxiliary transmission fluid cooler consists of the following:


- An in-tank transmission fluid cooler inlet tube
- A non-repairable in-tank transmission fluid cooler
- An auxiliary transmission fluid cooler inlet tube
- An auxiliary transmission fluid cooler
- An auxiliary transmission fluid cooler outlet tube

Located inside the transmission case is a thermal bypass valve. The thermal bypass is used to route fluid to the cooler when operating temperatures increase, or to return fluid directly to the transmission lube circuit. When the transmission fluid temperature is below 185°F (85°C) no fluid is routed to the cooler. It is essential that the transmission fluid level be checked and adjusted only when the fluid temperature is verified with a scan tool.

The transmission fluid flows from the transmission bottom fitting, to the in-tank transmission fluid cooler, to the auxiliary transmission fluid cooler, if so equipped, and returns to the transmission top fitting.


For the transmission fluid cooler backflushing and cleaning procedure, refer to Section 307-01.

3.5L GTDI and 3.7L Engines Without an Auxiliary Transmission Fluid Cooler

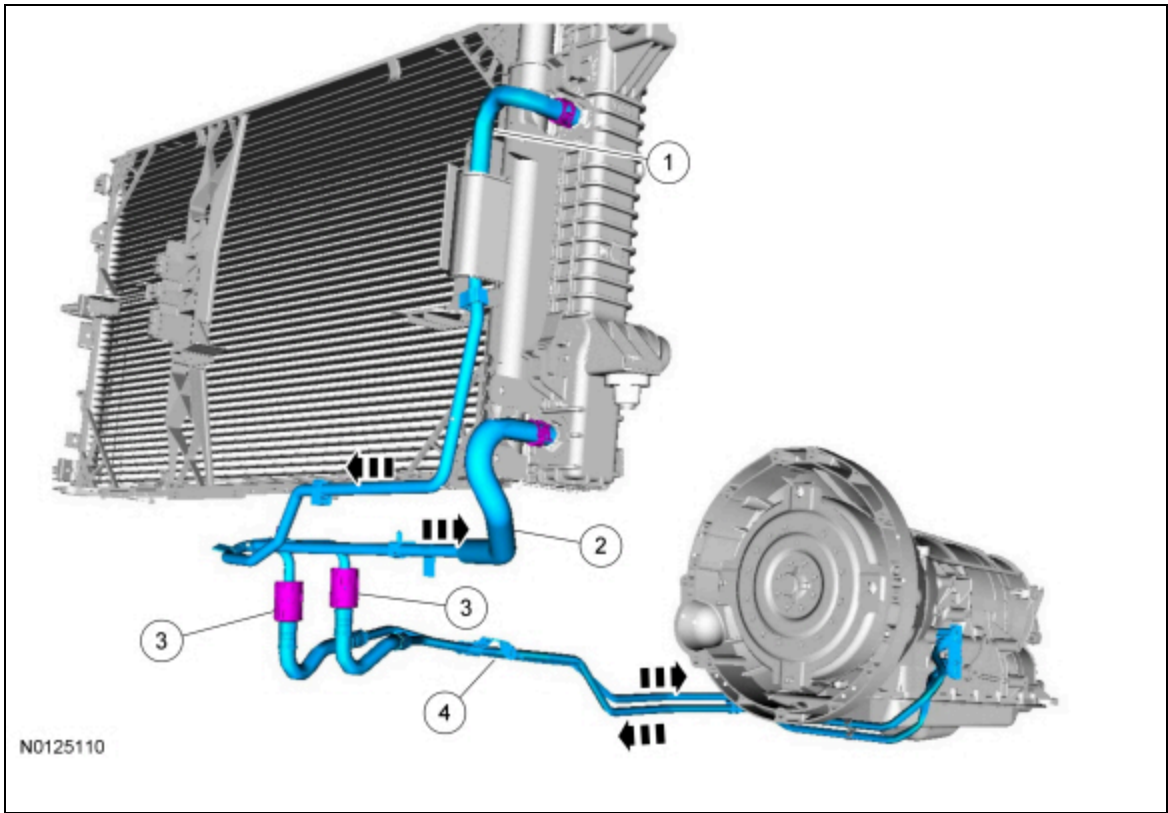


Item	Part Number	Description
1	7B0287B028	In-tank transmission fluid cooler outlet tube
2	7B0287B028	Transmission fluid cooler tube radiator inlet
3	7Z4657Z465	Transmission fluid cooler inlet and outlet tube secondary latches
4	7R0817R081	Transmission fluid cooler tubes

5.0L (4V) Engine Without an Auxiliary Transmission Fluid Cooler

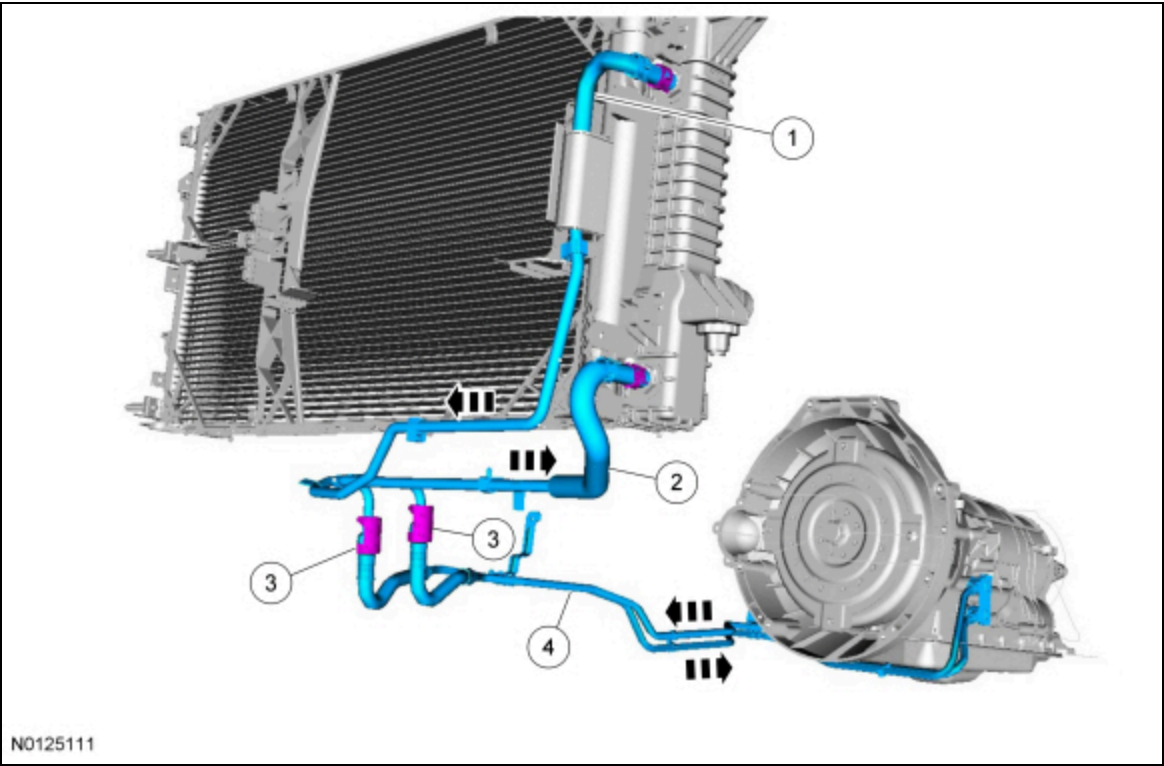


Item	Part Number	Description
1	7B0287B028	In-tank transmission fluid cooler outlet tube
2	7B0287B028	Transmission fluid cooler tube radiator inlet
3	7Z4657Z465	Transmission fluid cooler inlet and outlet tube secondary latches
4	7R0817R081	Transmission fluid cooler tubes

3.5L GTDI, 3.7L and 5.0L Engines With an Auxiliary Transmission Fluid Cooler

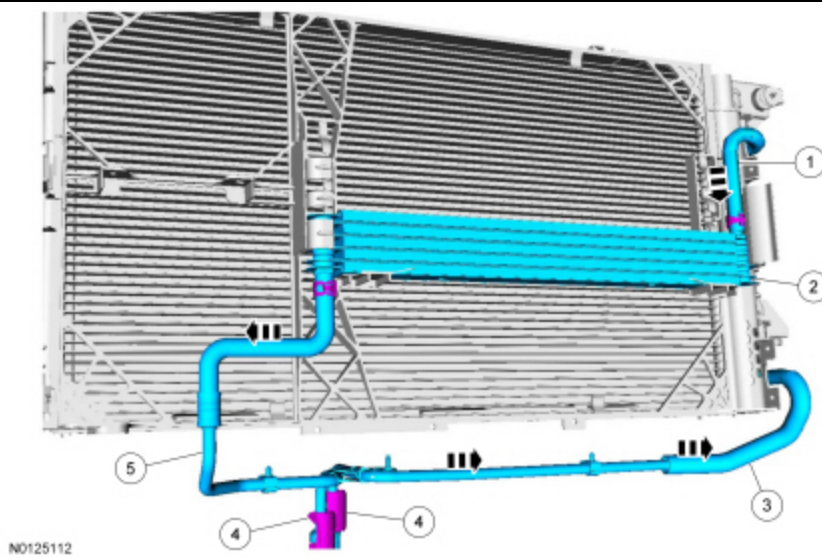

Item	Part Number	Description
1	7C4107C410	Auxiliary transmission fluid cooler inlet hose
2	7A0957A095	Auxiliary transmission fluid cooler
3	7B0287B028	In-tank transmission fluid cooler inlet tube
4	7Z4657Z465	Transmission fluid cooler inlet and outlet tube secondary latches
5	7B0287B028	Auxiliary transmission fluid cooler outlet hose

6.2L (2V) Engine With an Auxiliary Transmission Fluid Cooler

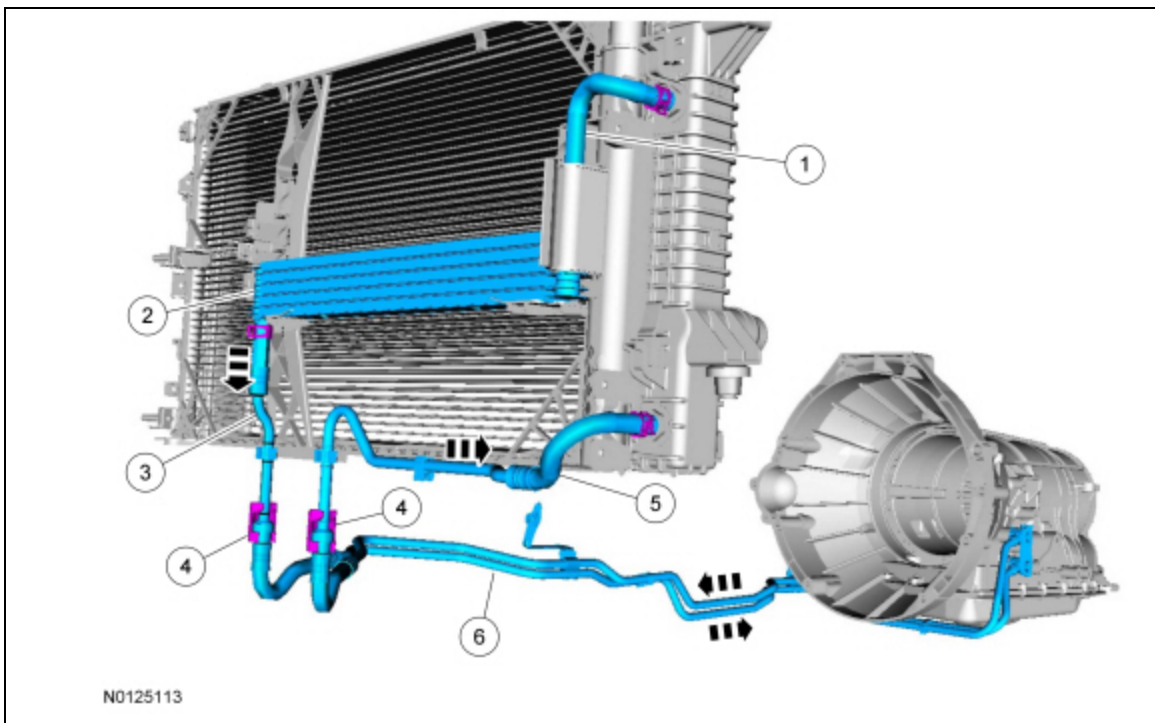

Item	Part Number	Description
1	7C4107C410	Auxiliary transmission fluid cooler inlet hose
2	7A0957A095	Auxiliary transmission fluid cooler
3	7B0287B028	Auxiliary transmission fluid cooler outlet hose

4	7Z465 7Z465	Transmission fluid cooler inlet and outlet tube secondary latches
5	7B028 7B028	In-tank transmission fluid cooler inlet tube
6	7R081 7R081	Transmission fluid cooler inlet and outlet tubes