


Selector Lever Bezel



NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)


NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

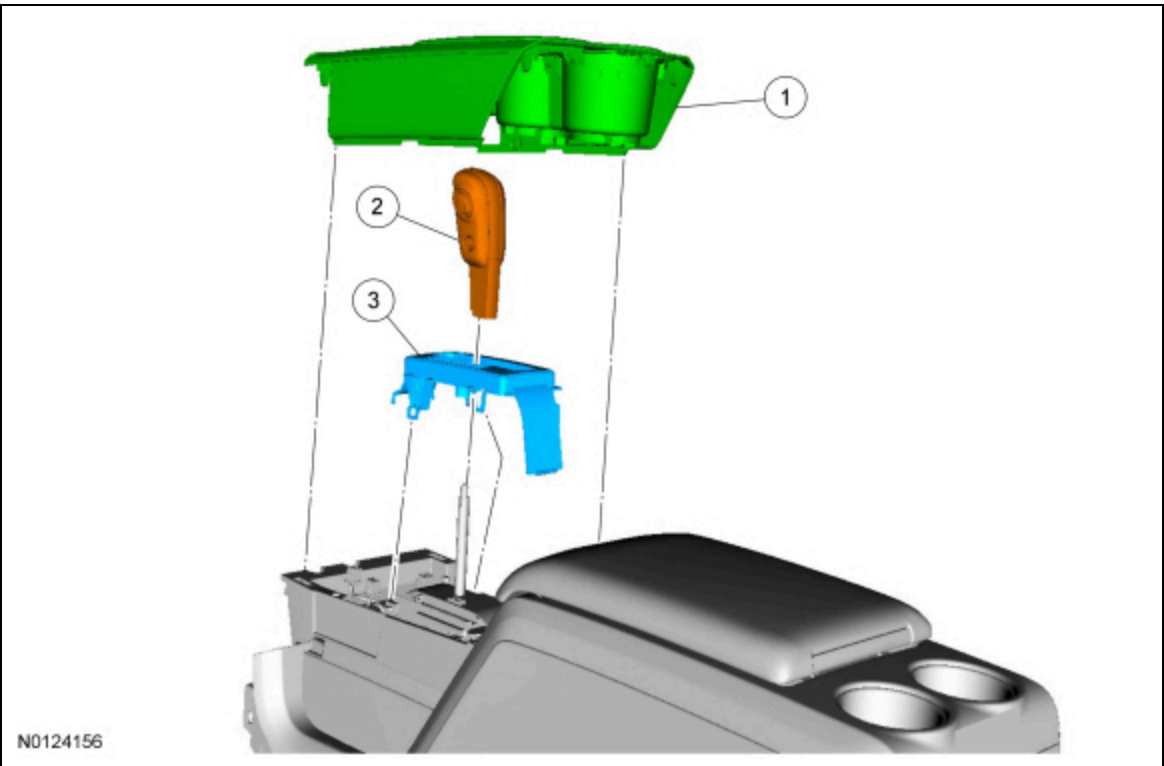

Item	Part Number	Description
1	045A76 045A76	Console upper trim panel
2	7213 7213	Selector lever knob
3	7D443 7D443	Selector lever bezel


Removal

1. Remove the instrument panel to floor console finish panel.

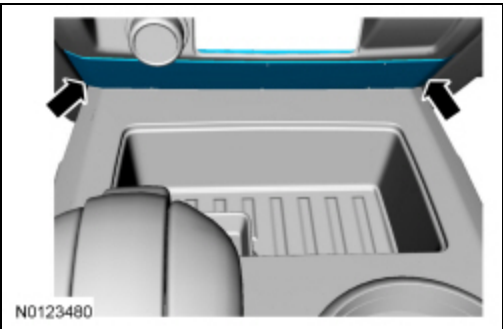


2. Remove the floor console upper finish panel.


- Starting at the rear of the upper finish panel, carefully pry up the upper finish panel and disconnect the electrical connectors.

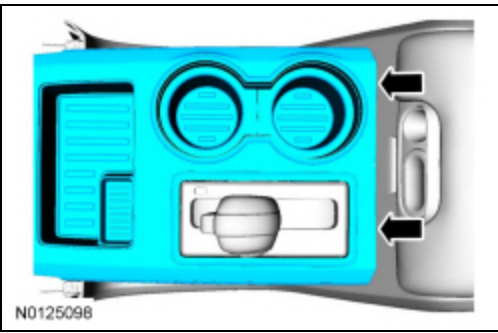


3. Remove and discard the RH selector lever knob cover.
 1. Start at the bottom front.
 2. Move towards the top front and remove the cover.

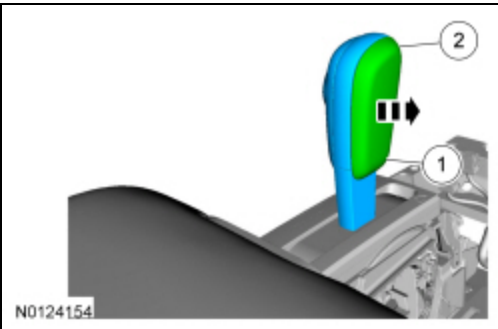


4. Remove and discard the LH selector lever knob cover.
 1. Start at the bottom front.
 2. Move towards the top front and remove the cover.

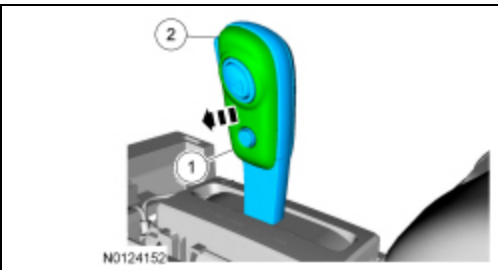

5. Remove and discard the RH selector lever knob screw.

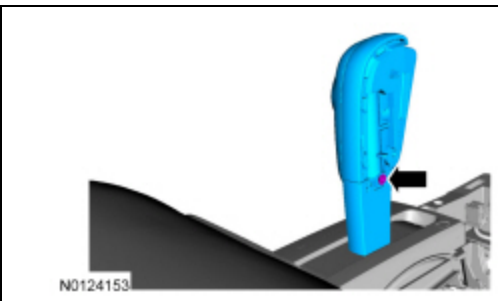


6. Remove and discard the LH selector lever knob screw.

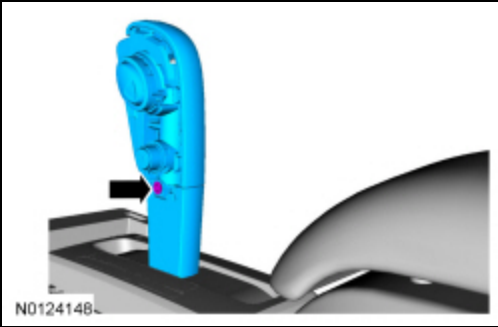


7. Disconnect the select shift and the Tow/Haul electrical connectors and remove the selector lever knob.

8. Lift the tabs on the selector lever bezel and lift the bezel.

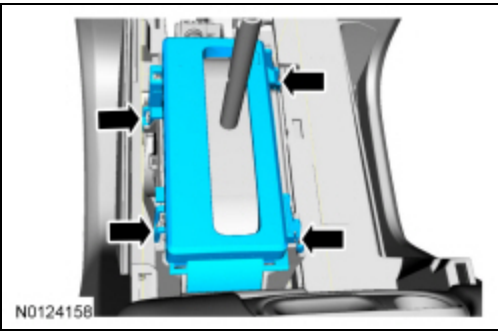


9. Disconnect the electrical harness from the bezel and remove the selector lever bezel.

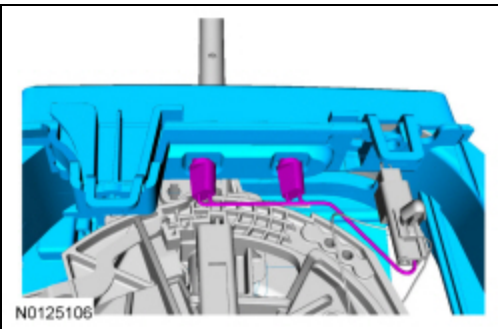


Installation

1. Connect the electrical harness to the selector lever bezel.

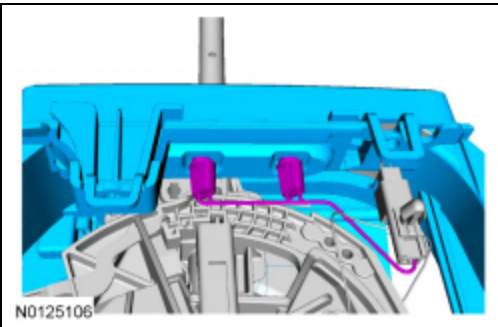


2. Install the selector lever bezel onto the selector lever housing.

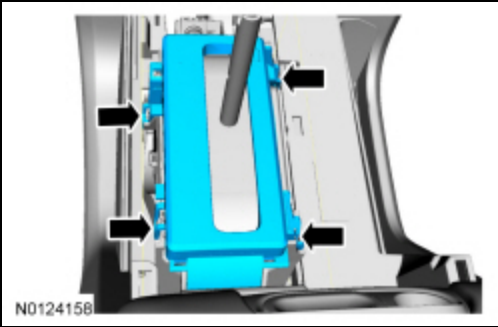


3. Connect the select shift and the Tow/Haul electrical connectors and install the selector lever knob.


4. Install a new LH selector lever knob screw.

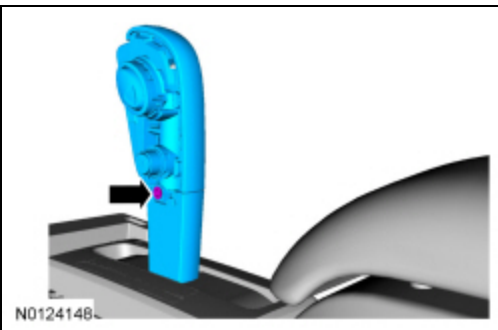


5. Install a new RH selector lever knob screw.

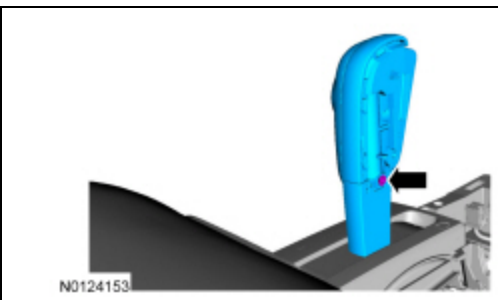


6. Install a new LH selector lever knob cover.

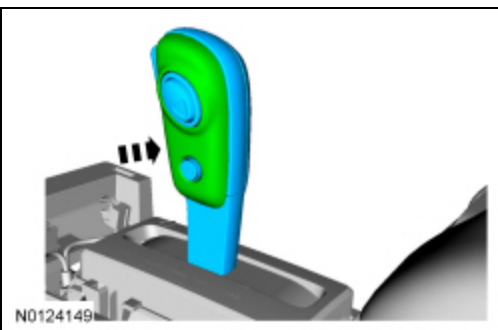

7. Install a new RH selector lever knob cover.

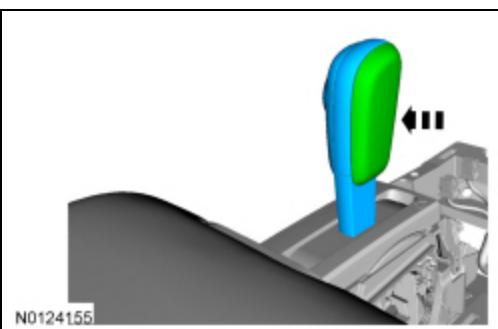

8. Connect and install the floor console upper finish panel.

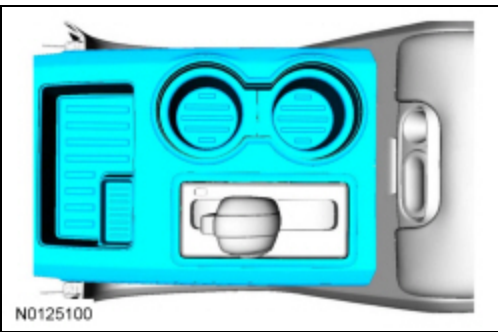

9. Install the instrument panel to floor console finish panel.

