


Transfer Case Control Module (TCCM)

 [Ford Ecat Electronic Parts Catalog](#)

Removal and Installation

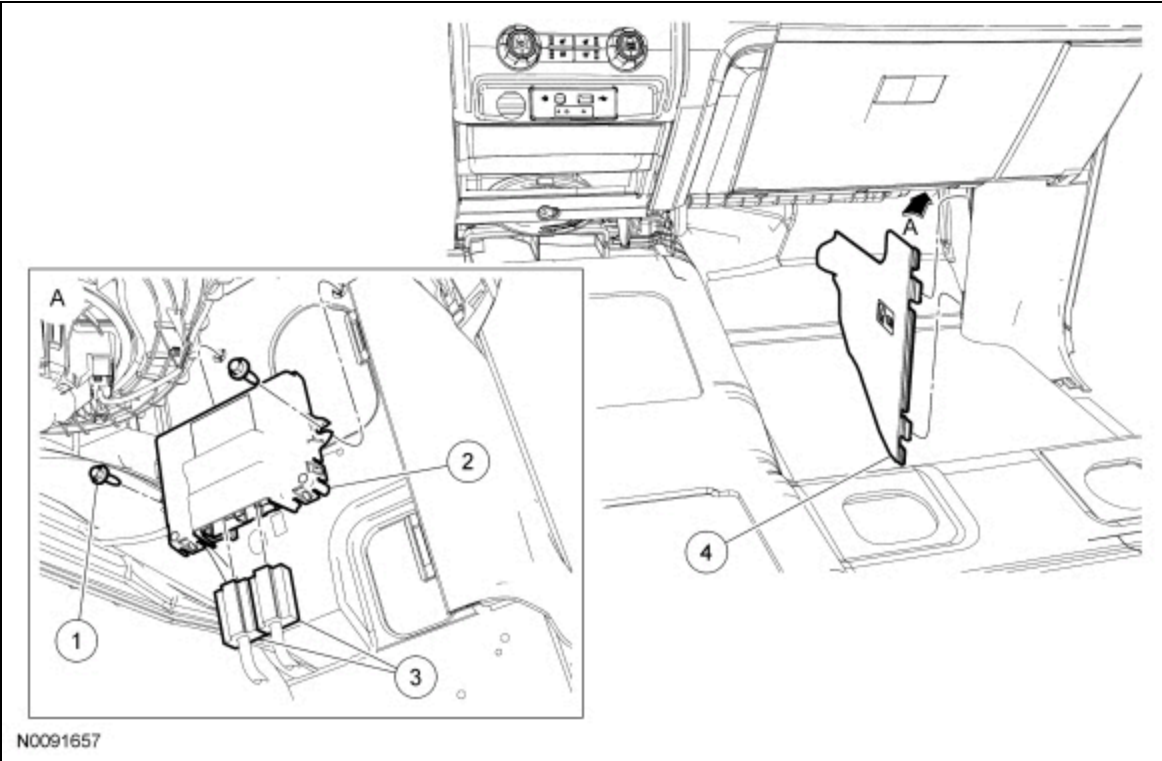

Item	Part Number	Description
1	W706287 W706287	Screw (2 required)
2	7E4537 E453	Transfer Case Control Module (TCCM)
3	—	TCCM electrical connectors (part of 12A581)
4	023A980 23A98	Central Junction Box (CJB) cover

1. Remove the Central Junction Box (CJB) cover to gain access to the Transfer Case Control Module (TCCM) .

NOTE: The TCCM has slotted mounting holes. It is not necessary to remove the LH TCCM screw when removing the TCCM .

2. Loosen the LH TCCM screw and remove the RH TCCM screw.

- To install, tighten to 7 Nm (62 lb-in).

3. Disconnect the 2 electrical connectors.

4. Remove the TCCM .

5. To install, reverse the removal procedure.