


Accelerator Pedal — Adjustable

 [Ford Ecat Electronic Parts Catalog](#)

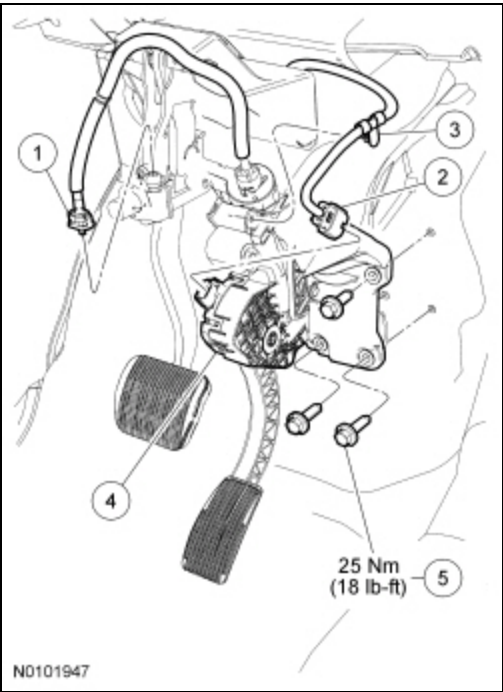

Item	Part Number	Description
1	—	Accelerator pedal-to-brake pedal cable (part of 9F836)
2	—	Accelerator Pedal Position (APP) sensor electrical connector (part of 12A581)
3	—	APP sensor electrical connector wiring harness retainer (part of 12A581)
4	9F836 9F836	Accelerator pedal assembly
5	W713384 W713384	Accelerator pedal assembly bolts (3 required)

Removal

1. If possible, adjust the pedals to the full forward (away from driver) position.
2. **NOTE:** *To prevent setting DTCs, make sure the ignition switch is in the OFF position prior to disconnecting the accelerator pedal electrical connector.*

Disconnect the Accelerator Pedal Position (APP) sensor electrical connector.

3. Disconnect the accelerator pedal-to-brake pedal cable from the brake pedal.
4. Remove the 3 bolts and the accelerator pedal assembly.

Installation

1. Install the accelerator pedal assembly and the 3 bolts.
 - Tighten to 25 Nm (18 lb-ft).

2. Connect the accelerator pedal-to-brake pedal cable to the brake pedal.
3. Connect the APP sensor electrical connector.
4. Carry out the adjustable pedal indexing procedure. For additional information, refer to Section 206-06.