






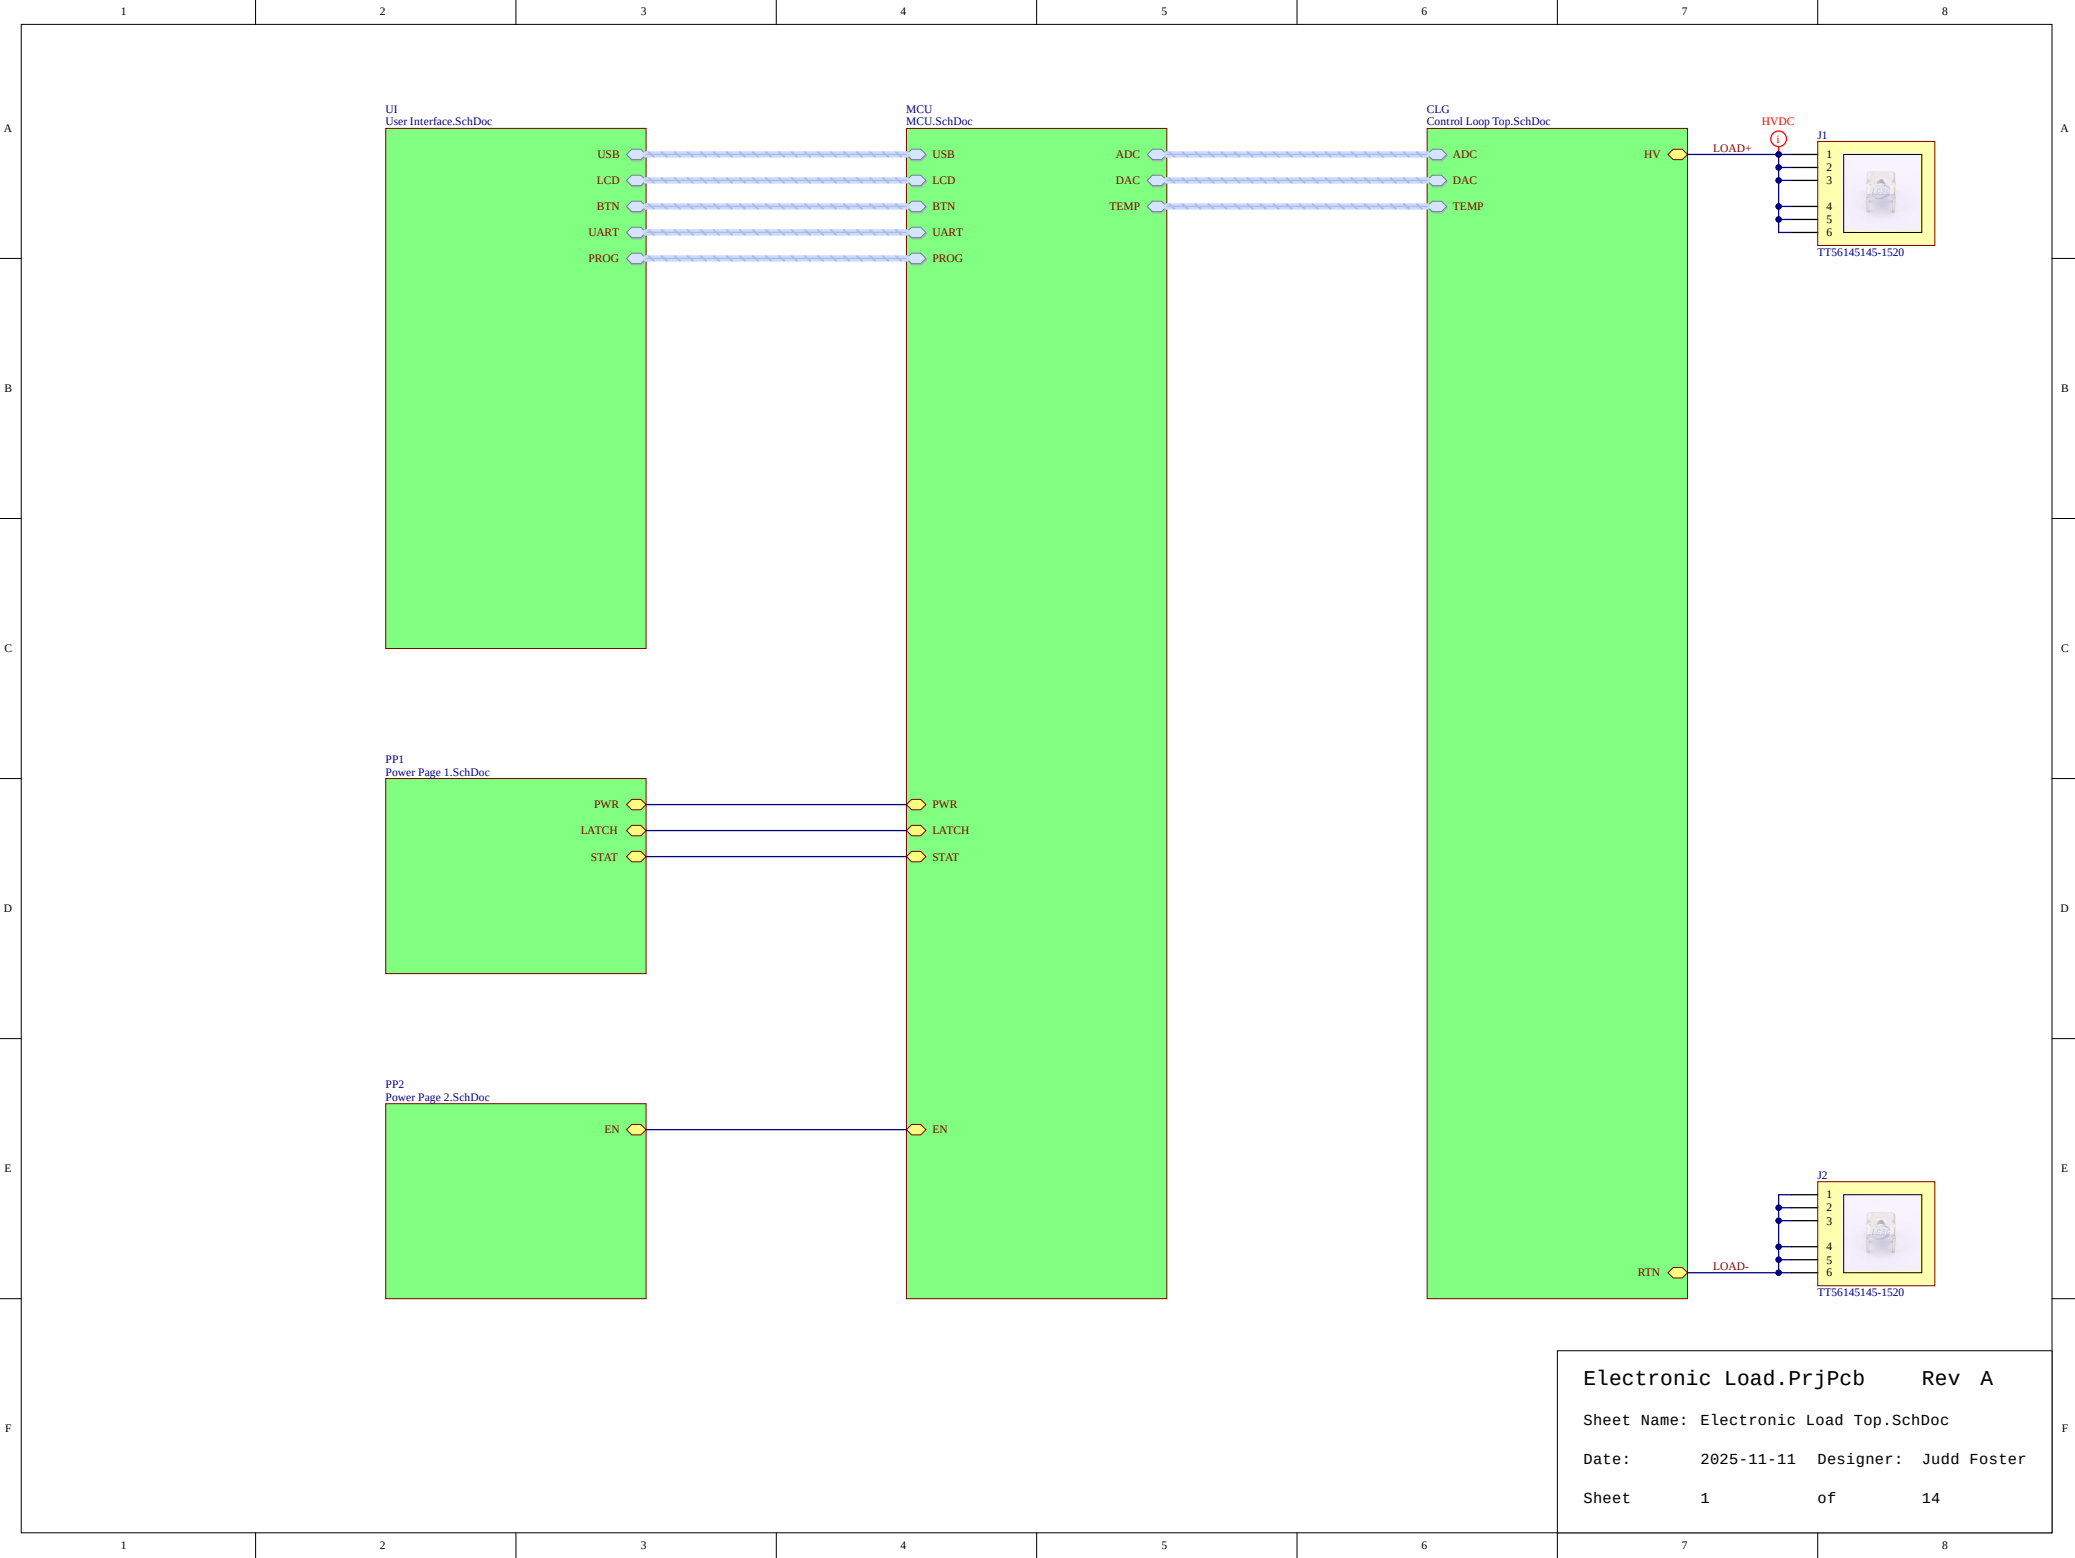

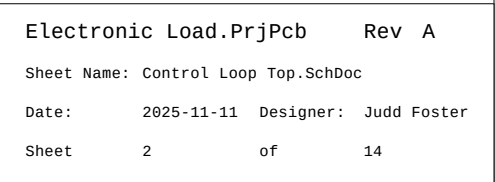

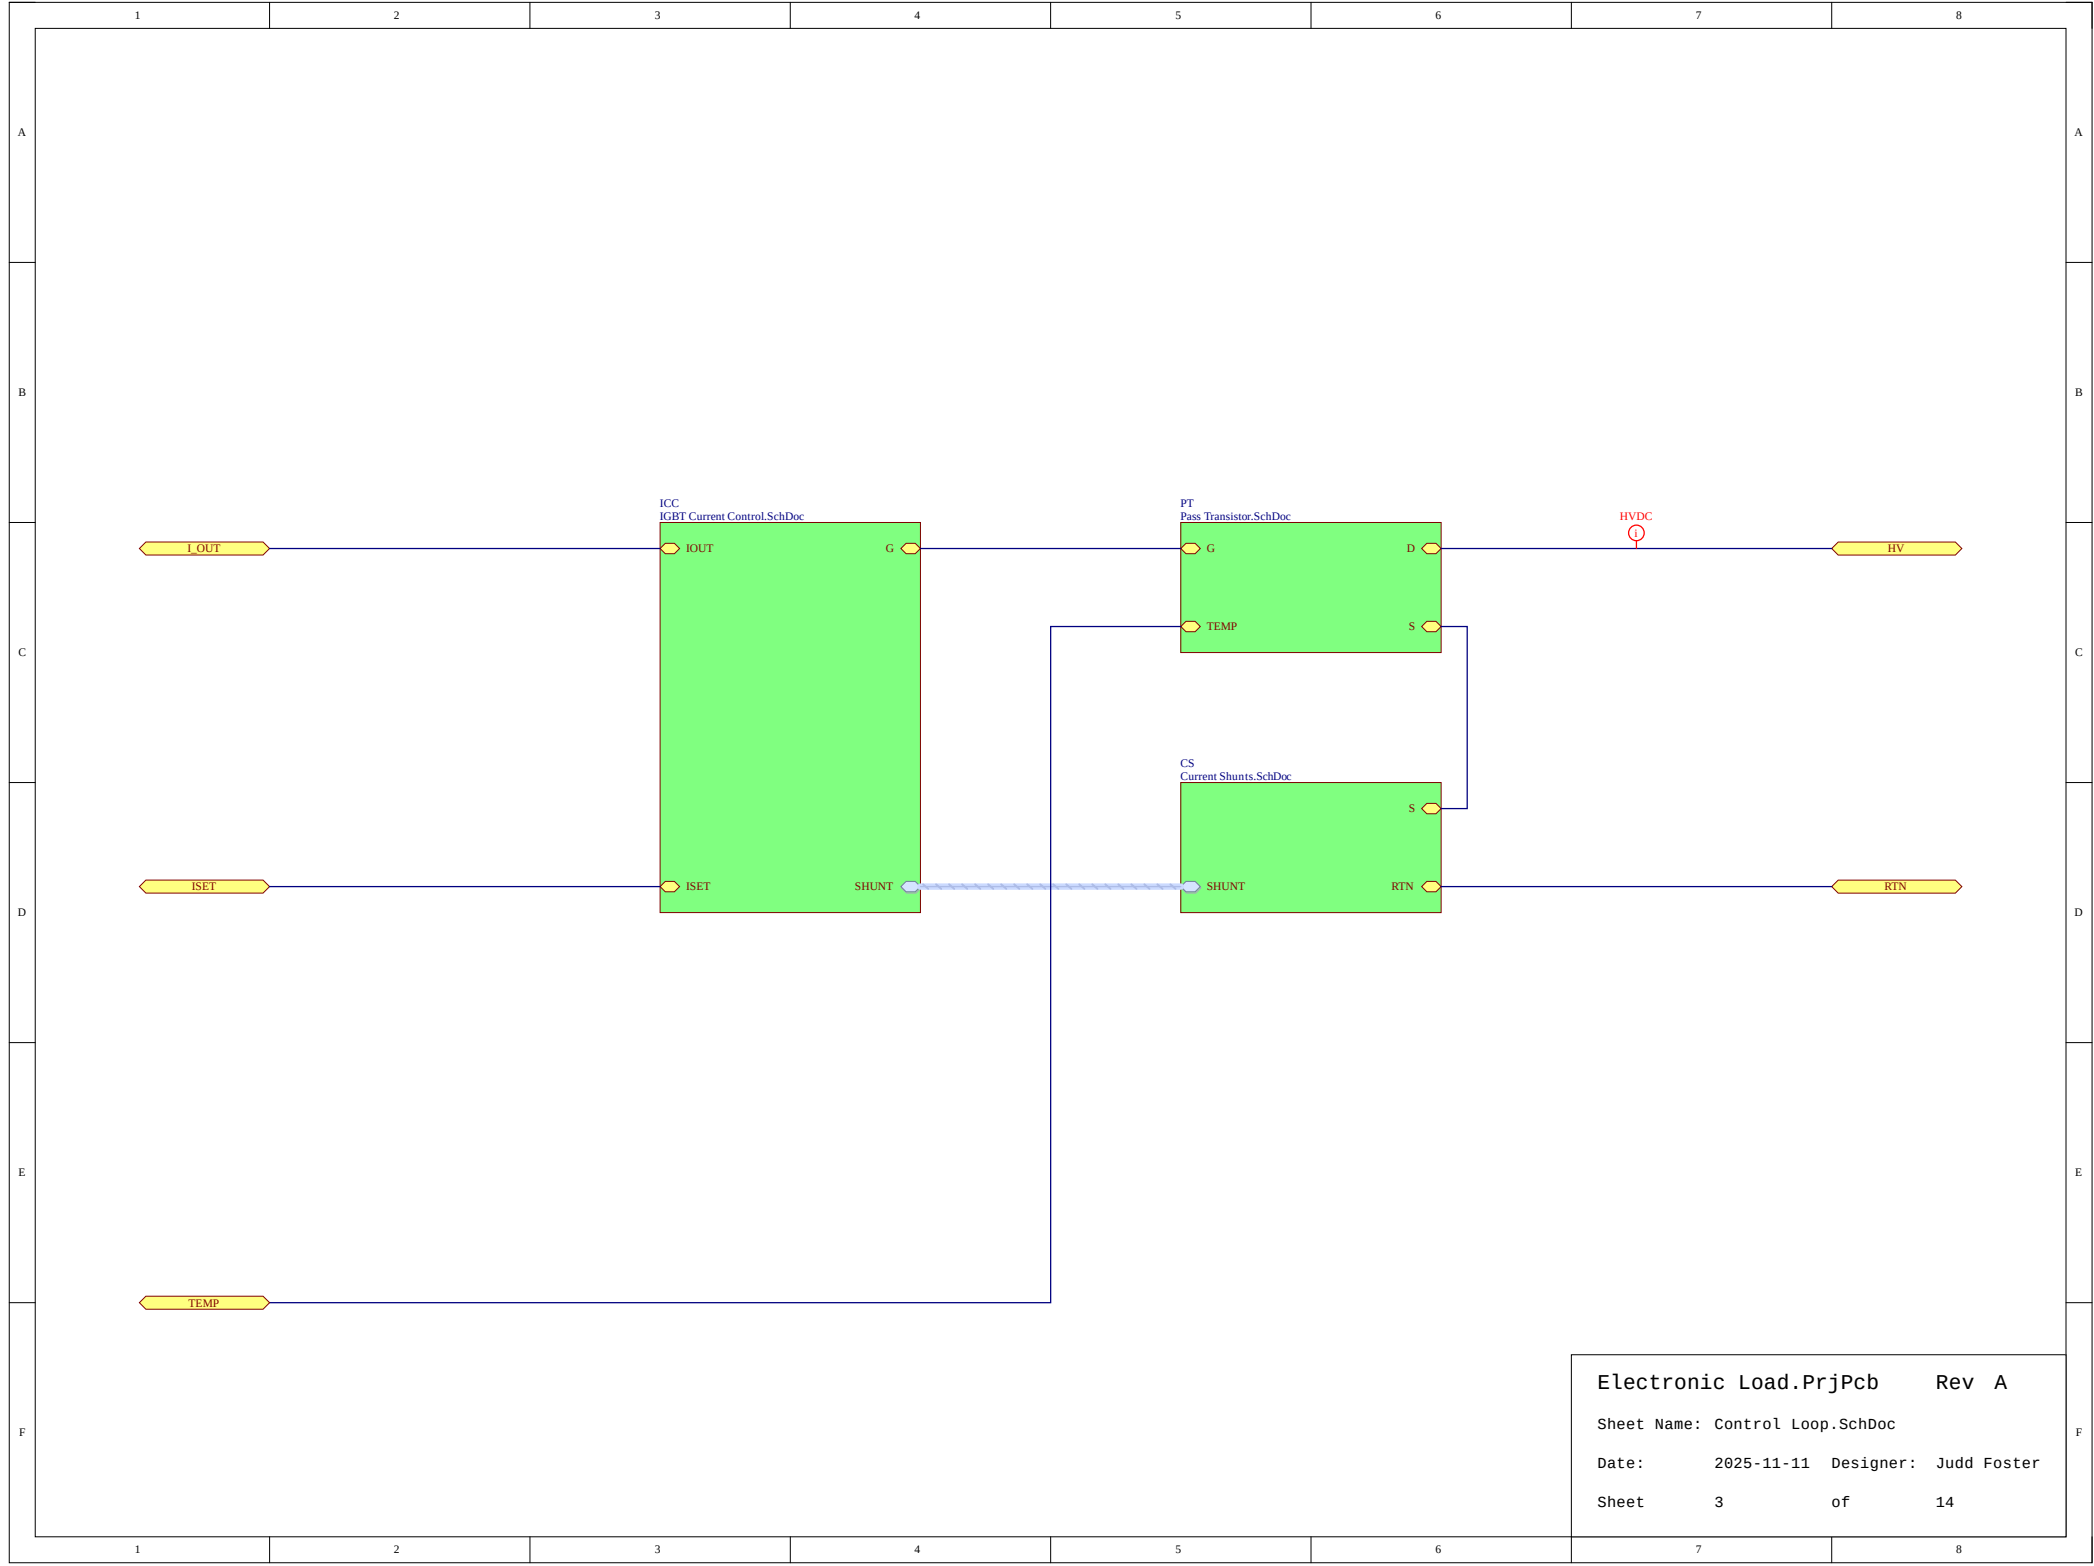

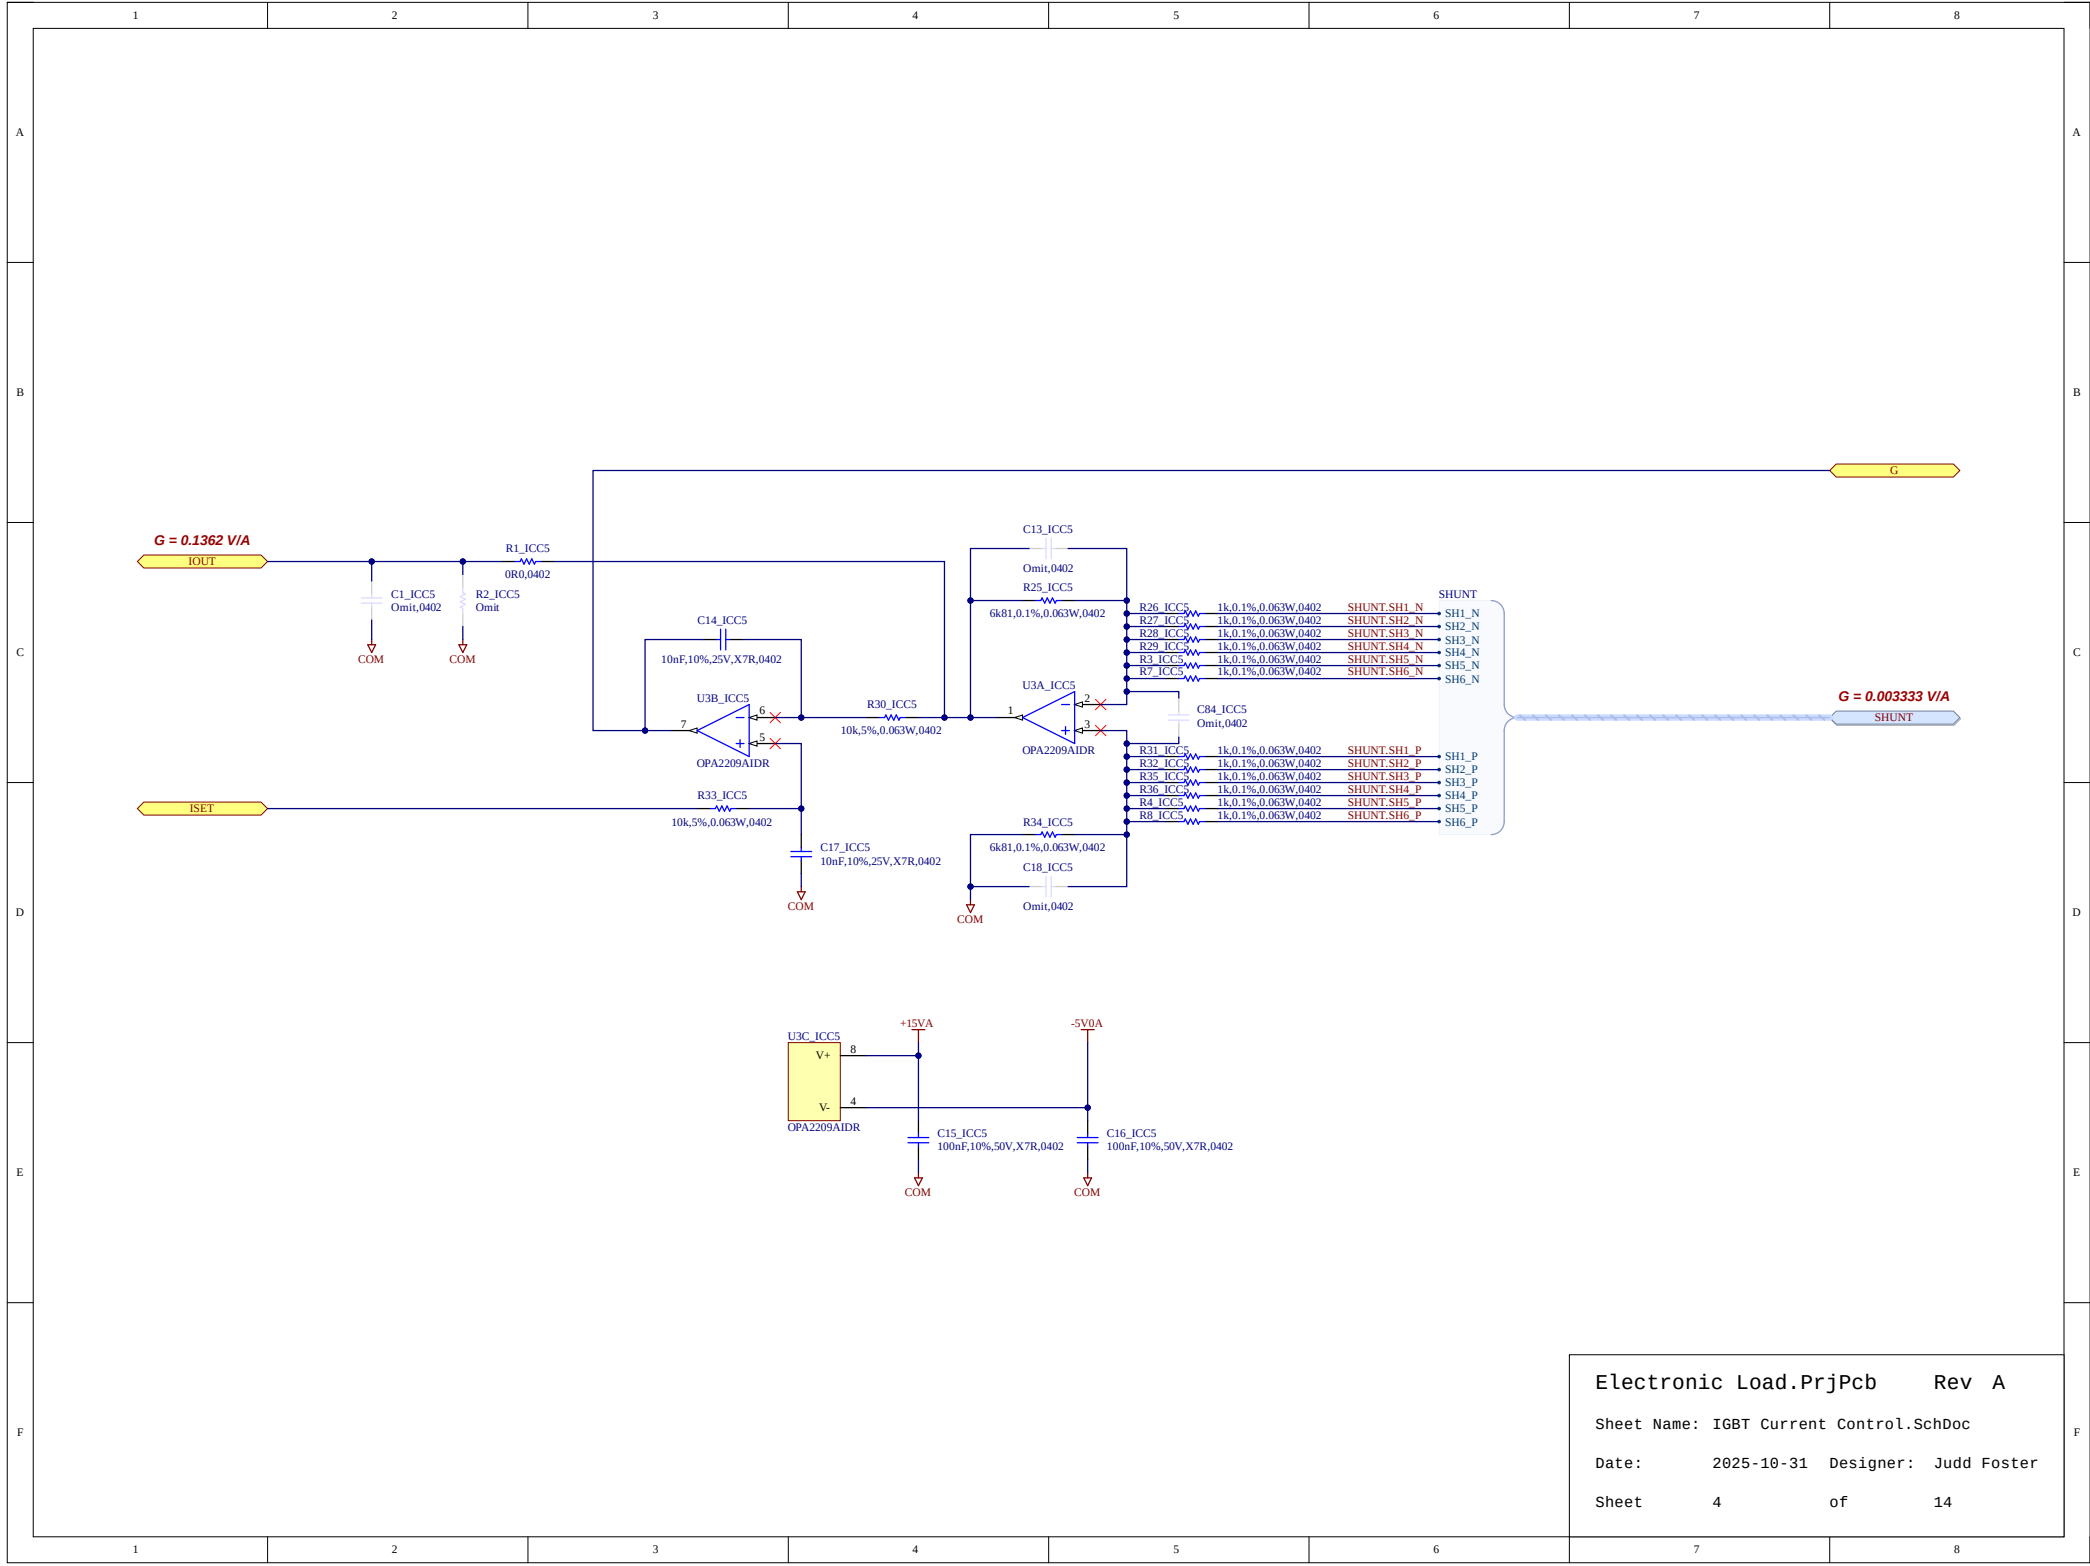

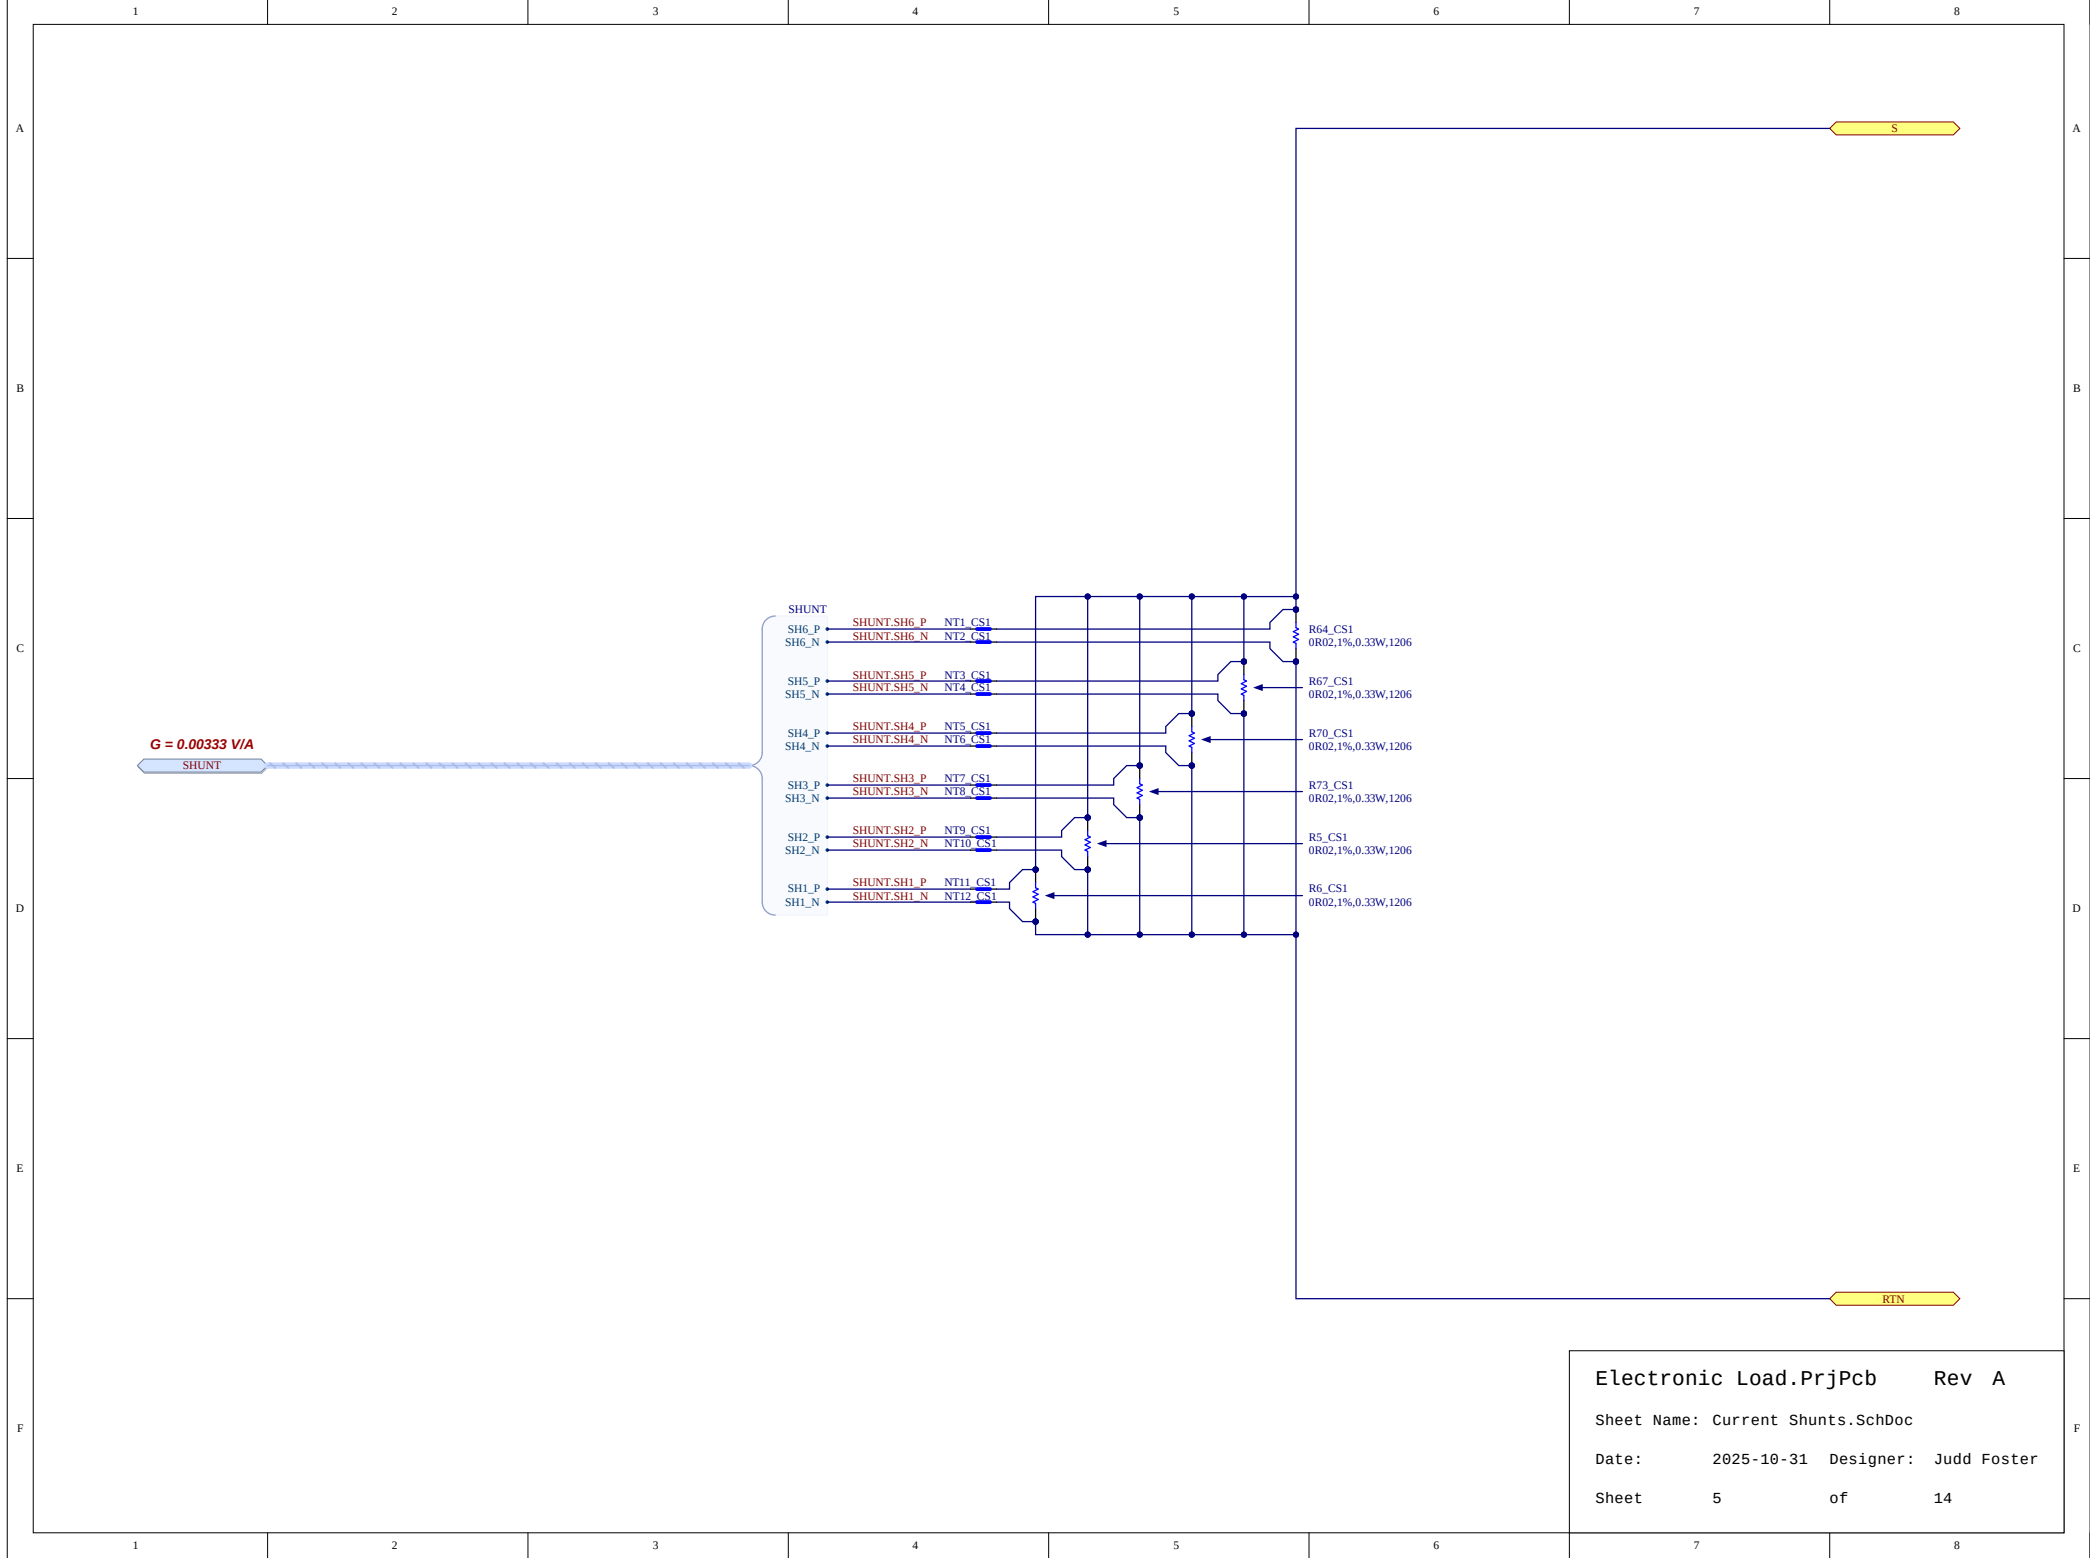



Electronic Load.PrjPcb Rev A

Sheet Name: Current Shunts.SchDoc

Date: 2025-10-31 Designer: Judd Foster

Sheet 5 of 14

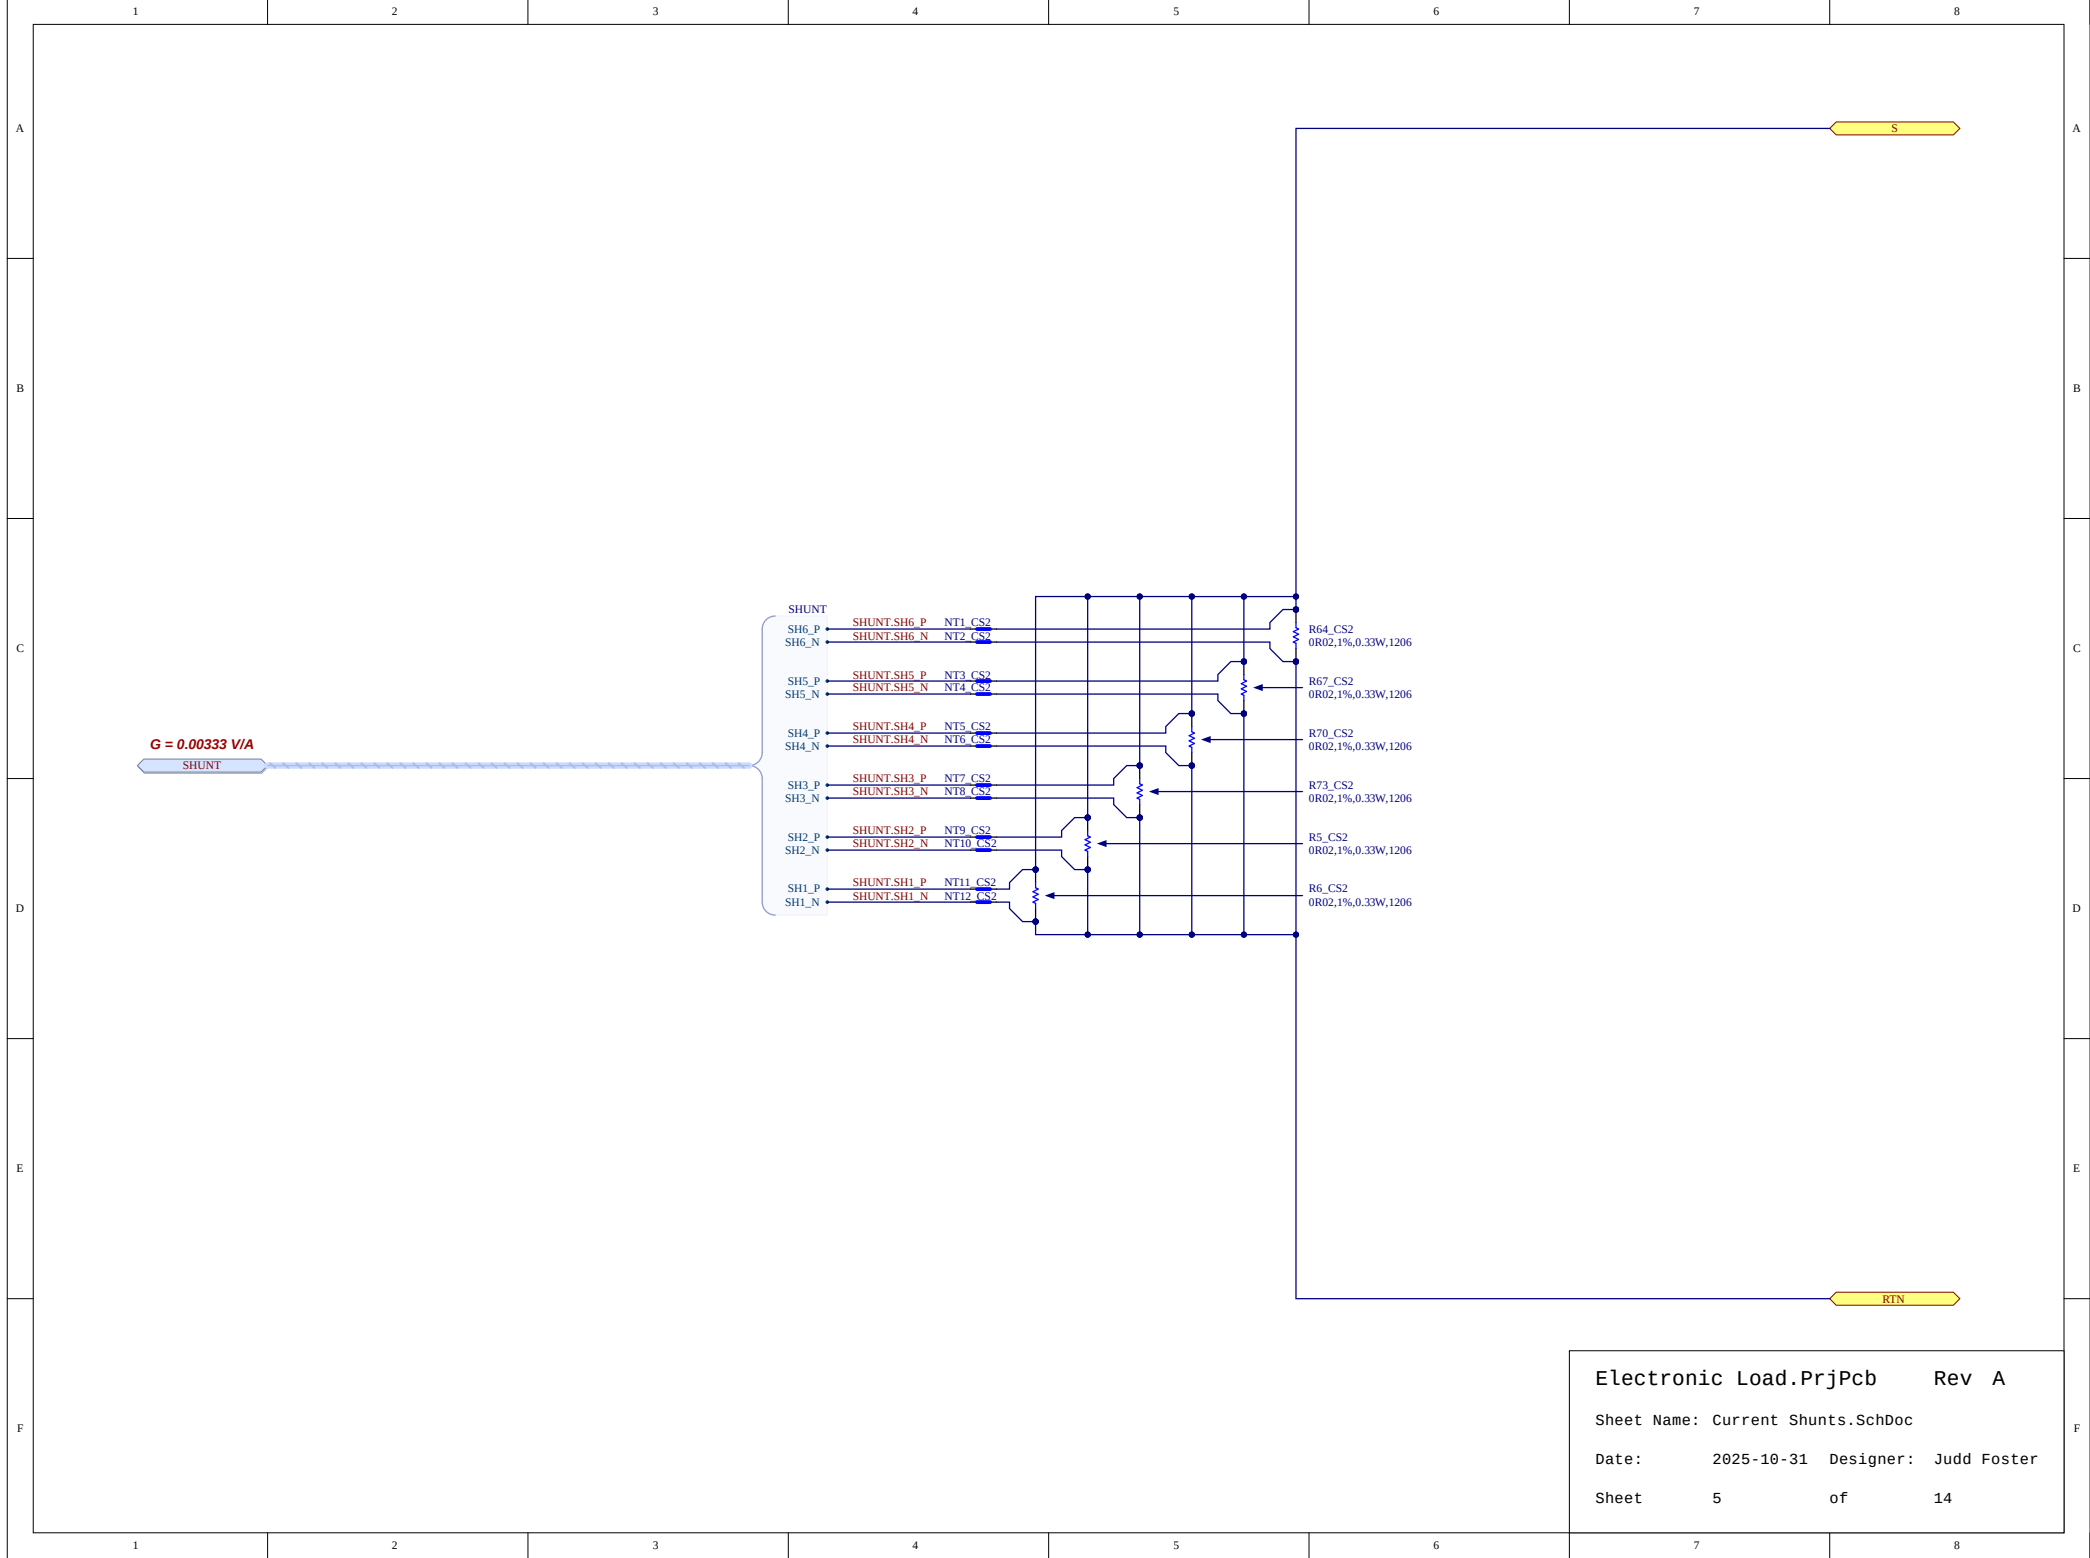

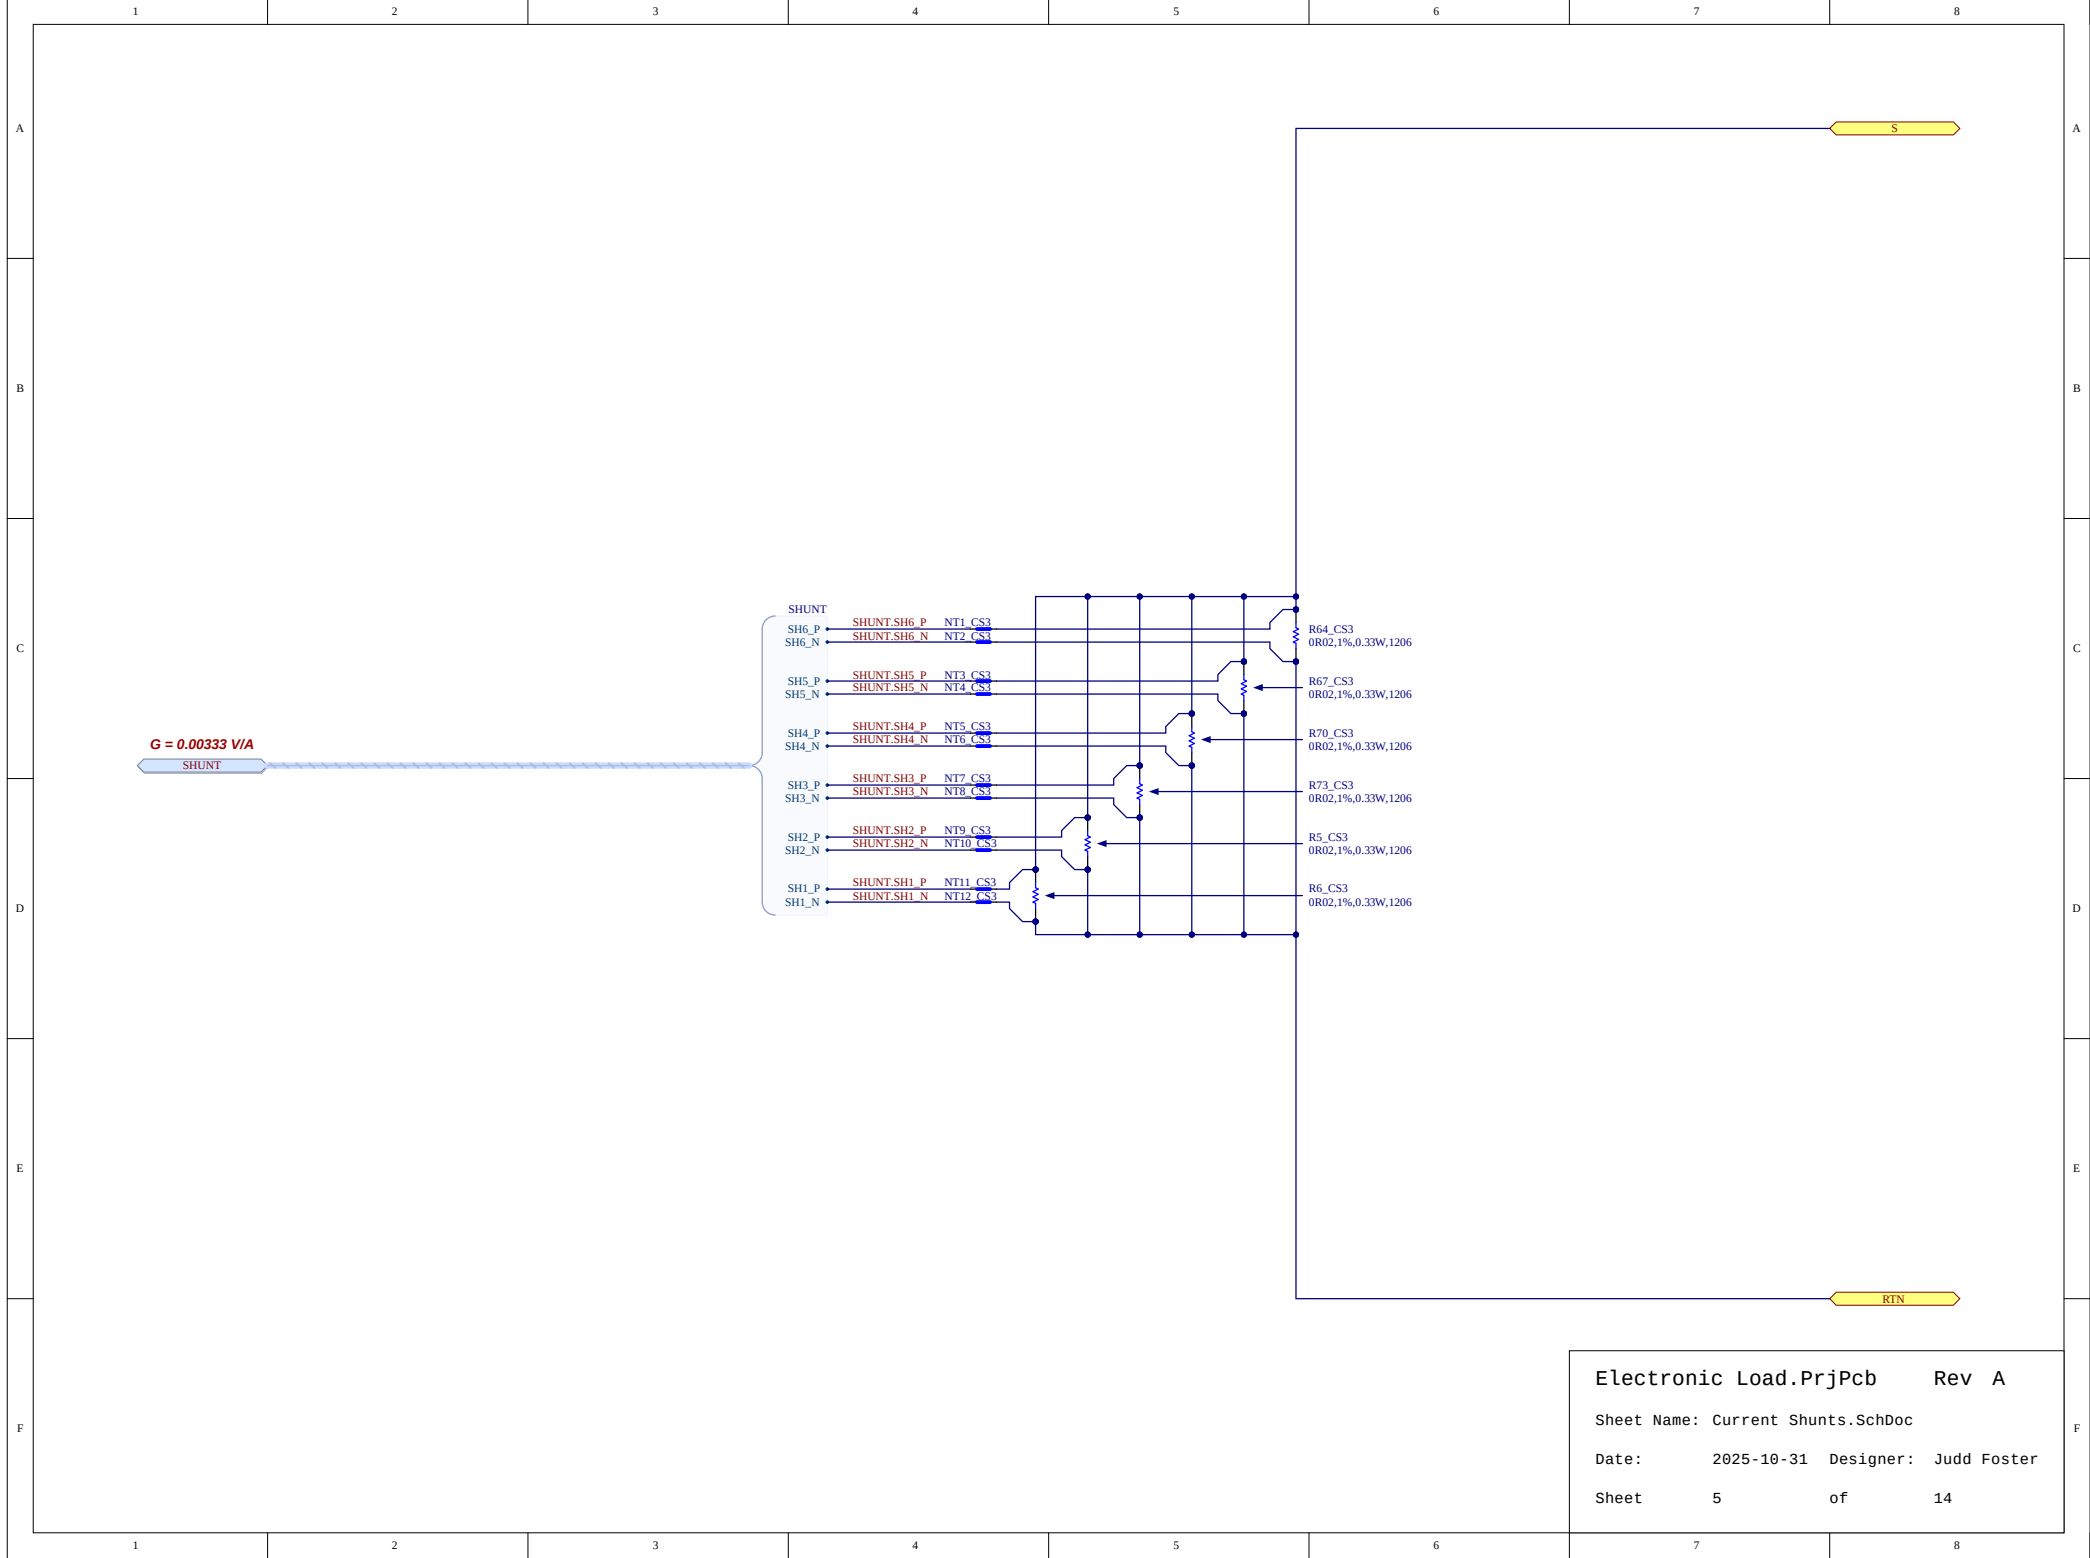



Electronic Load.PrjPcb Rev A


Sheet Name: Current Shunts.SchDoc


Date: 2025-10-31 Designer: Judd Foster

Sheet 5 of 14

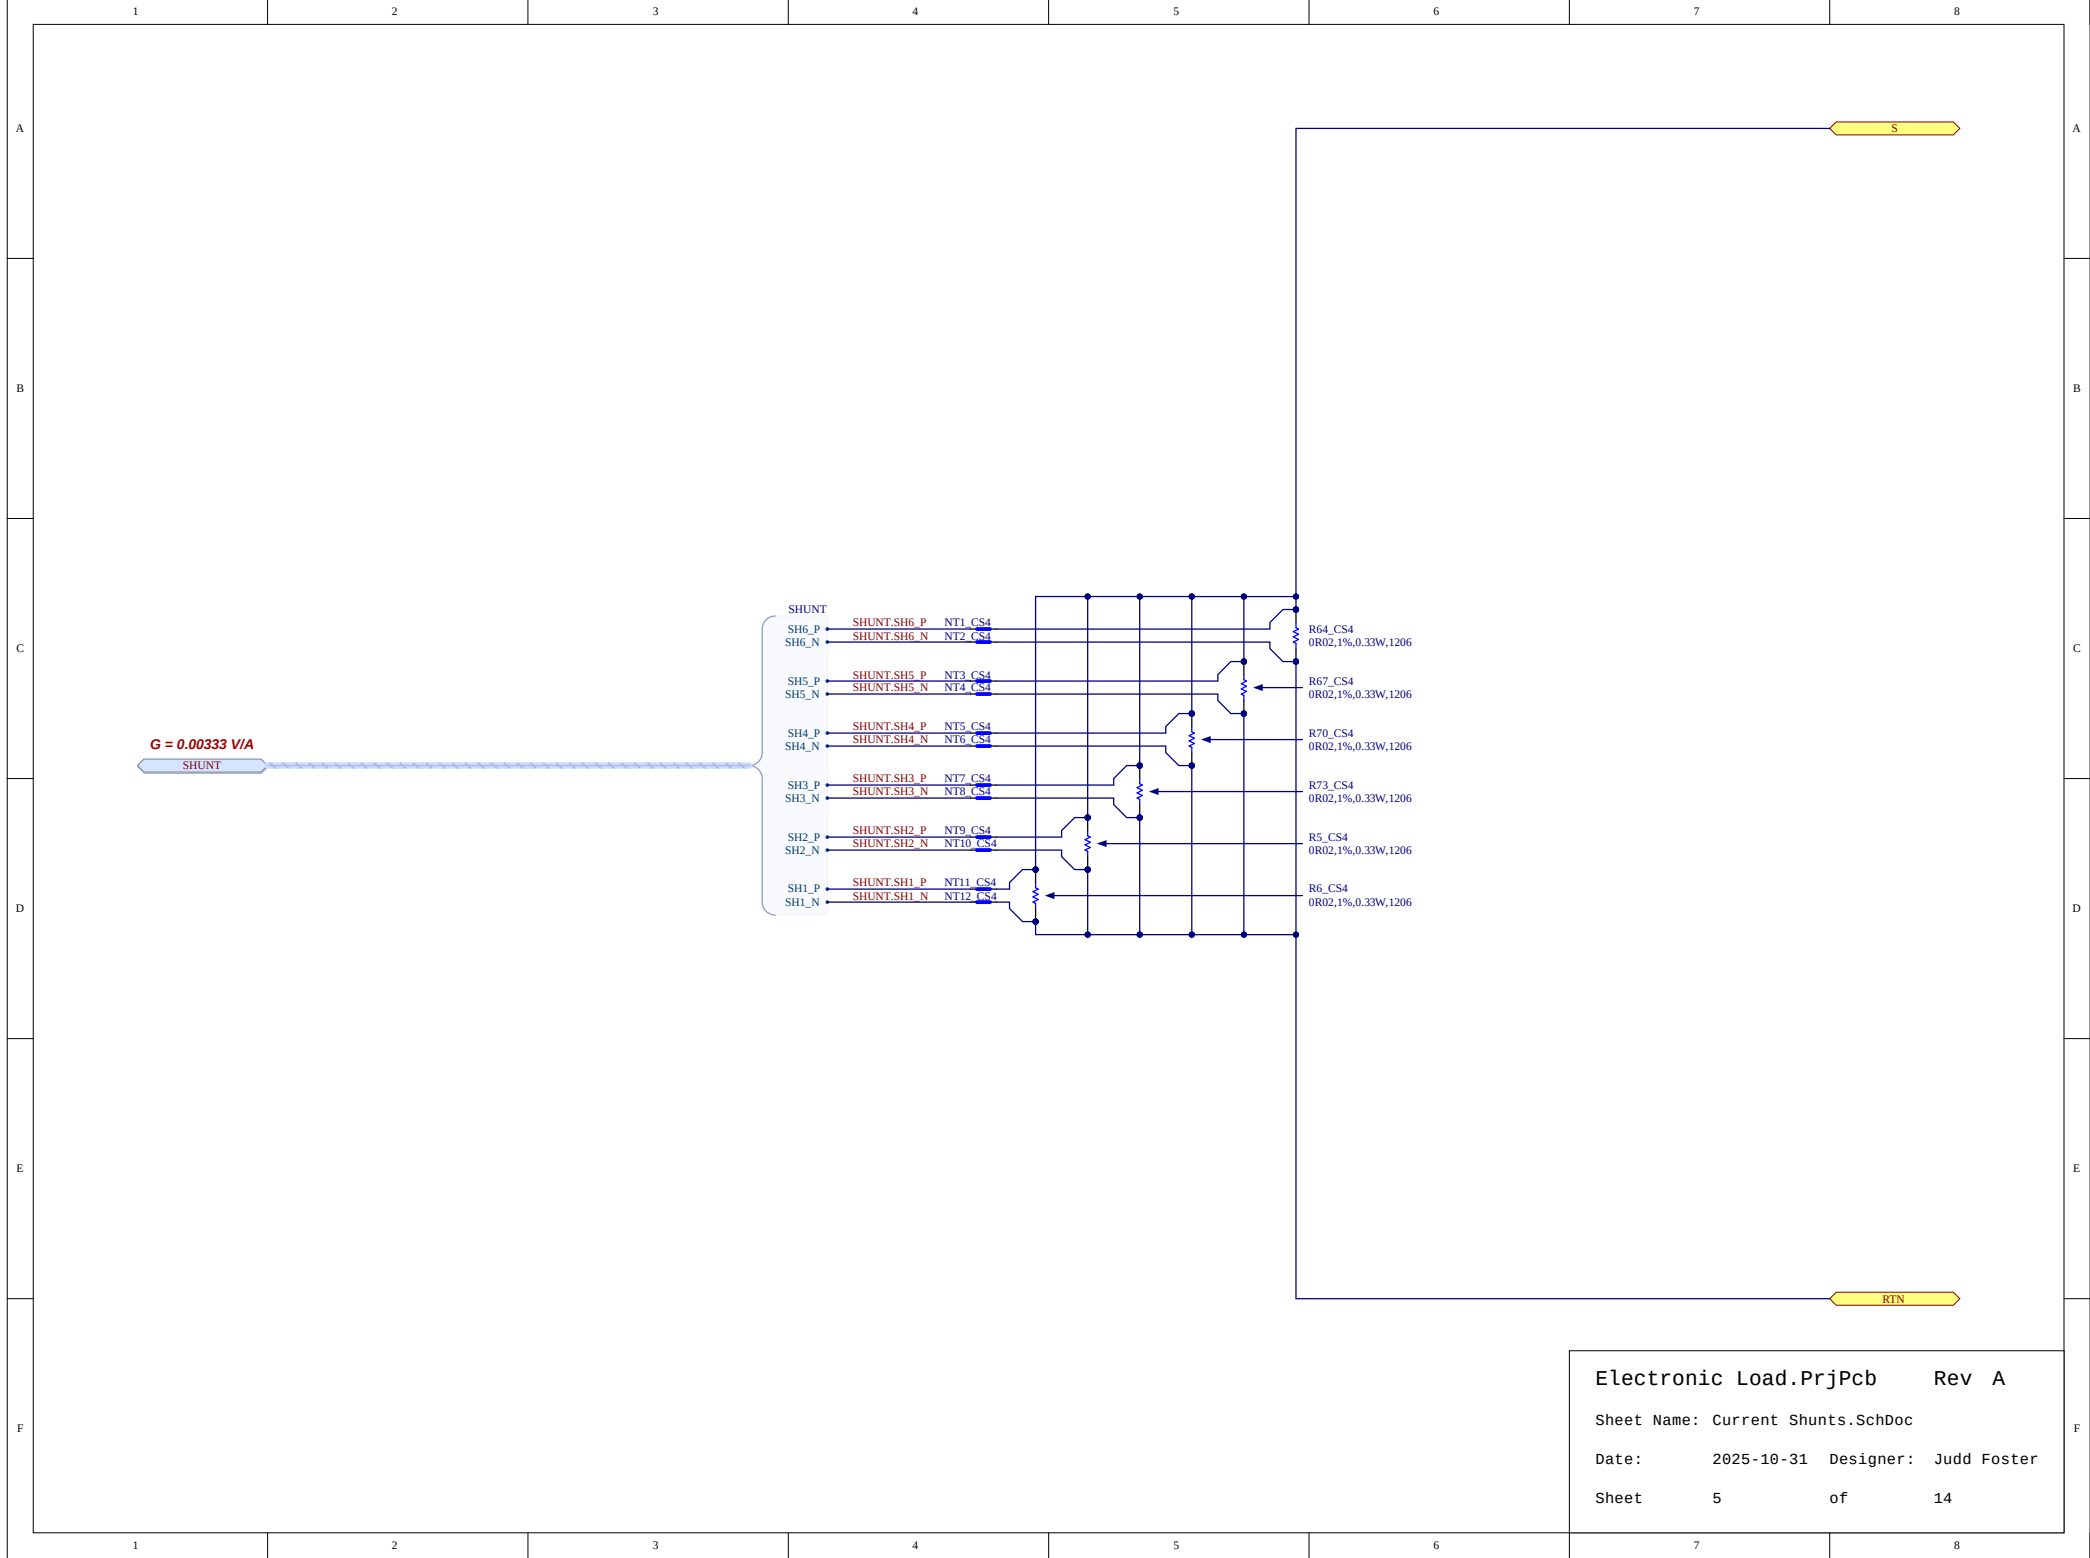

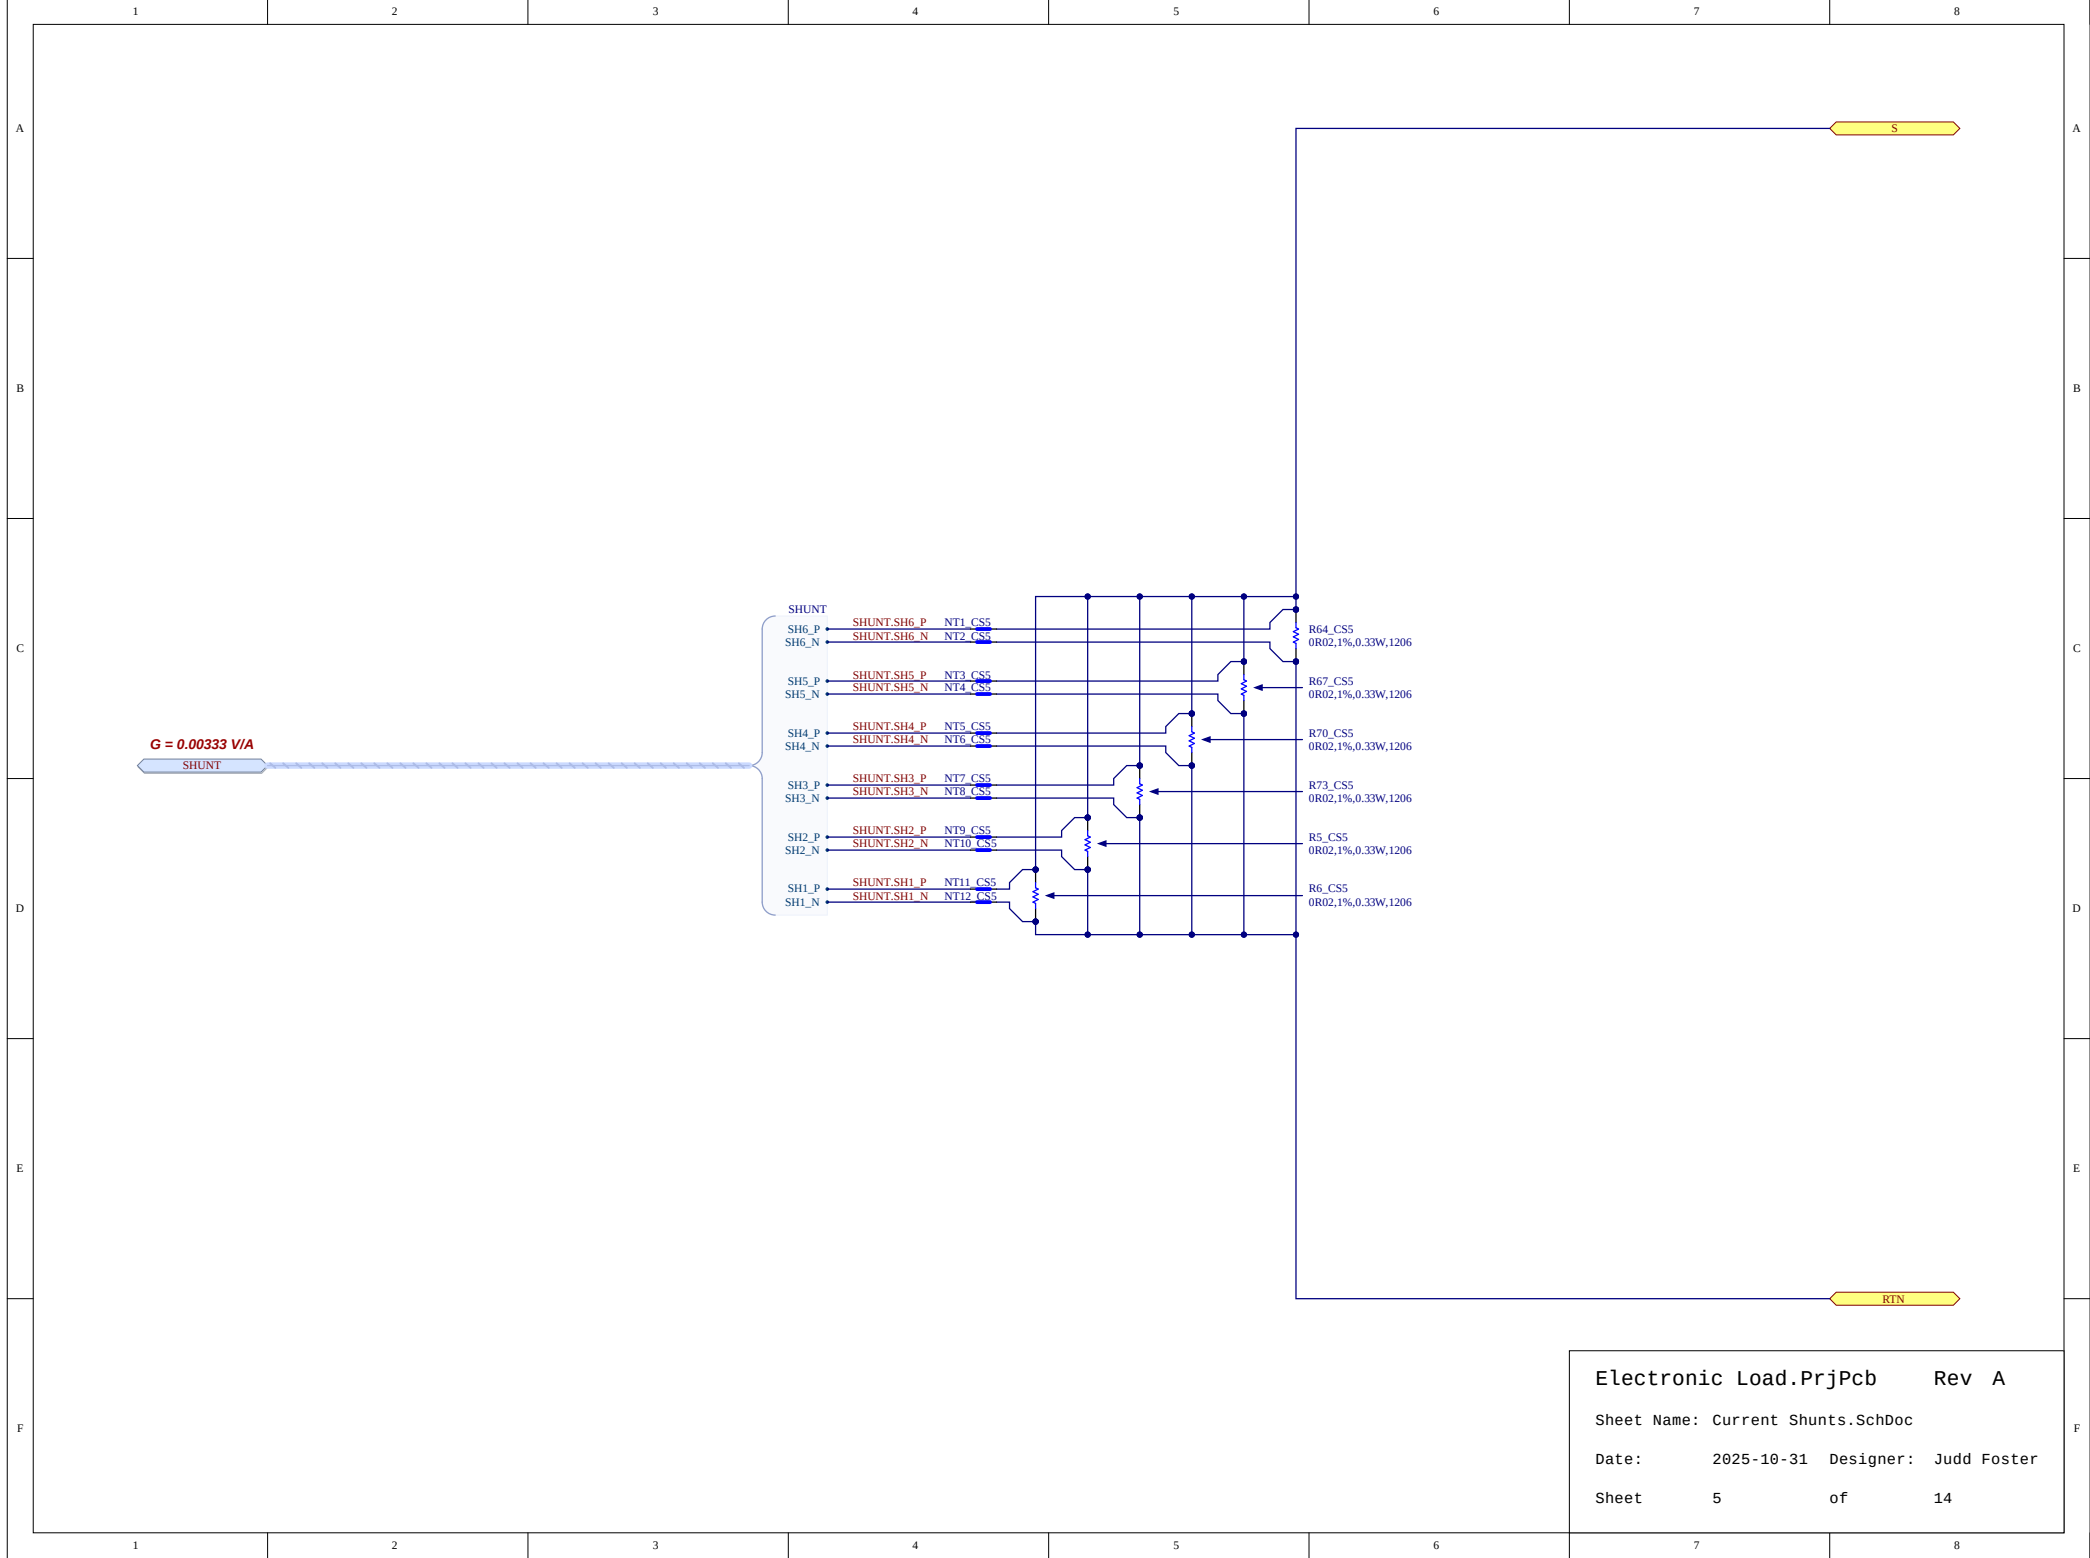

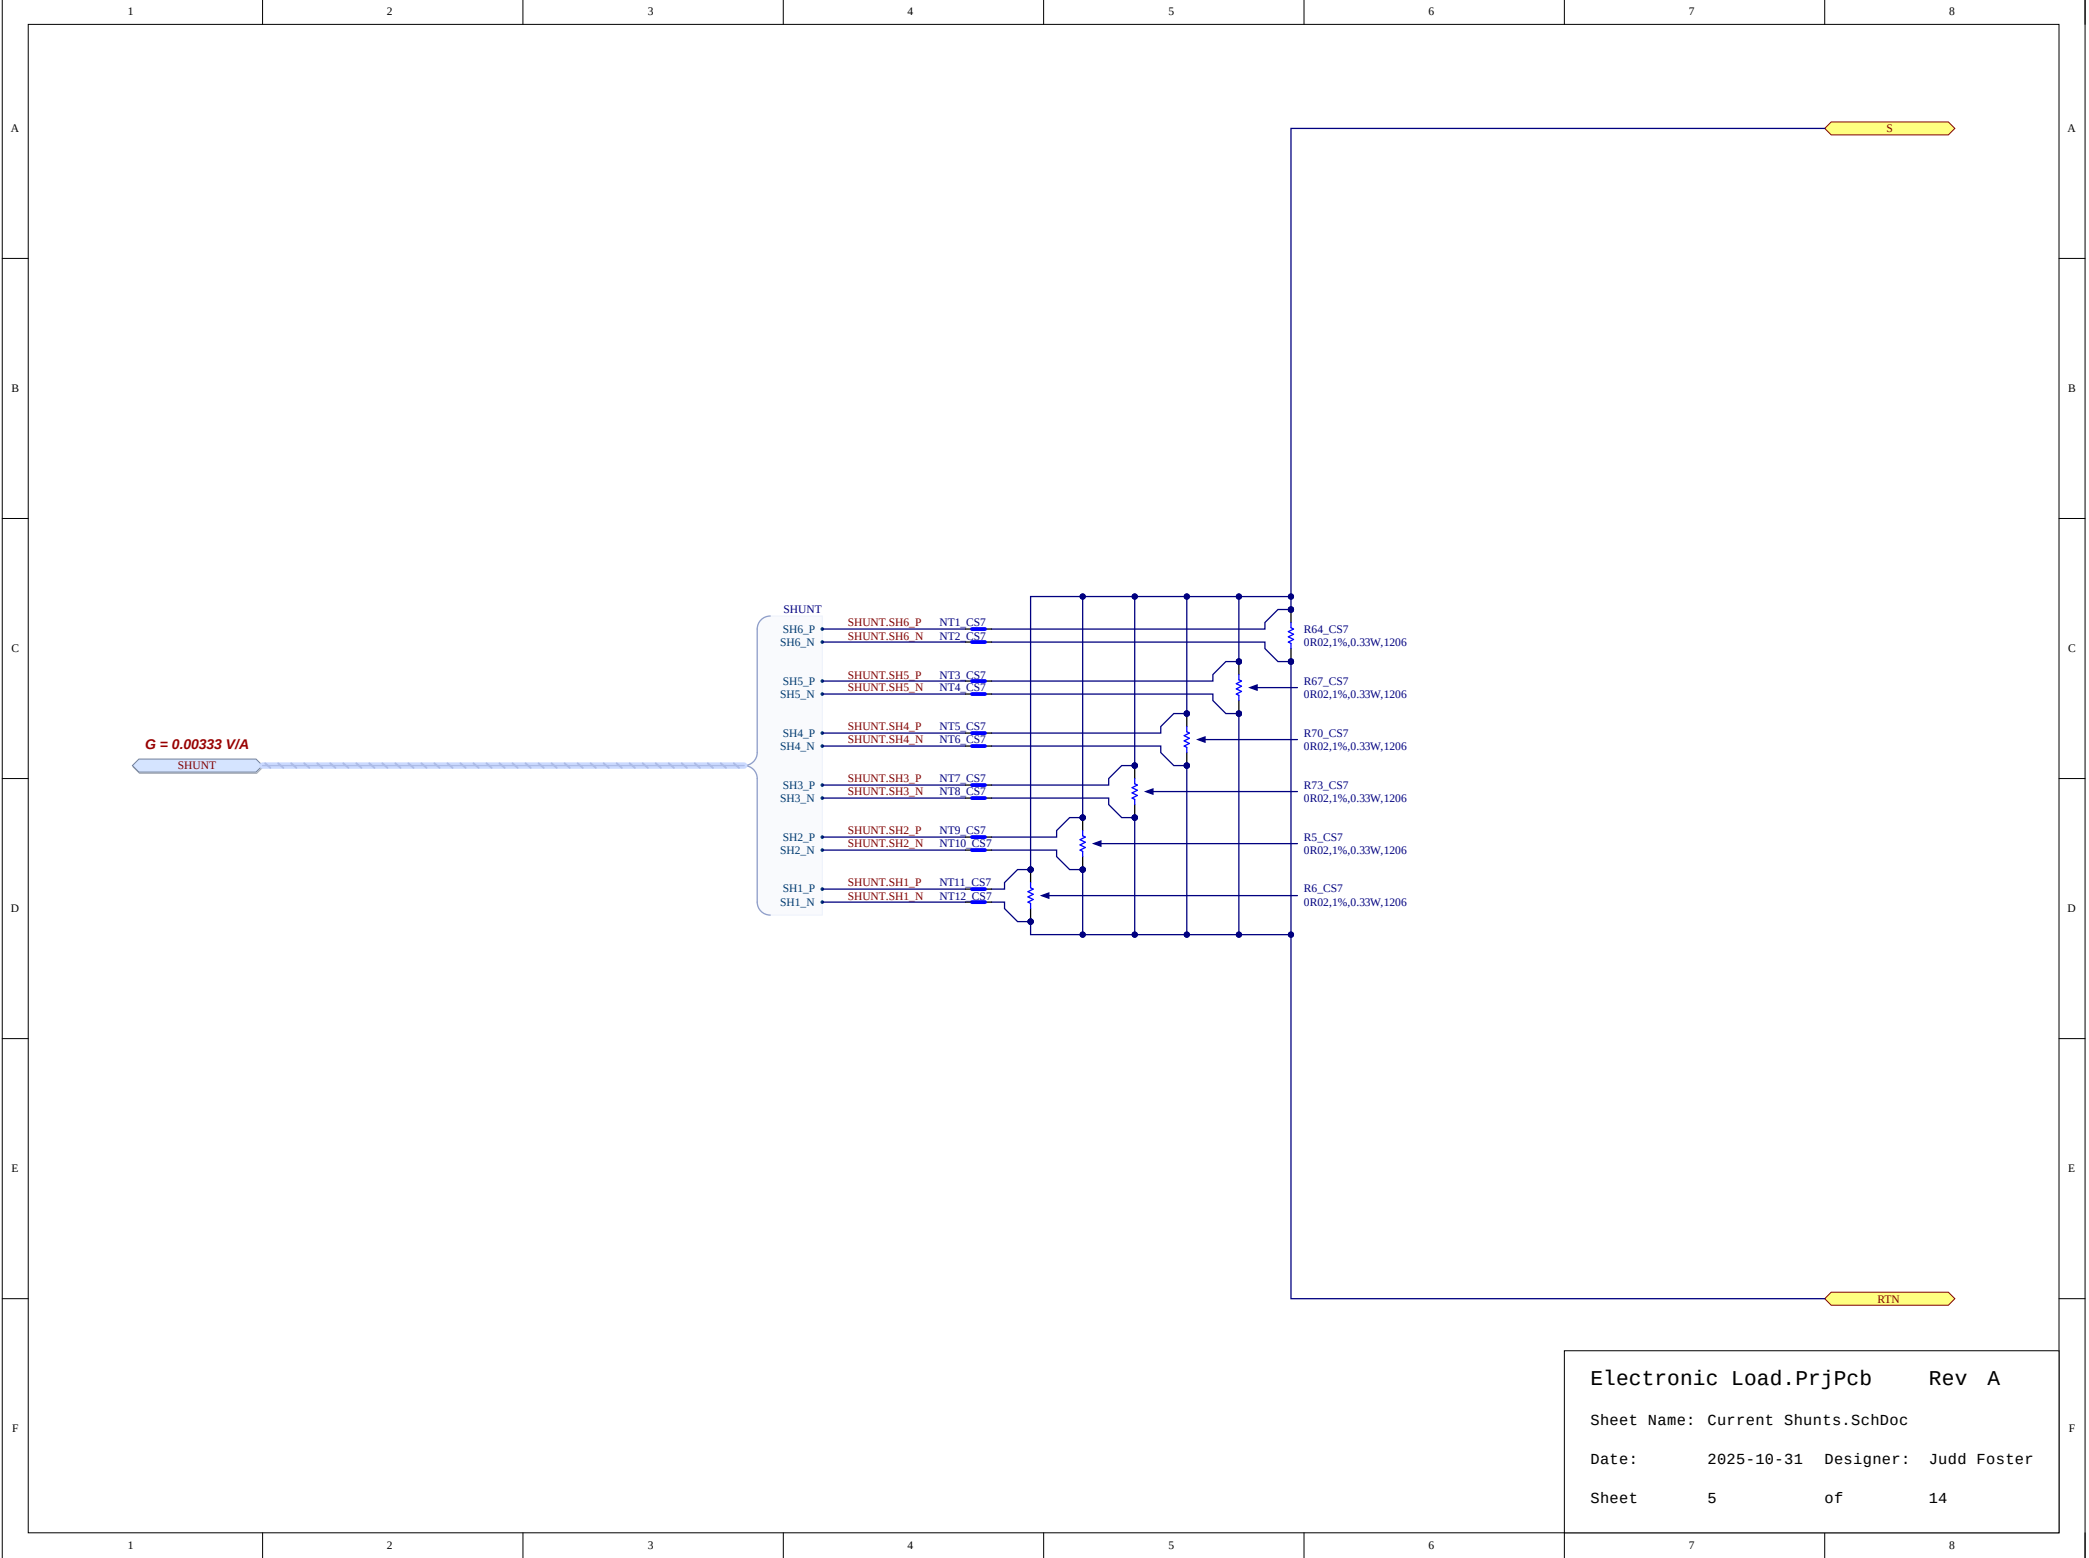

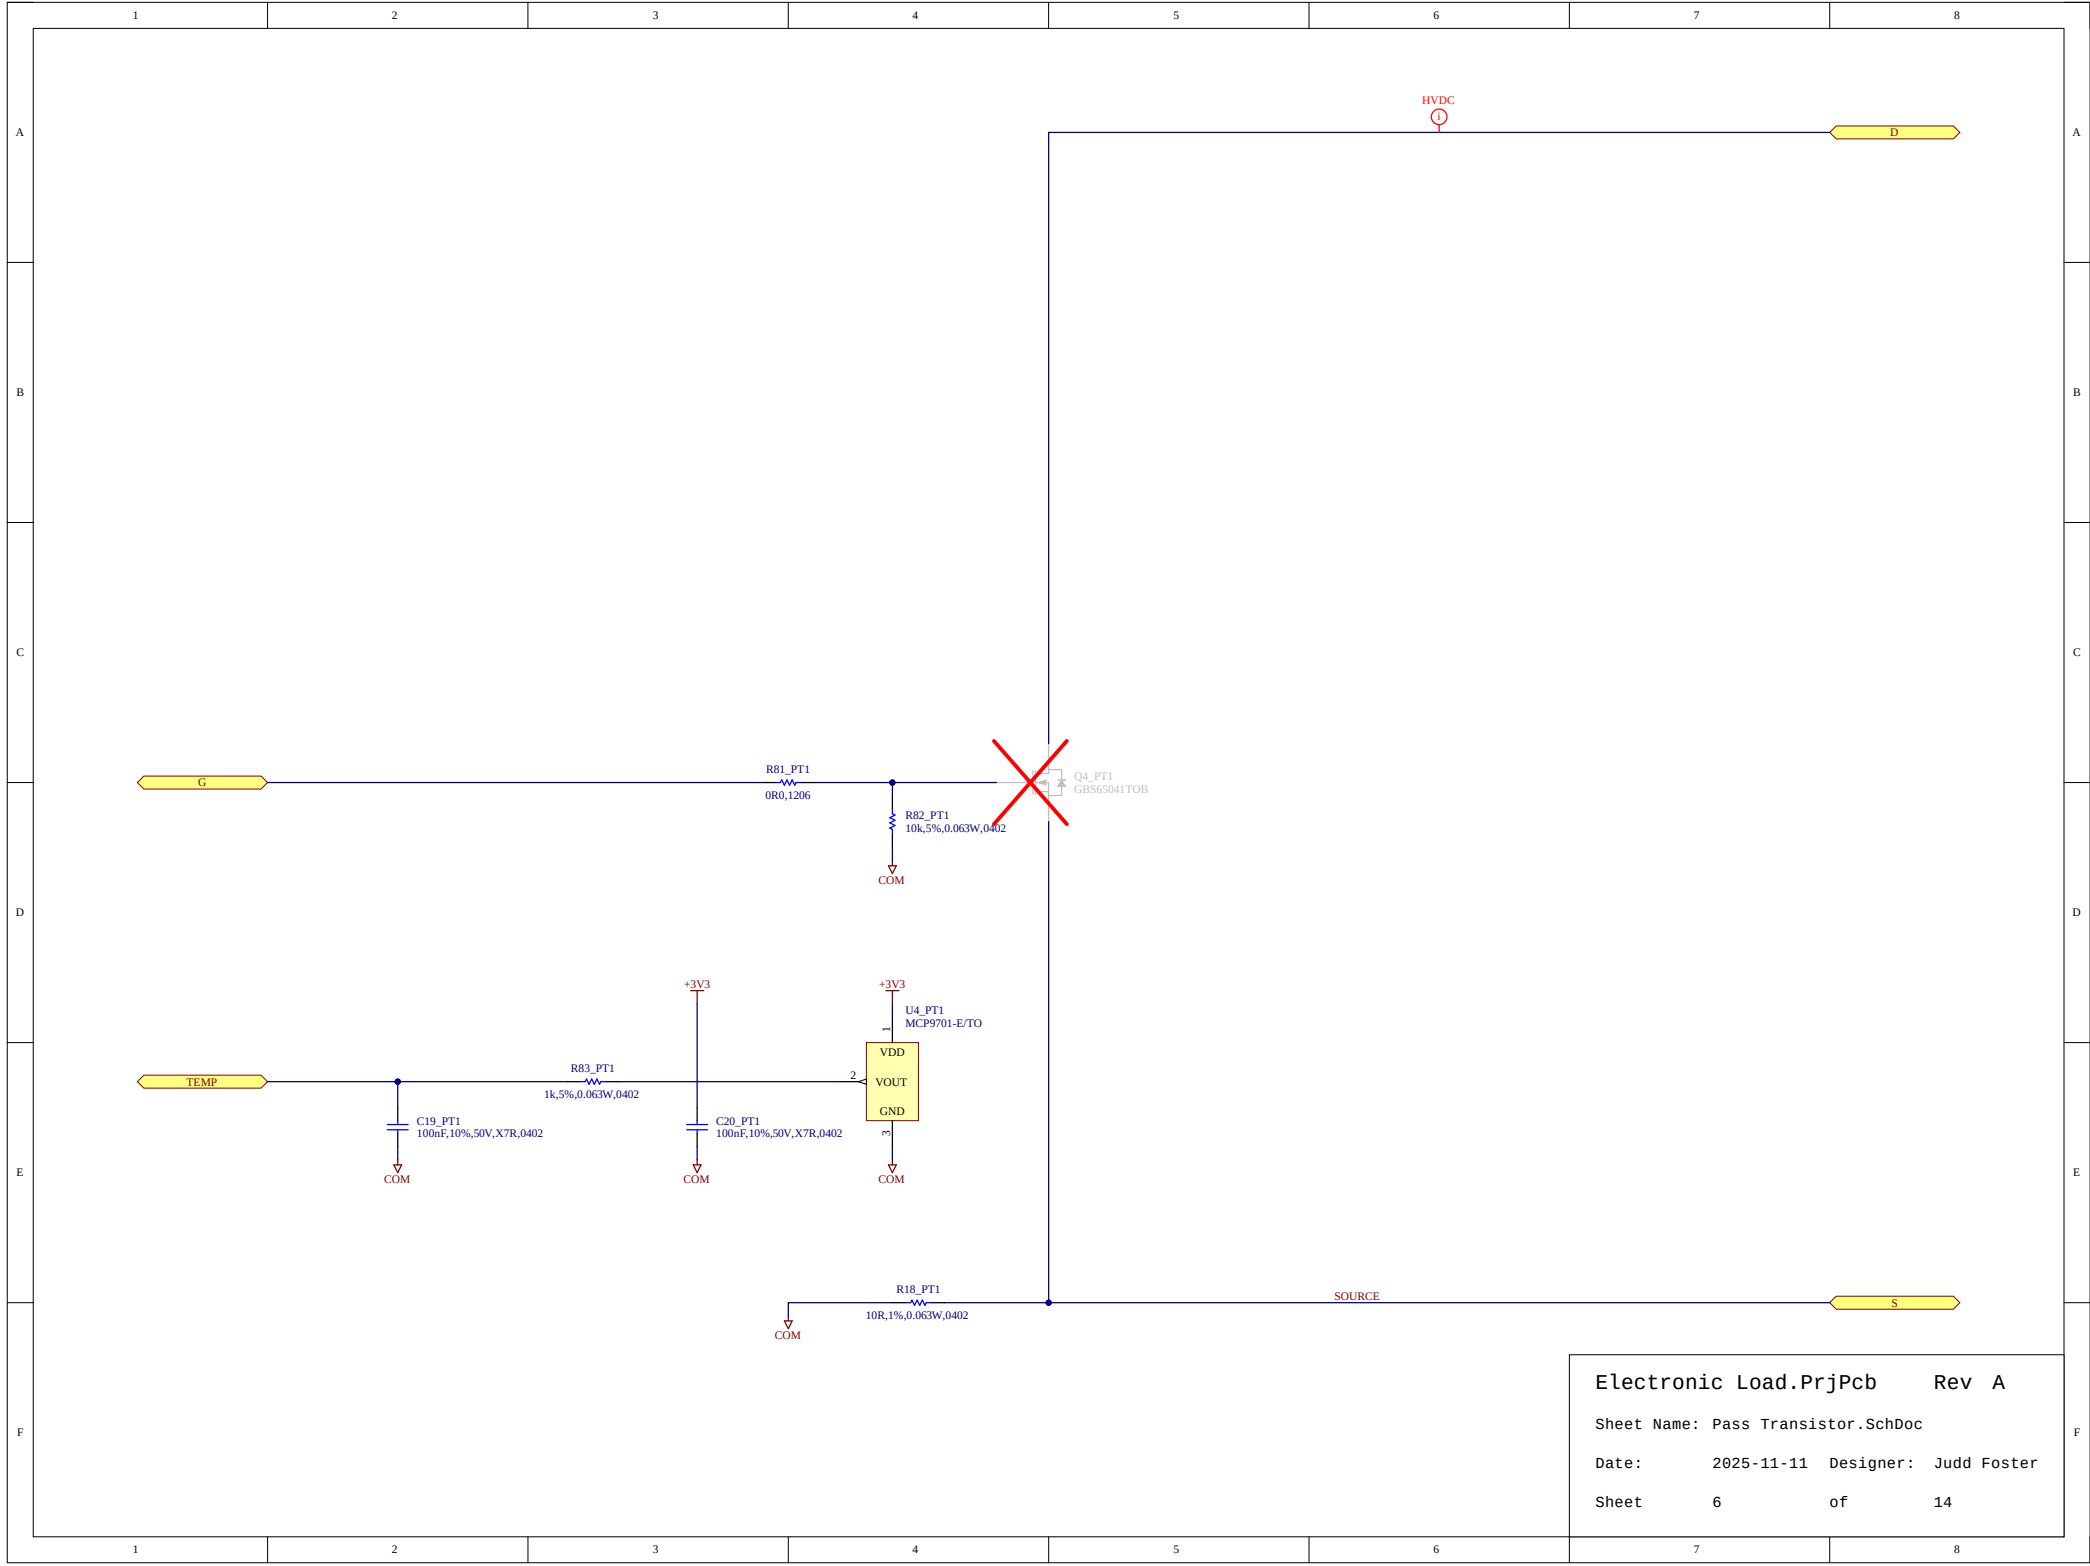



Electronic Load.PrjPcb Rev A


Sheet Name: Pass Transistor.SchDoc


Date: 2025-11-11 Designer: Judd Foster


Sheet 6 of 14

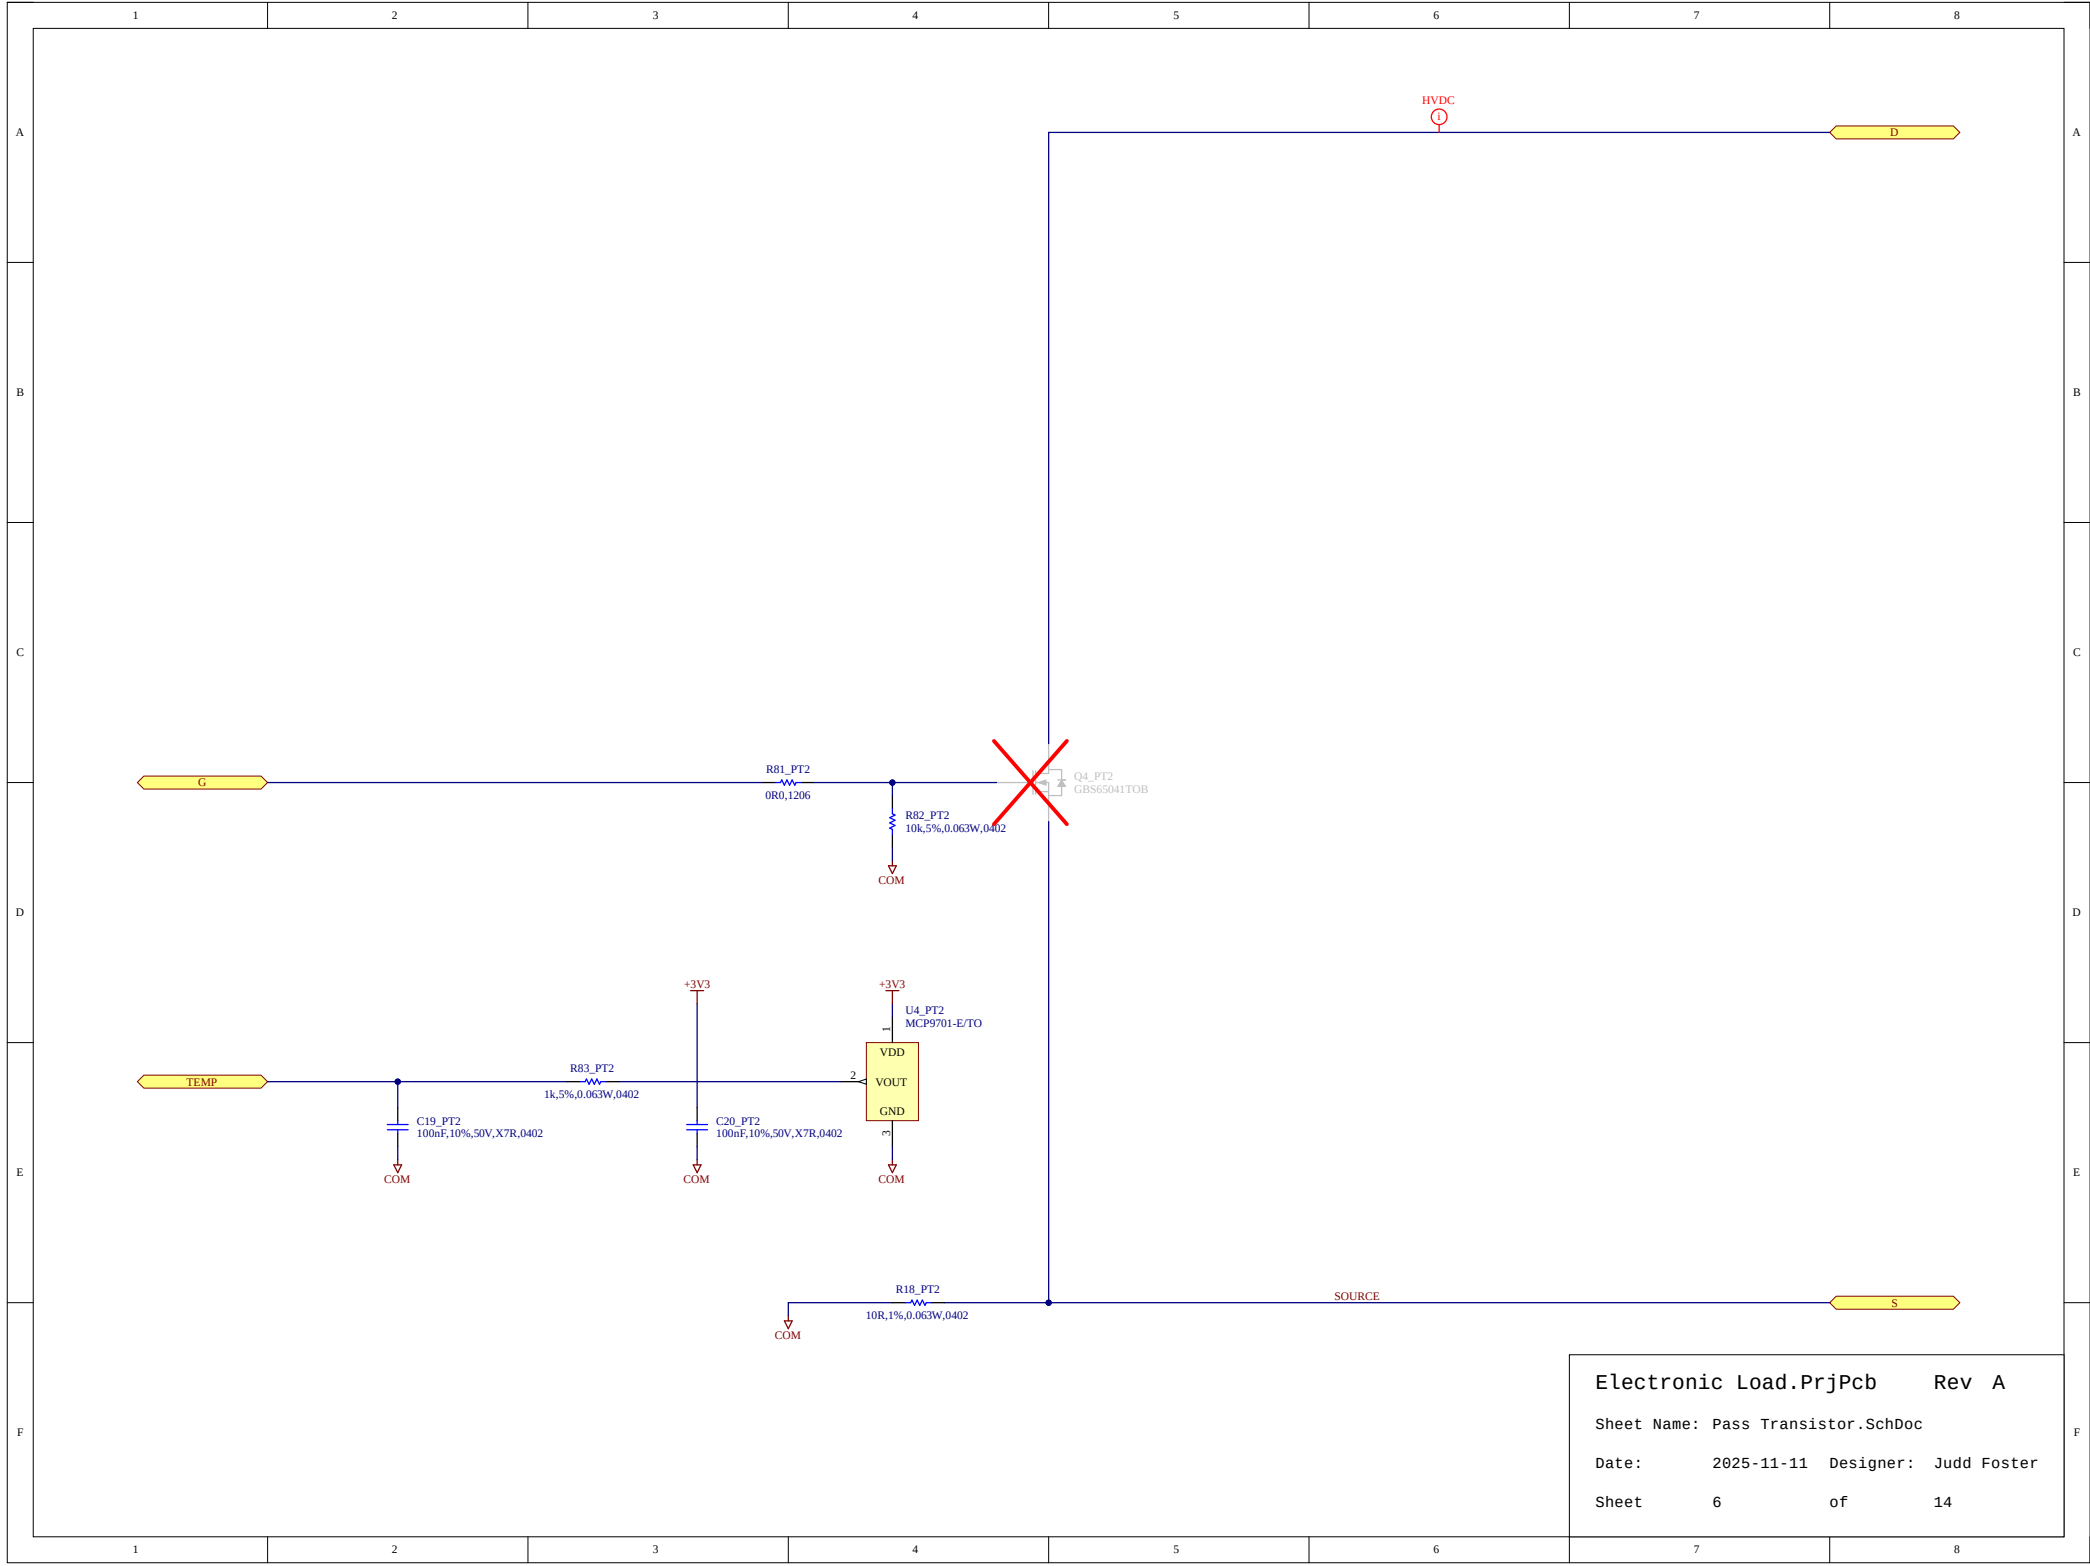


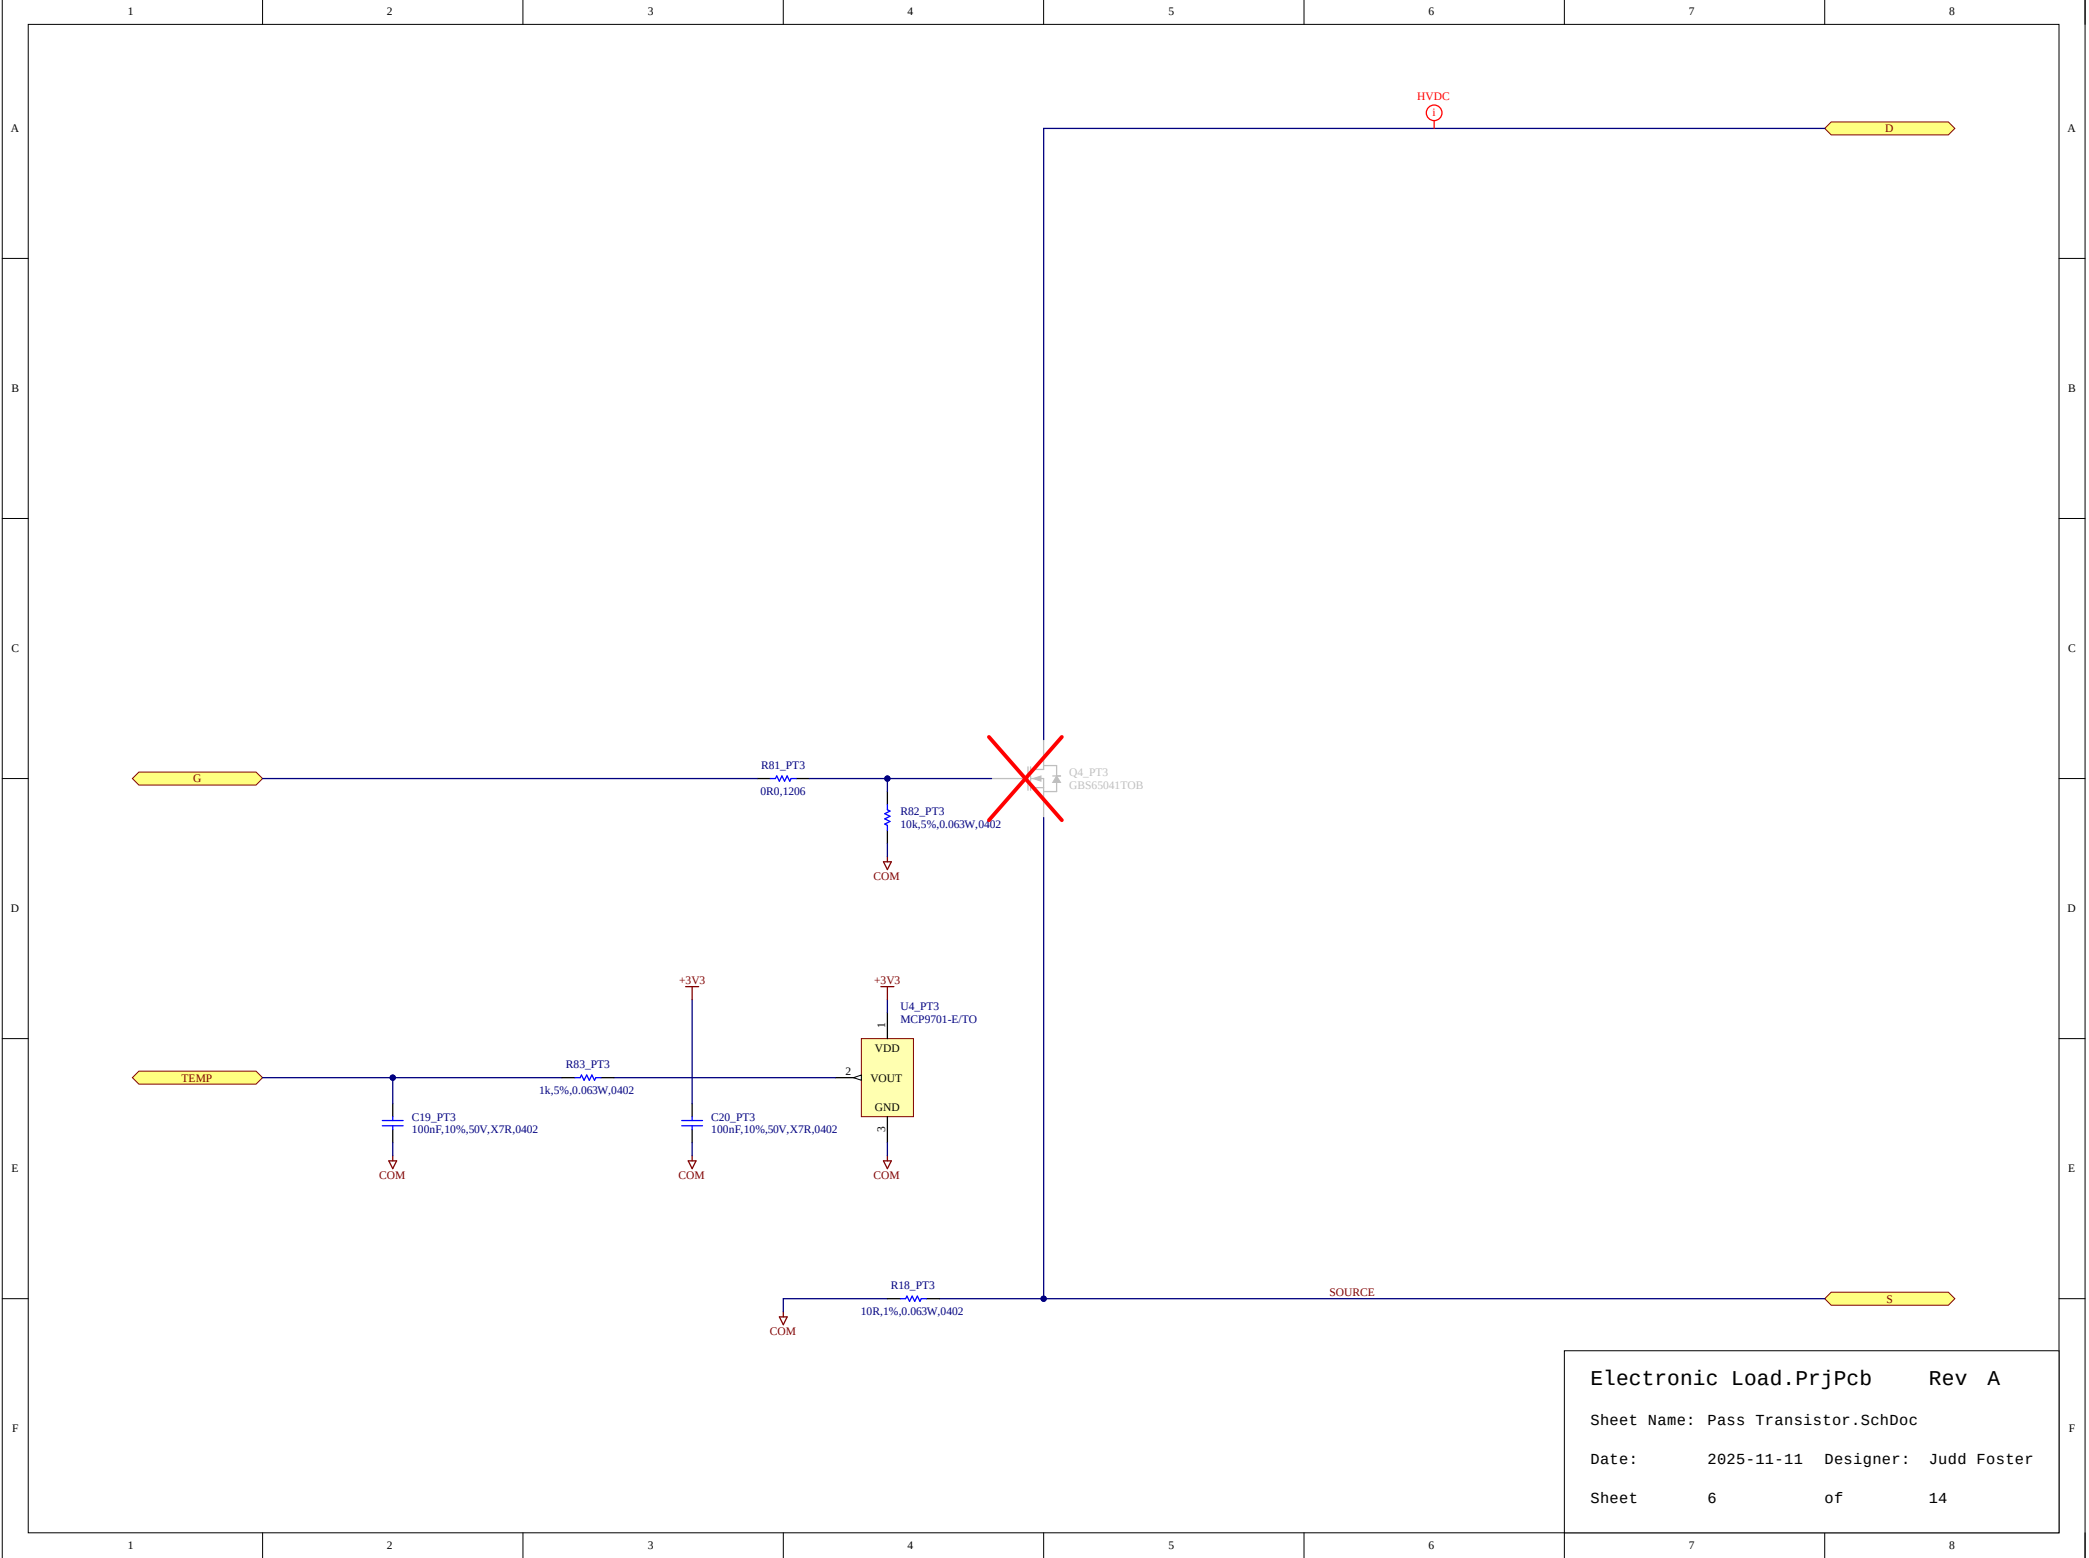


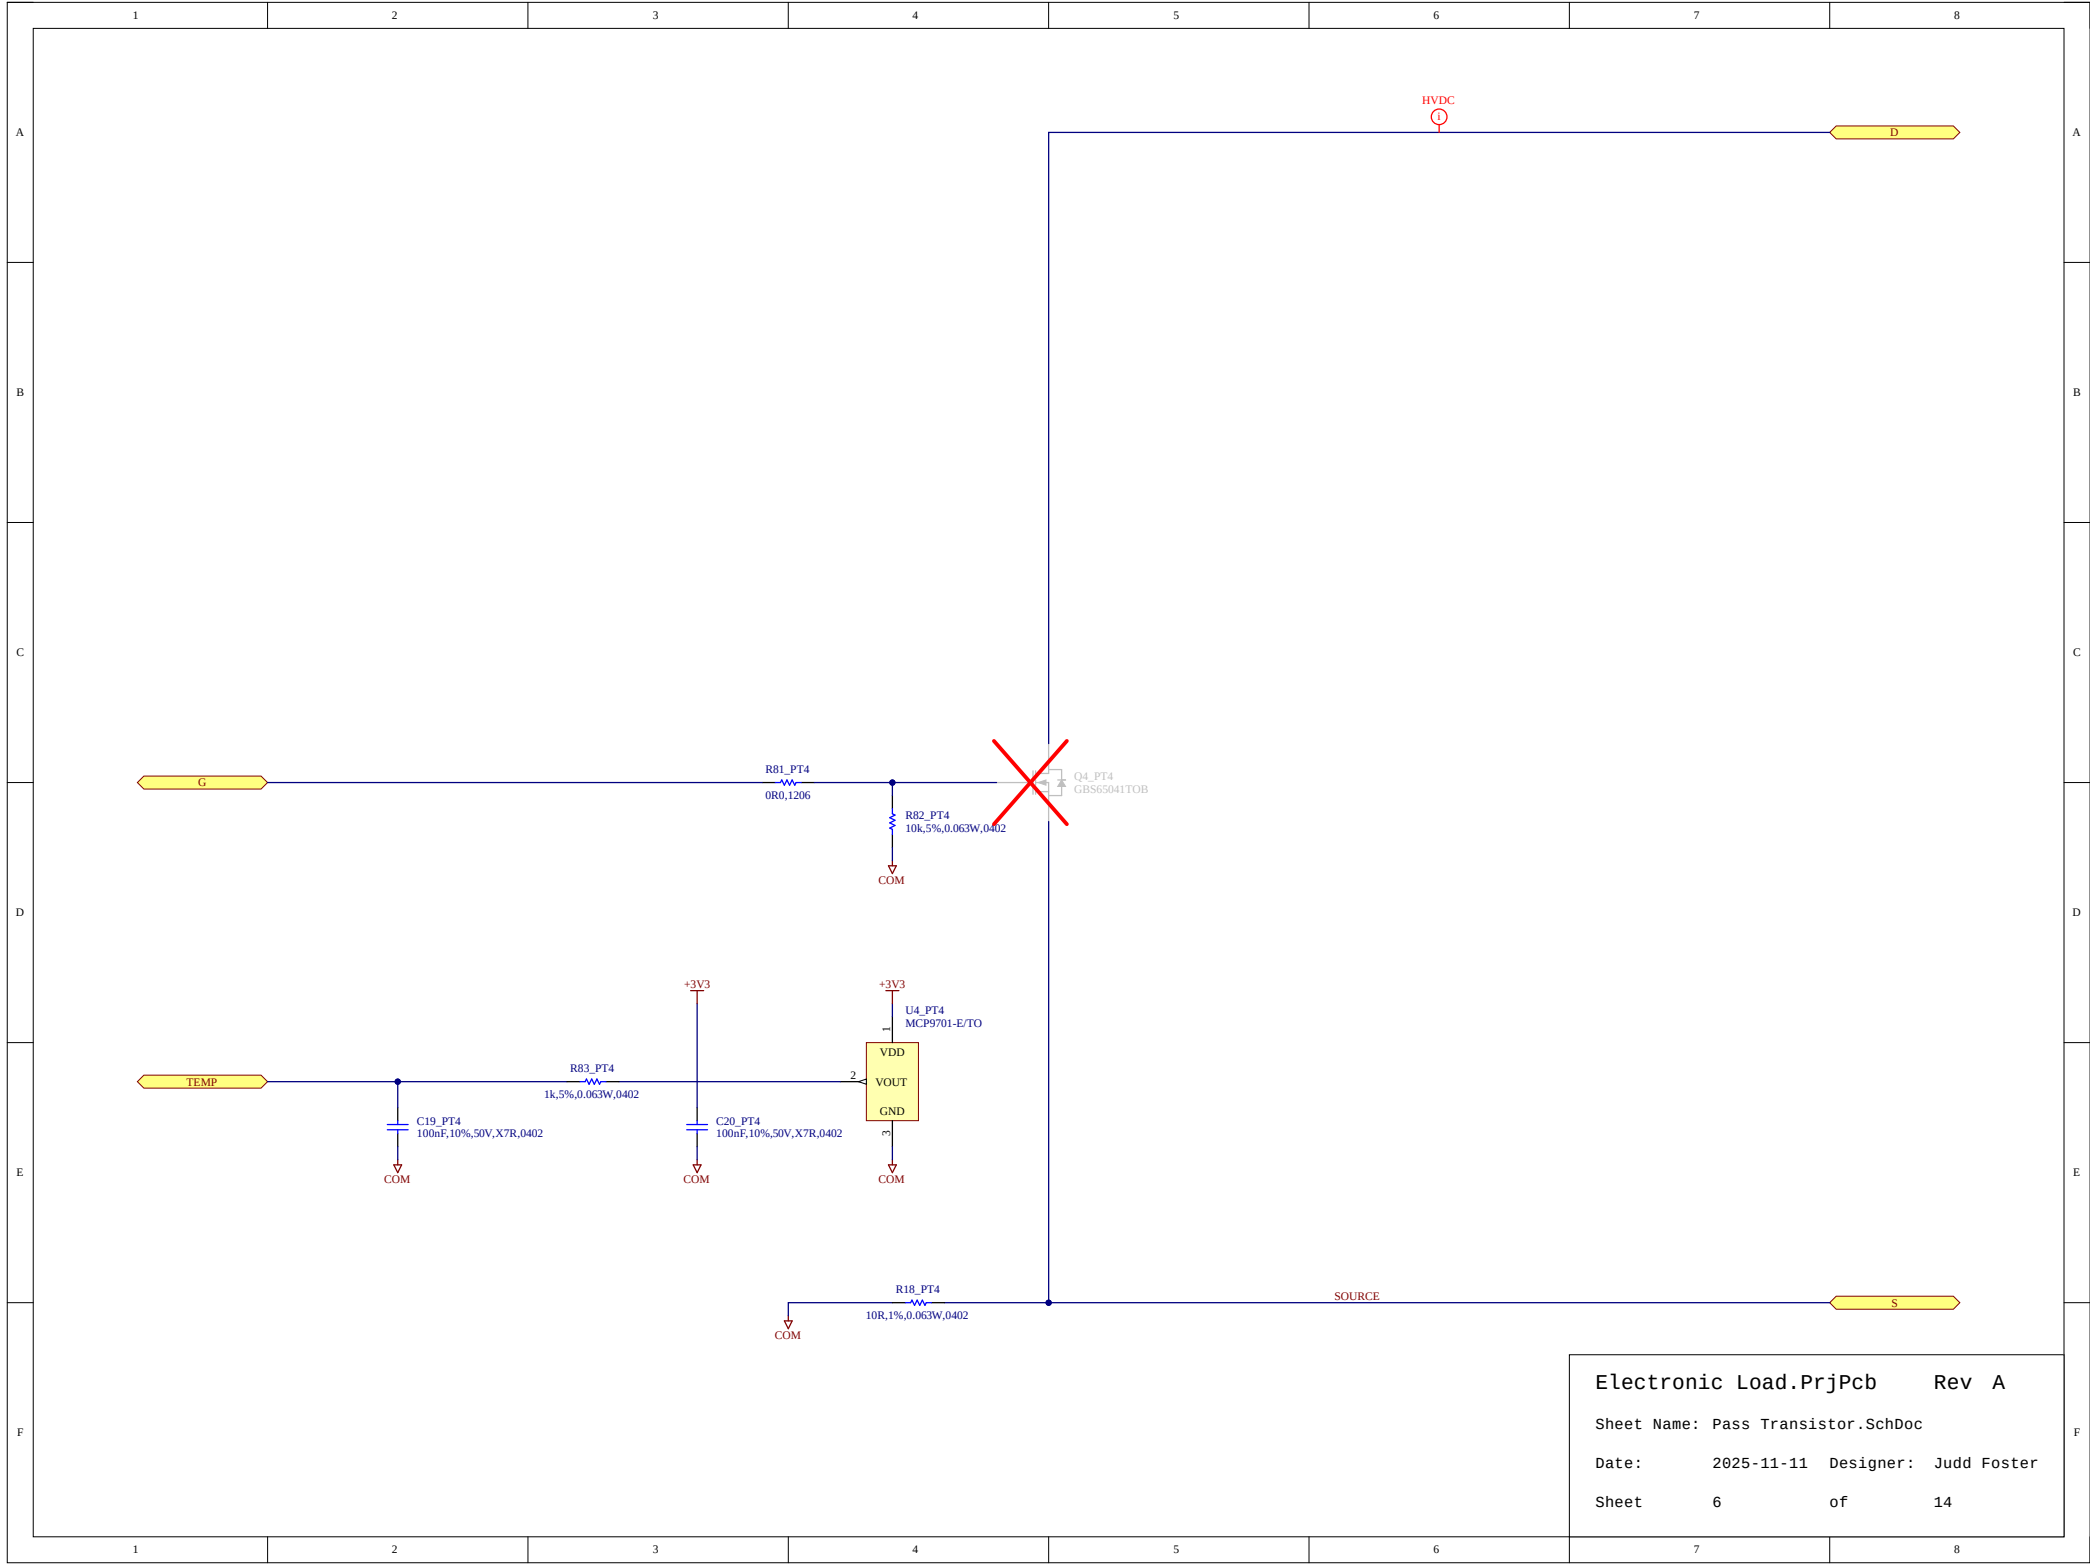


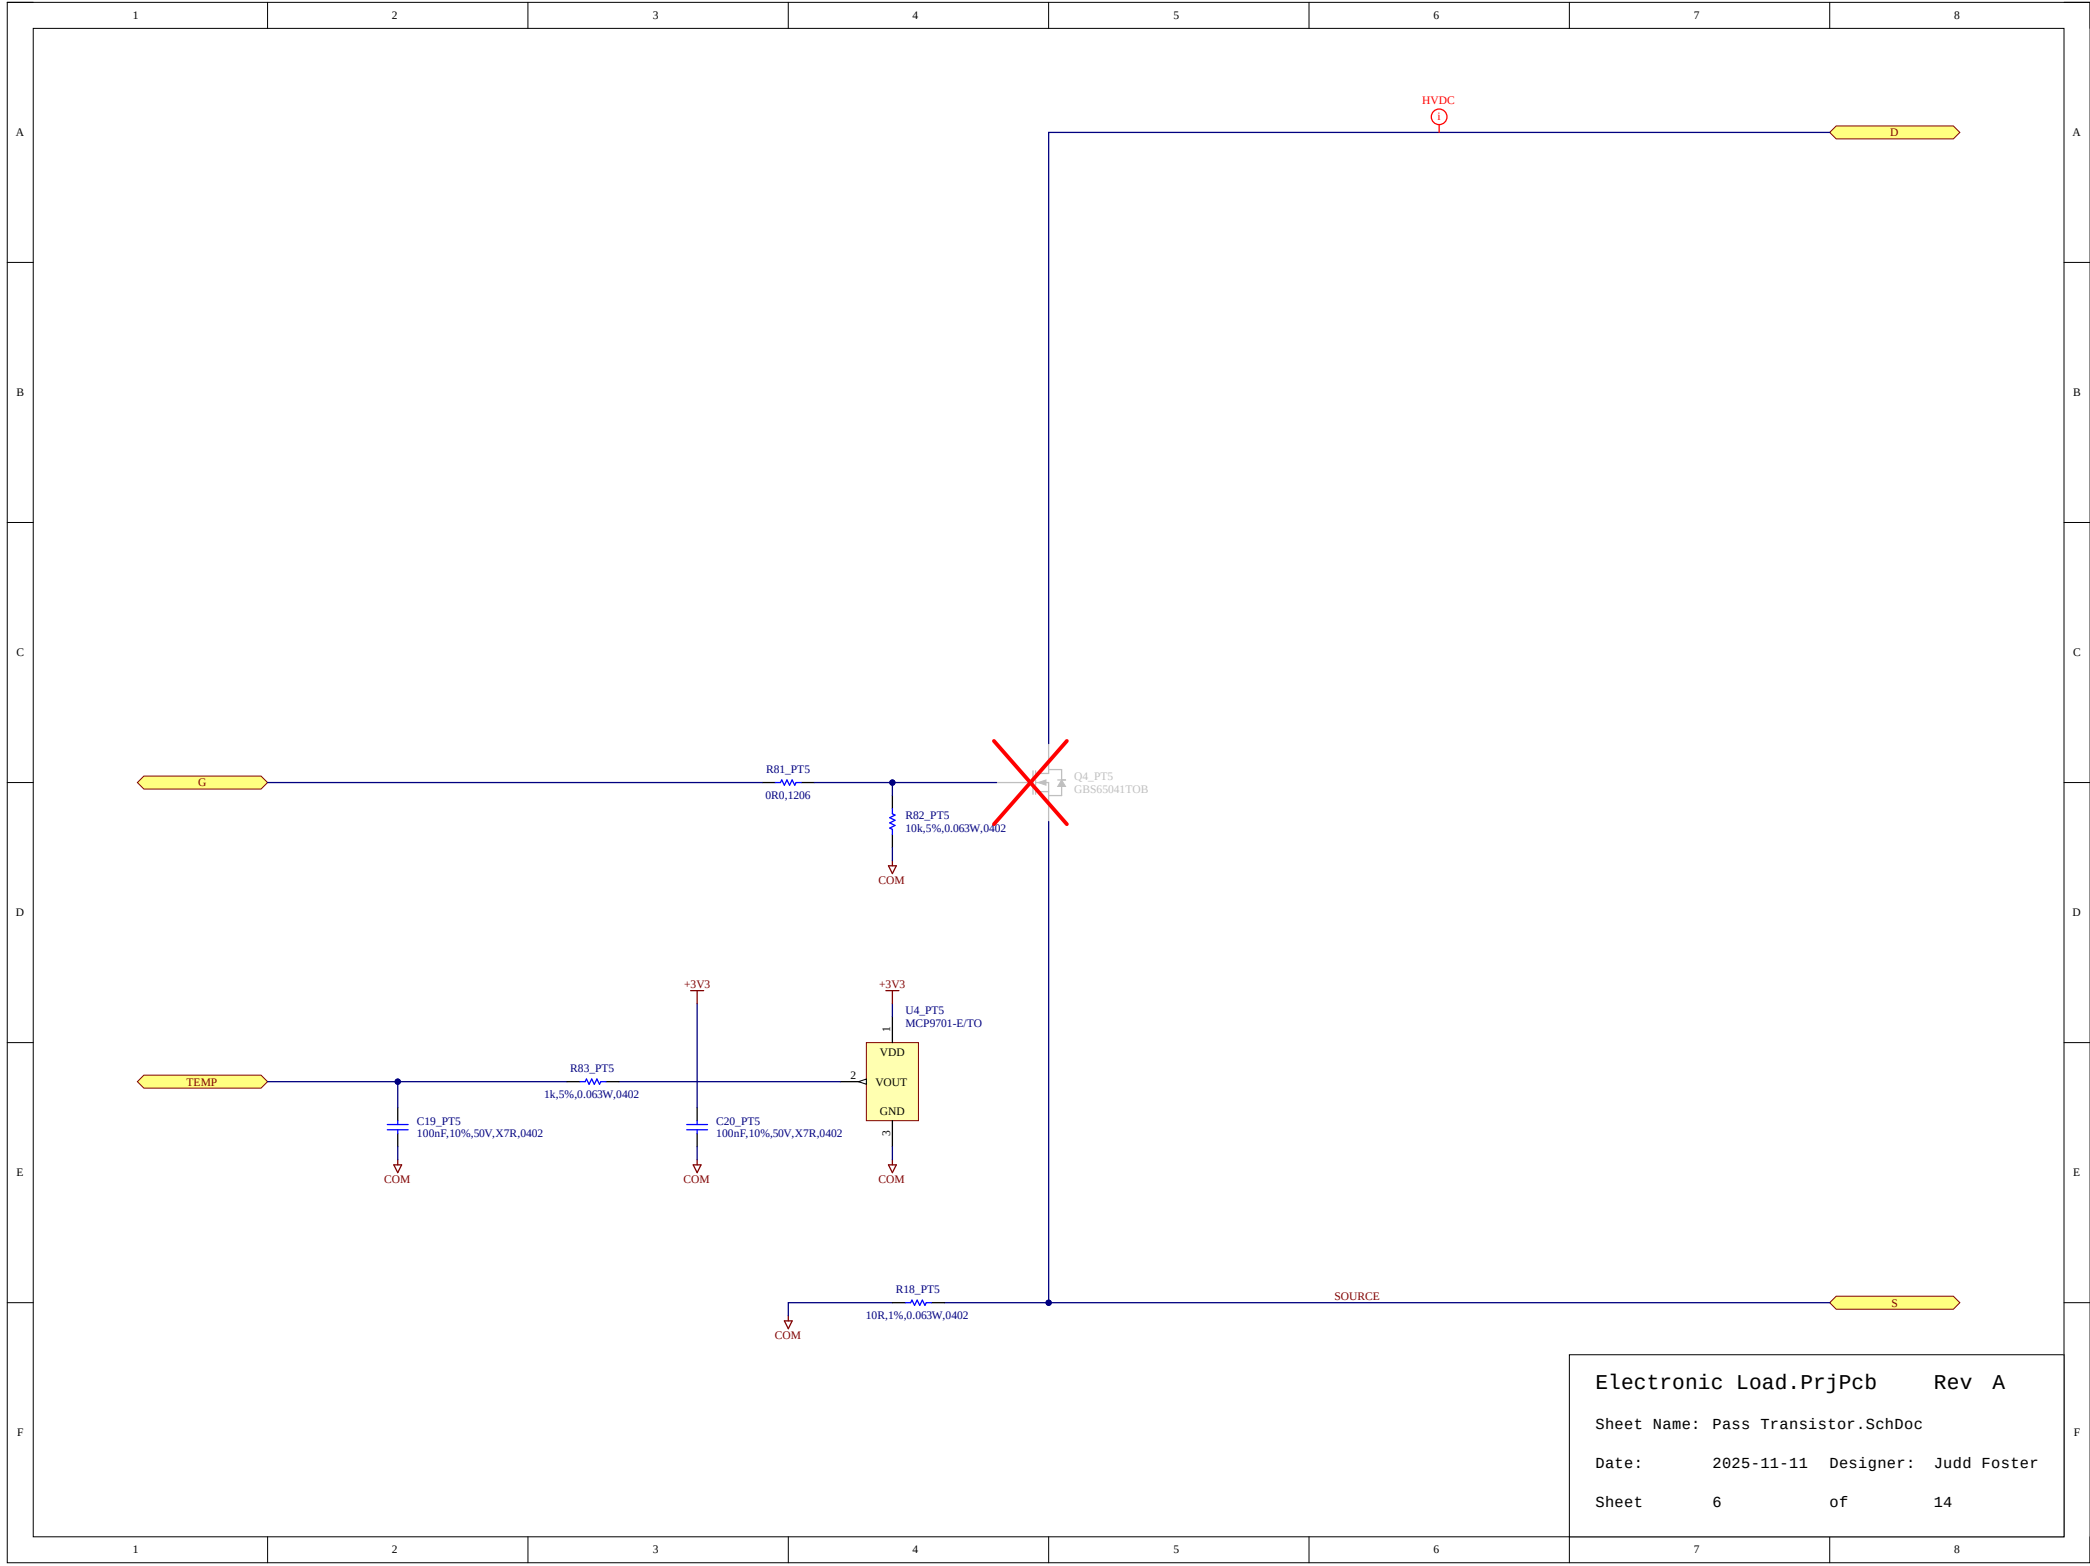

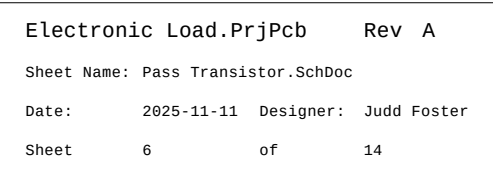

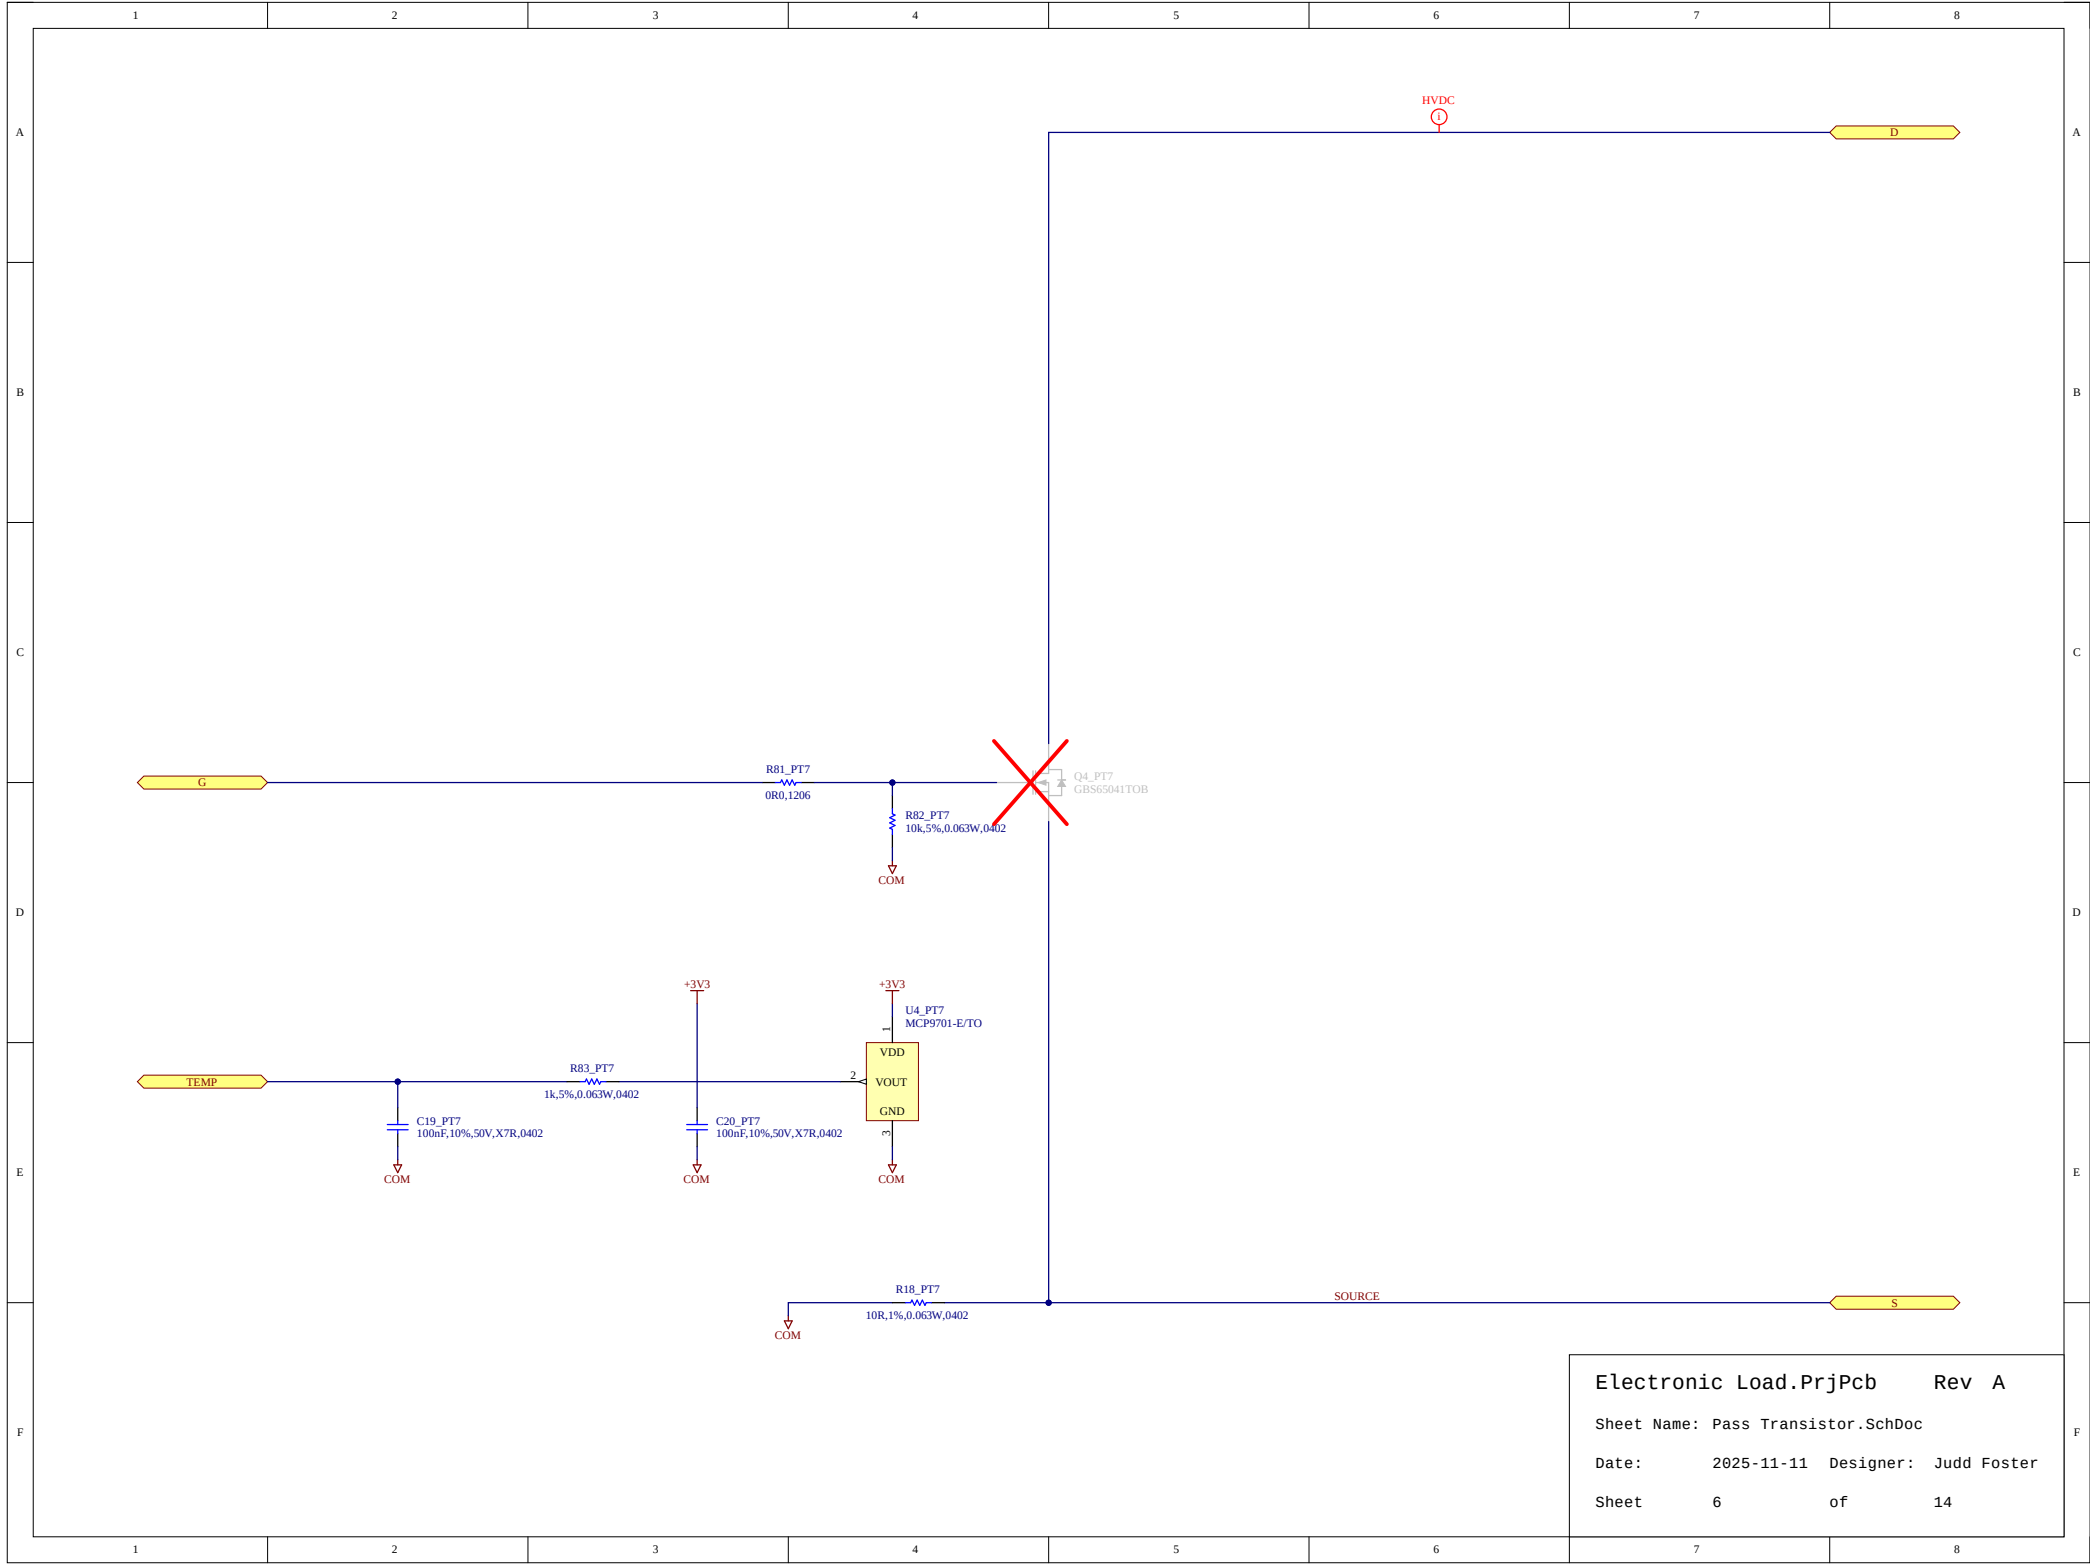

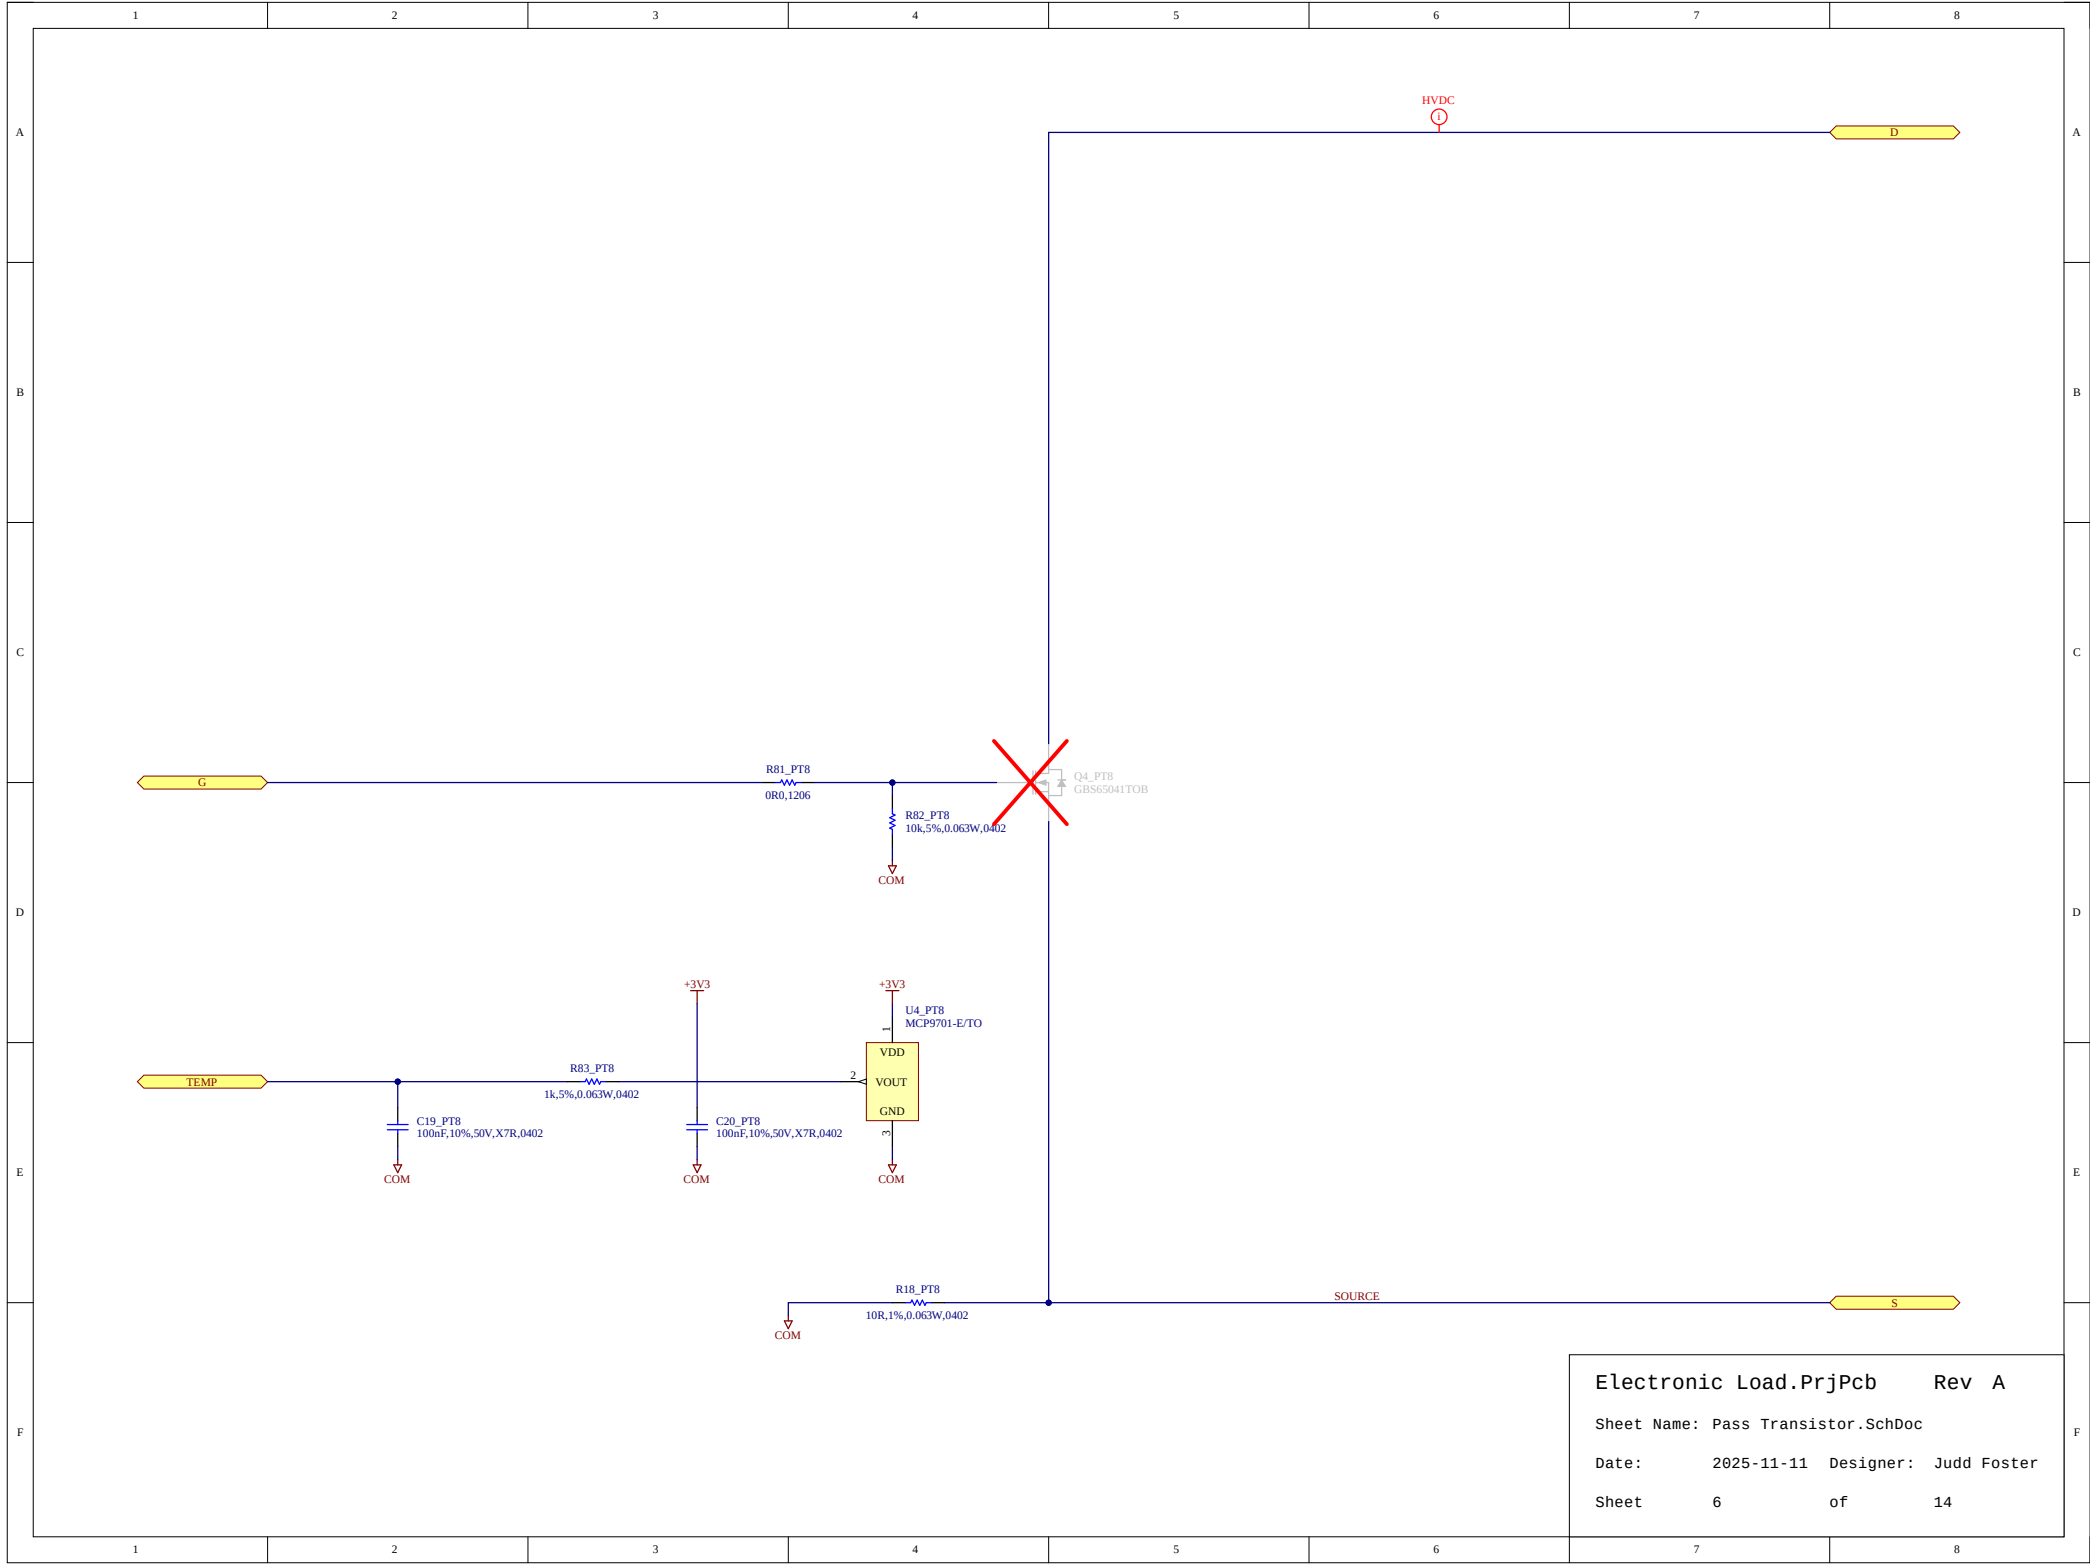

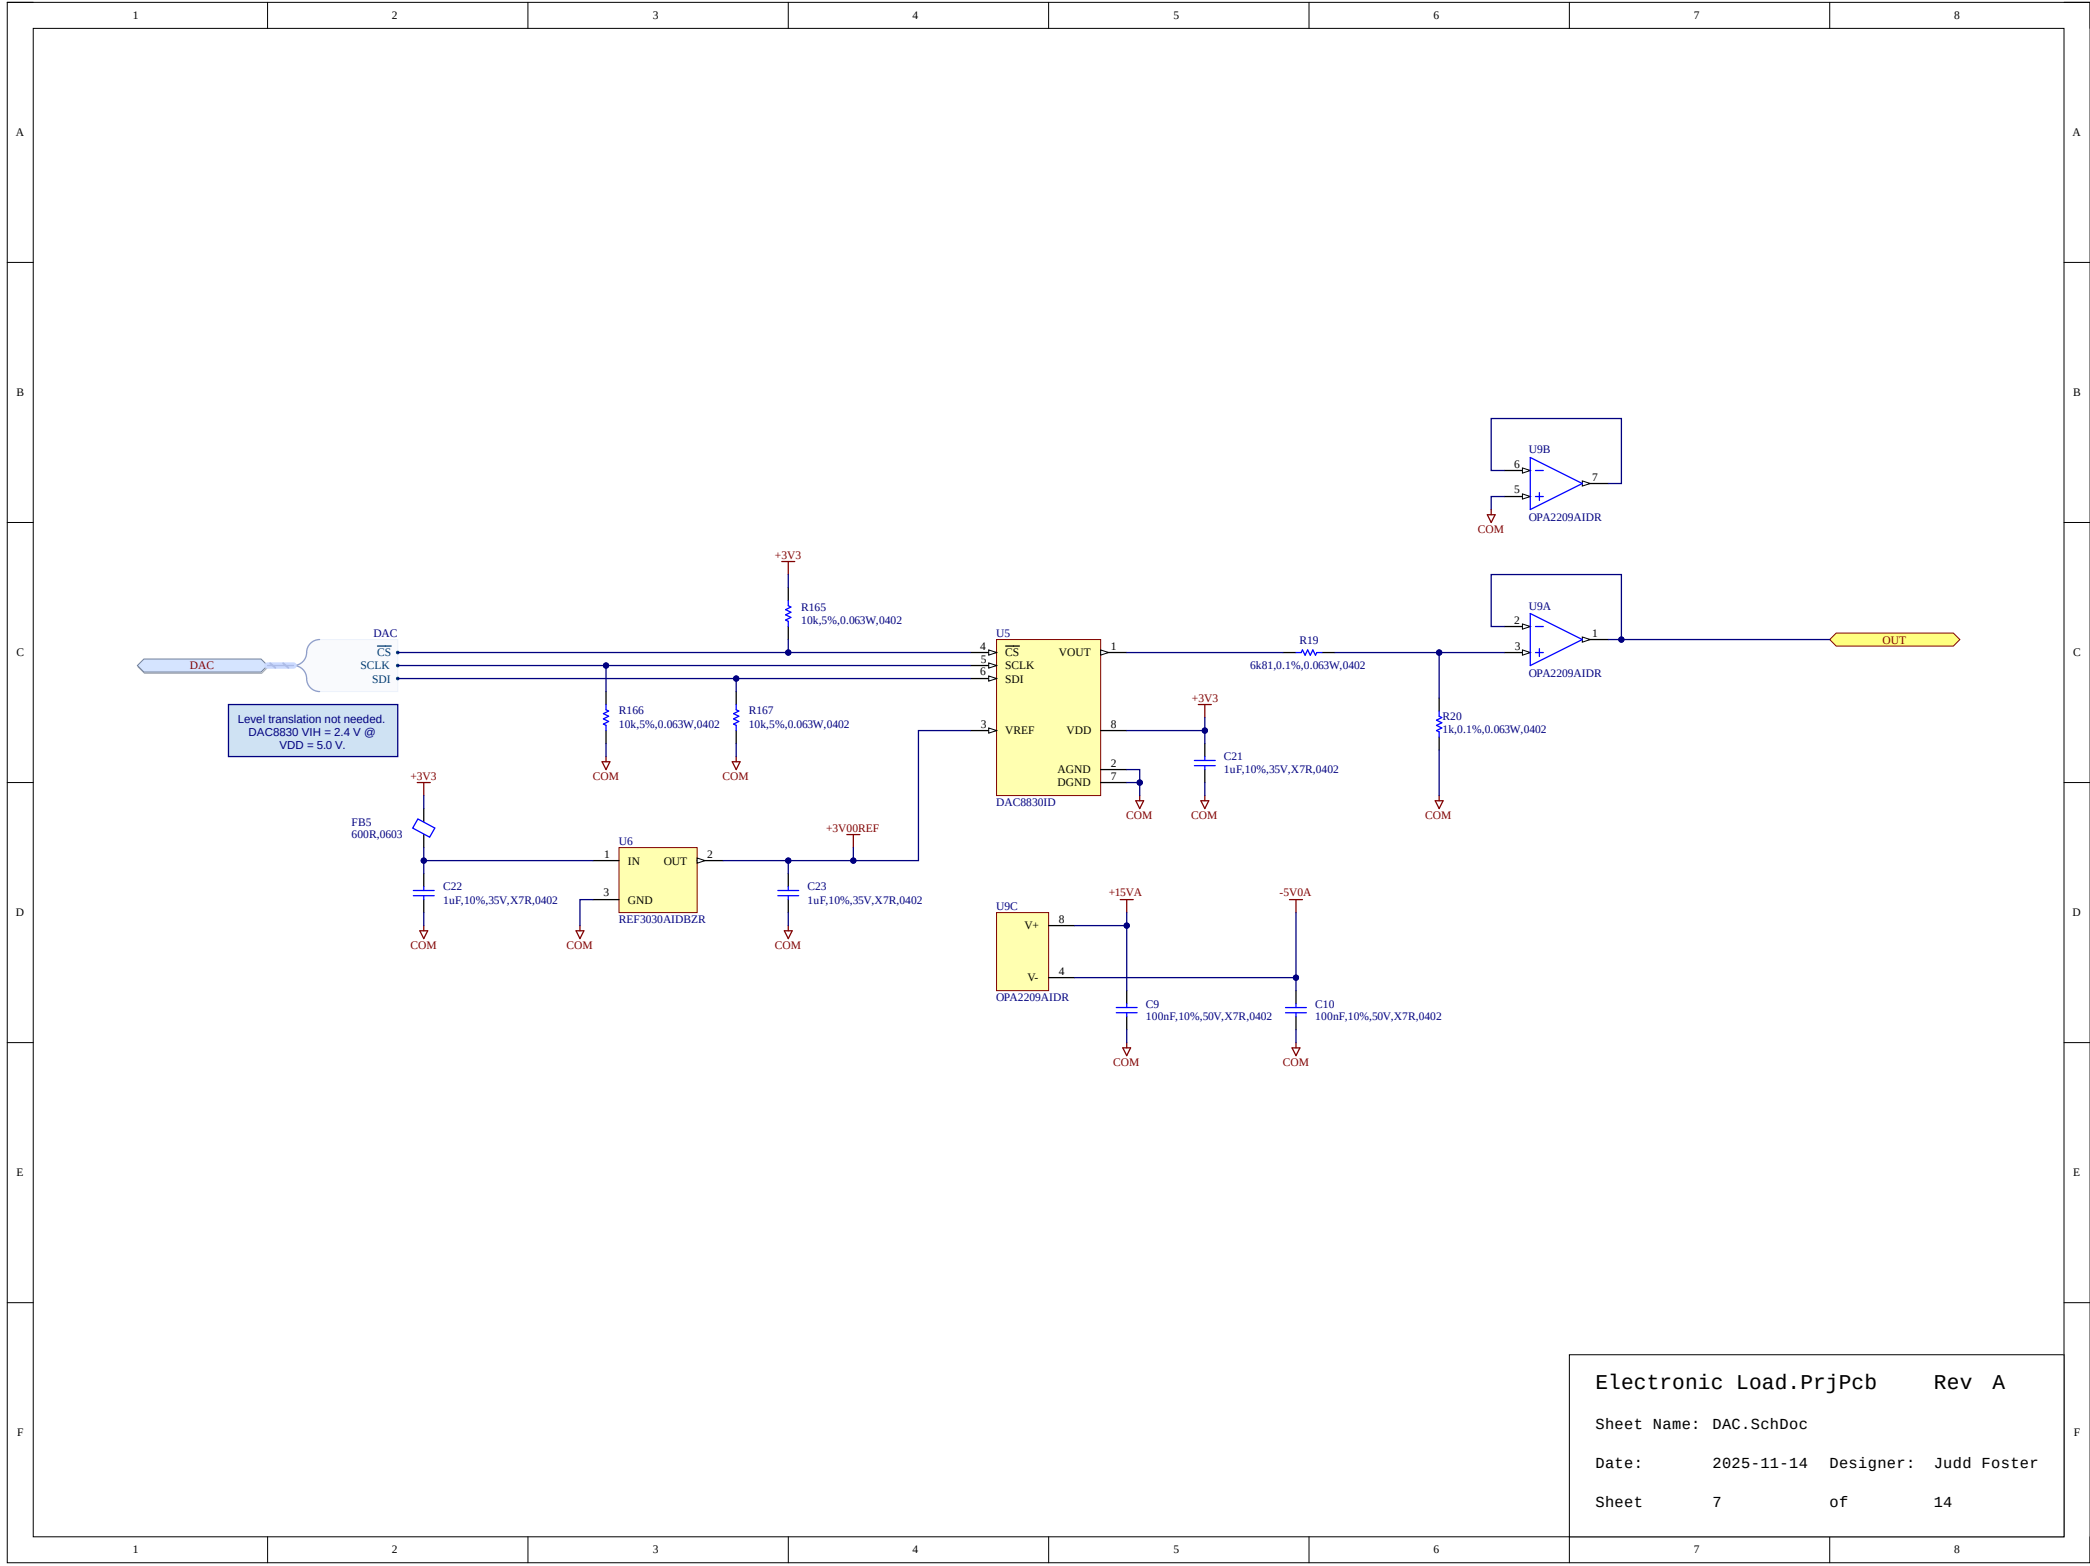


Electronic Load.PrjPcb Rev A


Sheet Name: DAC.SchDoc


Date: 2025-11-14 Designer: Judd Foster


Sheet 7 of 14

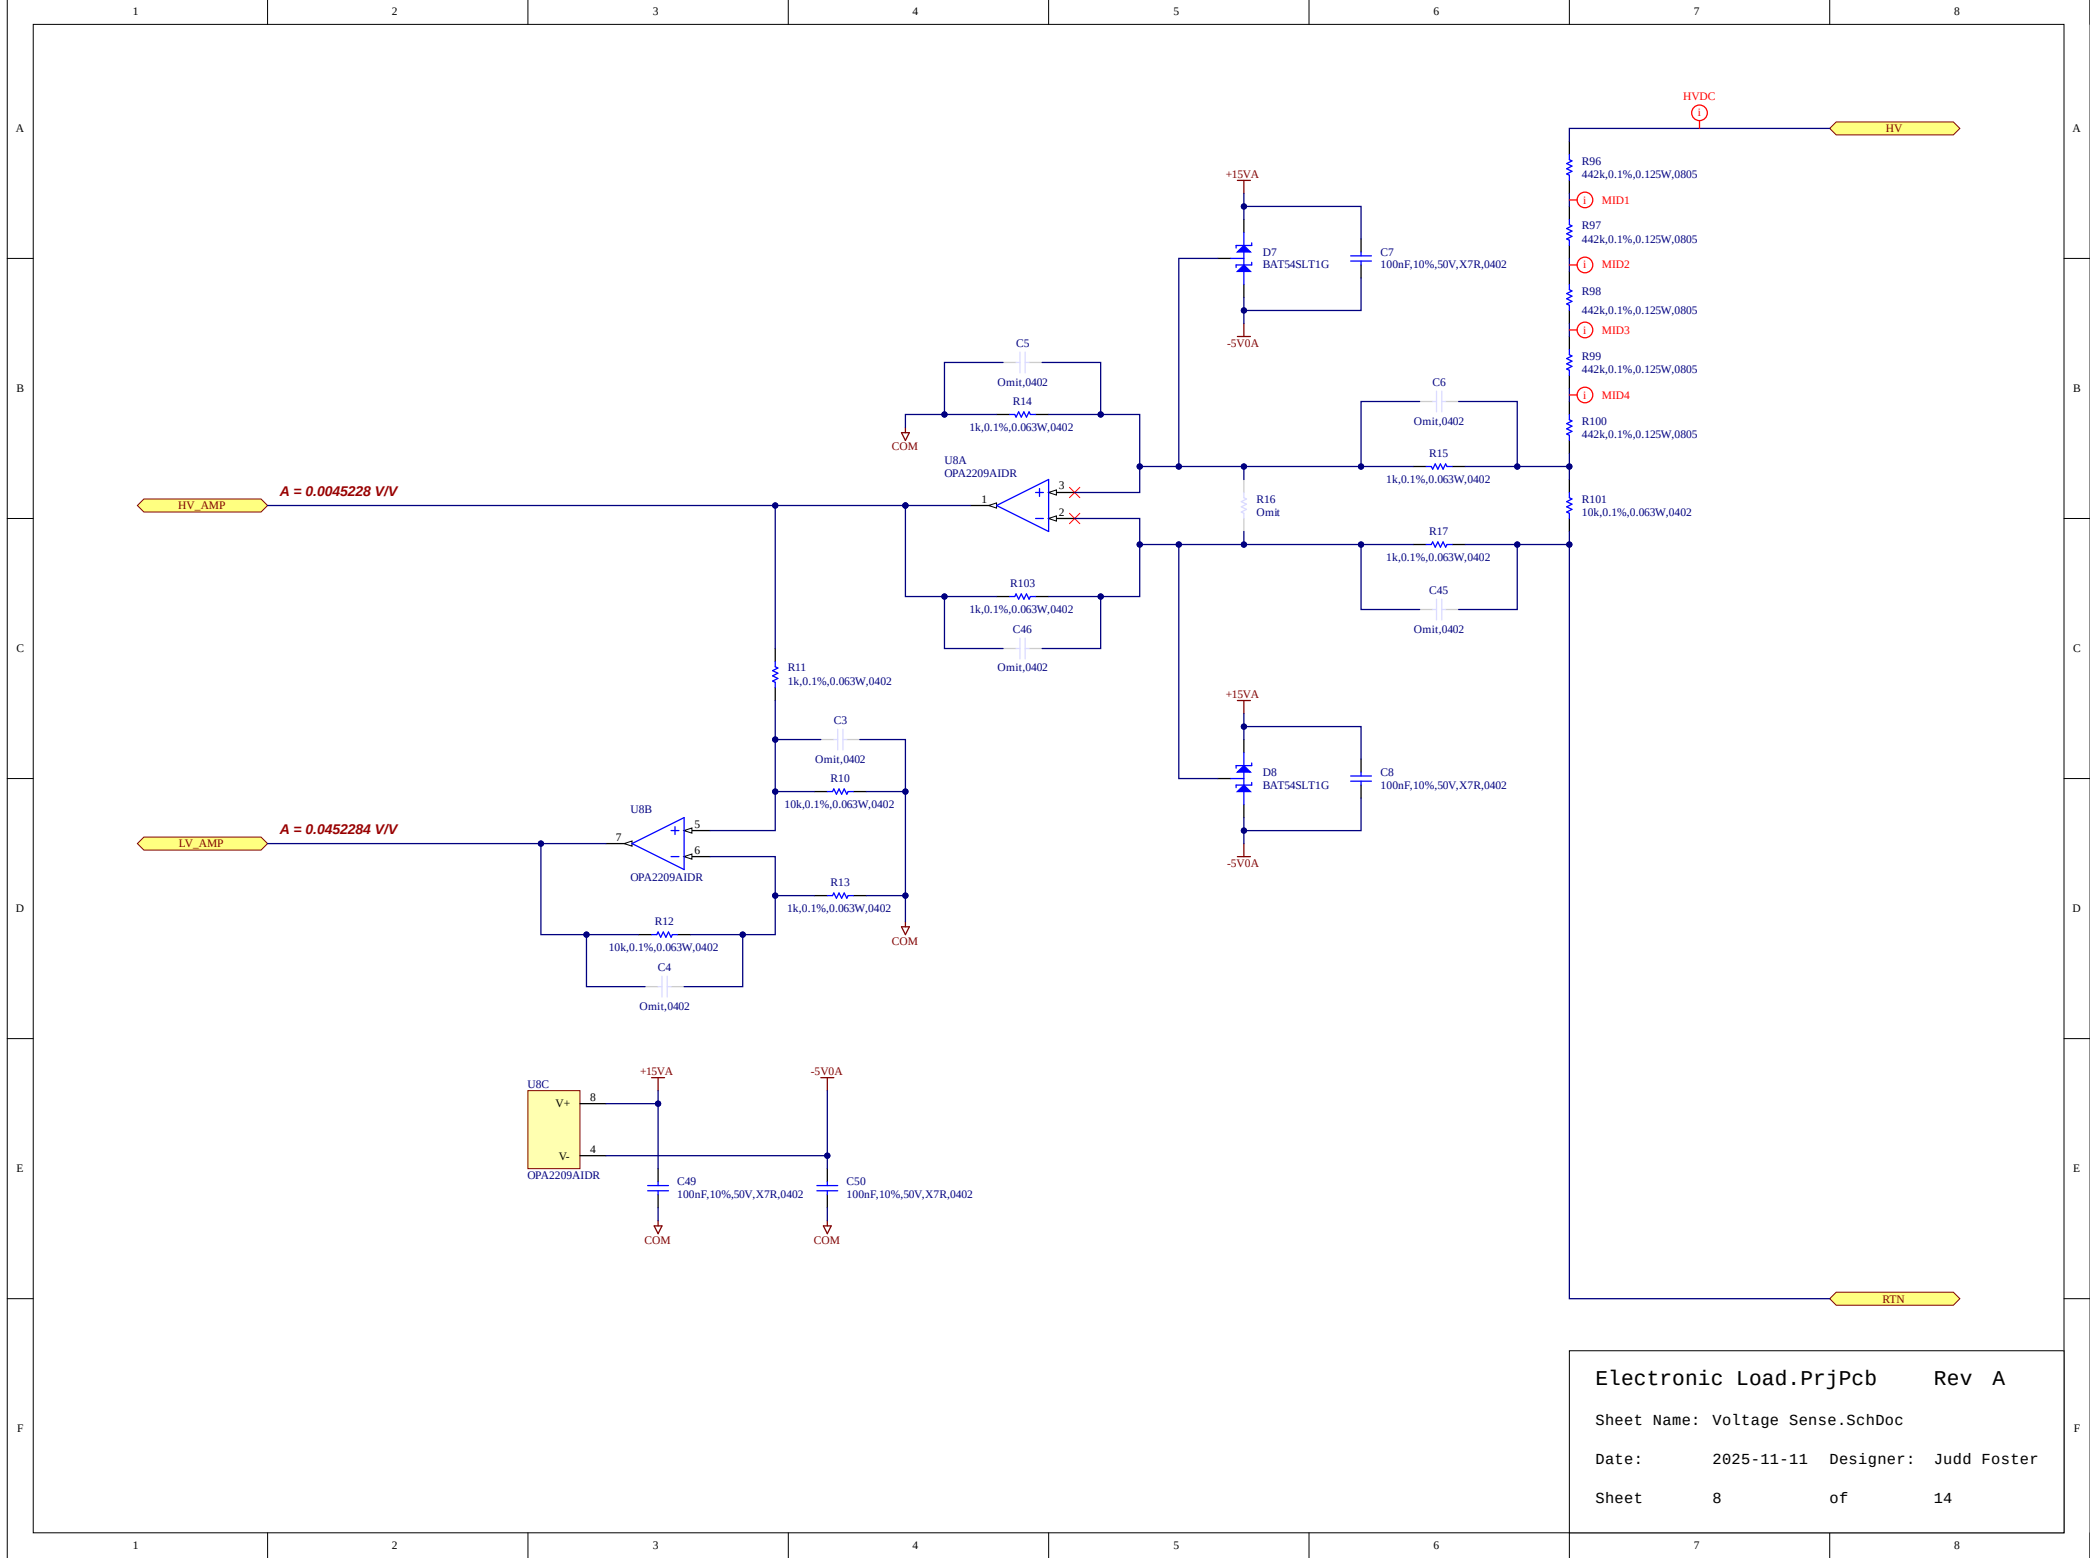




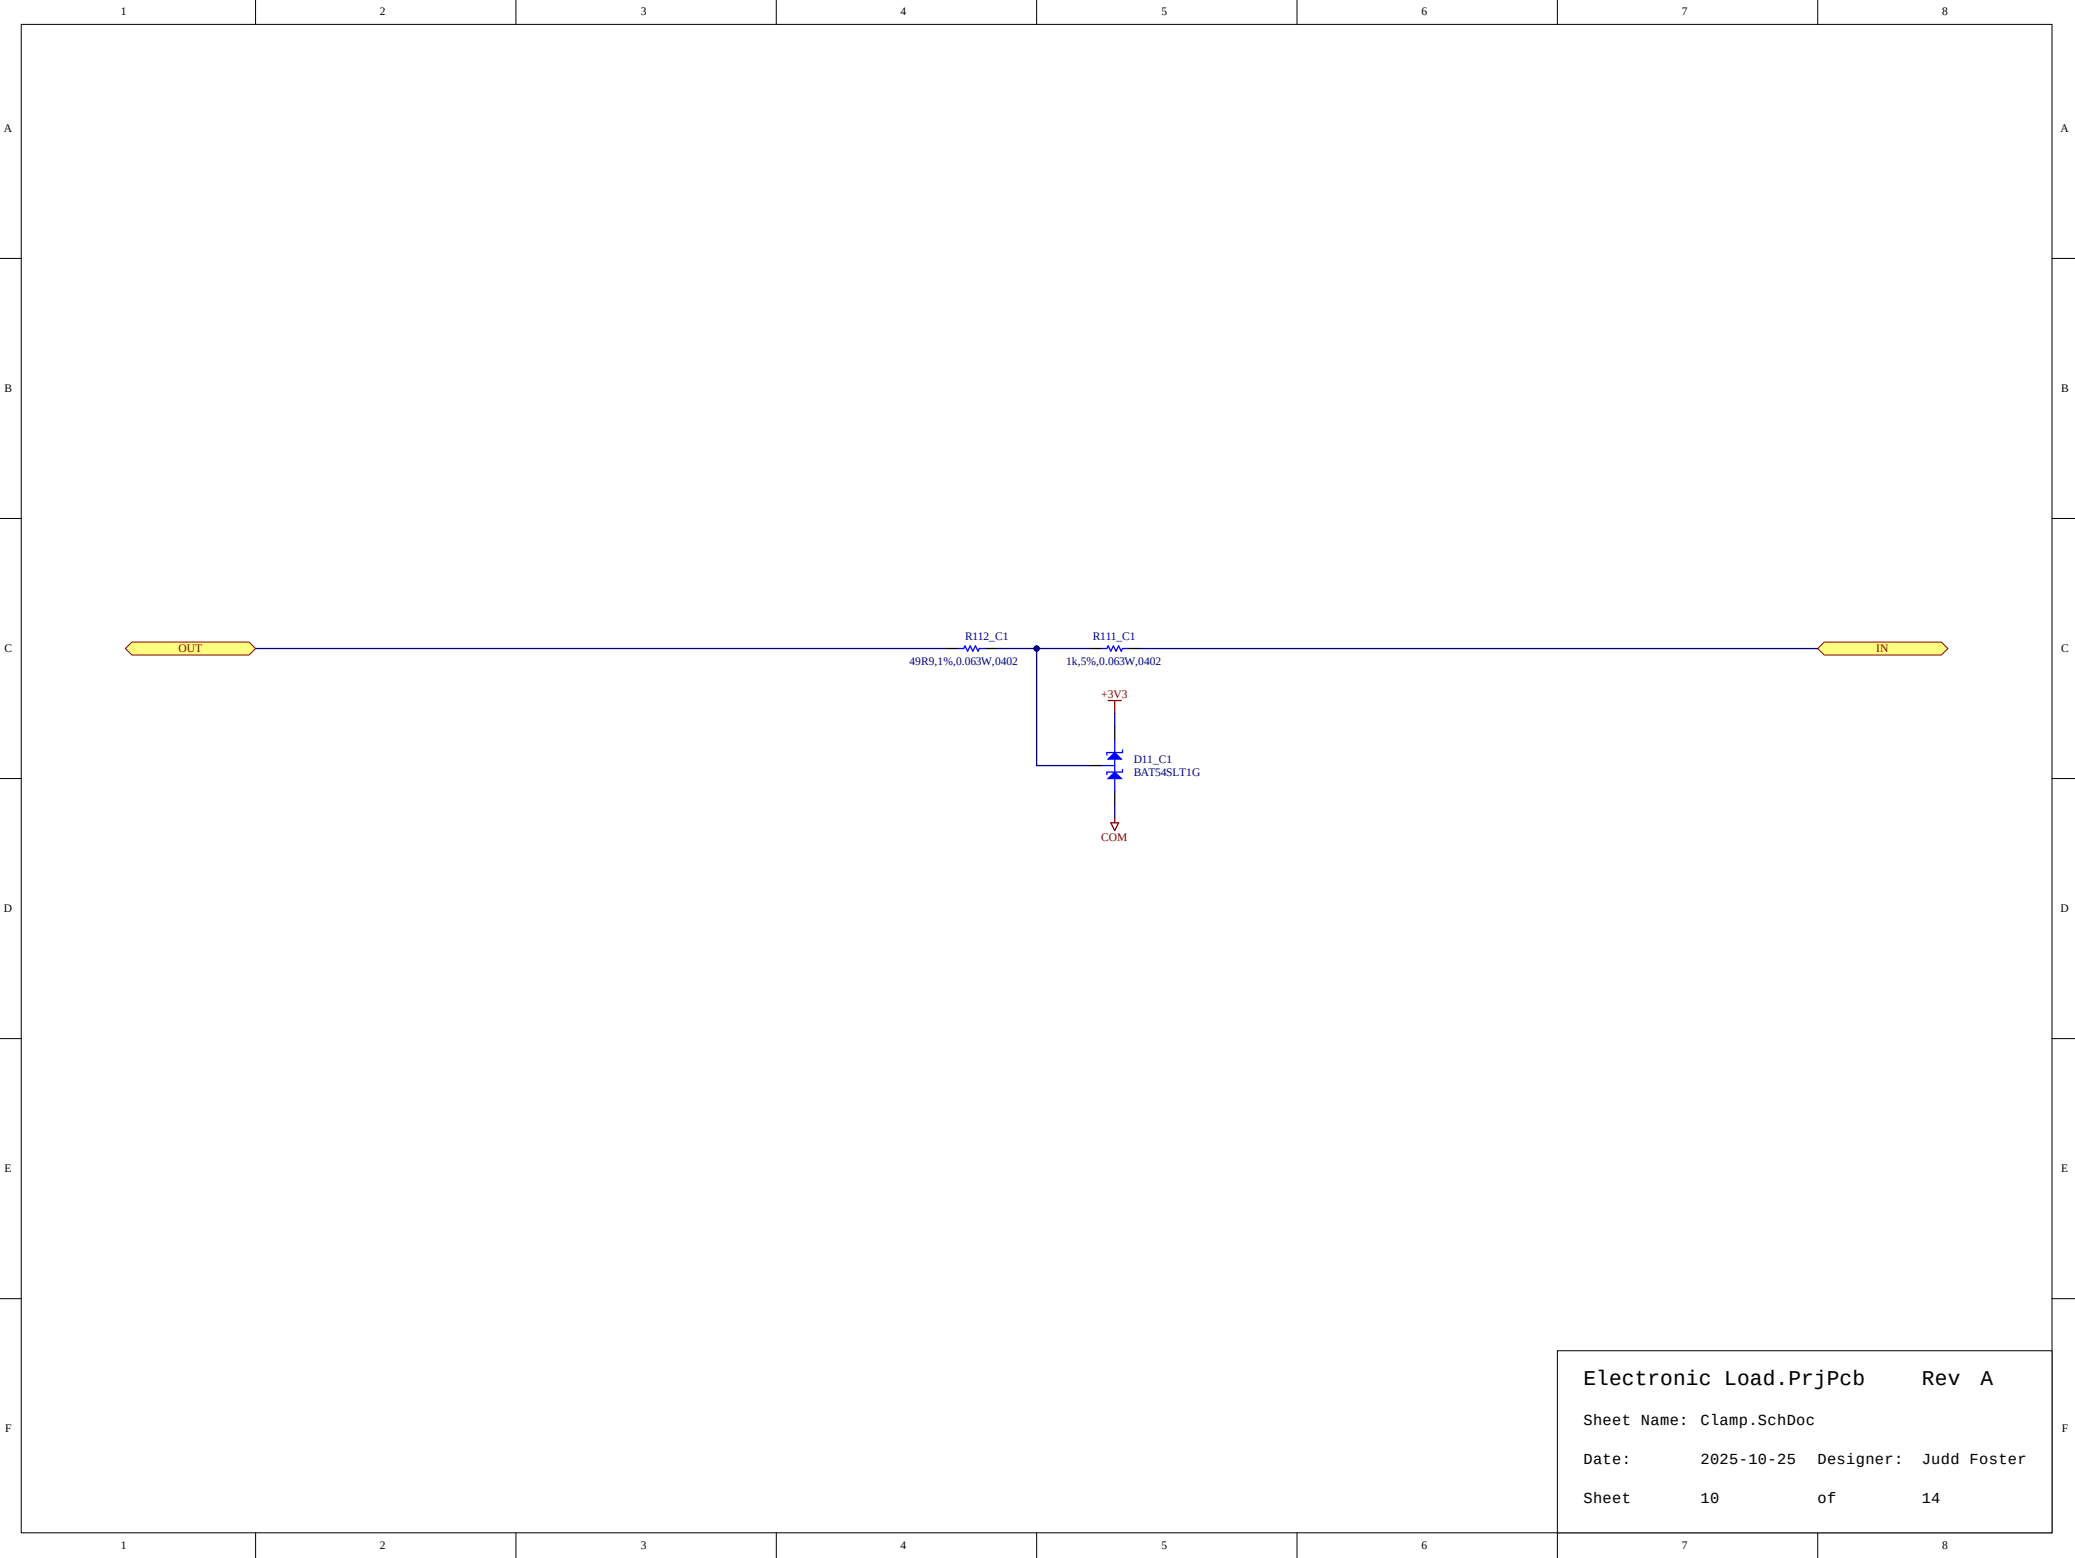


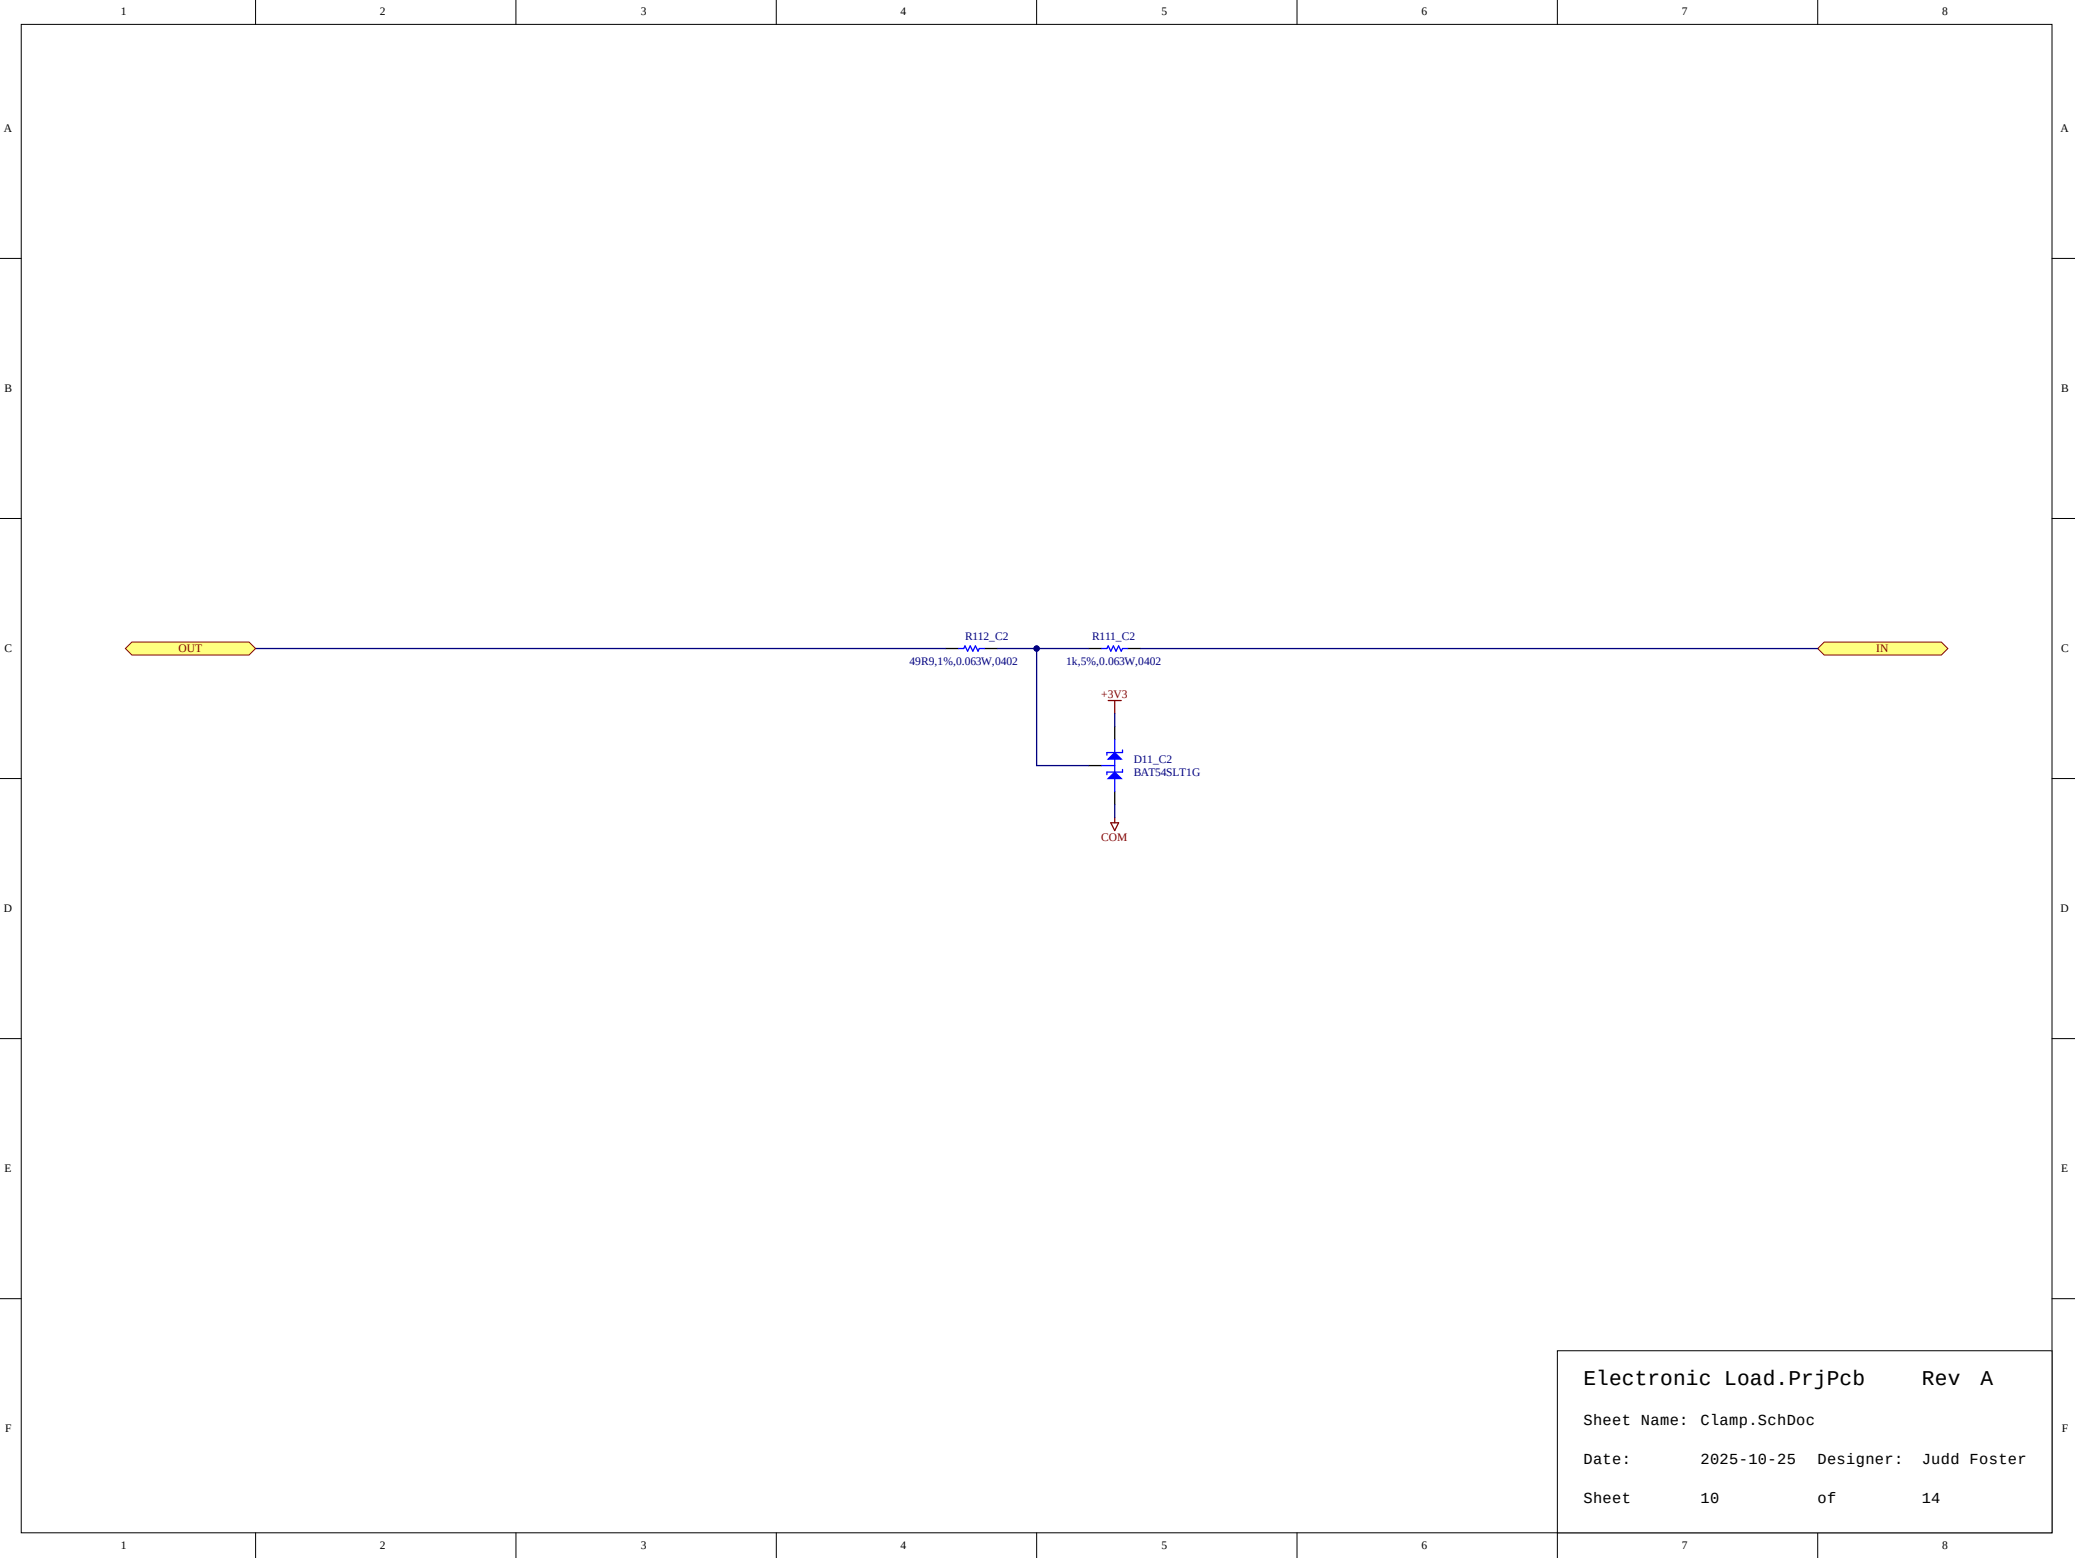

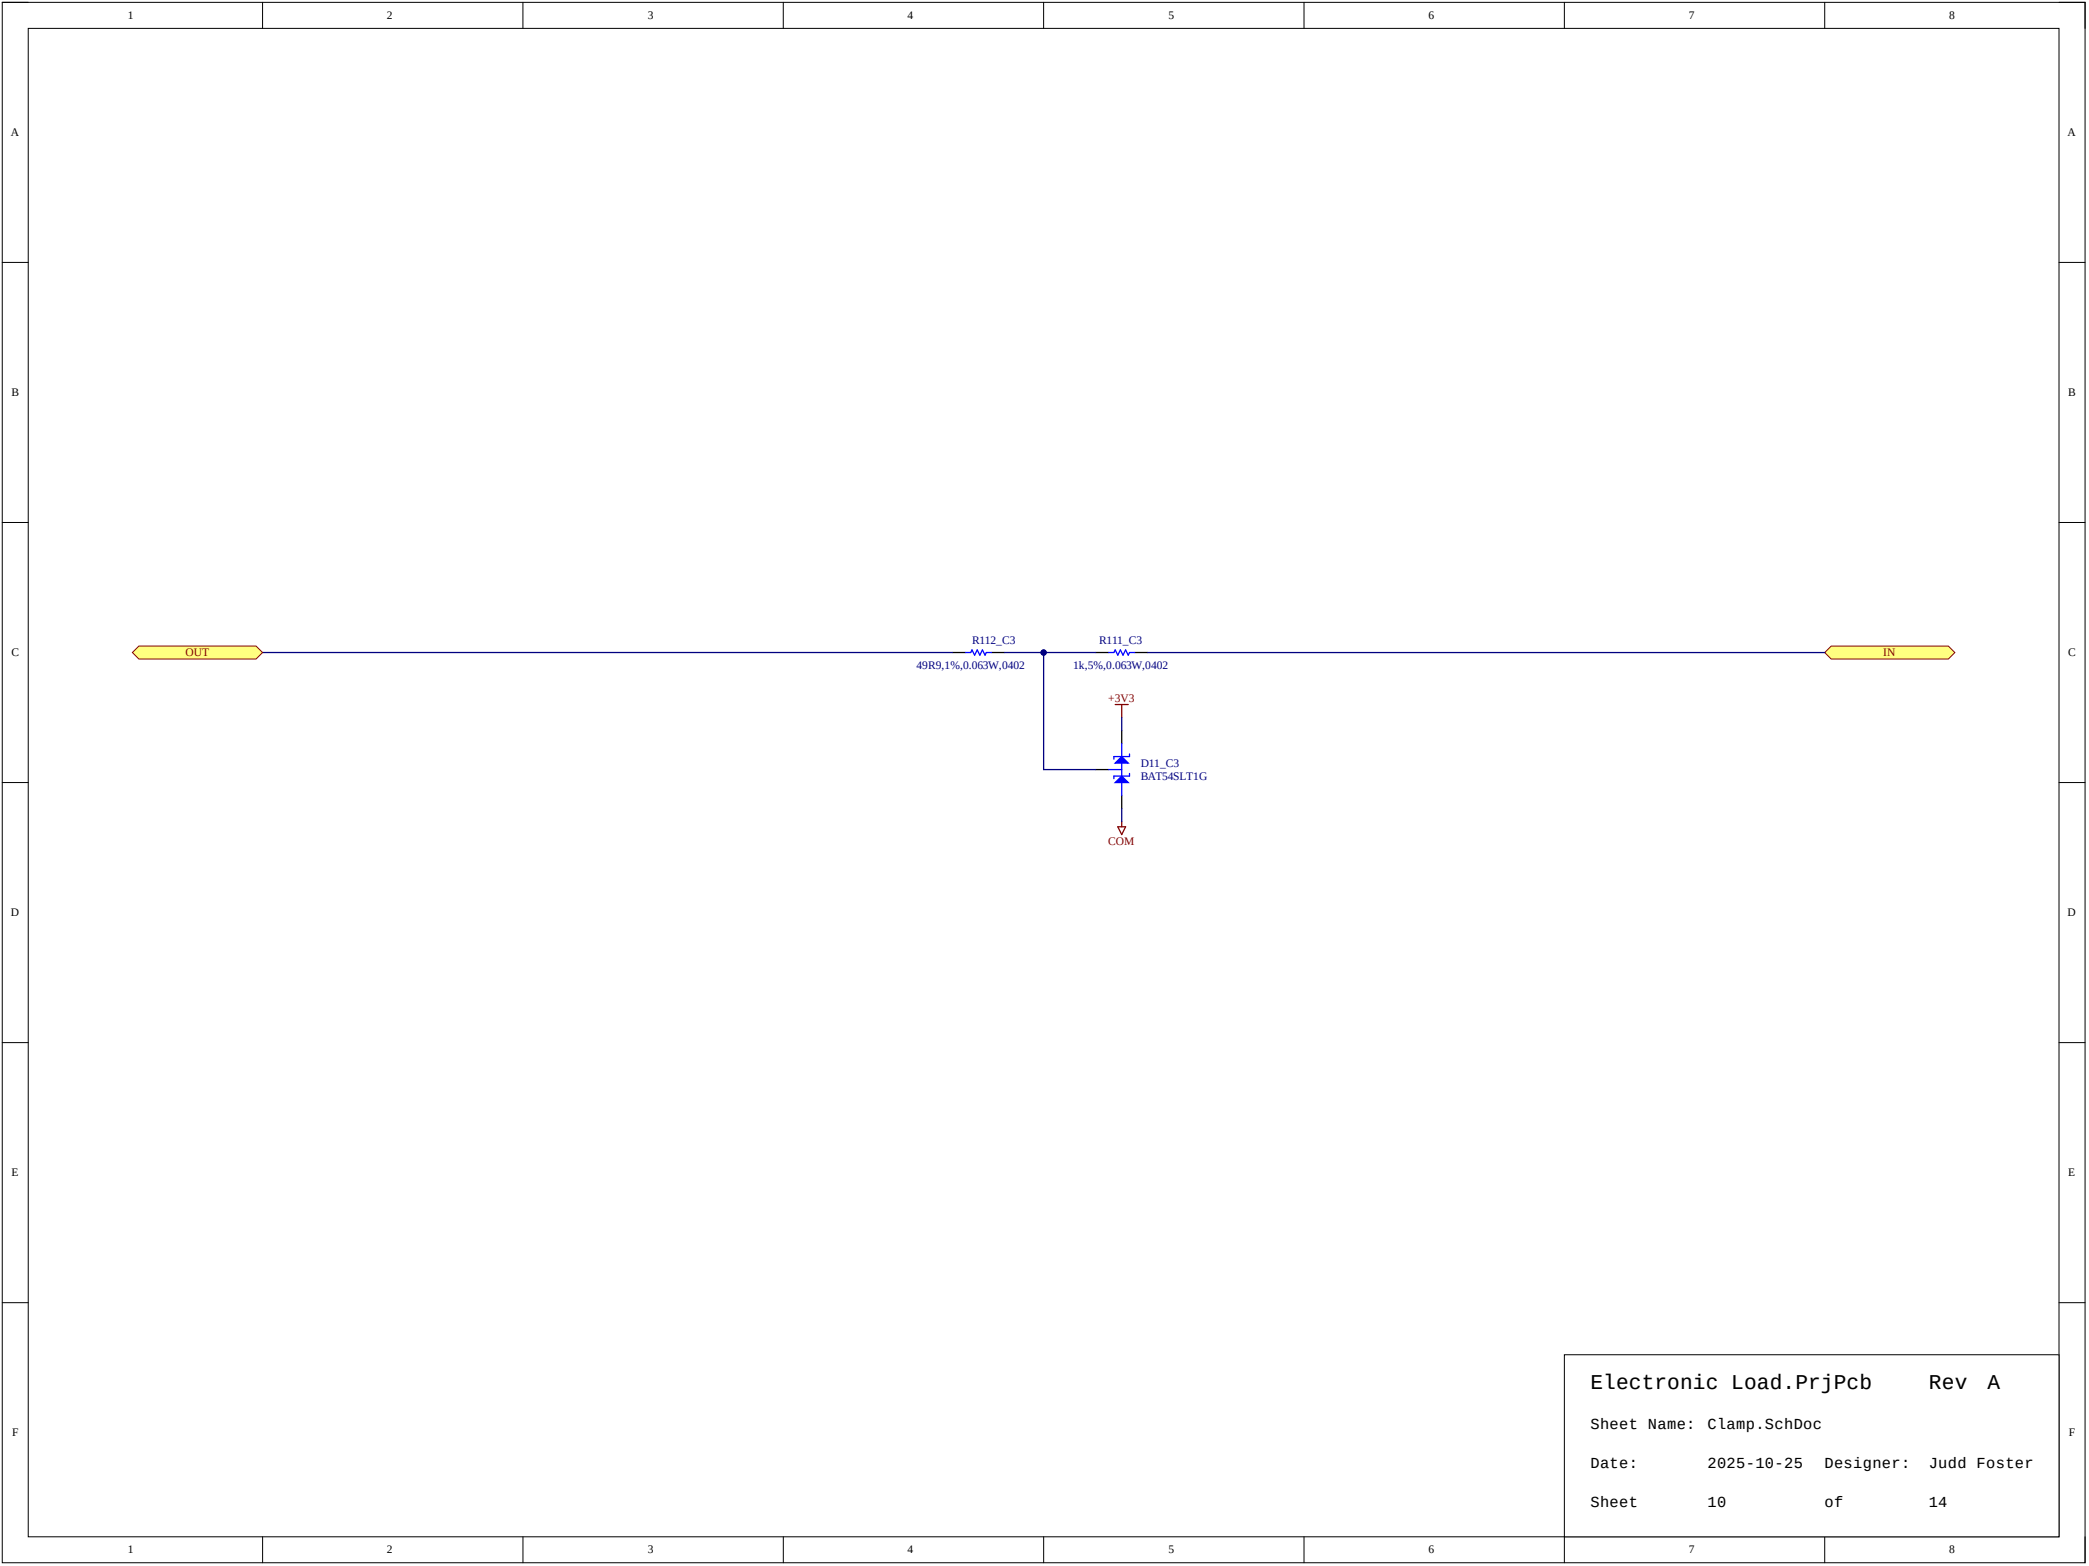


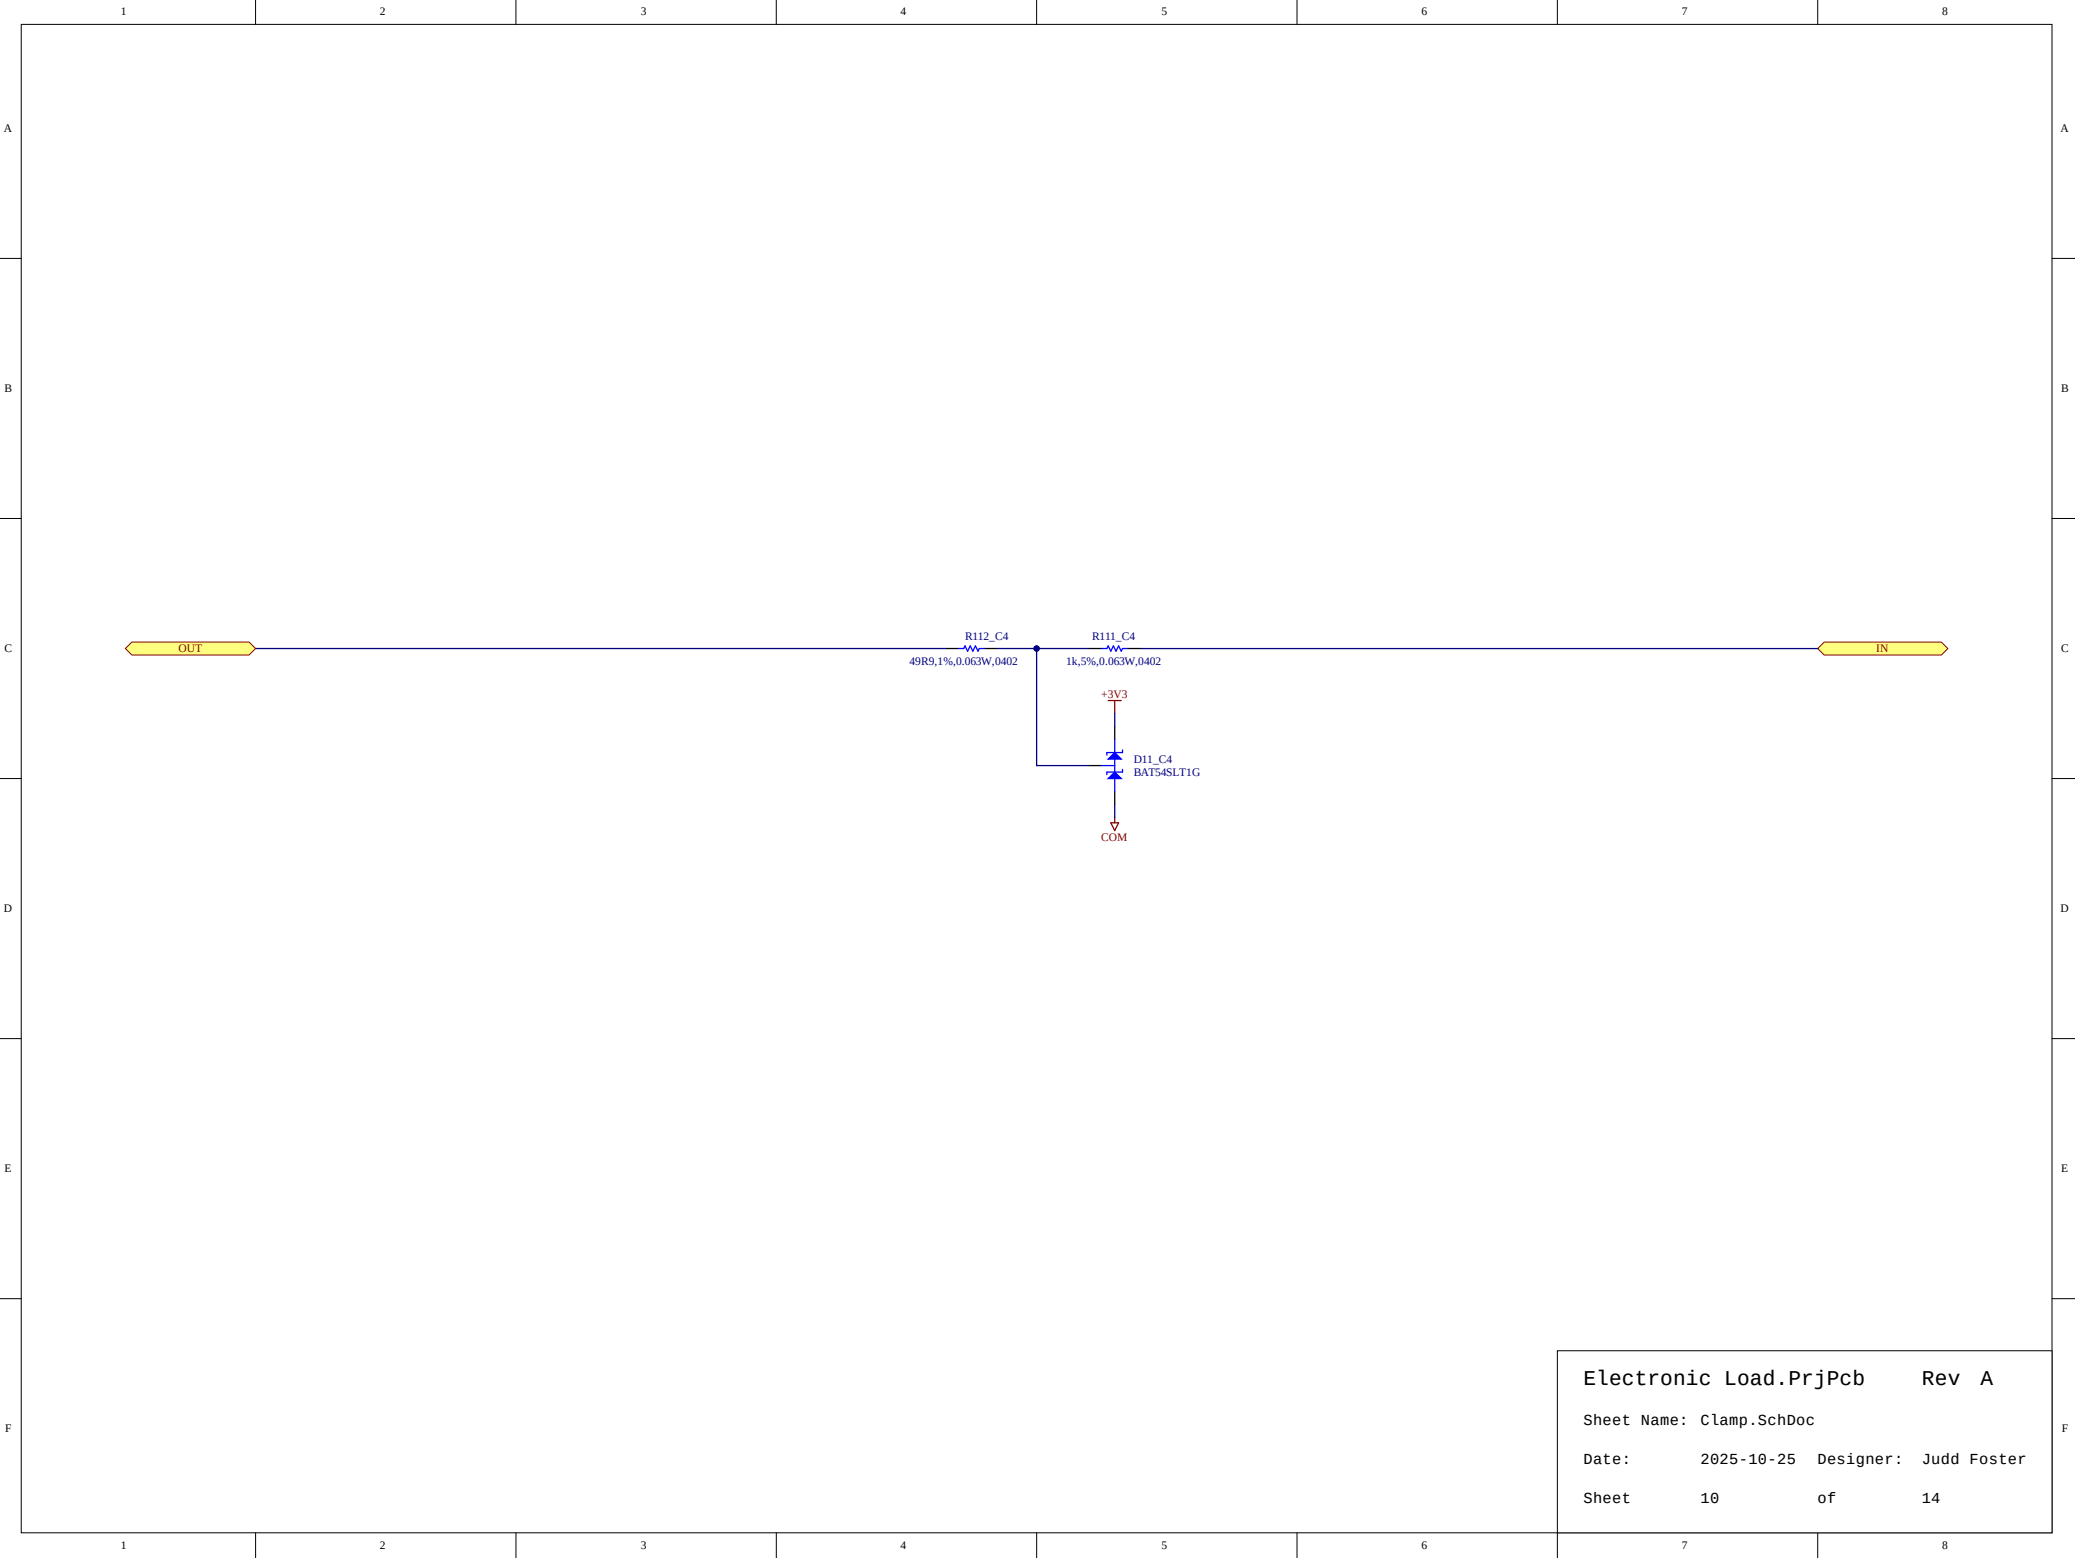



Electronic Load.PrjPcb			Rev A		
Sheet Name: Clamp.SchDoc					
Date:	2025-10-25		Designer:	Judd Foster	
Sheet	10	of		14	

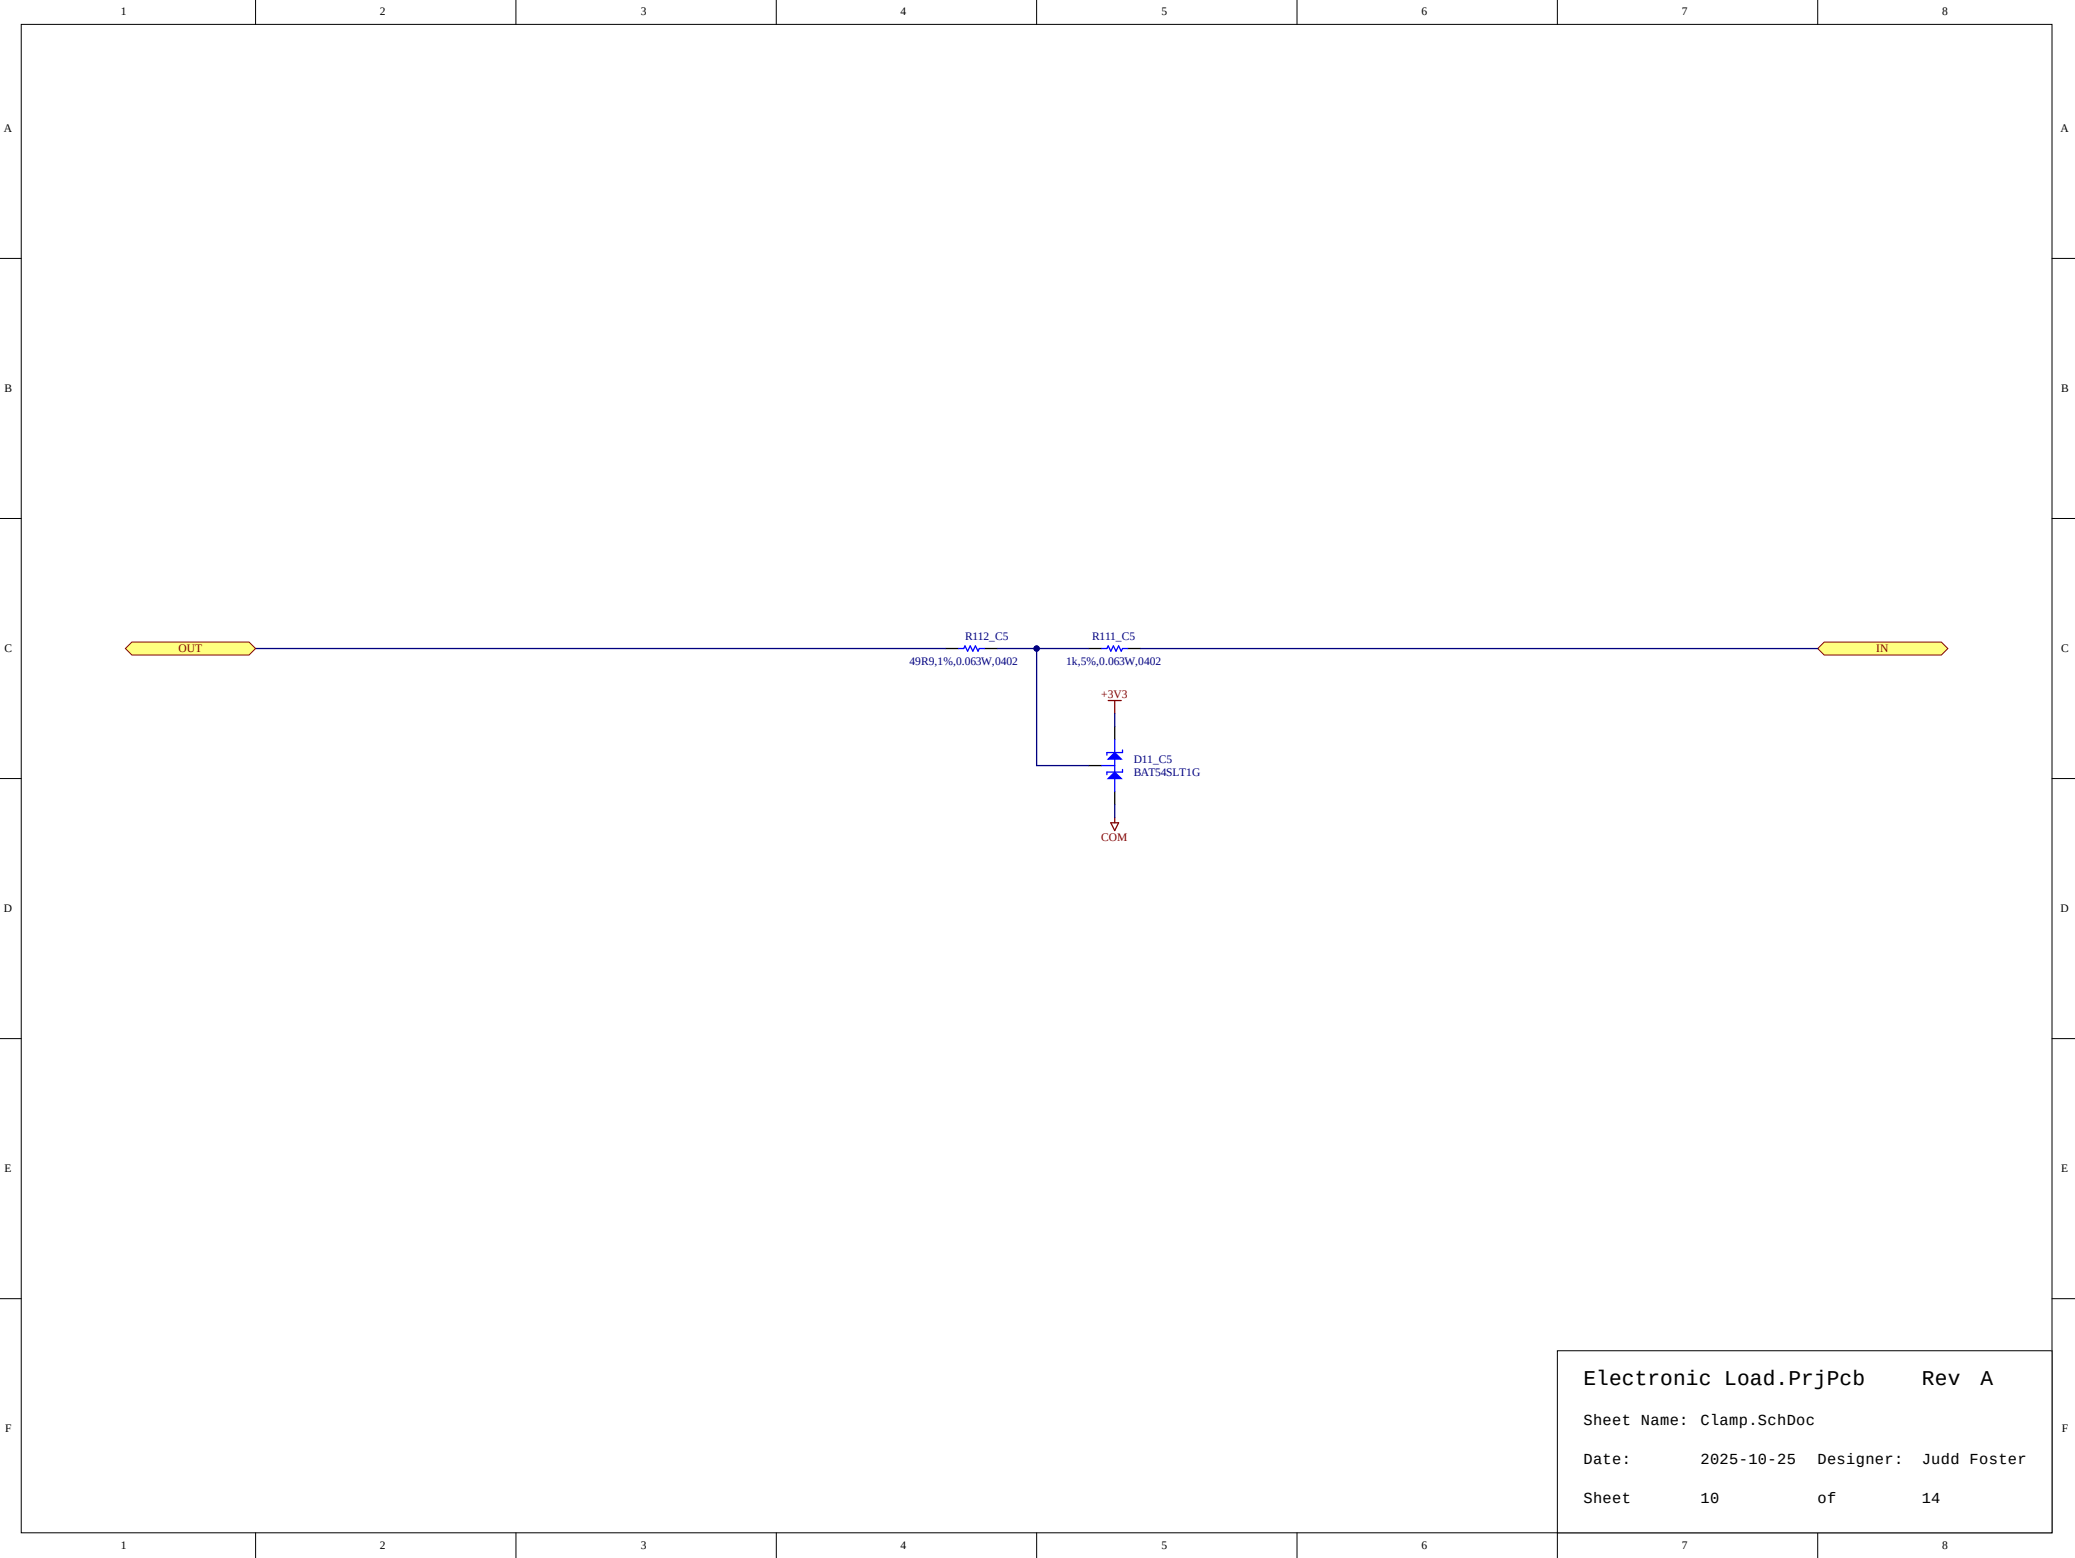



Electronic Load.PrjPcb		Rev A	
Sheet Name: Clamp.SchDoc			
Date:	2025-10-25	Designer:	Judd Foster
Sheet	10	of	14

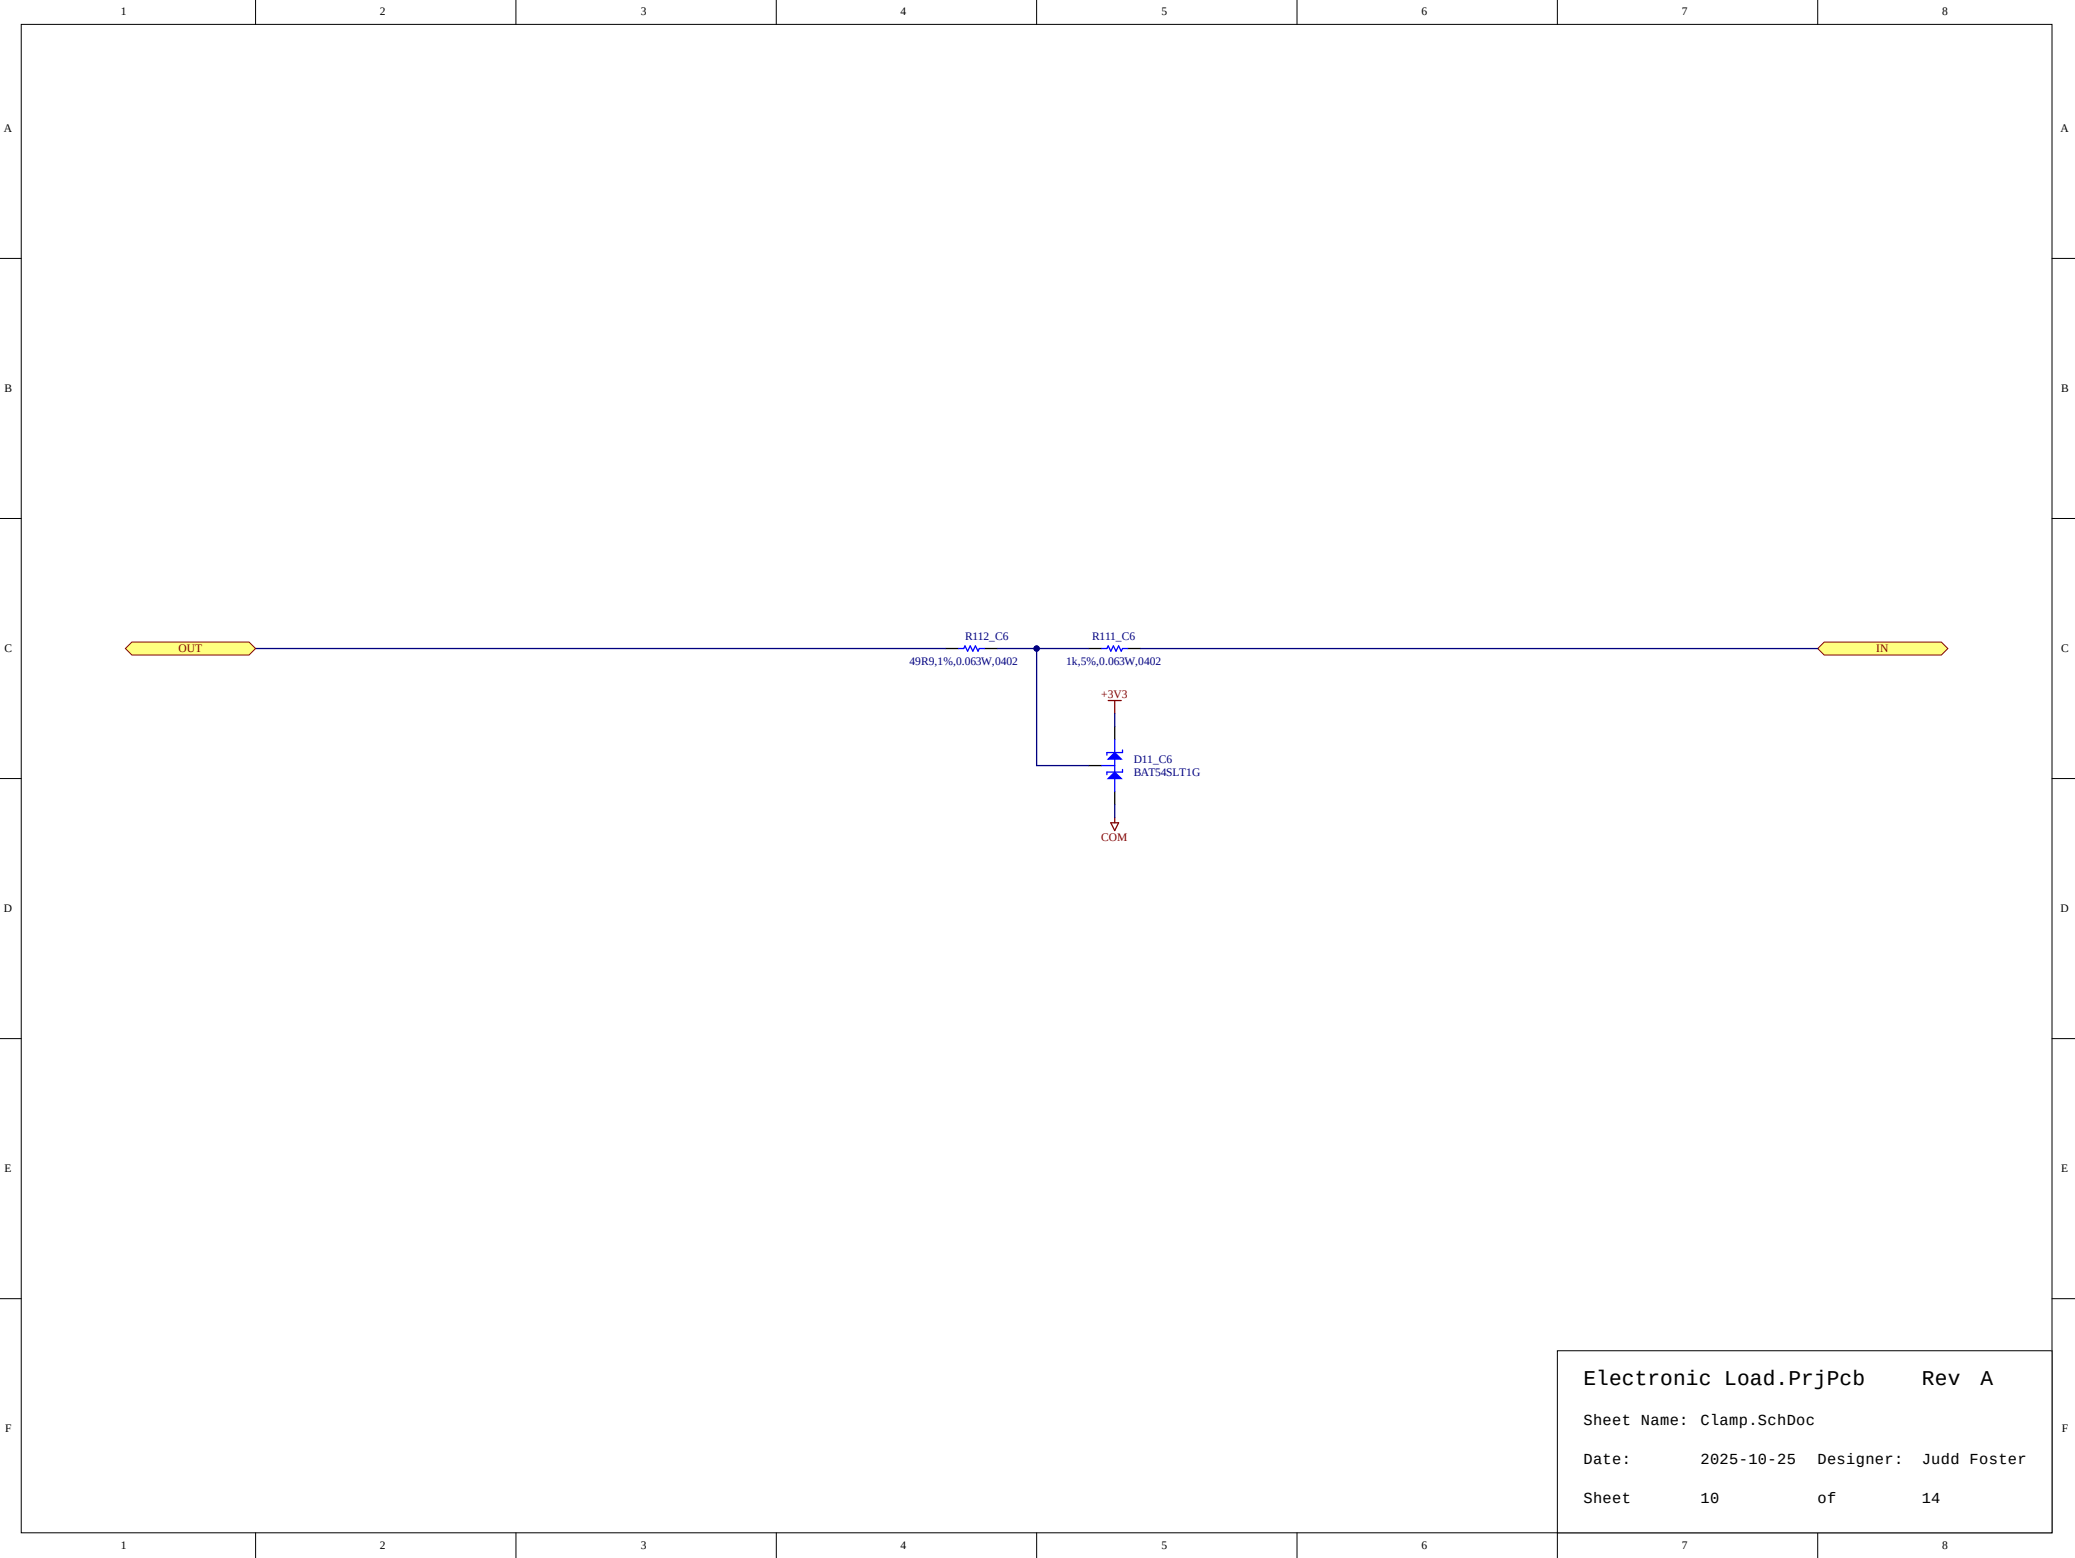


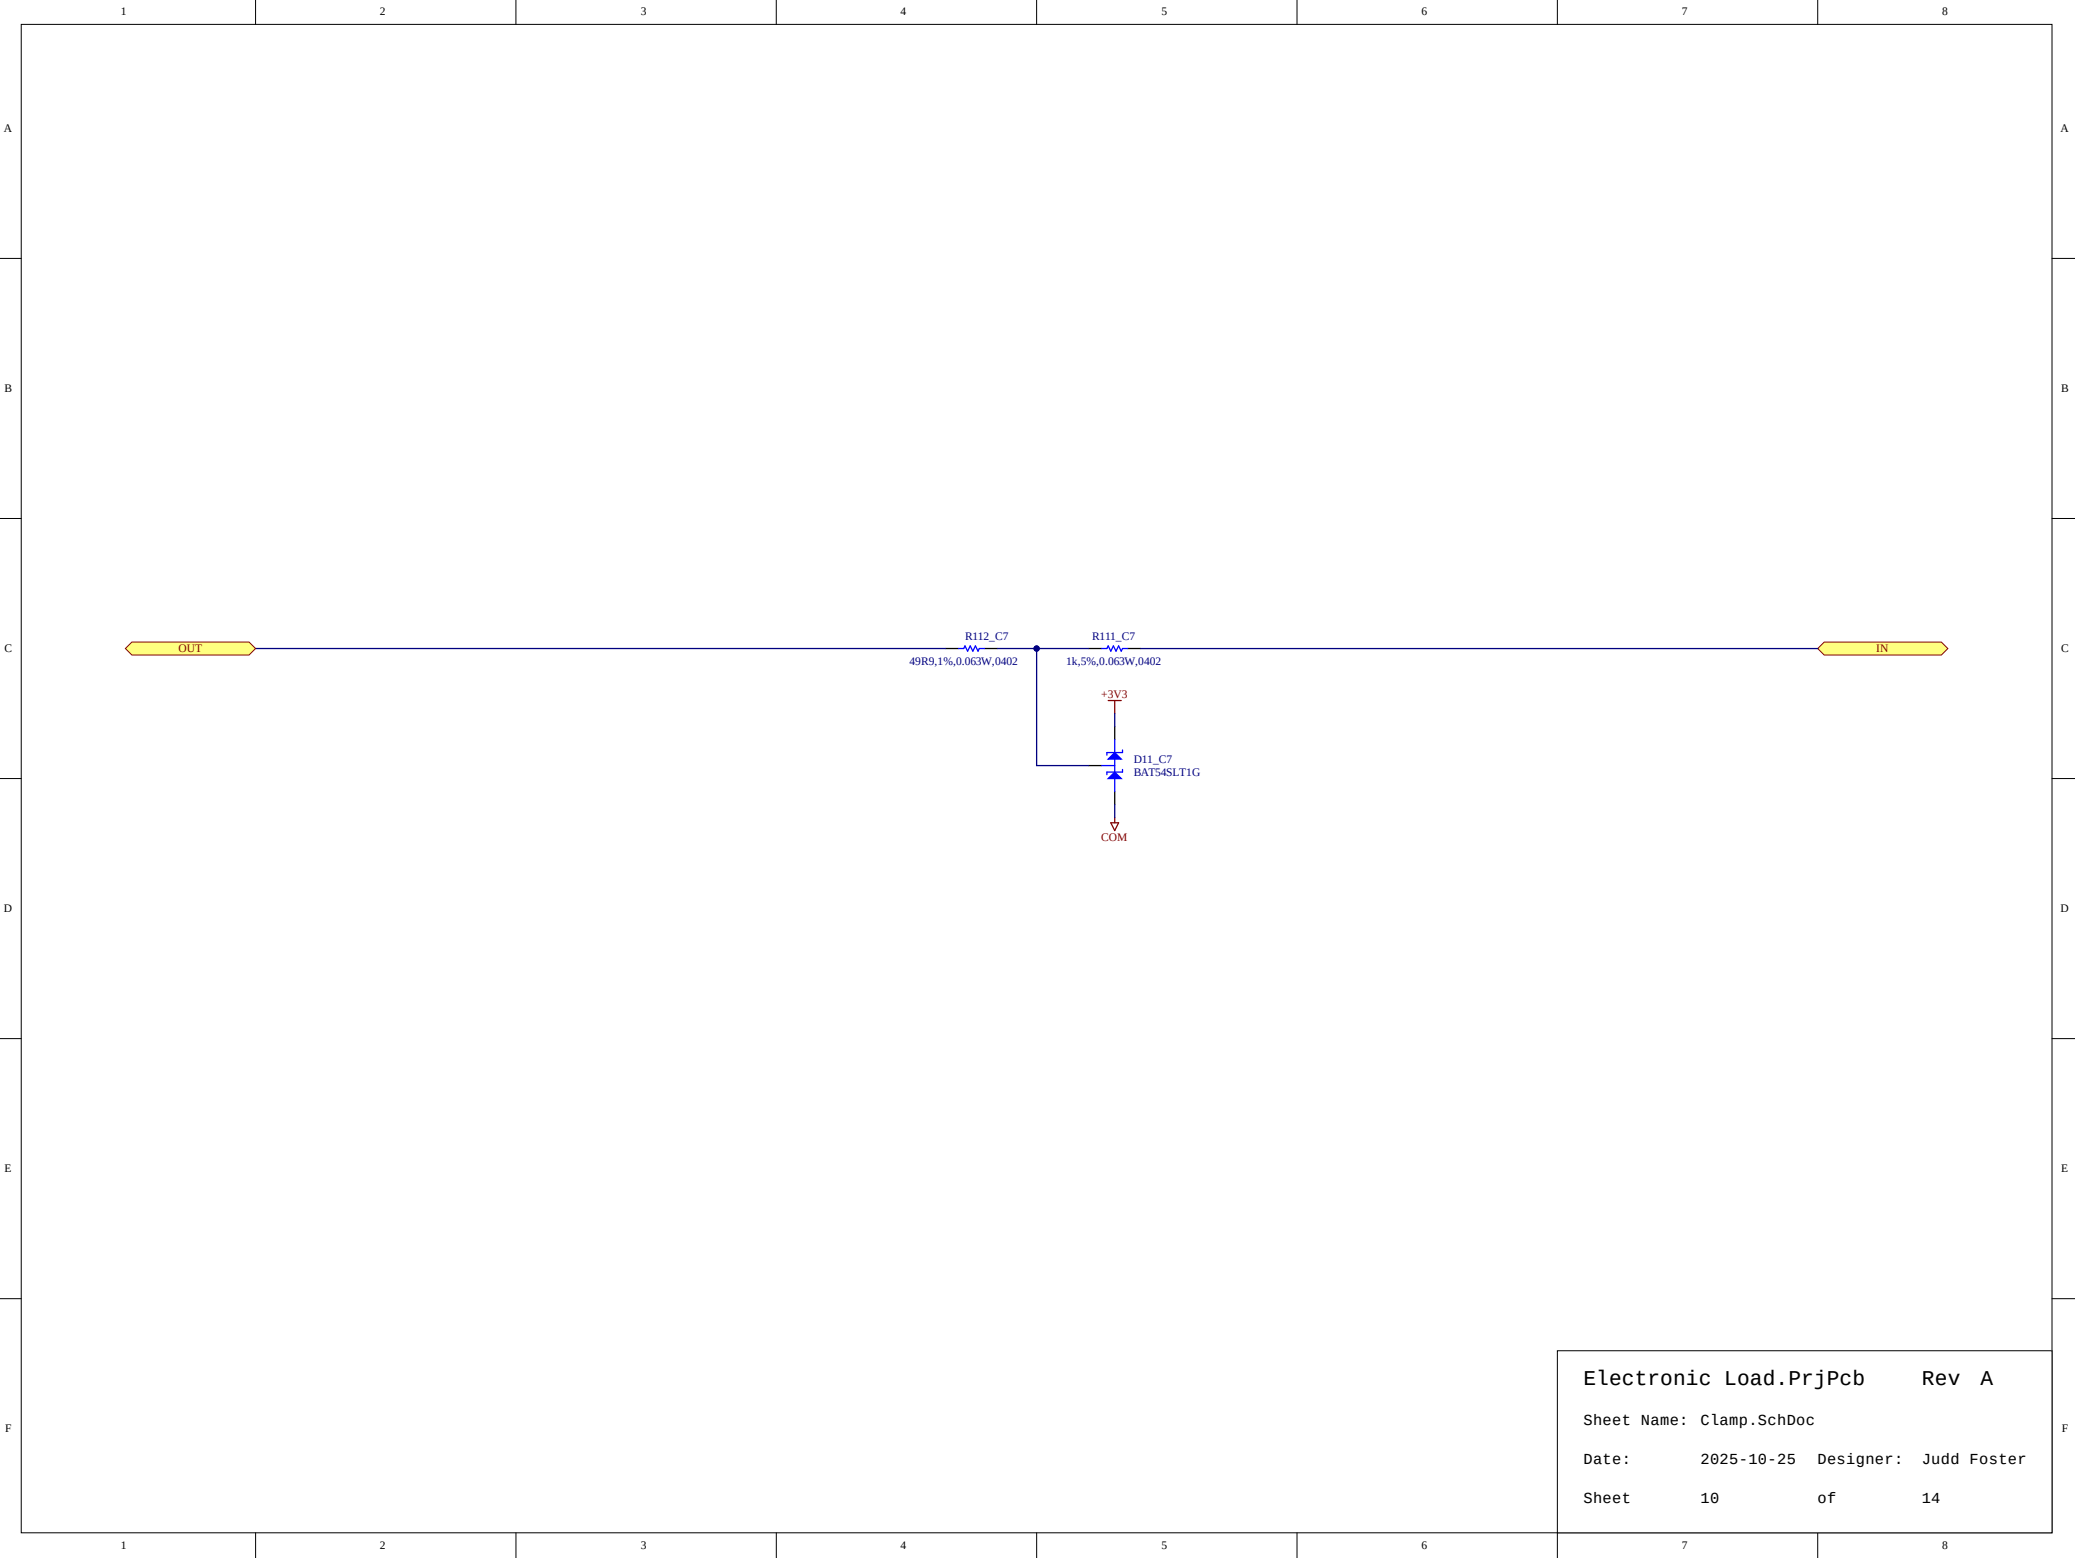

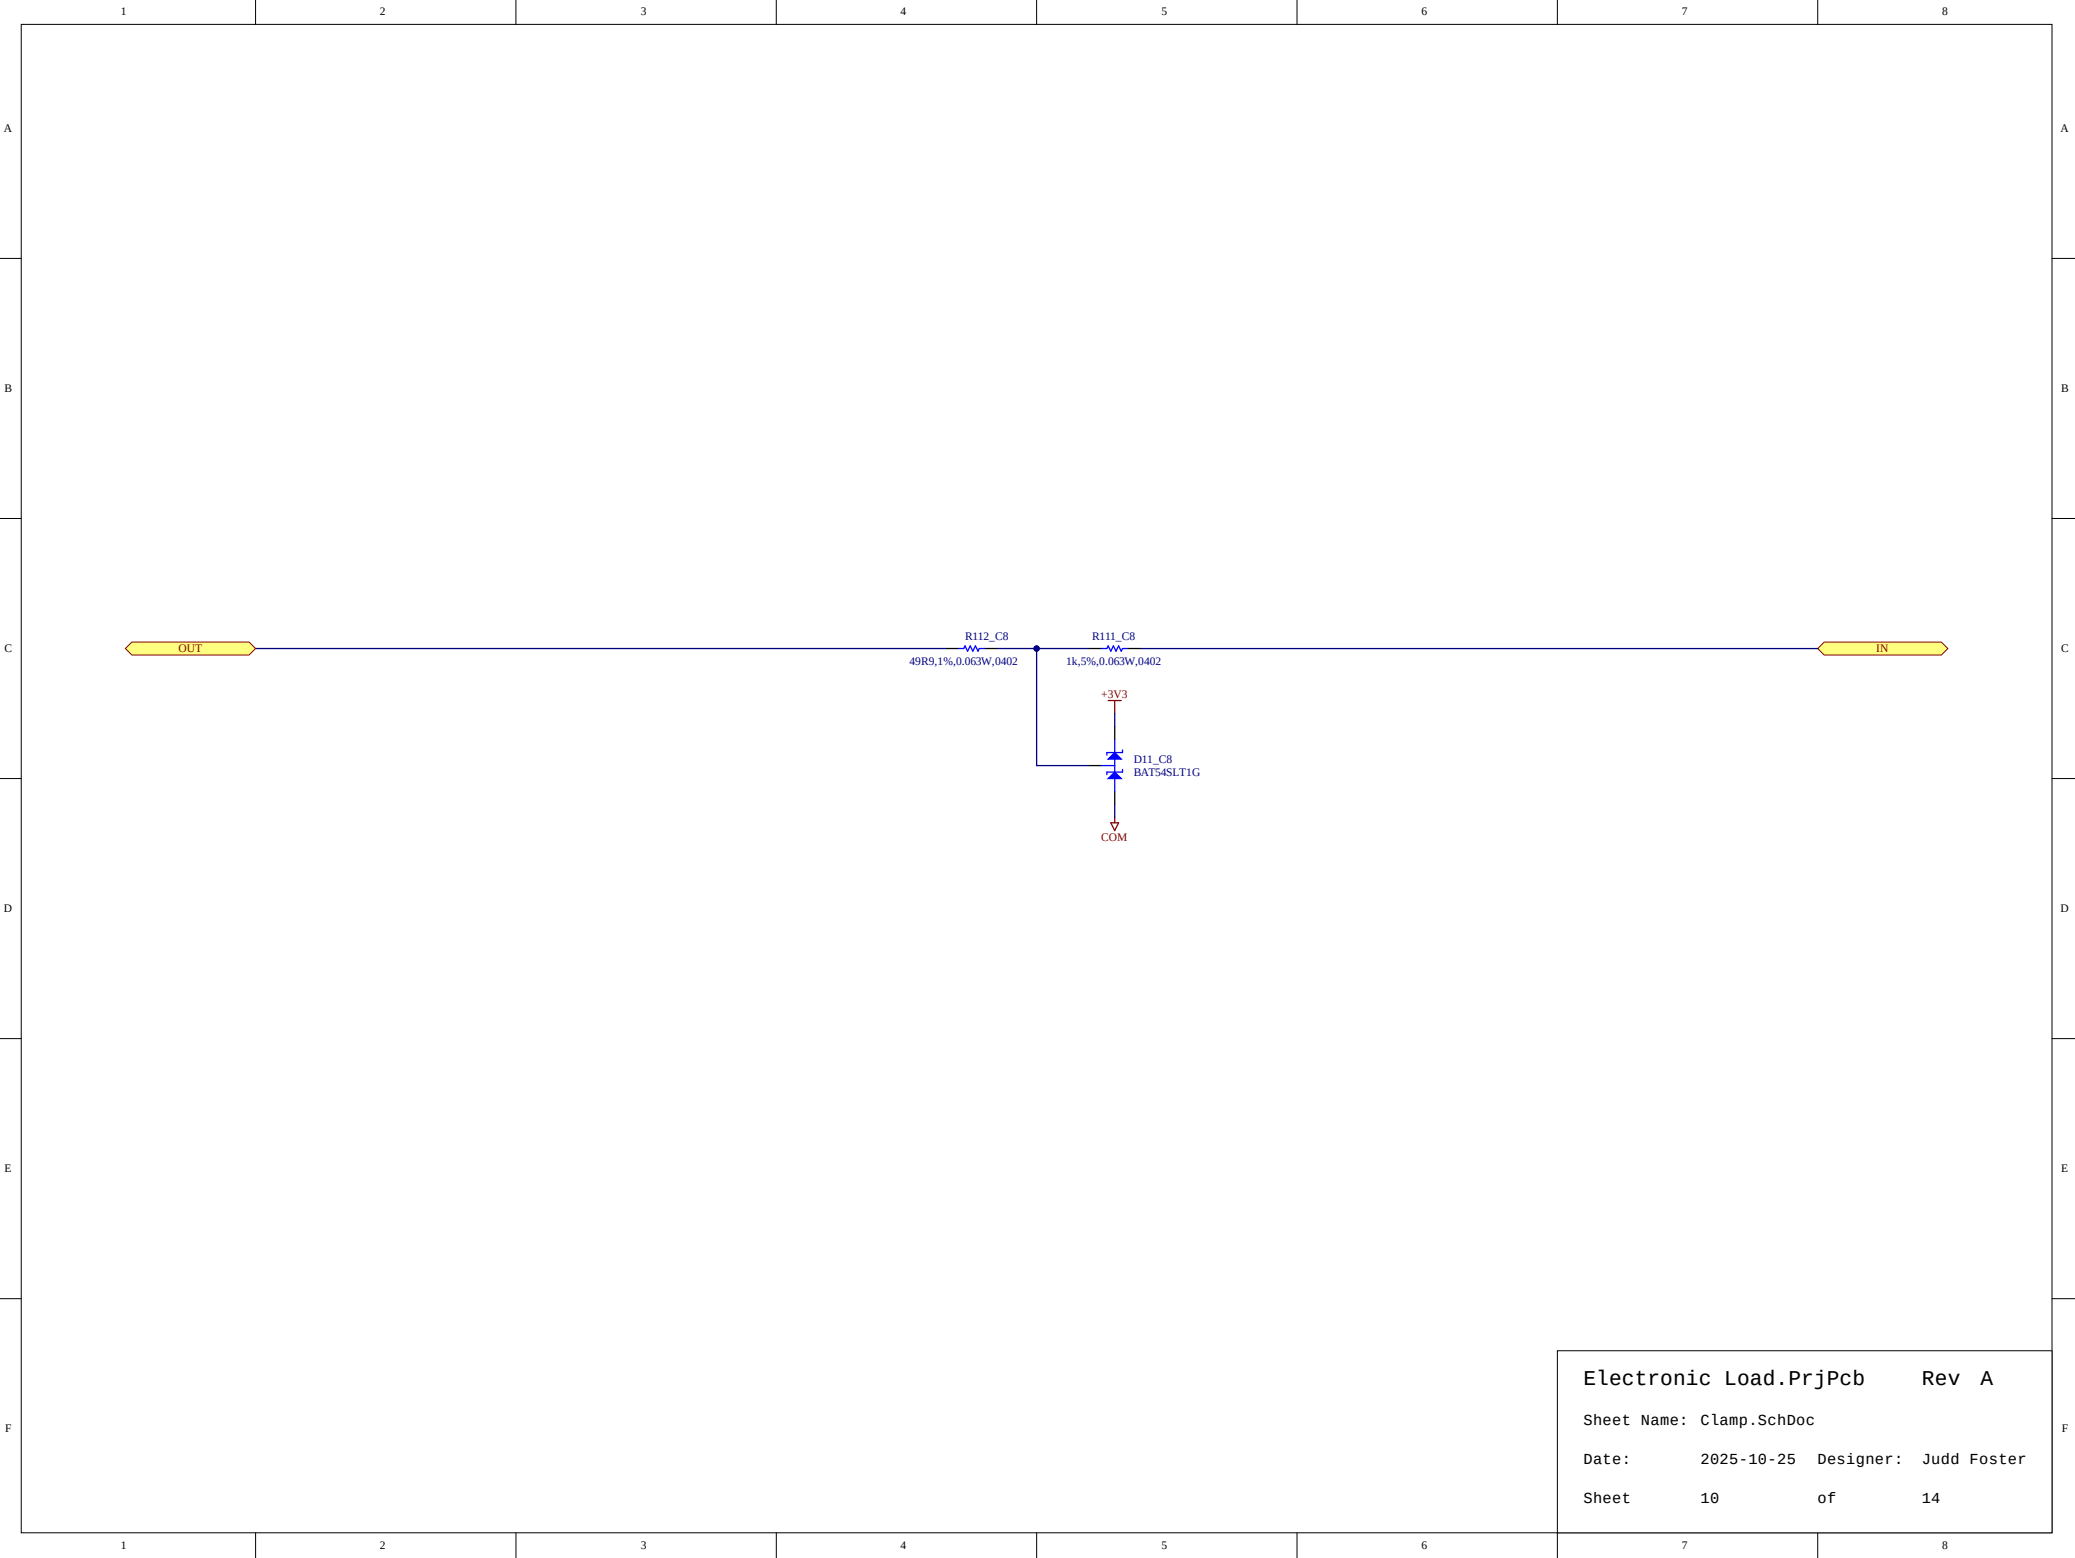


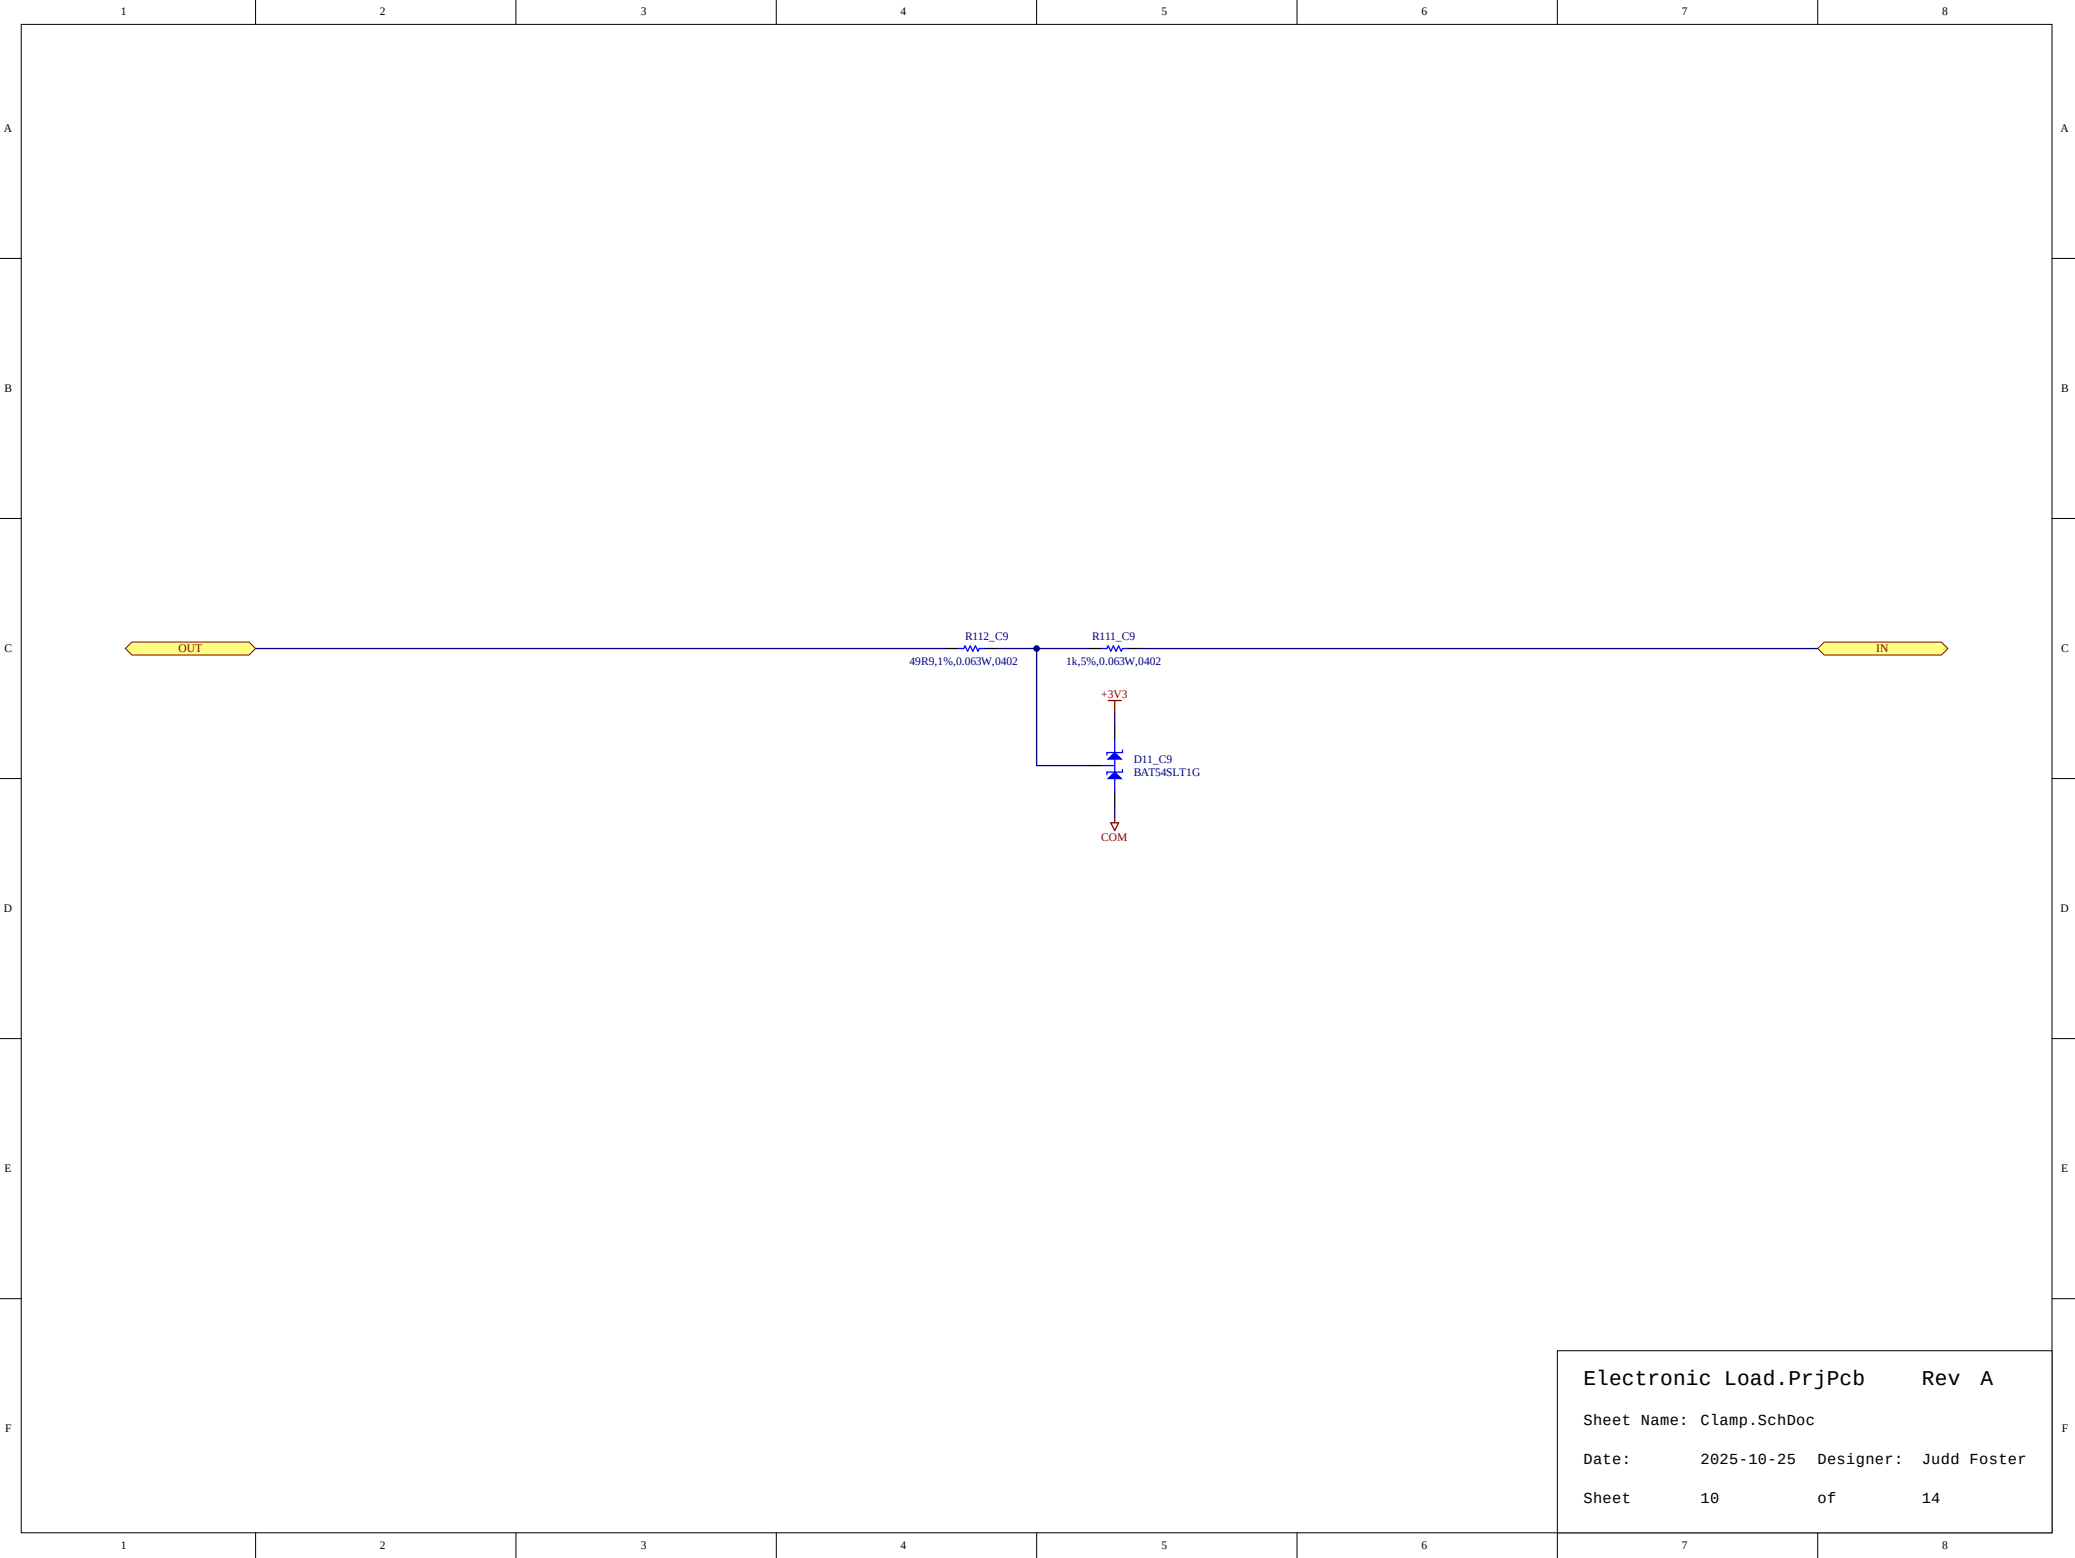

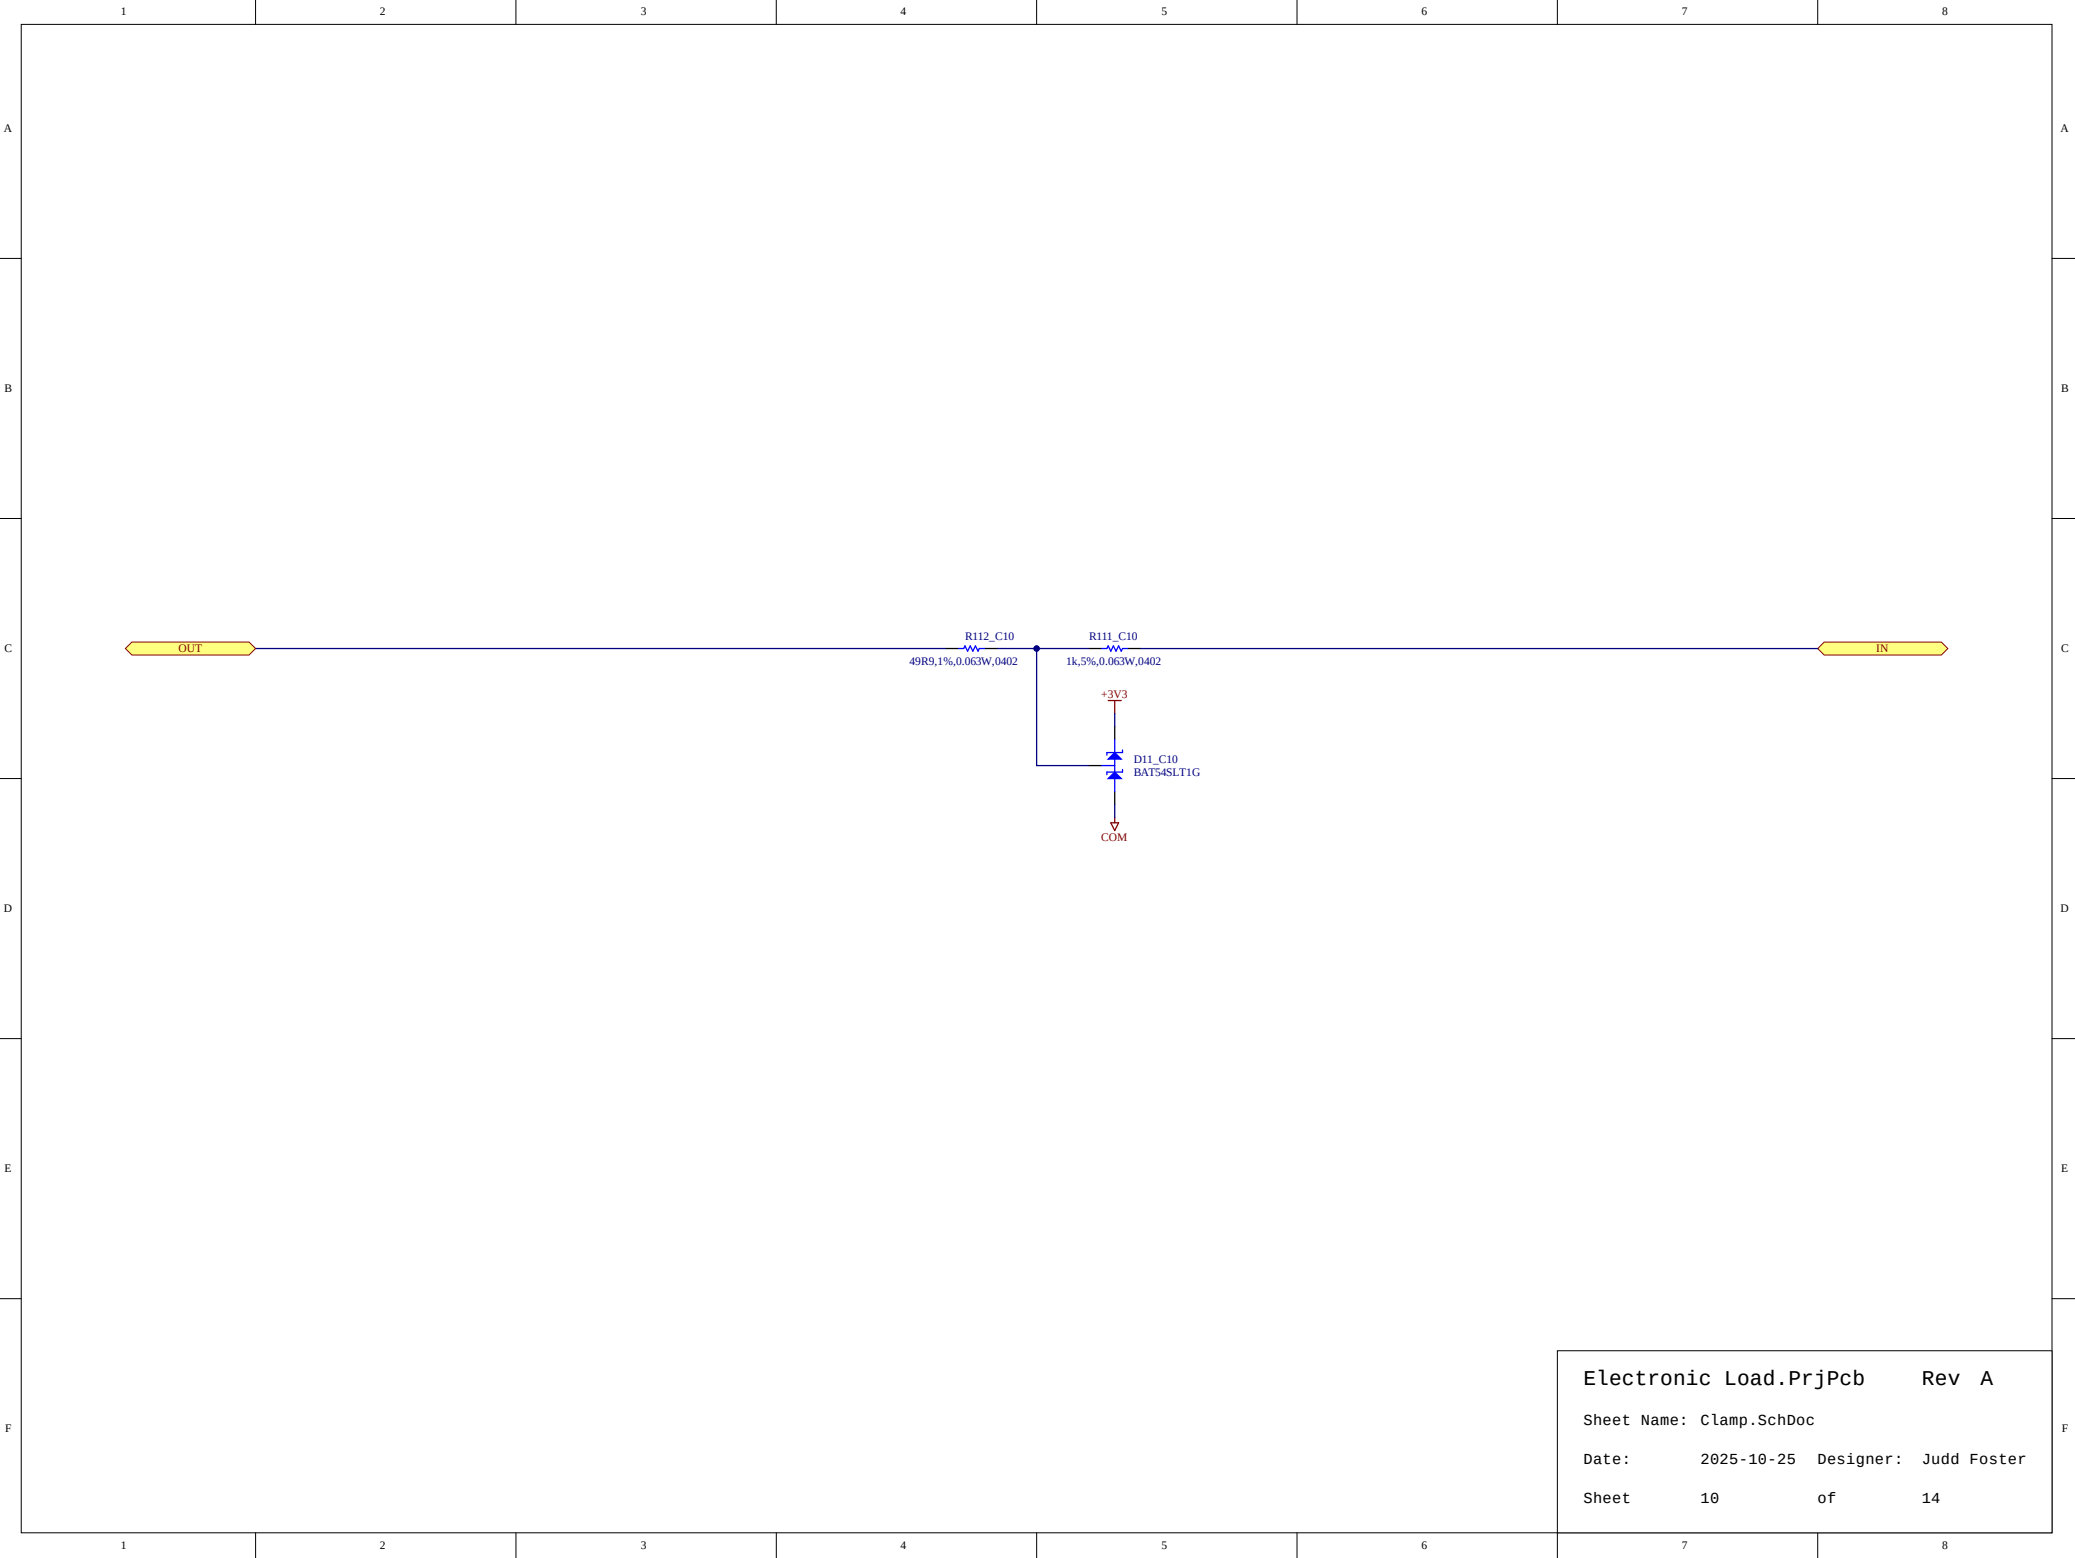


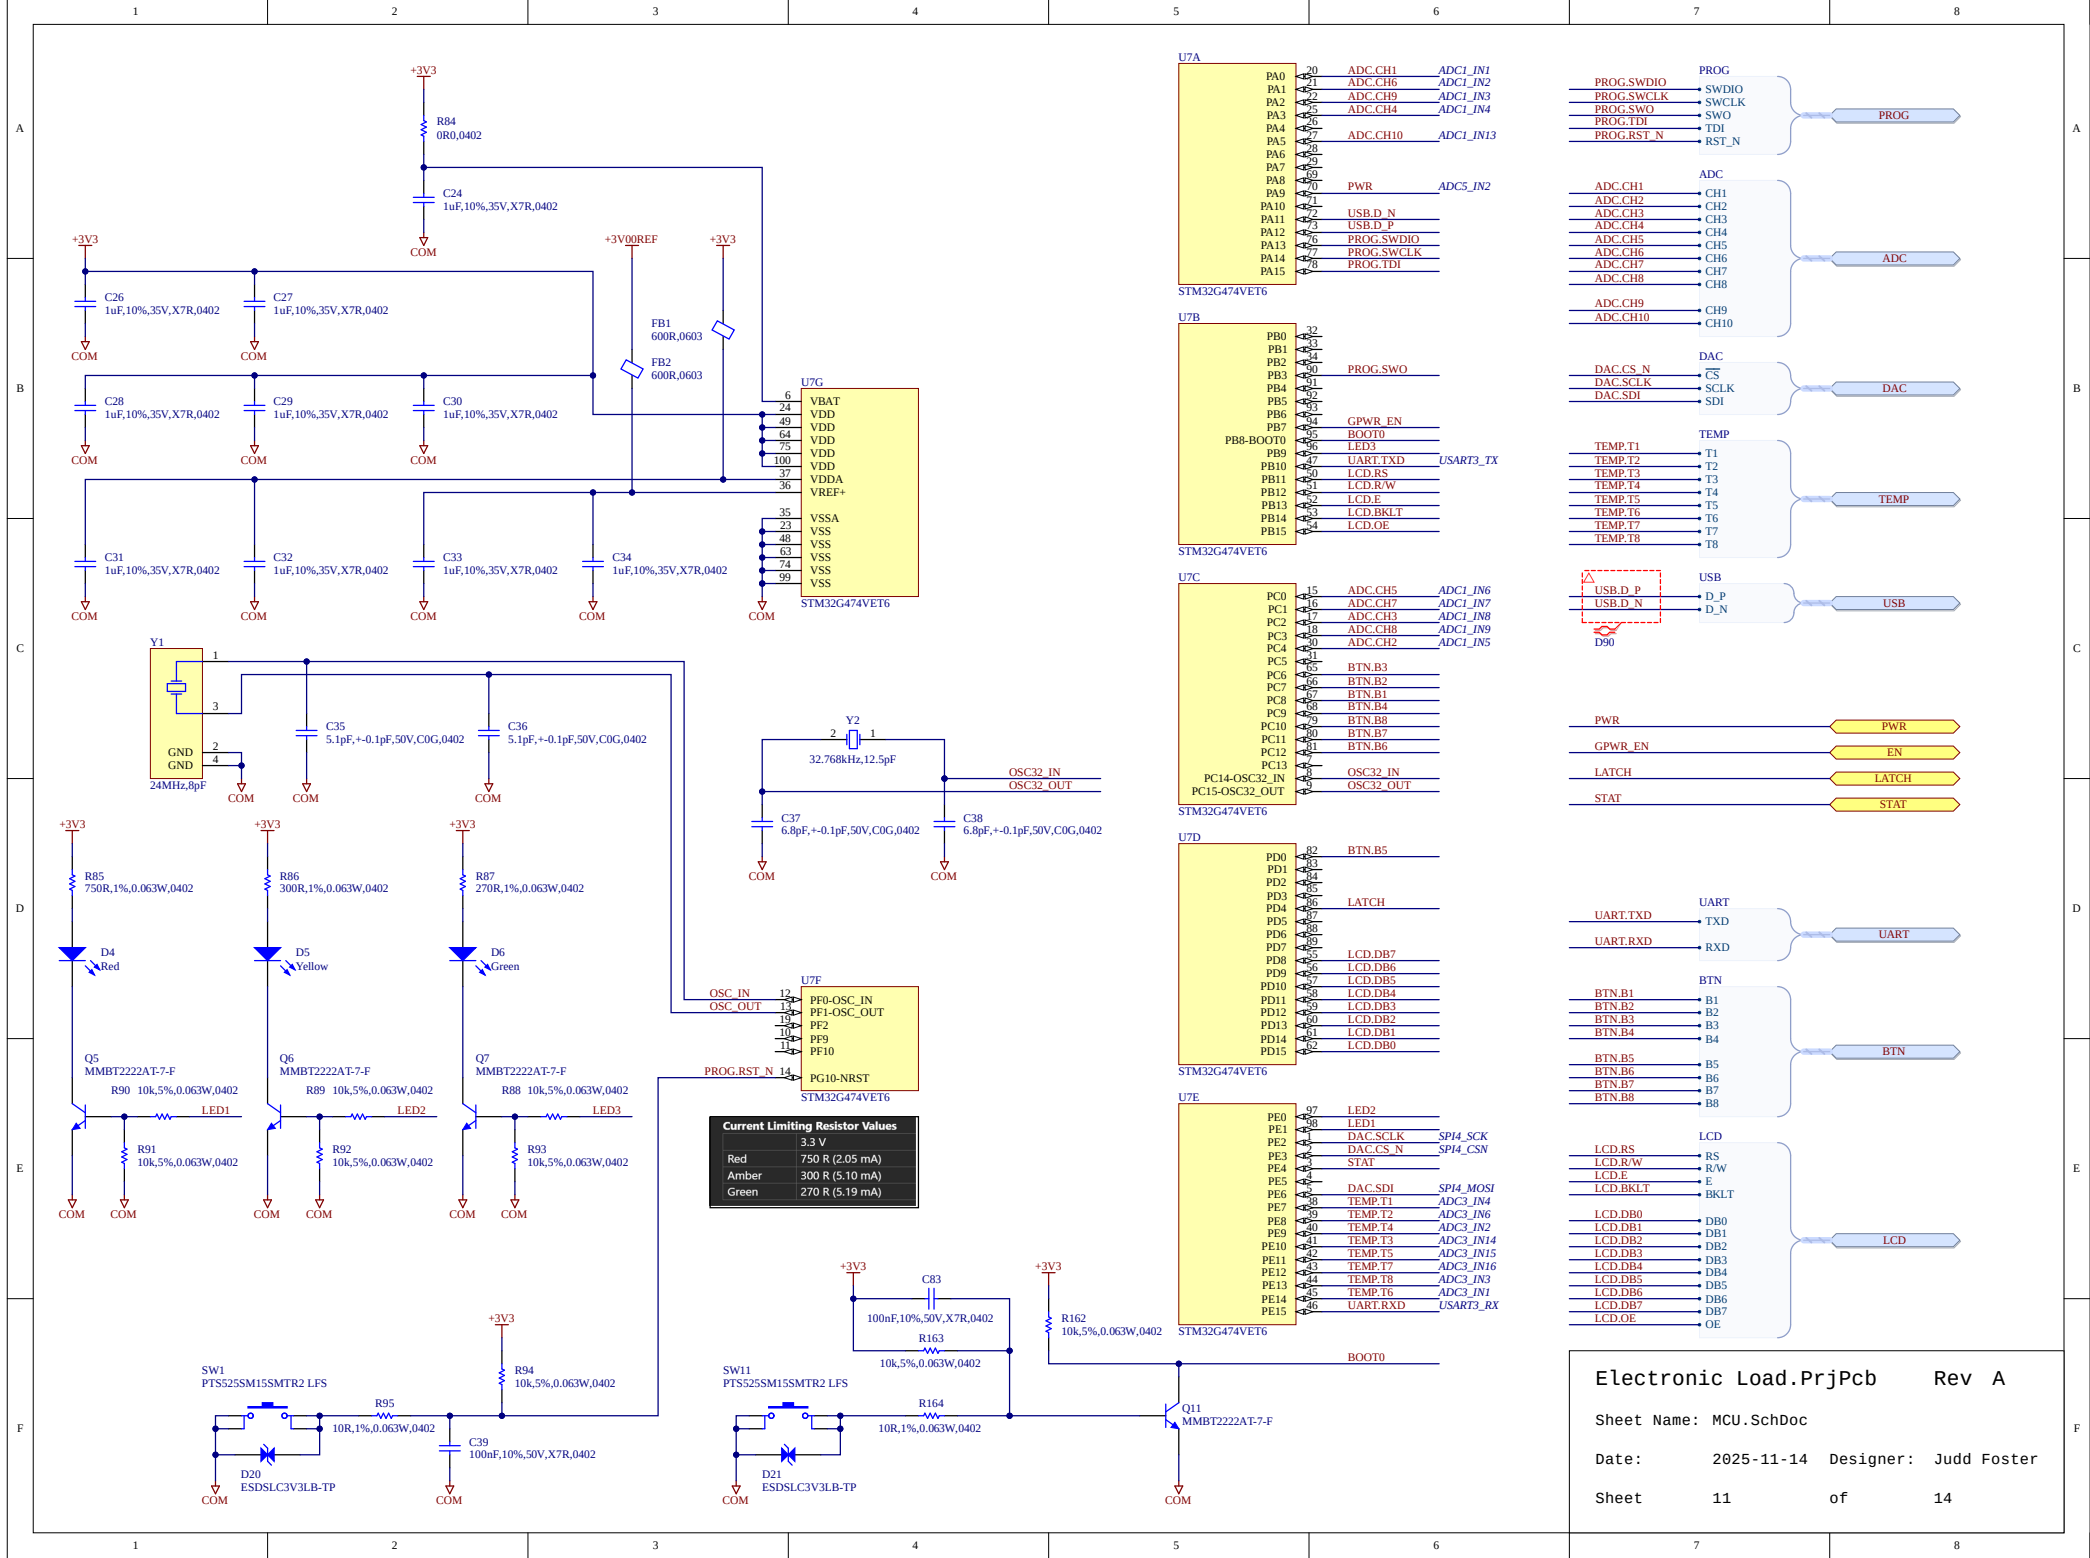

+/-19 V @ 200 mA

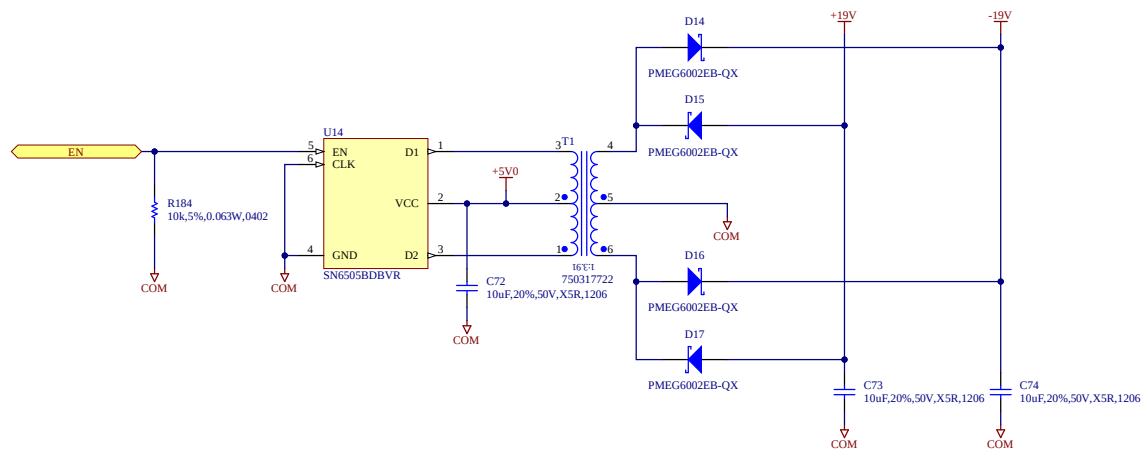

+15 V @ 200 mA

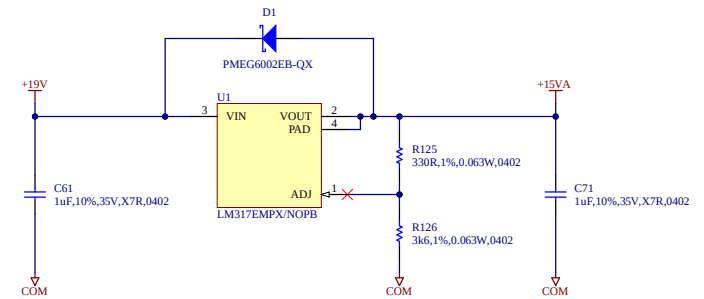

-5 V @ 200 mA

