


Board Outline Top Assy

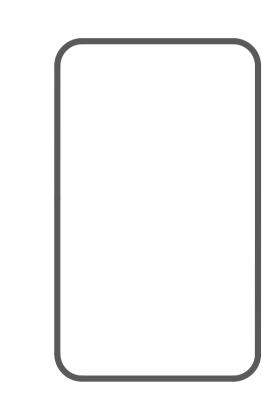



**Bottom Assy** 






do not add any PCB manufacturer identifiers no board edge pips/rat's teeth/mouse bites

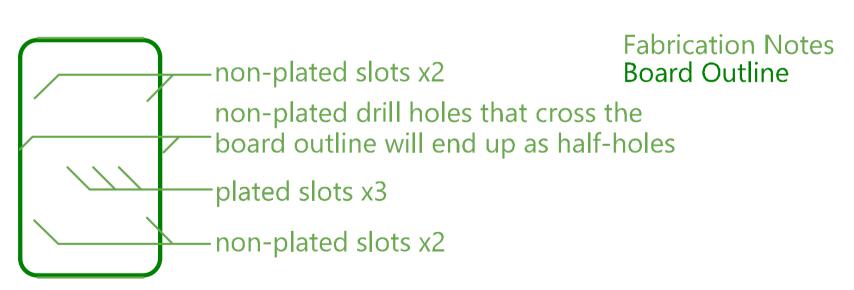

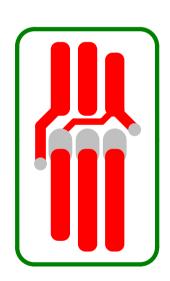


## Top Layer

**Board Outline** 

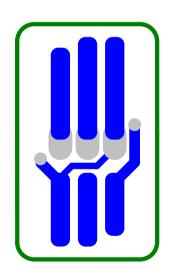


## **Bottom Layer**


**Board Outline** 

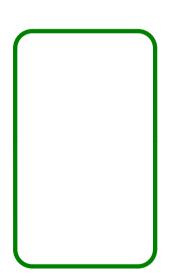


Top Overlay

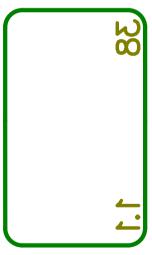


**Bottom Overlay** 

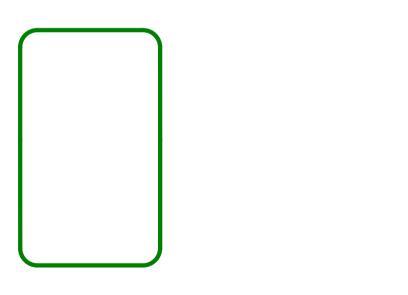


Top Paste

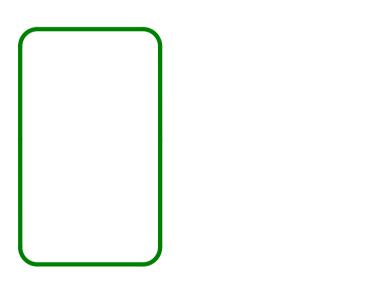

**Bottom Paste** 

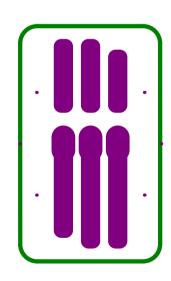

Top Solder (resist)

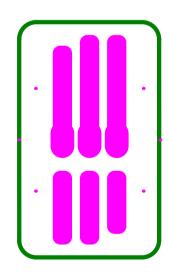

Bottom Solder (resist)

