

flowyopa

INSTRUCTION MANUAL

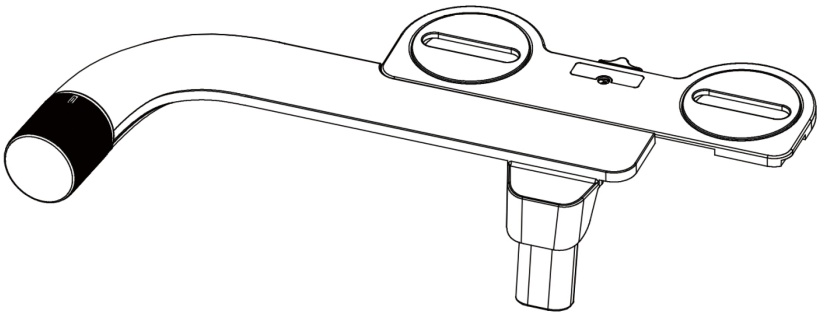


Names and Functions of Parts

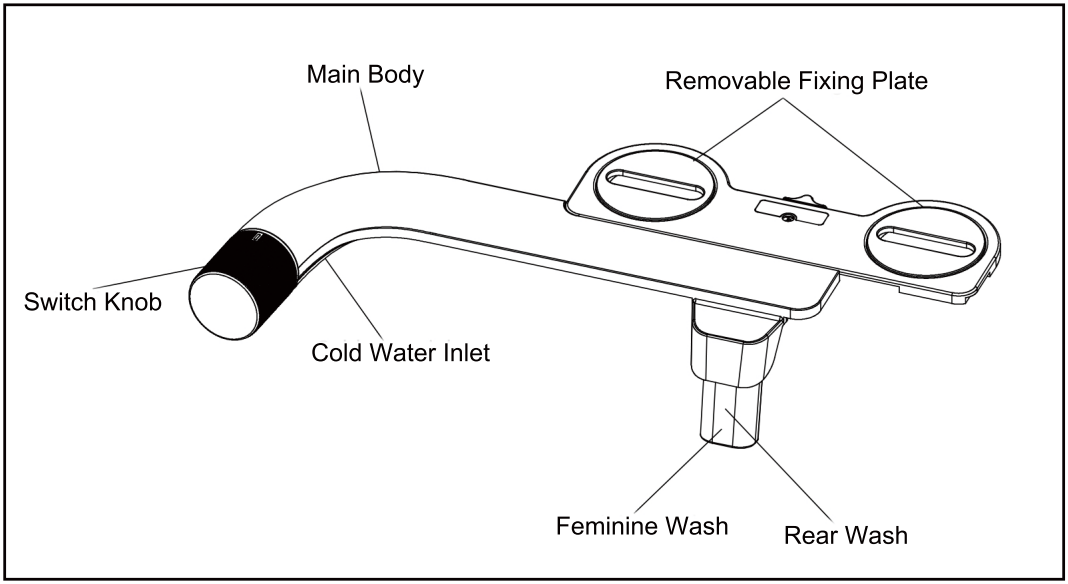

Accessories



Supply Hose

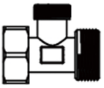
T-Adapter


Rubber Washer

Installation Tools Needed
 Wrench  Screwdriver


Pre-setup

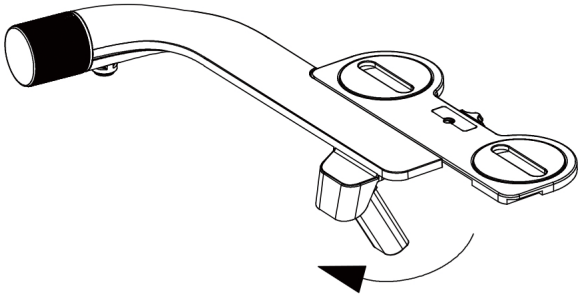


Step 1

Extend nozle A upward into slot B,

make sure you hear a clicking sound as you install it in place to avoid leaks or malfunctions.

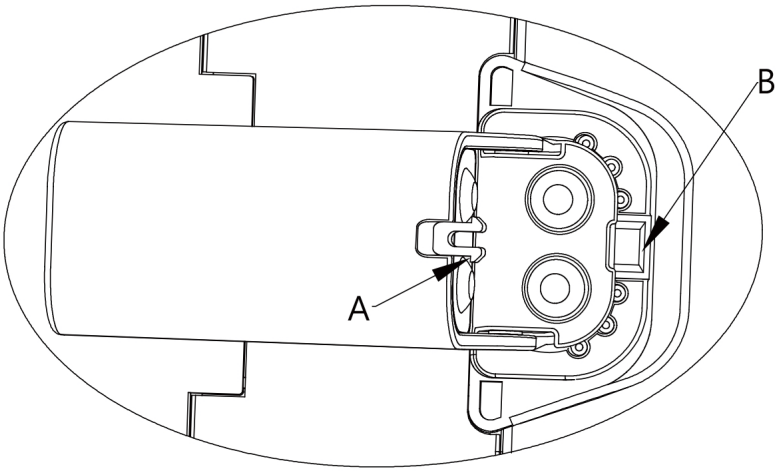

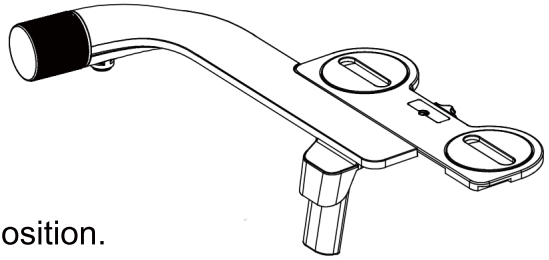

Step 2


Nozzle A is in position.

Install the Bidet




a

Adjust the position of the nozle A
as close to the toilet rim as possible.

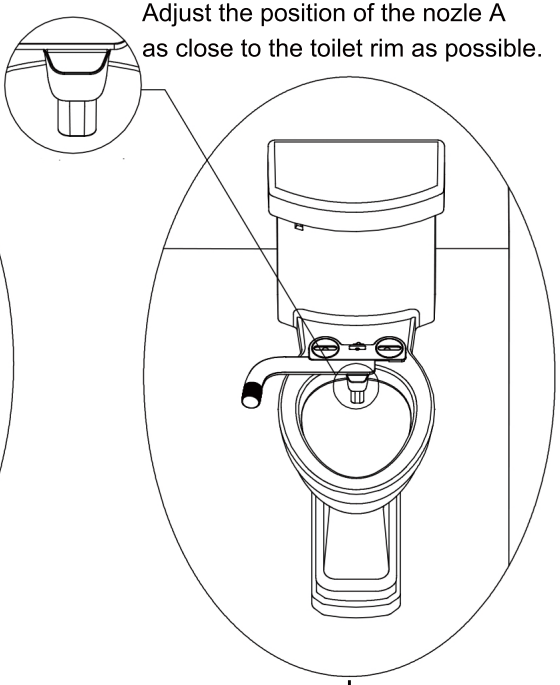

b

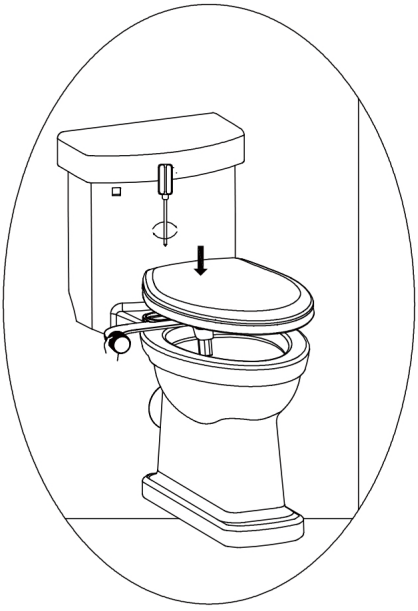


c





d


Installation Diagram

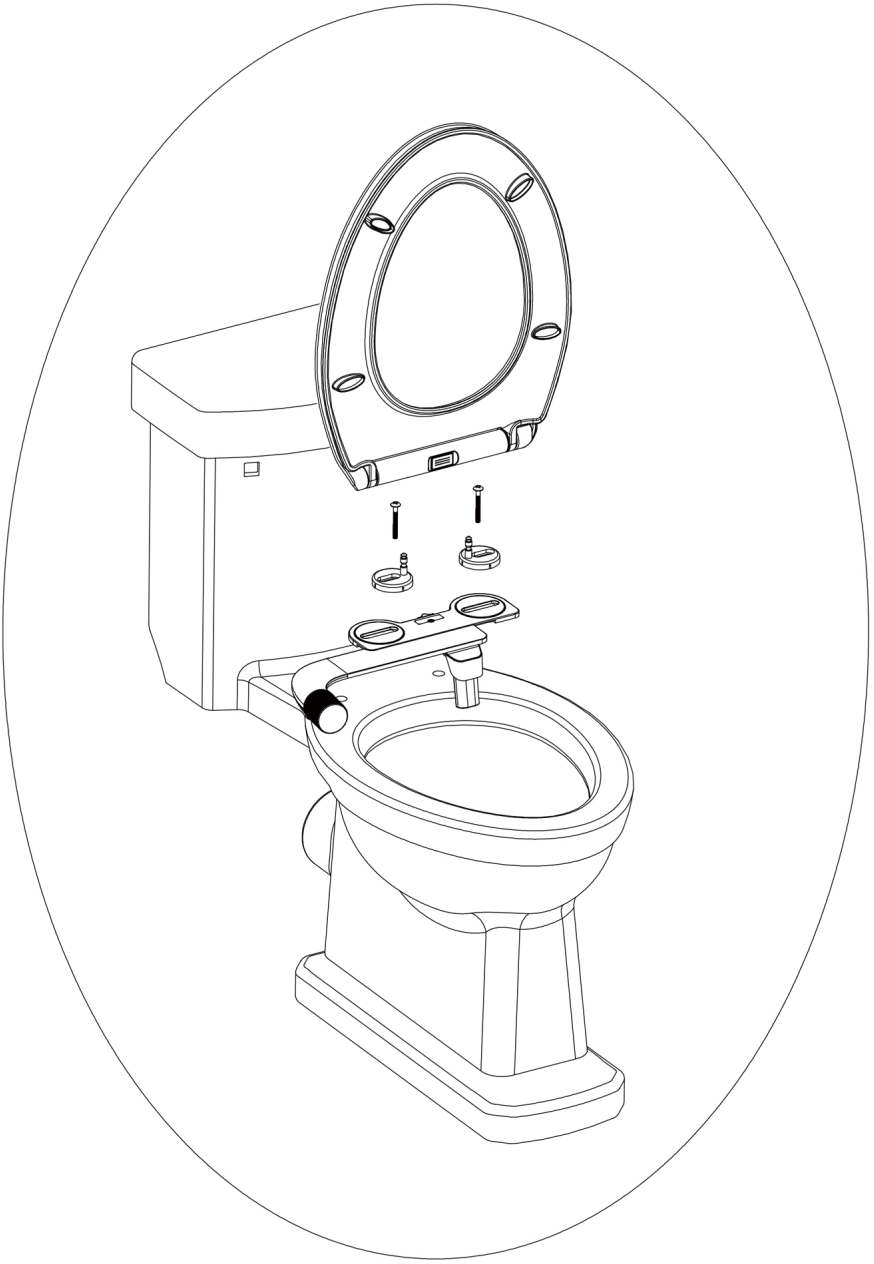


Connect Cold Water

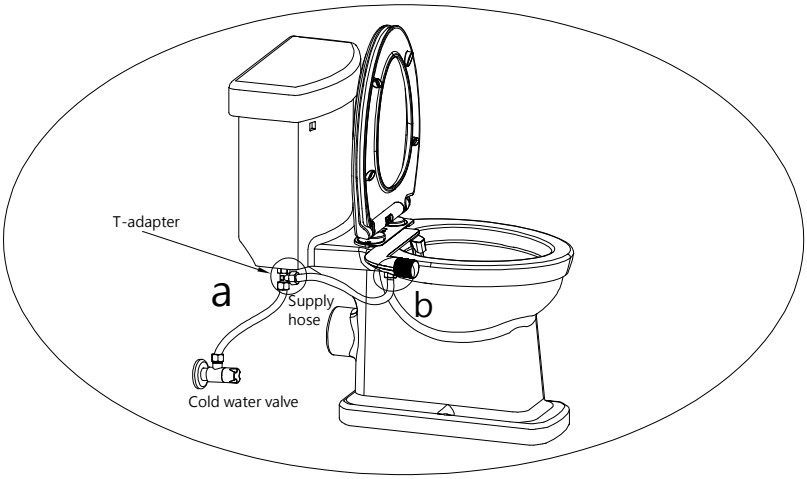


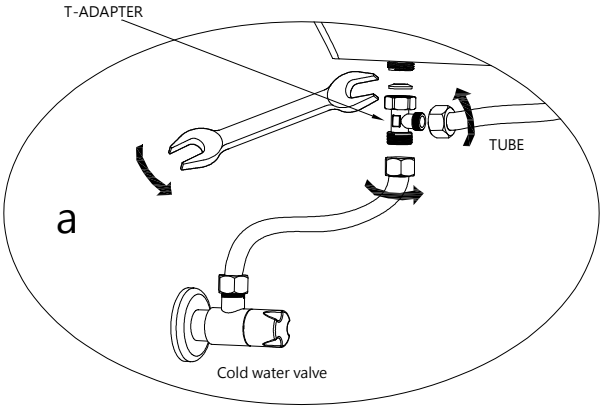


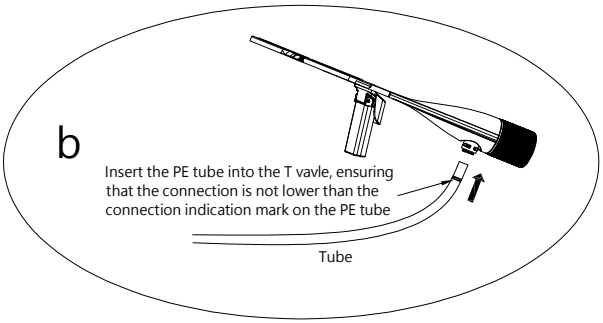


Quick Release

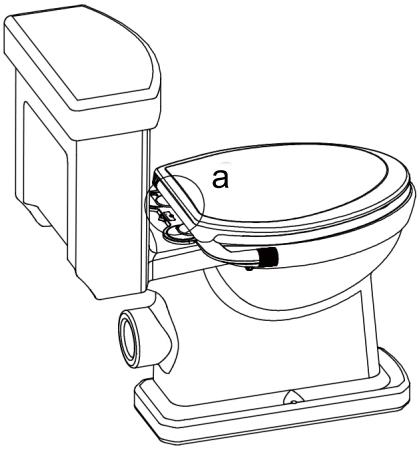

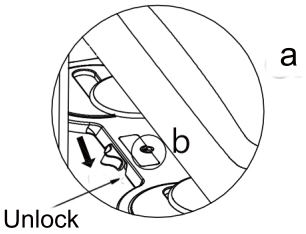

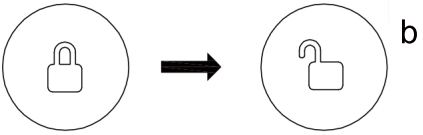

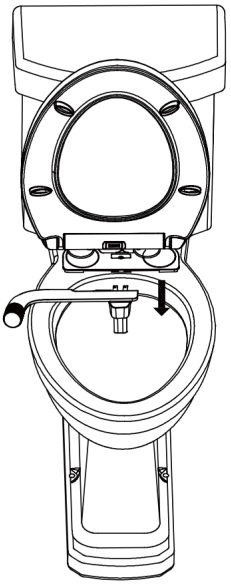

Quick Installation

