CA-404 Can bumper

NOTES

1. Hole sizes are the printed sizes from the PETG tolerance table (cad/model.py TOL).
   Print CA-900 first and adjust TOL if a fit is off.
2. Screws thread straight into the printed pilots (HF kit #67675, no nuts).
3. Datum = the part's bounding-box corner (min X, Y, Z), lower left of the front and top views.
   Hole centres: (X, Y) for Z holes, (X, Z) for Y holes, (Y, Z) for X holes. ×k = k holes stacked
   along the axis; +n = n more positions (see the STEP file).
4. Shown in its assembly orientation; the STEP file defines all other geometry.

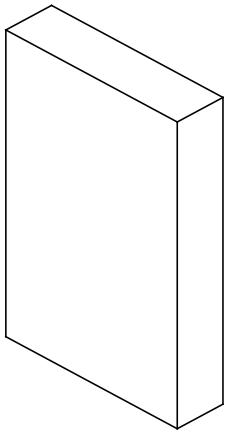

ISOMETRIC (not to scale)

TOP VIEW



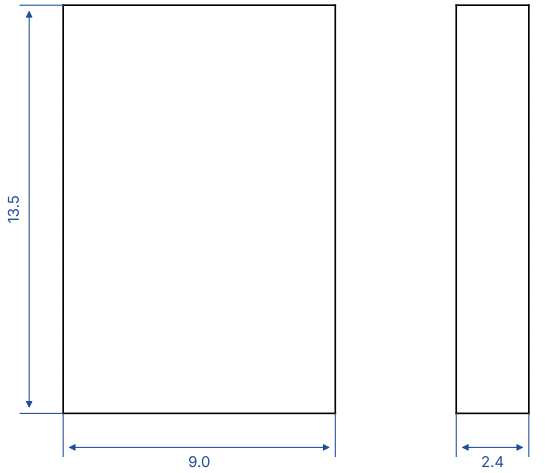

FRONT VIEW

RIGHT VIEW

PART NO.	**CA-404**
TITLE	**Can bumper**
MATERIAL	silicone (cut from sheet)
MASS	0.2 g (CAD, 60 % fill)
QTY	1 per robot
SCALE	4:1
UNITS	mm · general tolerance ±0.2
SOURCE	cad/model.py → cad/out/parts/can_bumper.step / .stl
PROJECTION	Third angle ⊕◁
SHEET	12 of 13
DRAWN	ME 2331 Project 2 team 2026-11-02