# CA-302  Lift link

**NOTES**

1. Hole sizes are the printed sizes from the PETG tolerance table (backend/cad/model.py TOL). Print CA-900 first and adjust TOL if a fit is off.
2. Screws thread straight into the printed pilots (HF kit #67675, no nuts).
3. Datum = the part's bounding-box corner (min X, Y, Z), lower left of the front and top views. Hole centres: (X, Y) for Z holes, (X, Z) for Y holes, (Y, Z) for X holes. ×k = k holes stacked along the axis; +n = n more positions (see the STEP file).
4. Shown in its assembly orientation; the STEP file defines all other geometry.

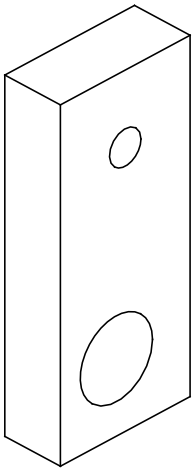

ISOMETRIC (not to scale)

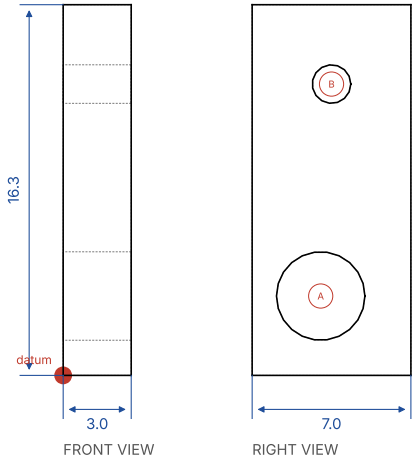


**HOLE TABLE  (letters mark hole centres on the view along that axis)**

| | Ø (mm) | × | axis | depth | centres from datum (mm) | fit / feature |
|---|---|---|---|---|---|---|
| A | 3.90 | 1 | X | 3.0 | (3.0, 3.5) | #6-32 clearance / running |
| B | 1.70 | 1 | X | 3.0 | (3.5, 12.8) | servo-bag screw pilot |

| | |
|---|---|
| PART NO. | **CA-302** |
| TITLE | **Lift link** |
| MATERIAL | PETG  printed, 0.4 mm nozzle |
| MASS | 0.2 g (CAD, 60 % fill) |
| QTY | 1 per robot |
| SCALE | 3:1 |
| UNITS | mm  ·  general tolerance ±0.2 |
| SOURCE | cad/step/parts/lift_link.step  (from backend/cad/model.py) |
| PROJECTION | Third angle ⊕◁ |
| SHEET | 8 of 13 |
| DRAWN | ME 2331 Project 2 team  2026-11-02 |