




oompono.	100
A10	Central electrical system control unit
F1	Fuse
F2	Fuse
G10	Battery
G20	Alternator
K10	Starter relay with main fuse
M10	Starter motor
T20	Voltage regulator
X270	Connector for accessory ground (terminal 31) ACC 1 (not assigned)
X271	Connector for accessory plus (terminal 30) ACC 1 (not assigned)
X272	Connector for accessory ground (terminal 31) ACC 2 (not assigned)
X273	Connector for accessory plus (terminal 15) ACC 2 (not assigned)
X290	Socket
X291	Connector for accessory ground (terminal 31) ACC 1 (not assigned)
X292	Connector for accessory plus (terminal 30) ACC 1 (not assigned)
X293	Connector for accessory ground (terminal 31) ACC 2 (not assigned)
X294	Connector for accessory plus (terminal 15) ACC 2 (not assigned)

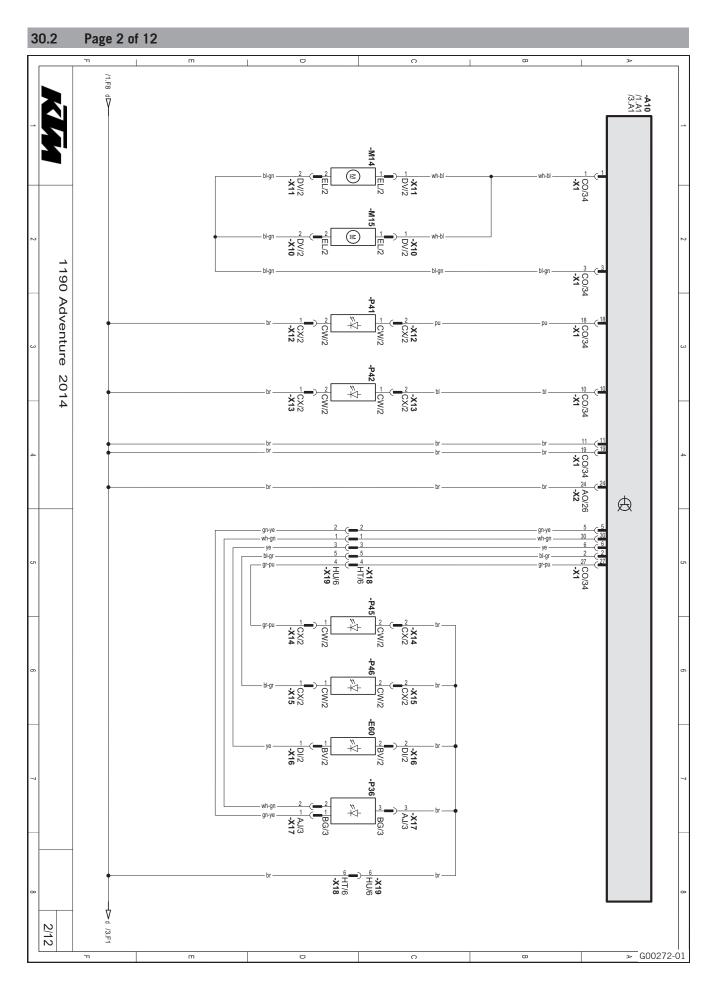


A10	Central electrical system control unit
E60	License plate lamp
M14	Fan
M15	Fan
P36	Tail light/brake light
P41	Front left turn signal
P42	Front right turn signal
P45	Rear left turn signal
P46	Rear right turn signal

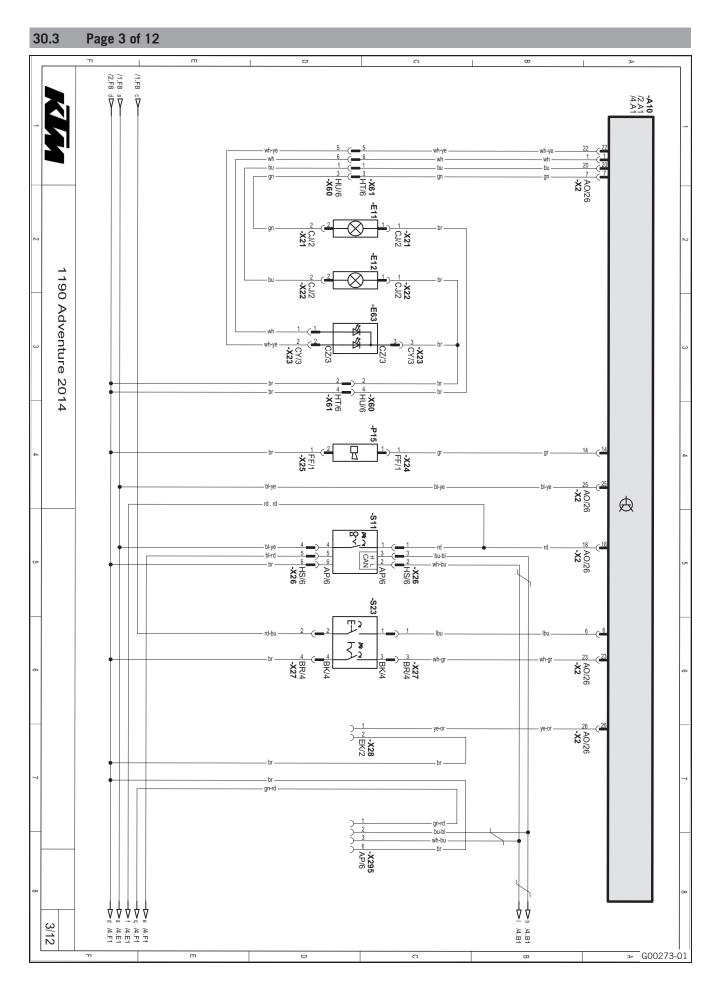


A10	Central electrical system control unit
E11	Low beam
E12	High beam
E63	Parking light, daytime running light
P15	Horn
S11	Ignition/steering lock
S23	Emergency OFF switch, electric starter button
X28	Heated grip connector
X295	Diagnostics connector

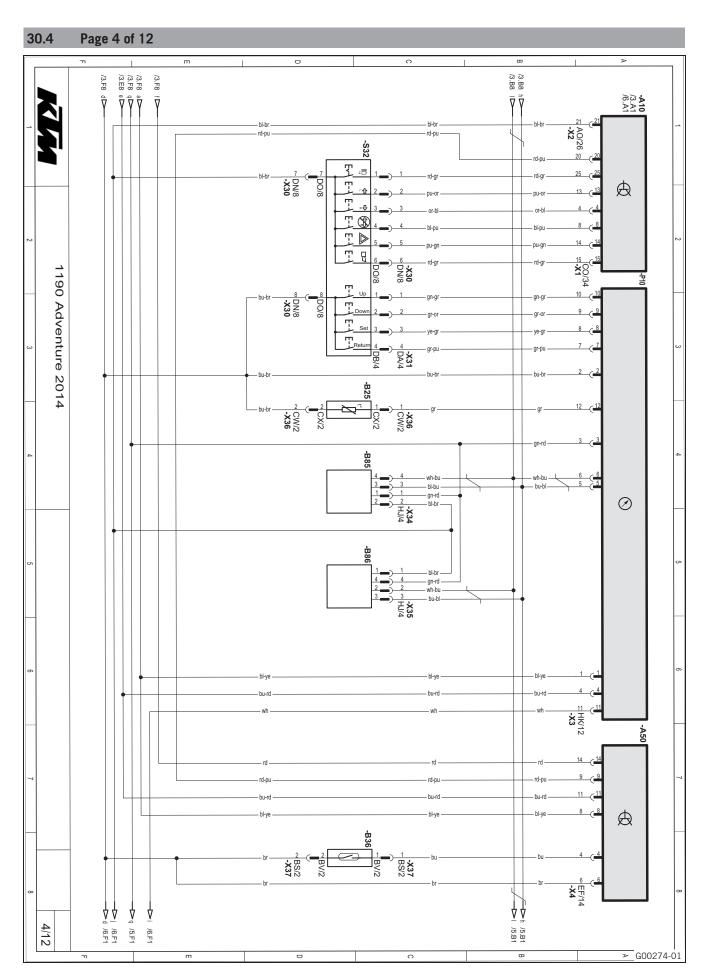


A10	Central electrical system control unit
A50	Alarm system
B25	Ambient air temperature sensor
B36	Seat contact alarm system
B85	TPMS control unit
B86	Acceleration sensor
P10	Combination instrument
S32	Combination switch, on left side of handlebar

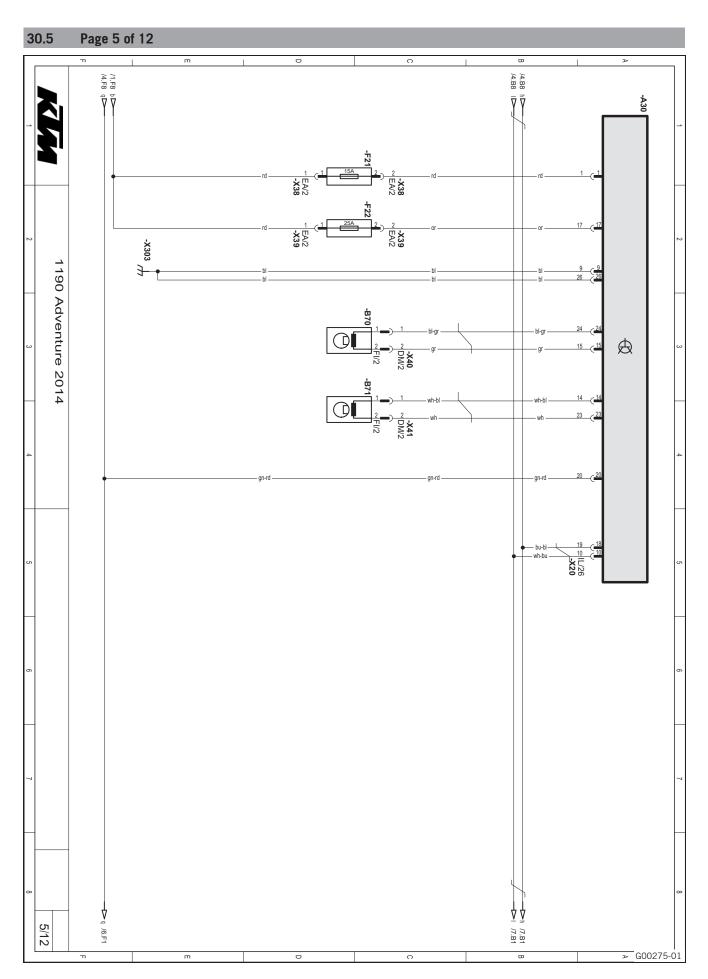


A30	ABS control unit
B70	Front wheel speed sensor
B71	Rear wheel speed sensor
F21	ABS fuse
F22	ABS fuse

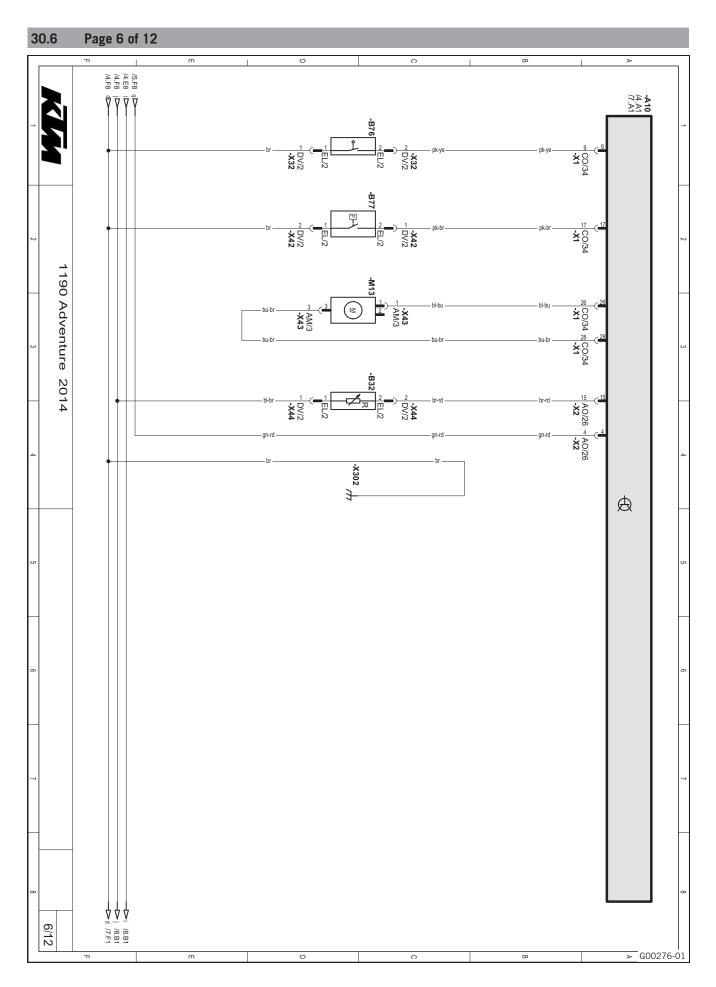


A10	Central electrical system control unit
B32	Fuel tank sensor
B76	Front brake light switch
B77	Rear brake light switch
M13	Fuel pump

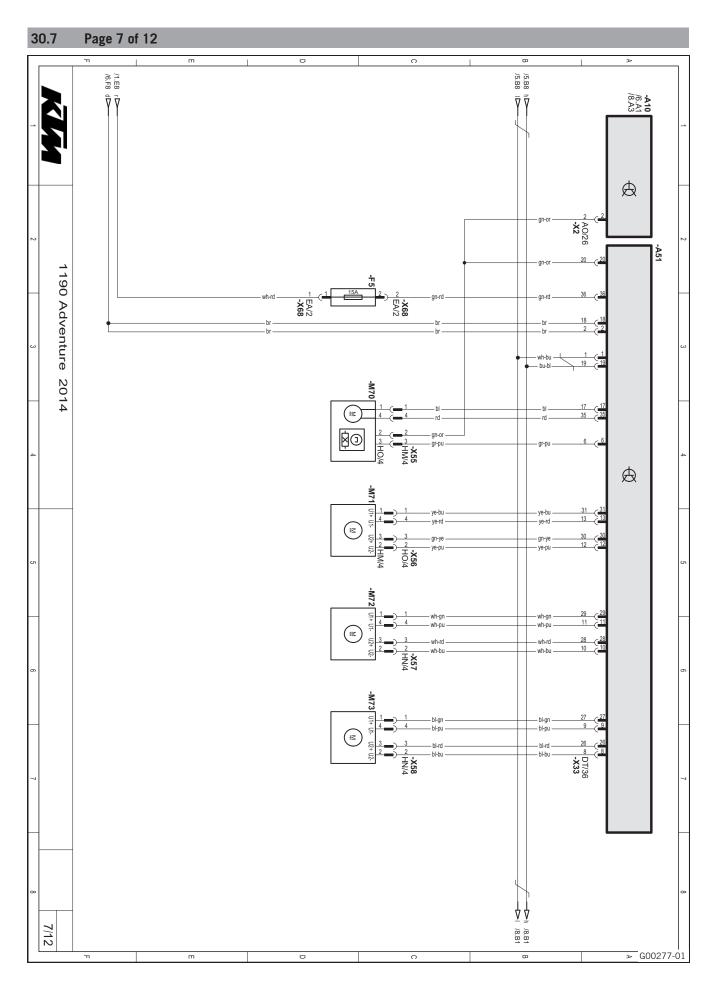


A10	Central electrical system control unit
A51	EDS control unit
F5	Fuse
M70	Spring preload control motor with hall sensor
M71	Shock absorber rebound damping control motor
M72	Fork leg compression damping control motor
M73	Fork leg rebound damping control motor

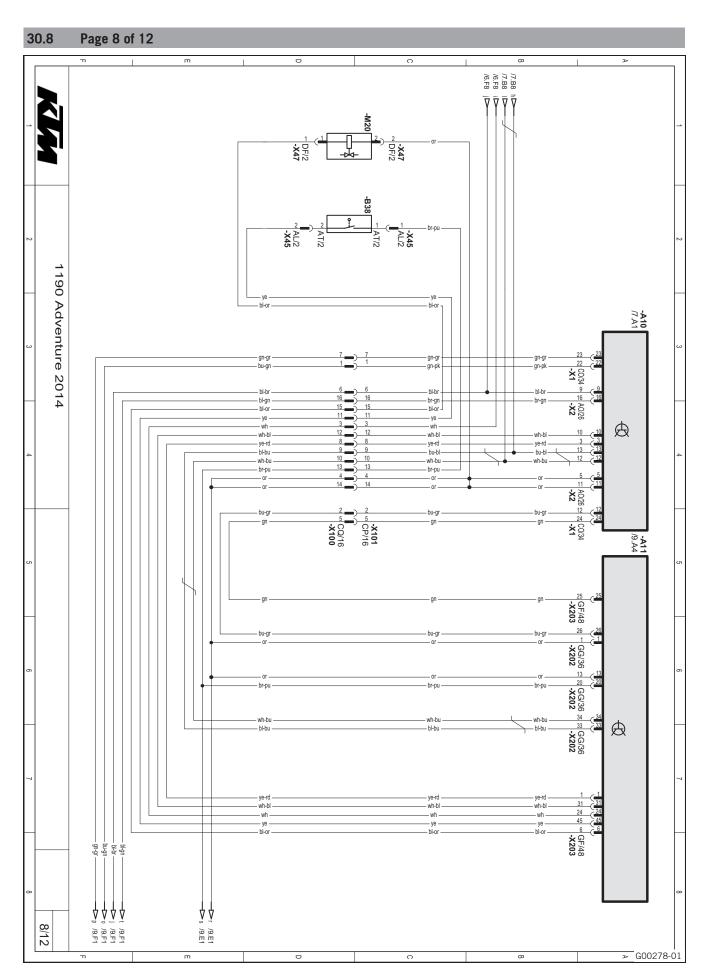


A10	Central electrical system control unit
A11	EFI control unit
B38	Clutch switch
M20	Fuel evaporation valve

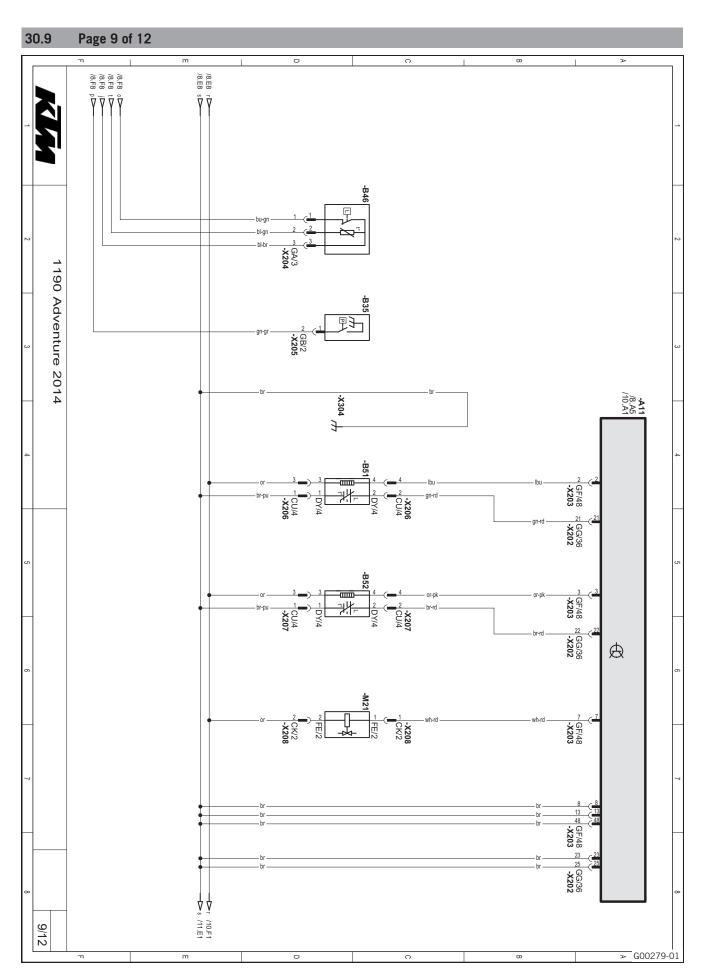


A11	EFI control unit
B35	Oil pressure sensor
B46	Oil temperature/oil level sensor
B51	Lambda sensor, cylinder 1
B52	Lambda sensor, cylinder 2
M21	Secondary air valve

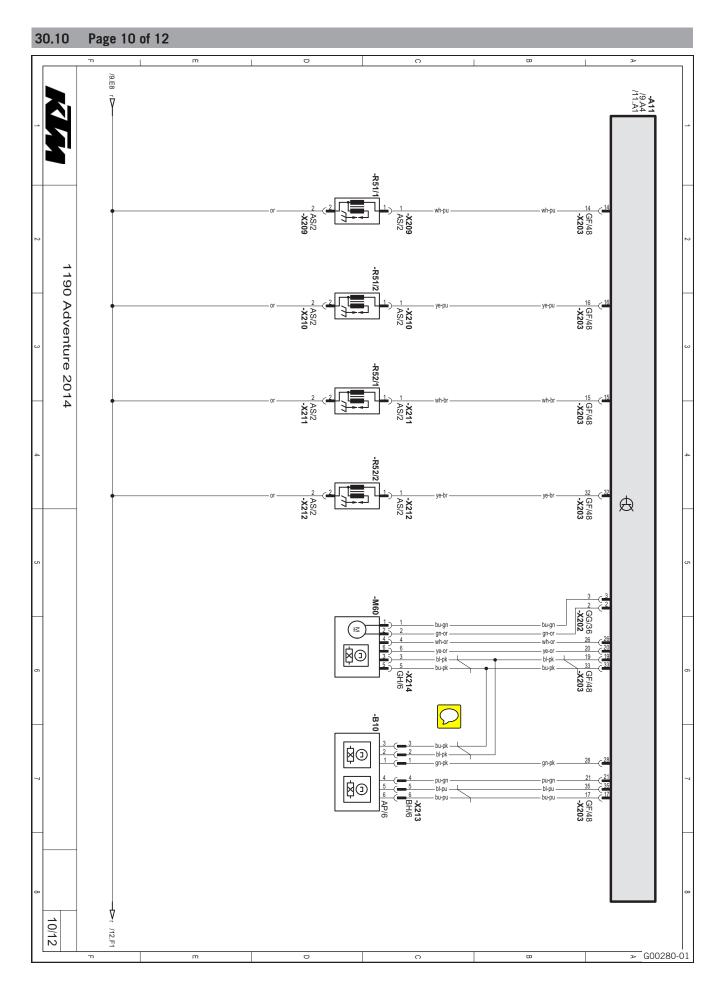

A11	EFI control unit
B10	Throttle position sensor circuit A
M60	Motor drive
R51/1	Ignition coil 1, cylinder 1
R51/2	Ignition coil 2, cylinder 1
R52/1	Ignition coil 1, cylinder 2
R52/2	Ignition coil 2, cylinder 2

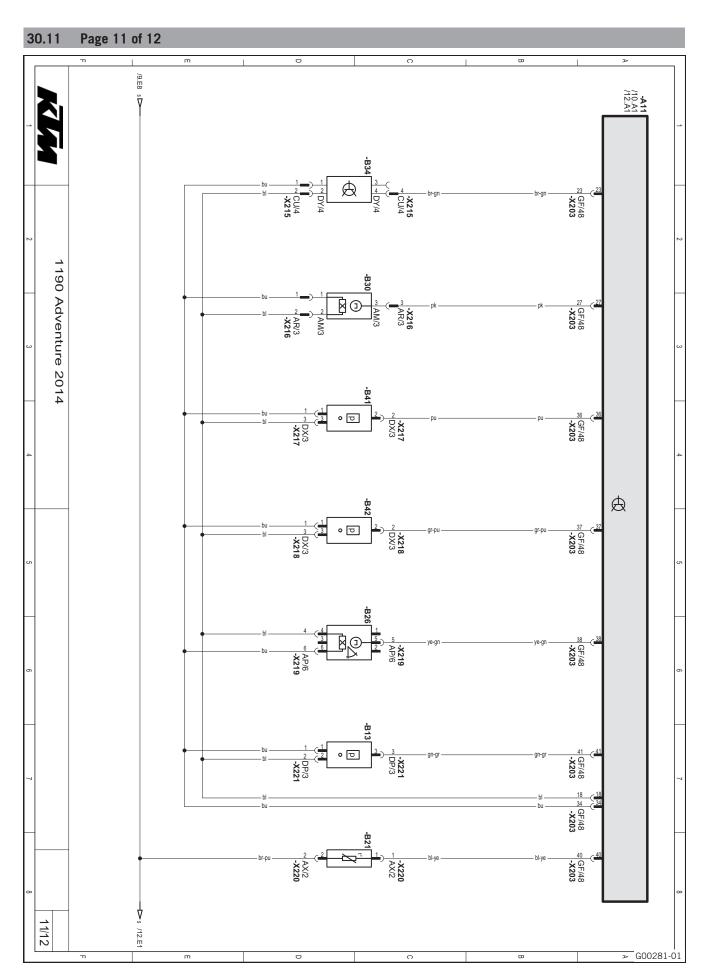

•	
A11	EFI control unit
B13	Ambient air pressure sensor
B21	Engine coolant temperature sensor, cylinder 1
B26	Rollover sensor
B30	Side stand switch
B34	Gear position sensor
B41	Manifold absolute pressure sensor, cylinder 1
B42	Manifold absolute pressure sensor, cylinder 2

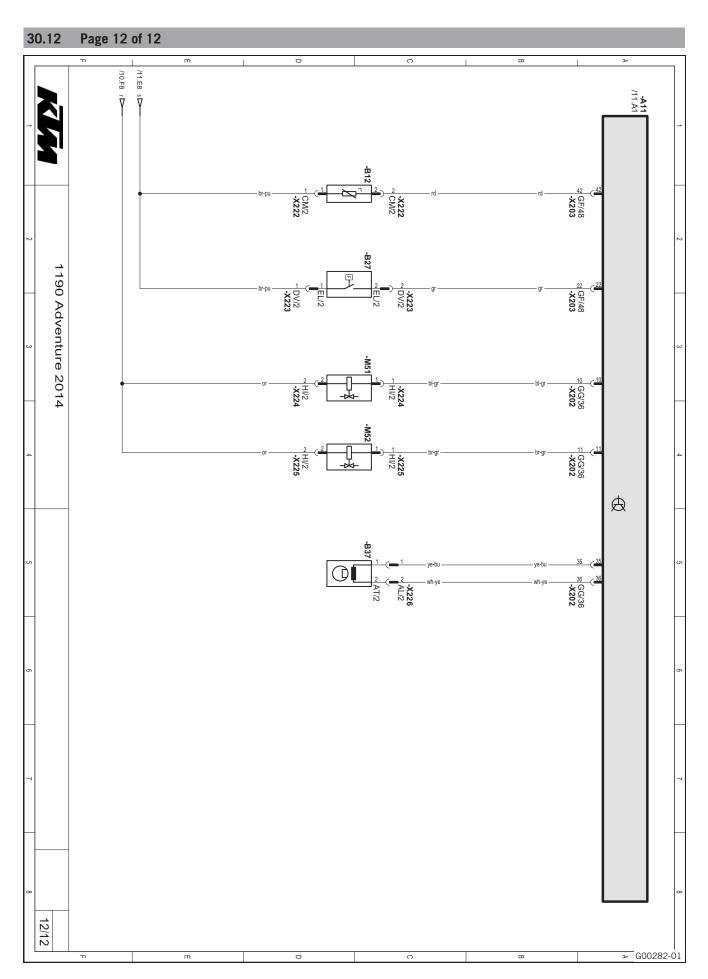

Compone		
A11	EFI control unit	
B12	Intake air temperature sensor	
B27	Quick shifter	
B37	Crankshaft position sensor	
M51	Injection valve cylinder 1	
M52	Injection valve cylinder 2	
Cable col	ors:	
bl	Black	
br	Brown	
bu	Blue	
gn	Green	
gr	Gray	
lbu	Light blue	
or	Orange	
pk	Pink	
pu	Violet	
rd	Red	
wh	White	
ye	Yellow	