

							REVISIONS						
E240	No.	XX-	XX-	XX-	No.	XX-	XX-	XX-	ORIGINATOR	CHECKER	ENGR APP	MTL APP	
1	Index		PHAR29	14T400 AA	76	Connector Views	700	07	00-1	A150 E 12550373 000			
2	General Information		100	00	00-1	77	Connector Views	700	07	00-2	MP1 DESIGN LEVEL	22082012	
3	General Information		100	00	00-2	78	Connector Views	700	07	00-3			
4	General Information - Junction Box Layout		100	00	00-3	79	Connector Views	700	07	00-4	SBANGAR	PEINAM	PIVANKA
5	General Information - Power Distribution Box Layout I6 / LPI		100	00	00-4	80	Connector Views	700	07	00-5			NOT RQD
6	General Information - Power Distribution Box Layout V8		100	00	00-5	81	Connector Views	700	07	00-6			
7	General Information - Power Distribution Box Layout I4		100	00	00-6	82	Connector Views	700	07	00-7			
8	General Information - Power Distribution - Fuse and Relay holders		100	00	00-7	83	Connector Views	700	07	00-8			
9	DSC		206	09	00-1	84	Connector Views	700	07	00-9			
10	Engine Cooling (Dual Fan - I6)		303	03	00-1	85	Connector Views	700	07	00-10			
11	Engine Cooling (Single Fan)		303	03	00-2	86	Connector Views	700	07	00-11			
12	Engine Cooling (Dual Fan - D40/V8)		303	03	00-3	87	Connector Views	700	07	00-12			
13	Starting System Alternator and Regulator (Petrol I6/V8)		303	06	00-1	88	Connector Views	700	07	00-13			
14	Starting System Alternator and Regulator (LPI)		303	06	00-2	89	Connector Views	700	07	00-14			
15	Starting System Alternator and Regulator (I4)		303	06	00-3	90	Connector Views	700	07	00-15			
16	Powertrain Control Management - I6-1		303	14	00-1	91	Connector Views	700	07	00-16			
17	Powertrain Control Management - I6-2		303	14	00-2	92	Connector Views	700	07	00-17			
18	Powertrain Control Management - V8-1		303	14	00-3	93	Connector Views	700	07	00-18			
19	Powertrain Control Management - V8-2		303	14	00-4	94	Connector Views	700	07	00-19			
20	Powertrain Control Management - LPI-1		303	14	00-5	95	Connector Views	700	07	00-20			
21	Powertrain Control Management - LPI-2		303	14	00-6	96	Connector Views	700	07	00-21			
22	Powertrain Control Management - LPI-3 Fuel System		303	14	00-7	97	Connector Views	700	07	00-22			
23	Powertrain Control Management - I4		304	14	00-8	98	Connector Views	700	07	00-23			
24	Powertrain Control Management - I4-2		304	14	00-9	99	Connector Views	700	07	00-24			
25	Powertrain Control Management - Turbo/Supercharge		303	14	00-10	100	Connector Views	700	07	00-25			
26	Powertrain Control Management - HEGO		303	14	00-11	101	Connector Views	700	07	00-26			
27	Vehicle Speed Control (Cruise Control)		303	14	00-12	102	Connector Views	700	07	00-27			
28	Automatic Transmission/Transaxle - I6		307	01	00-1	103	Connector Views	700	07	00-28			
29	Automatic Transmission/Transaxle - V8		307	01	00-2	104	Connector Views	700	07	00-29			
30	Automatic Transmission/Transaxle - I4		307	01	00-3	105	Connector Views	700	07	00-30			
31	Automatic Transmission - Sequential Sports Shift		307	05	00-1	106	Connector Views	700	07	00-31			
32	Steering Column - Lever Combination		307	05	00-2	107	Connector Views	700	07	00-32			
33	Memory Module - Seat, Mirror and Pedal		400	00	00-1	108	Connector Views	700	07	00-33			
34	Climate Control System		412	00	00-1	109	Connector Views	700	07	00-34			
35	Instrument Cluster		413	01	00-1	110	Connector Views	700	07	00-35			
36	Horn		413	06	00-1	111	Connector Views	700	07	00-36			
37	Parking Aid		413	13	00-1	112	Connector Views	700	07	00-37			
38	Entertainment System - Audio		415	00	00-1	113	Connector Views	700	07	00-38			
39	Entertainment System - Display		415	00	00-2	114	Connector Views	700	07	00-39			
40	Exterior Lighting -Standard Headlamp		417	01	00-1	115	Connector Views	700	07	00-40			
41	Exterior Lighting -Projector Headlamp		417	01	00-2	116	Connector Views	700	07	00-41			
42	Exterior Lighting - Fog		417	01	00-3	117	Connector Views	700	07	00-42			
43	Exterior Lighting - Turn/Hazard - Sedan		417	01	00-4	118	Connector Views	700	07	00-43			
44	Exterior Lighting - Turn/Hazard - Ute		417	01	00-5	119	Connector Views	700	07	00-44			
45	Exterior Lighting - Stop/Backup - Sedan		417	01	00-6	120	Connector Views	700	07	00-45			
46	Exterior Lighting - Stop/Backup - Ute		417	01	00-7	121	Connector Views	700	07	00-46			
47	Interior Lighting Switch		417	02	00-1	122	Connector Views	700	07	00-47			
48	Interior Lighting - Courtesy - Sedan		417	02	00-2	123	Connector Views	700	07	00-48			
49	Interior Lighting - Courtesy - Ute		417	02	00-3	124	Connector Views	700	07	00-49			
50	Module Communication Network I6/V8		418	00	00-1	125	Connector Views	700	07	00-50			
51	Module Communication Network LPI		418	00	00-2	126	Connector Views	700	07	00-51			
52	Module Communication Network I4		418	00	00-3								
53	Body Control Module		419	10	00-1								
54	Body System - Trailer - Sedan		501	00	00-1								
55	Body System - Trailer - Ute		501	00	00-2								
56	Rear View Mirrors - Without Memory		501	09	00-1								
57	Rear View Mirrors - Electrochromatic		501	09	00-2								
58	Rear View Camera		501	09	00-3								
59	Seating		501	10	00-1								
60	Glass, Frames and Mechanisms - Rear Demister		501	11	00-1								
61	Glass, Frames and Mechanisms - Sedan		501	11	00-2								
62	Glass, Frames and Mechanisms - Ute		501	11	00-3								
63	Cigar Lighter		501	12	00-1								
64	Locks, Latches and Entry Systems - Sedan		501	14	00-1								
65	Locks, Latches and Entry Systems - Ute		501	14	00-2								
66	Wipers and Washers		501	16	00-1								
67	Occupant Restraints - Passive		501	20B	00-1								
68	Power Distribution - PDB1		700	02	00-1								
69	Power Distribution - PDB2		700	02	00-2								
70	Power Distribution - JB		700	02	00-3								
71	Ground Distribution - Instrument Panel		700	03	00-1								
72	Ground Distribution - Engine Bay-I6/V8		700	03	00-2								
73	Ground Distribution - Engine Bay-I4		701	03	00-3								
74	Ground Distribution - Sedan		700	03	00-4								
75	Ground Distribution -Ute		700	03	00-5								





REFERENCE	

<tbl_r cells="1" ix="1" maxcspan="2" maxrspan="1" usedcols="2


			ALTERNATE
B	BLACK	BK
BR	BROWN	BN
GR	GREY	GY
L	BLUE	BU
R	RED	RD
W	WHITE	WH
Y	YELLOW	YE
G	GREEN	GN
O	ORANGE	OG
P	PINK	
V	VIOLET	VT
SB	SKY BLUE	
LG	LIGHT GREEN	
T	TAN	

EXAMPLE:

GR GREY
GR-R GREY-RED
BR-Y BROWN-YELLOW

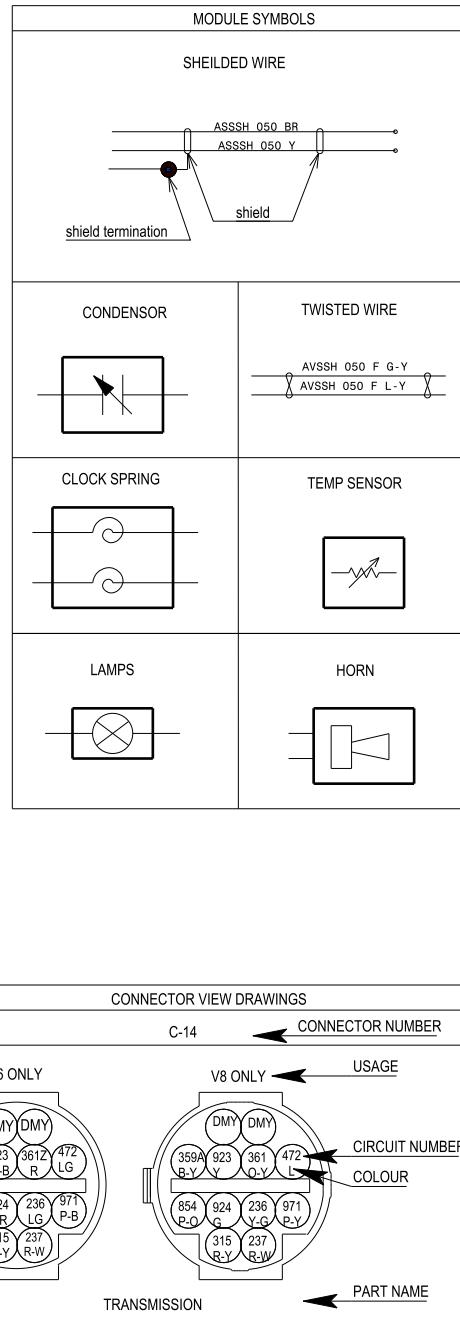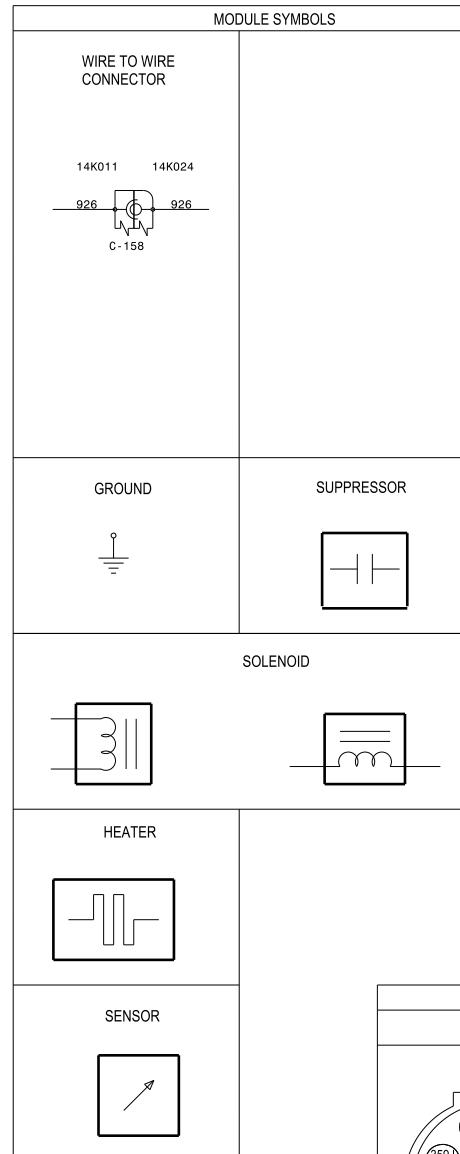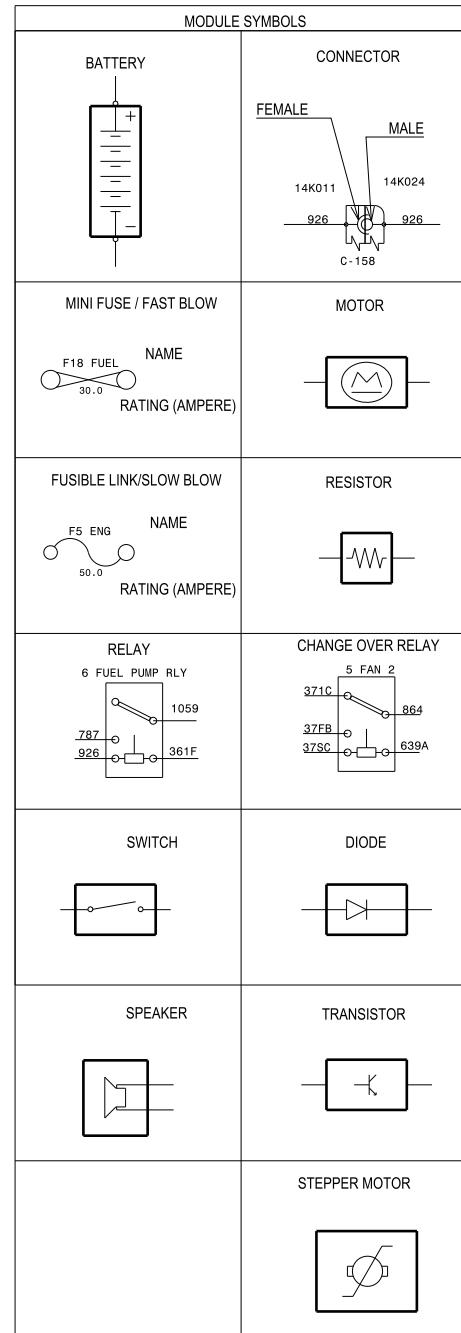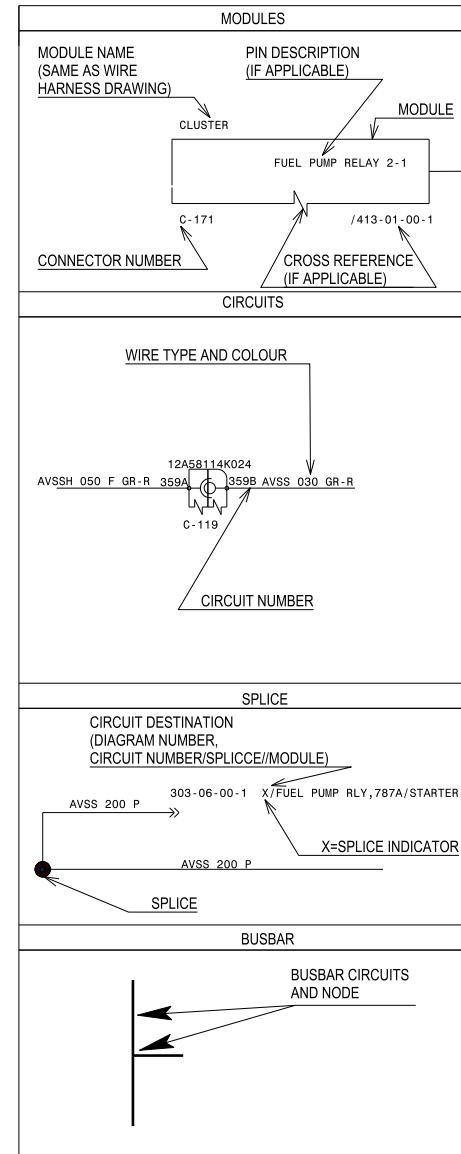


JUNCTION BOX (INSTRUMENTAL PANEL)

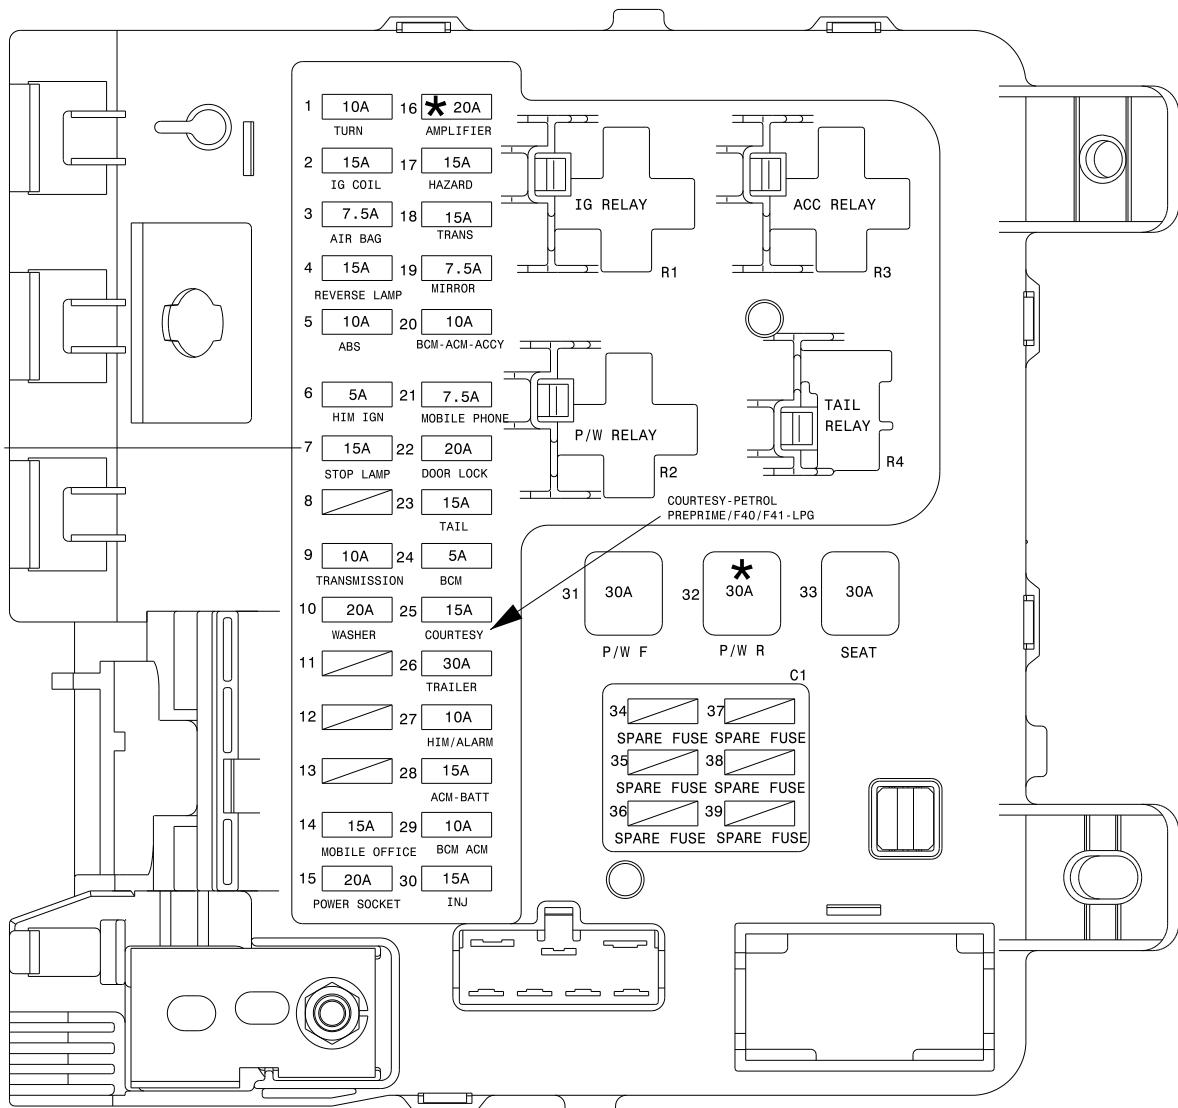

★ IF FITTED

POWER DISTRIBUTION BOX (ENGINE BAY) - I6/LPI

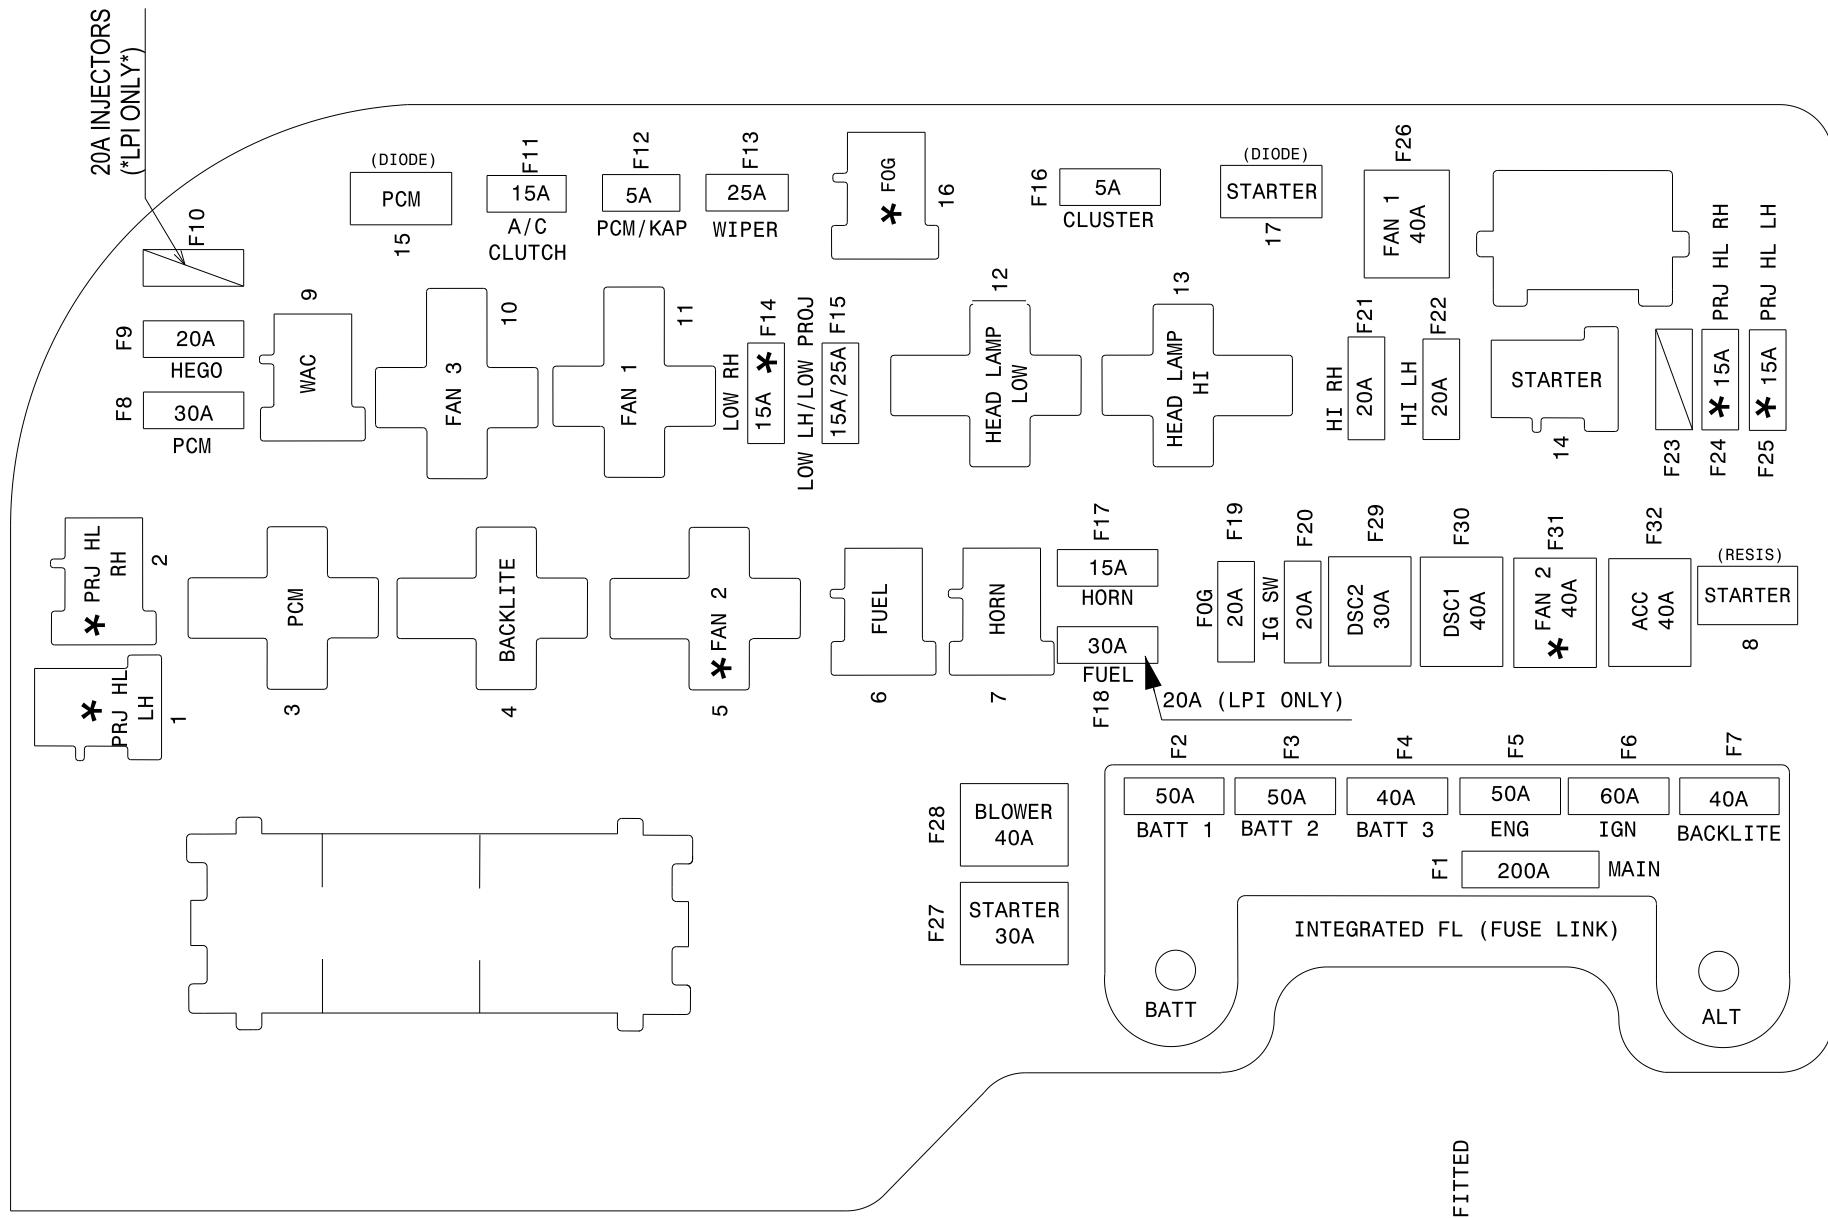


RYL 18
REVERSE LAMP RELAY -
PETROL AUTO

100-00-00-5

GENERAL INFORMATION

POWER DISTRIBUTION BOX (ENGINE BAY) - V8

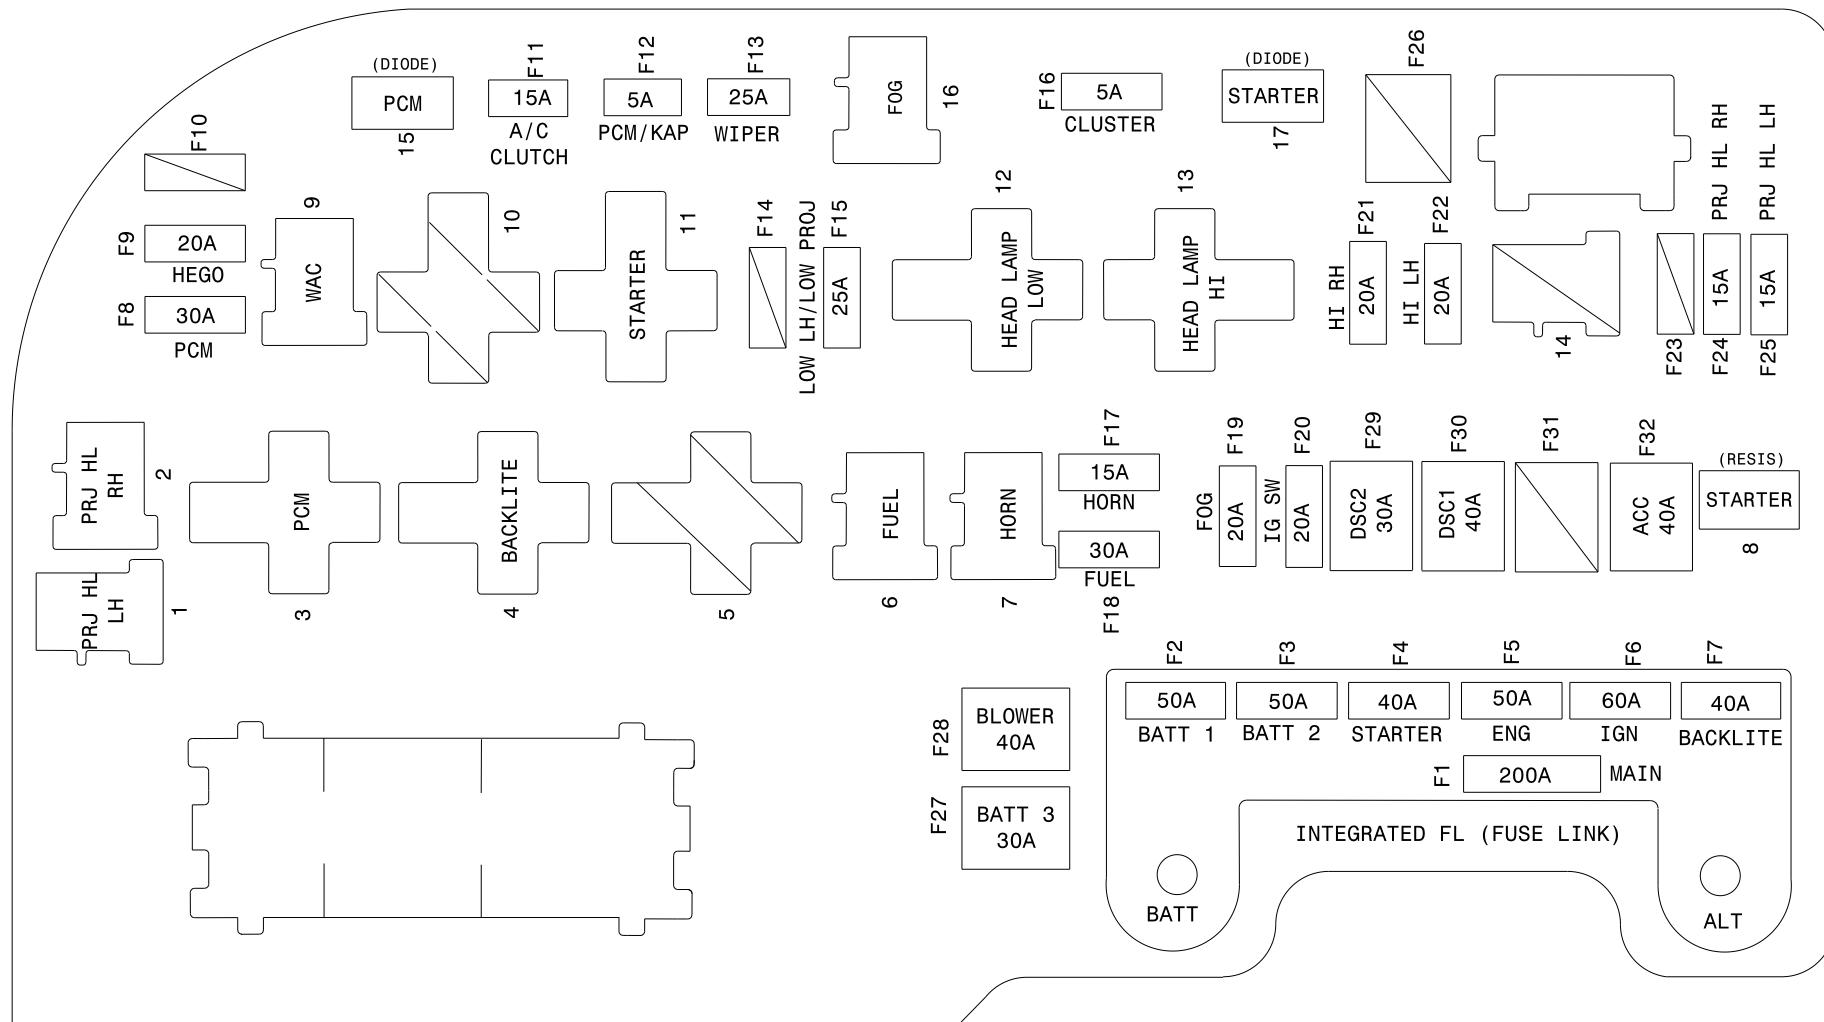

F33
80A

COOLING FAN


ADDITIONAL FUSE LOCATED INSIDE
THE POWER DISTRIBUTION BOX

RLY 18
REVERSE LAMP RELAY -
PETROL AUTO



Login Tracking Code

POWER DISTRIBUTION BOX (ENGINE BAY) - I4

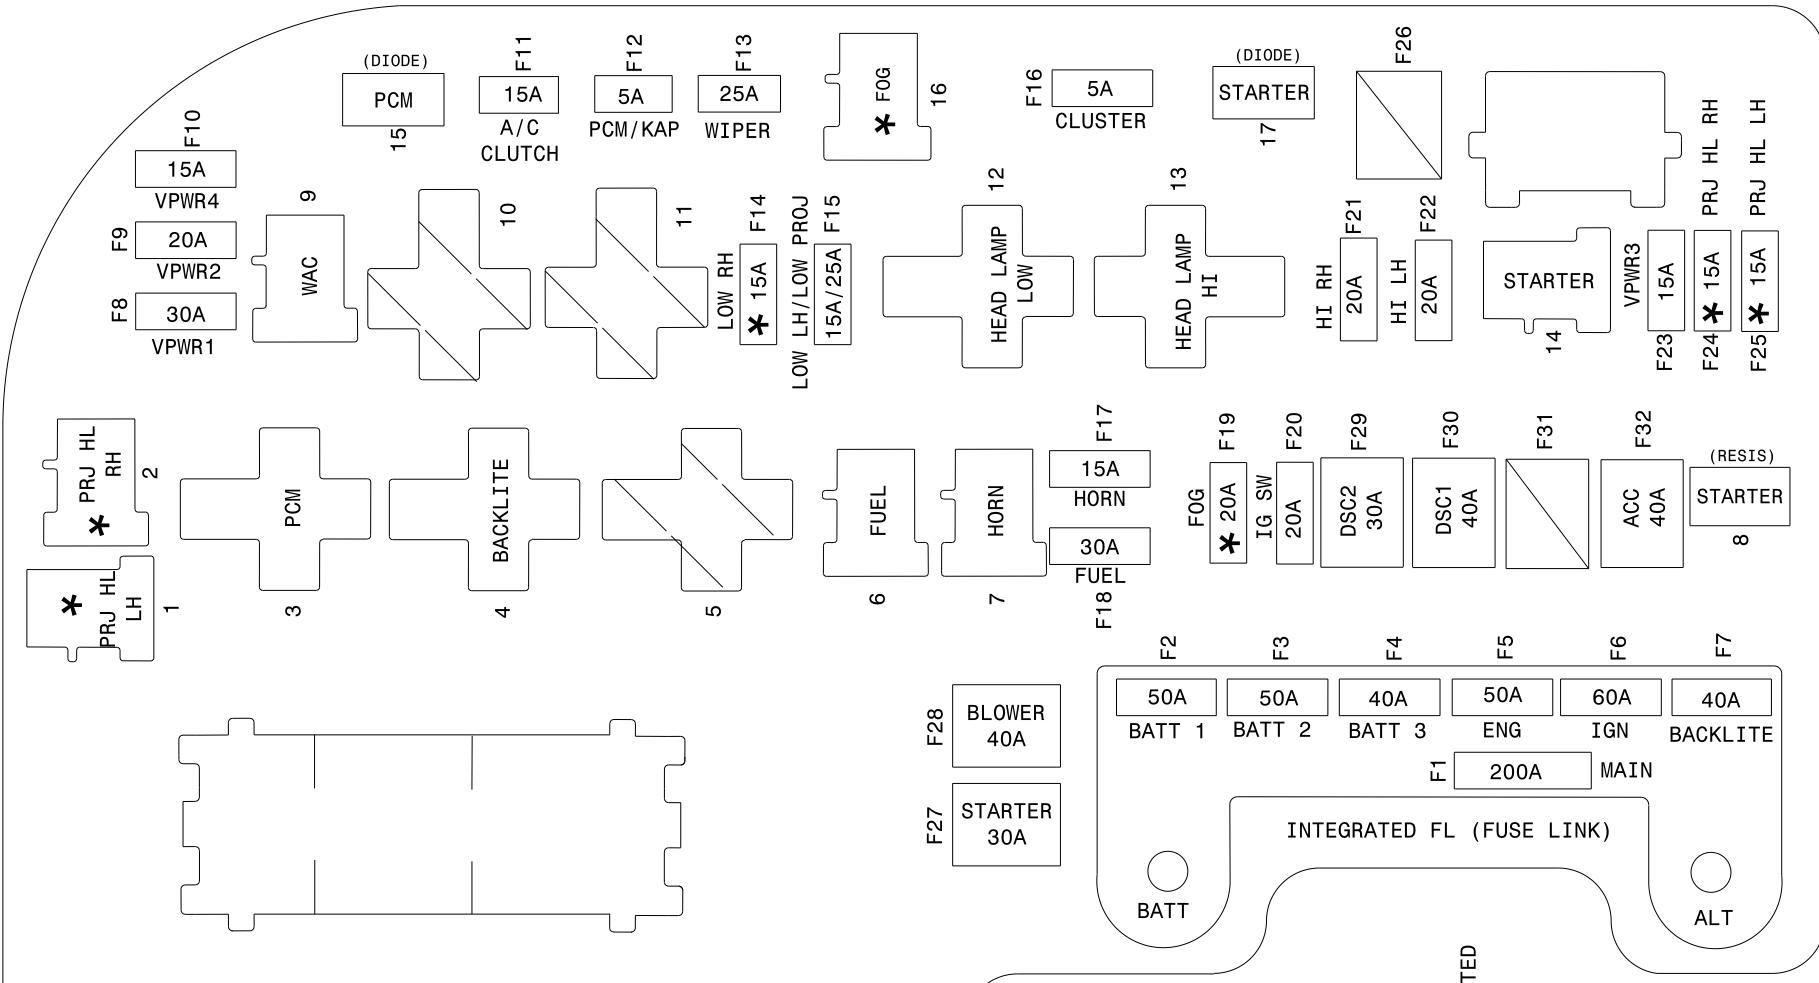

F33
80A

COOLING FAN

ADDITIONAL FUSE LOCATED INSIDE
THE POWER DISTRIBUTION BOX

* IF FITTED




RLY 18
REVERSE LAMP RELAY-
PETROL AUTO





FUSE AND RELAY HOLDERS

INSTRUMENTAL PANEL FUSE HOLDER - LPI ONLY

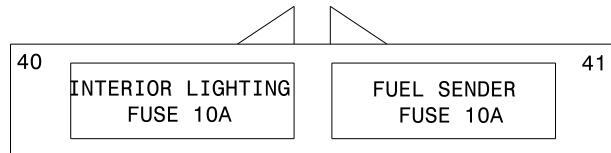

ENGINE DASH RELAY/FUSE BOX - LPI ONLY

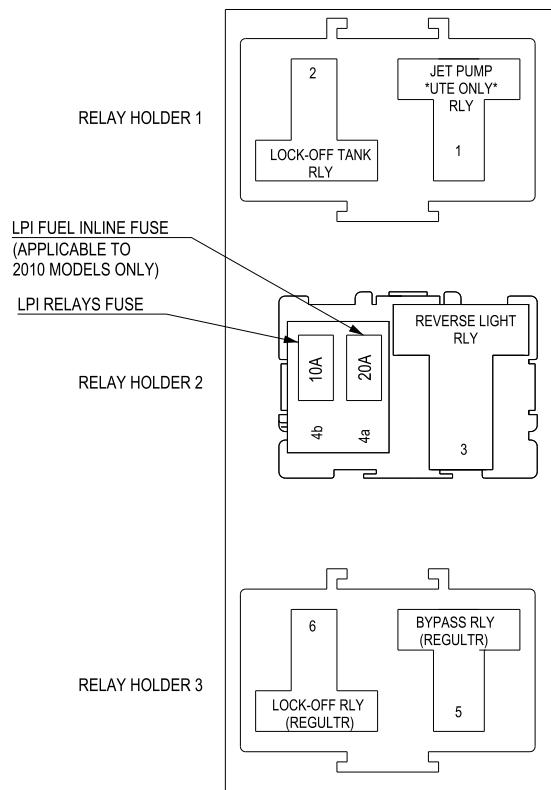


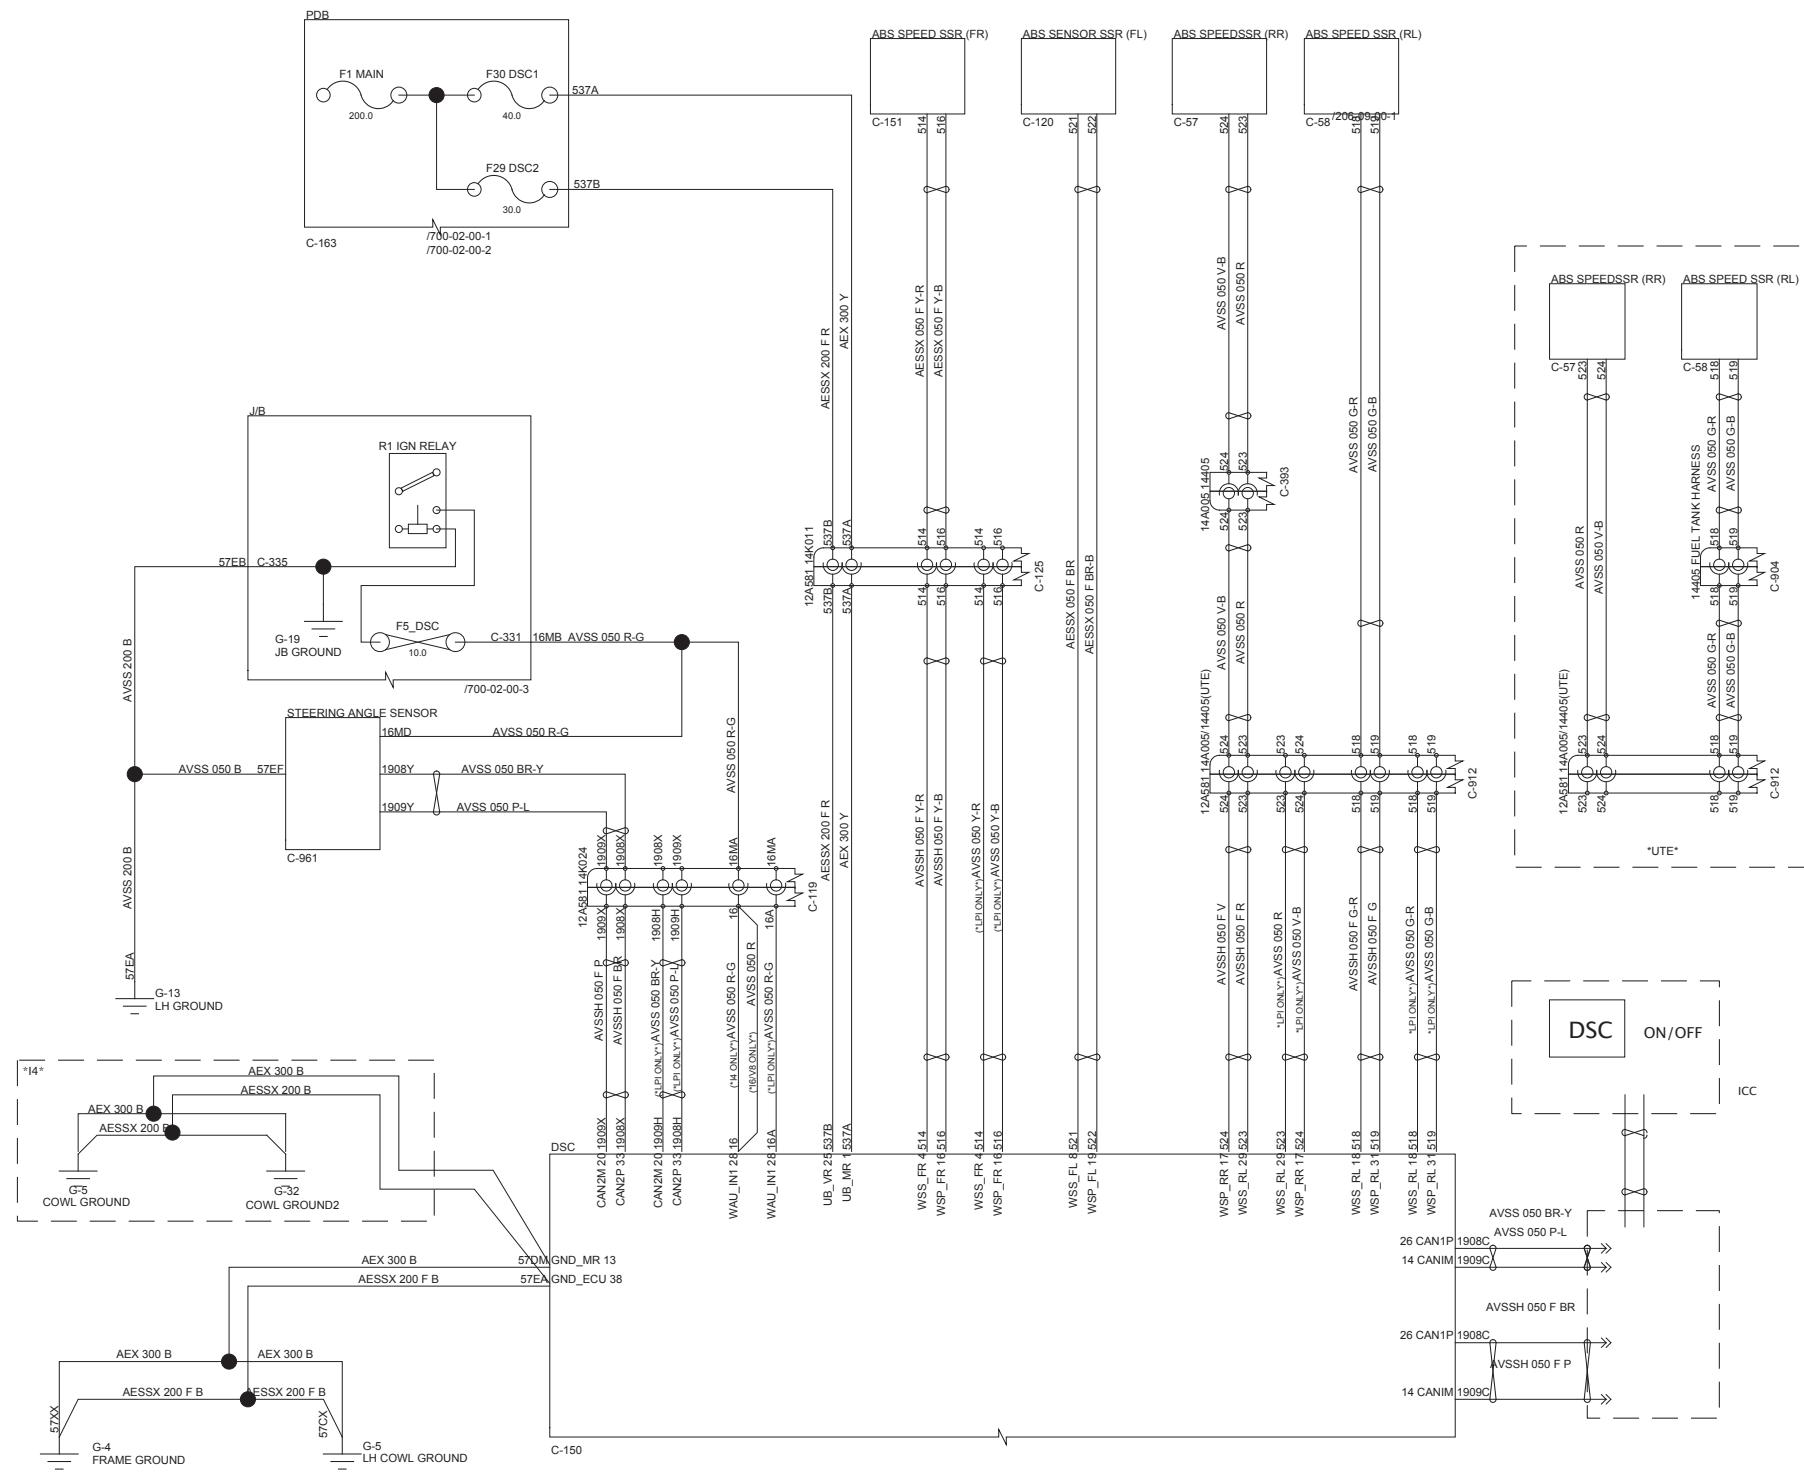

303-03-00-1

Engine Cooling (Dual Fan) - 16

303-03-00-1

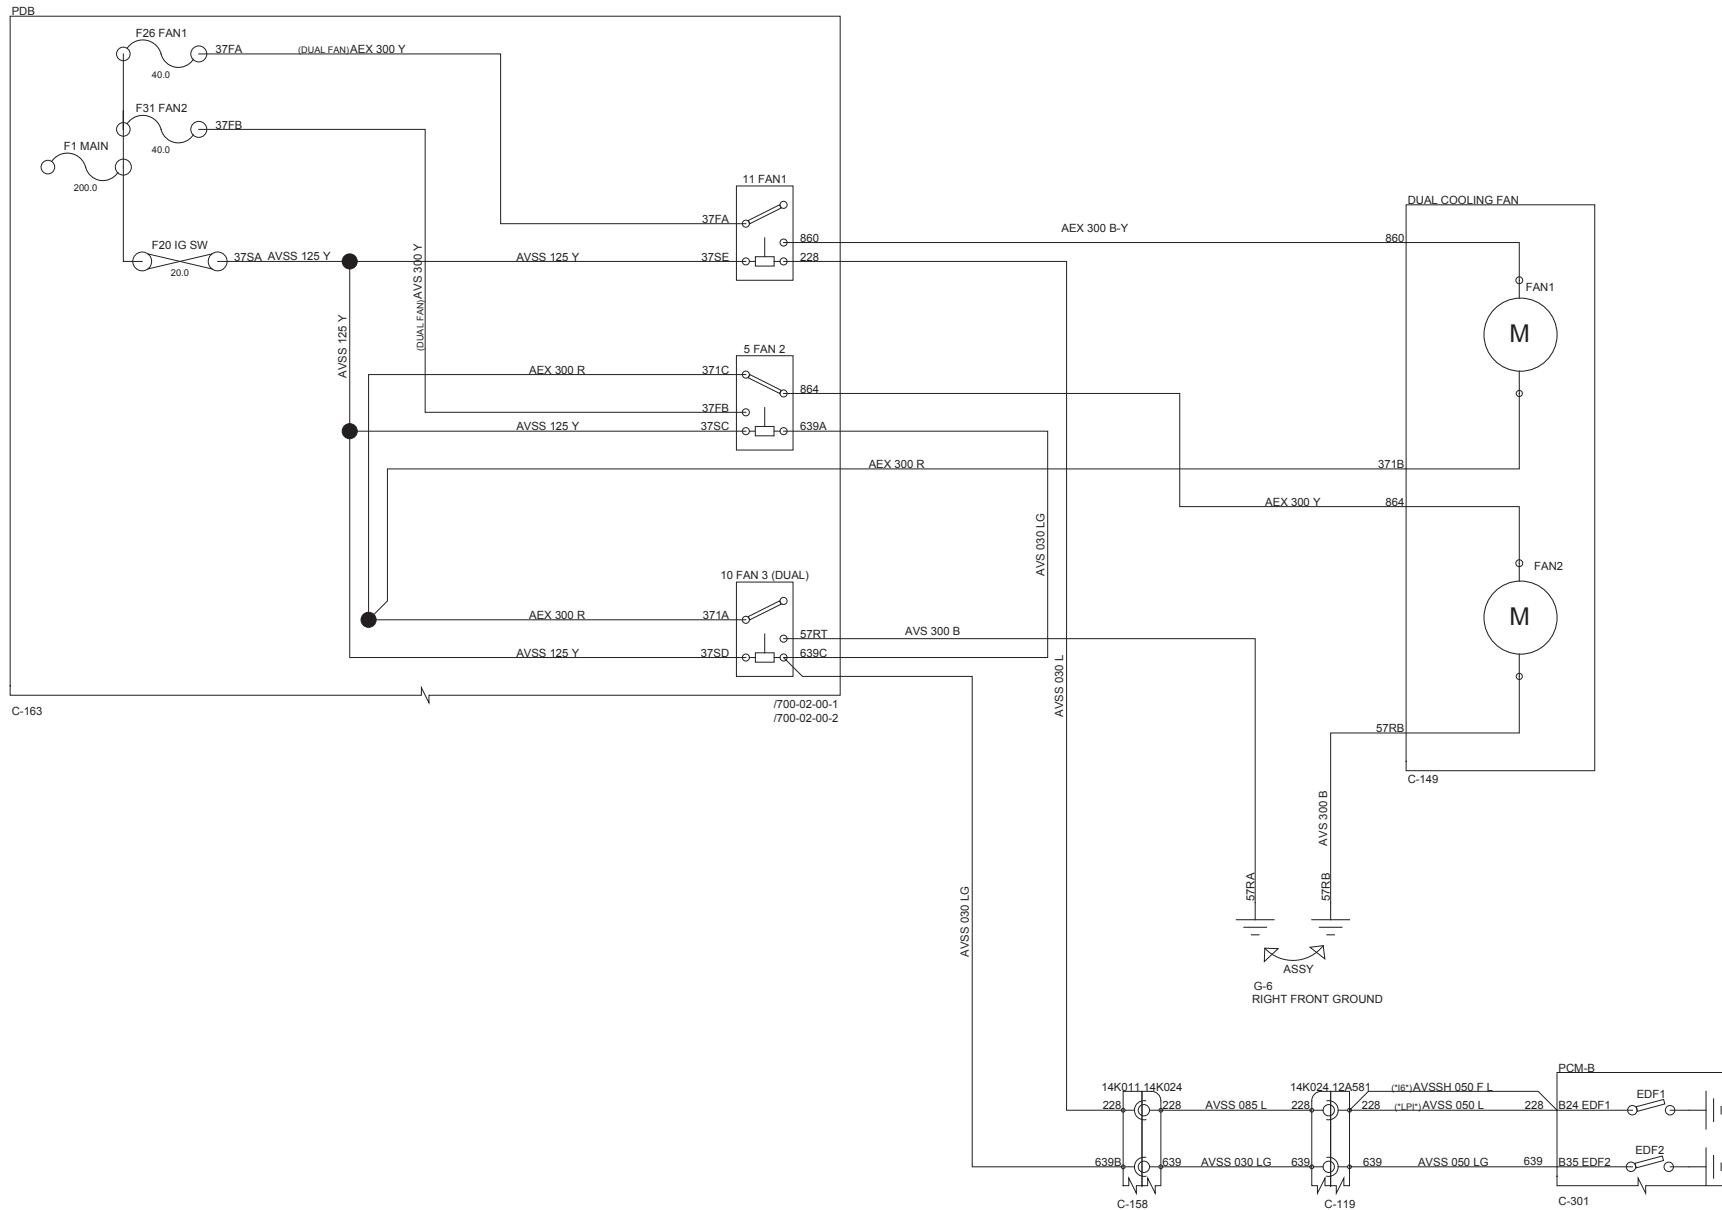


303-03-00-2

Engine Cooling (Single Fan) - 16

303-03-00-2

303-03-00-2

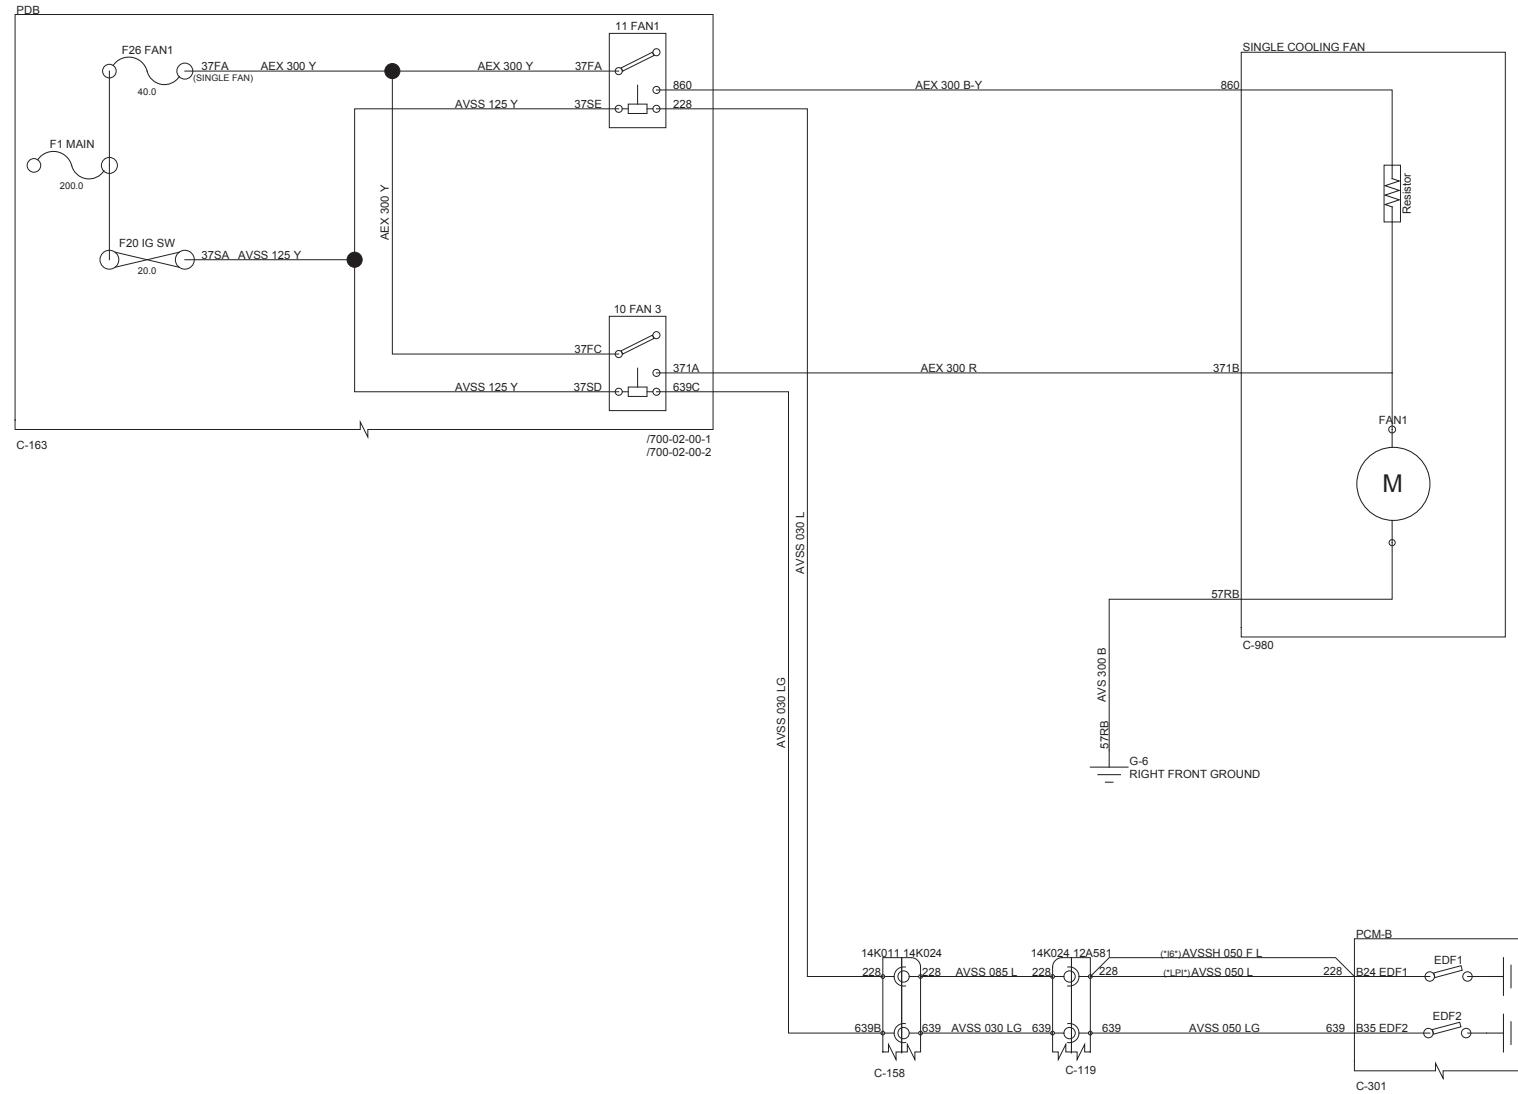

Login Tracking Code

SHT 11 OF 126


303-00-3

Engine Cooling (Dual Fan) - I4/V8

303-00-3


303-00-3

303-00-3

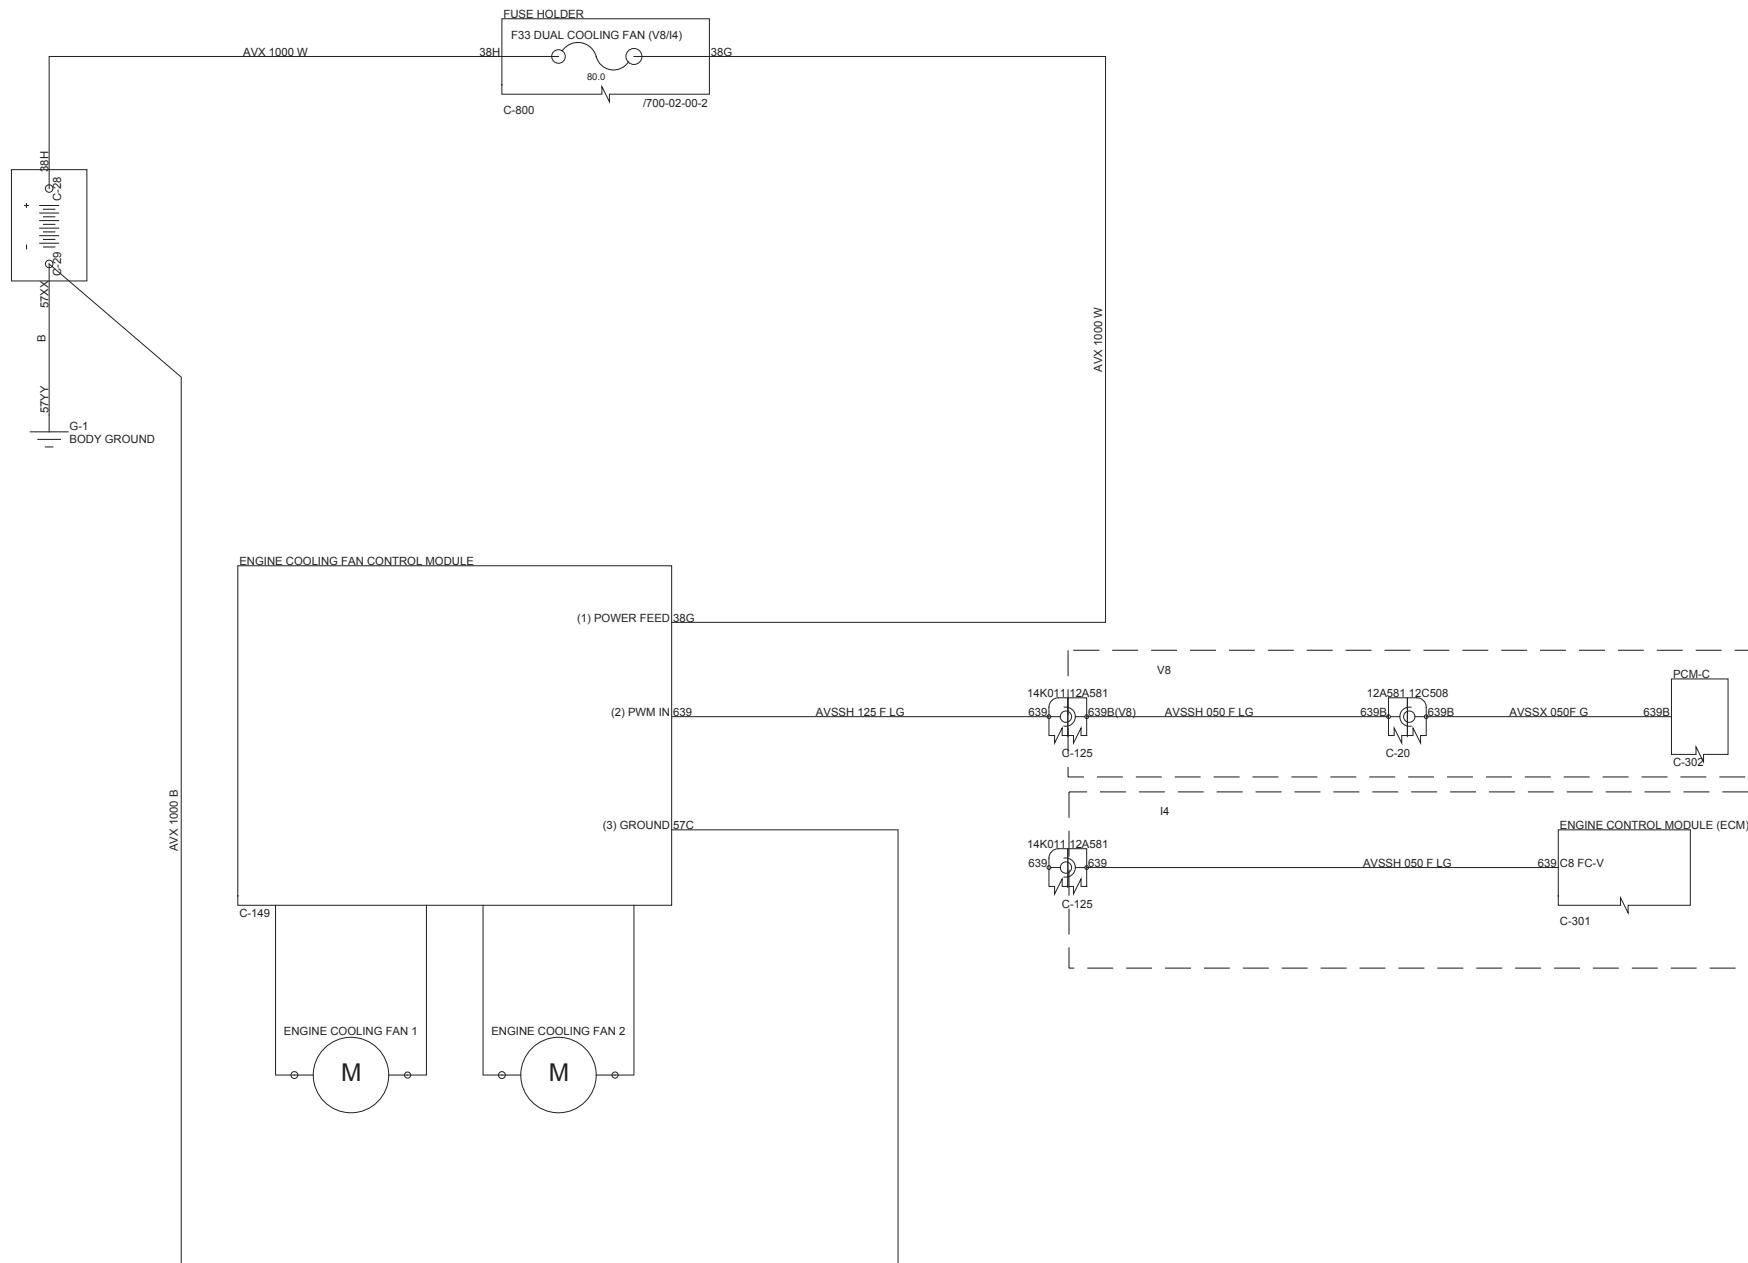

Login Tracking Code

SHT 12 OF 126

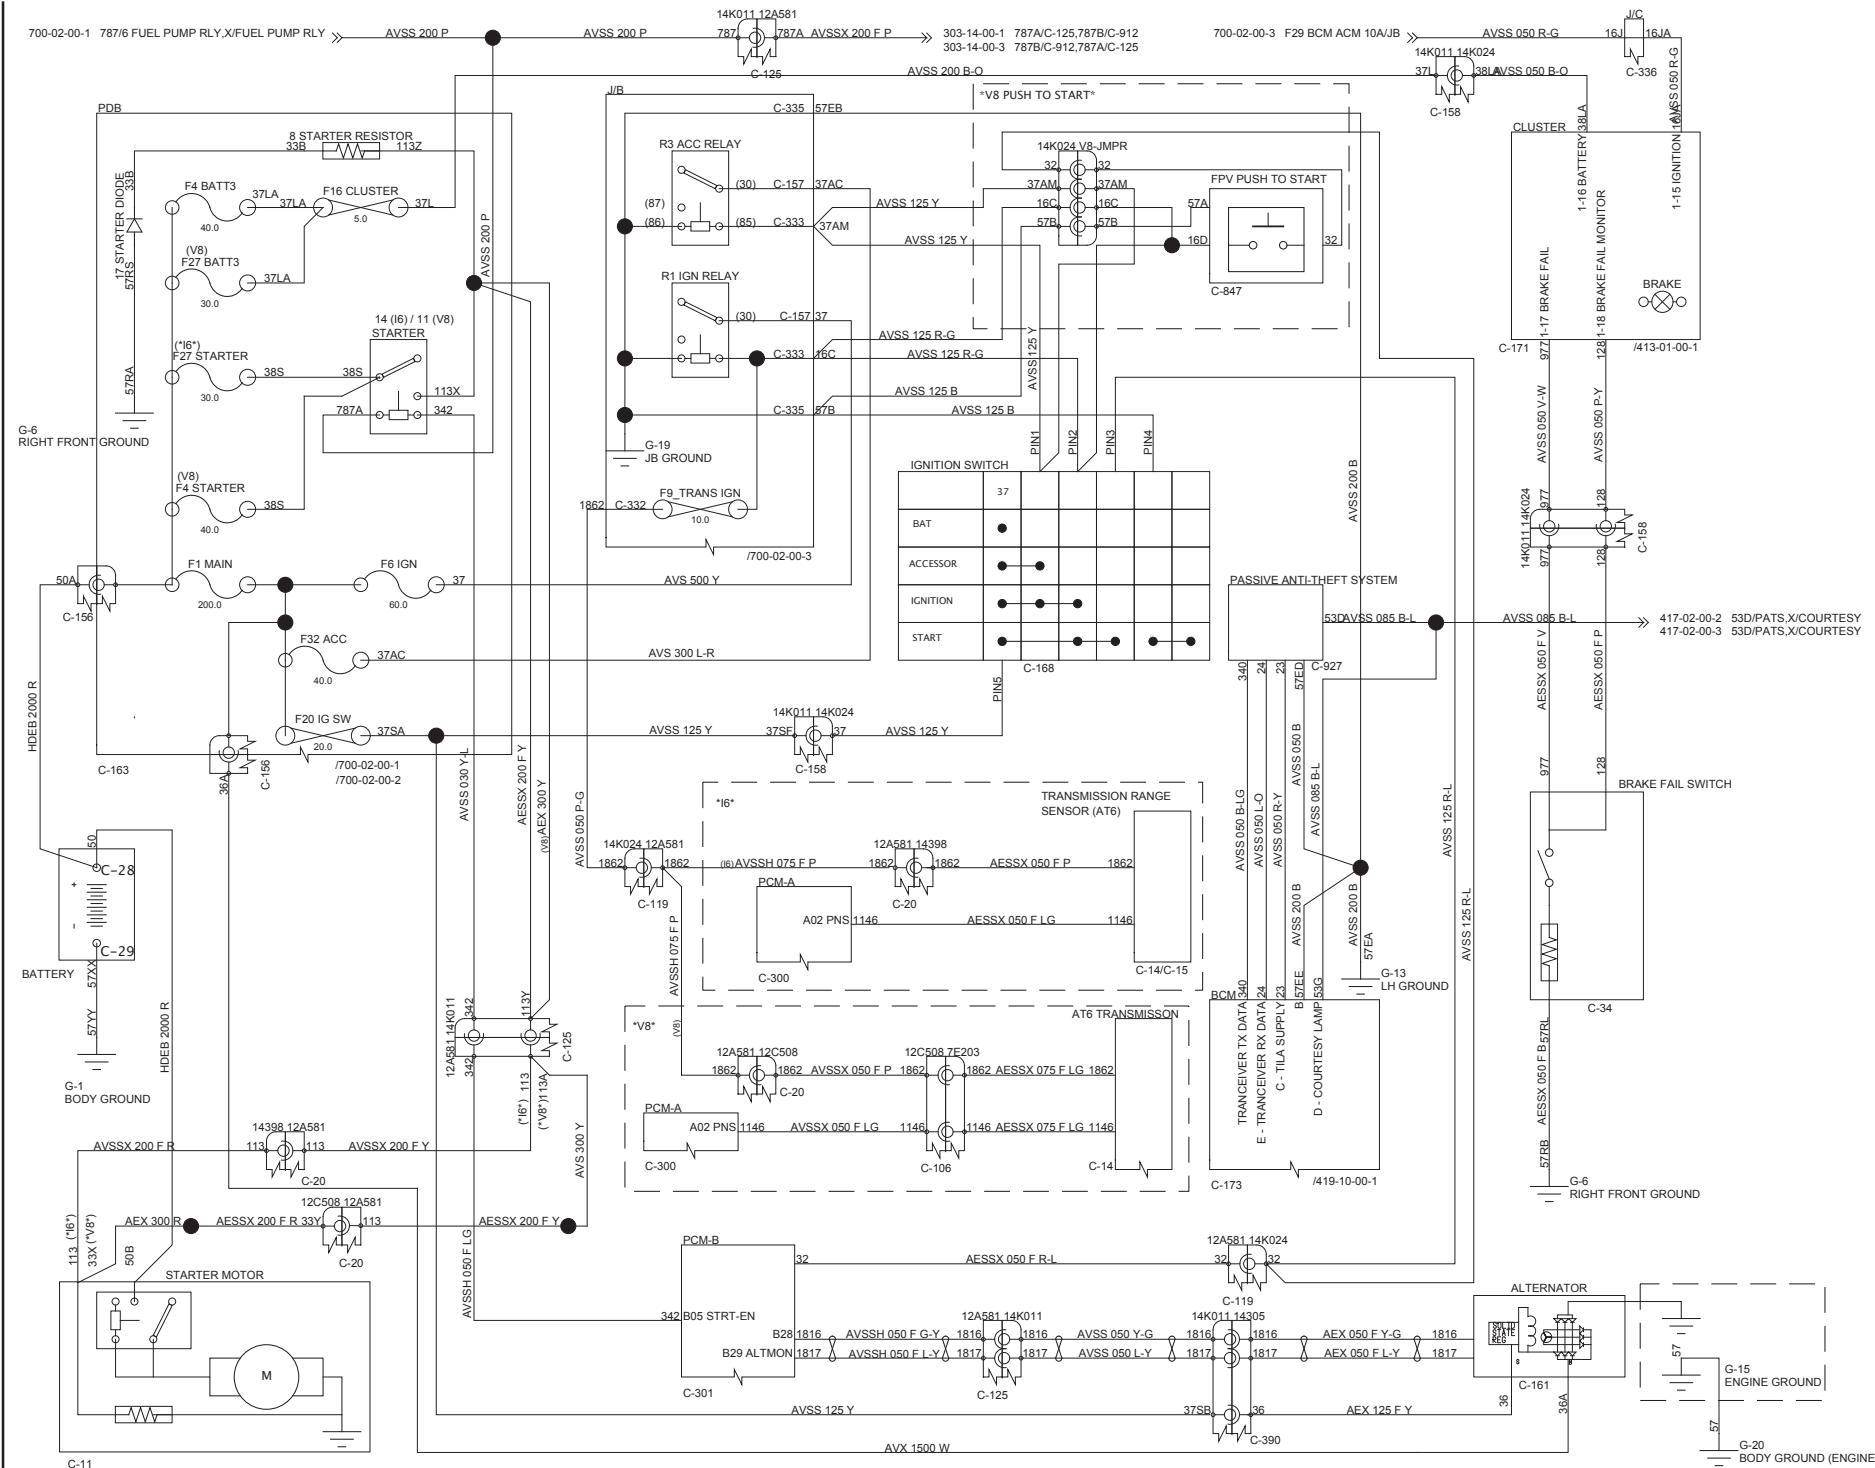


303-06-00-2

Starting System Alternator and Regulator (LPI)

303-06-00-2


Starting System Alternator and Regulator (LPI)


303-06-00-2

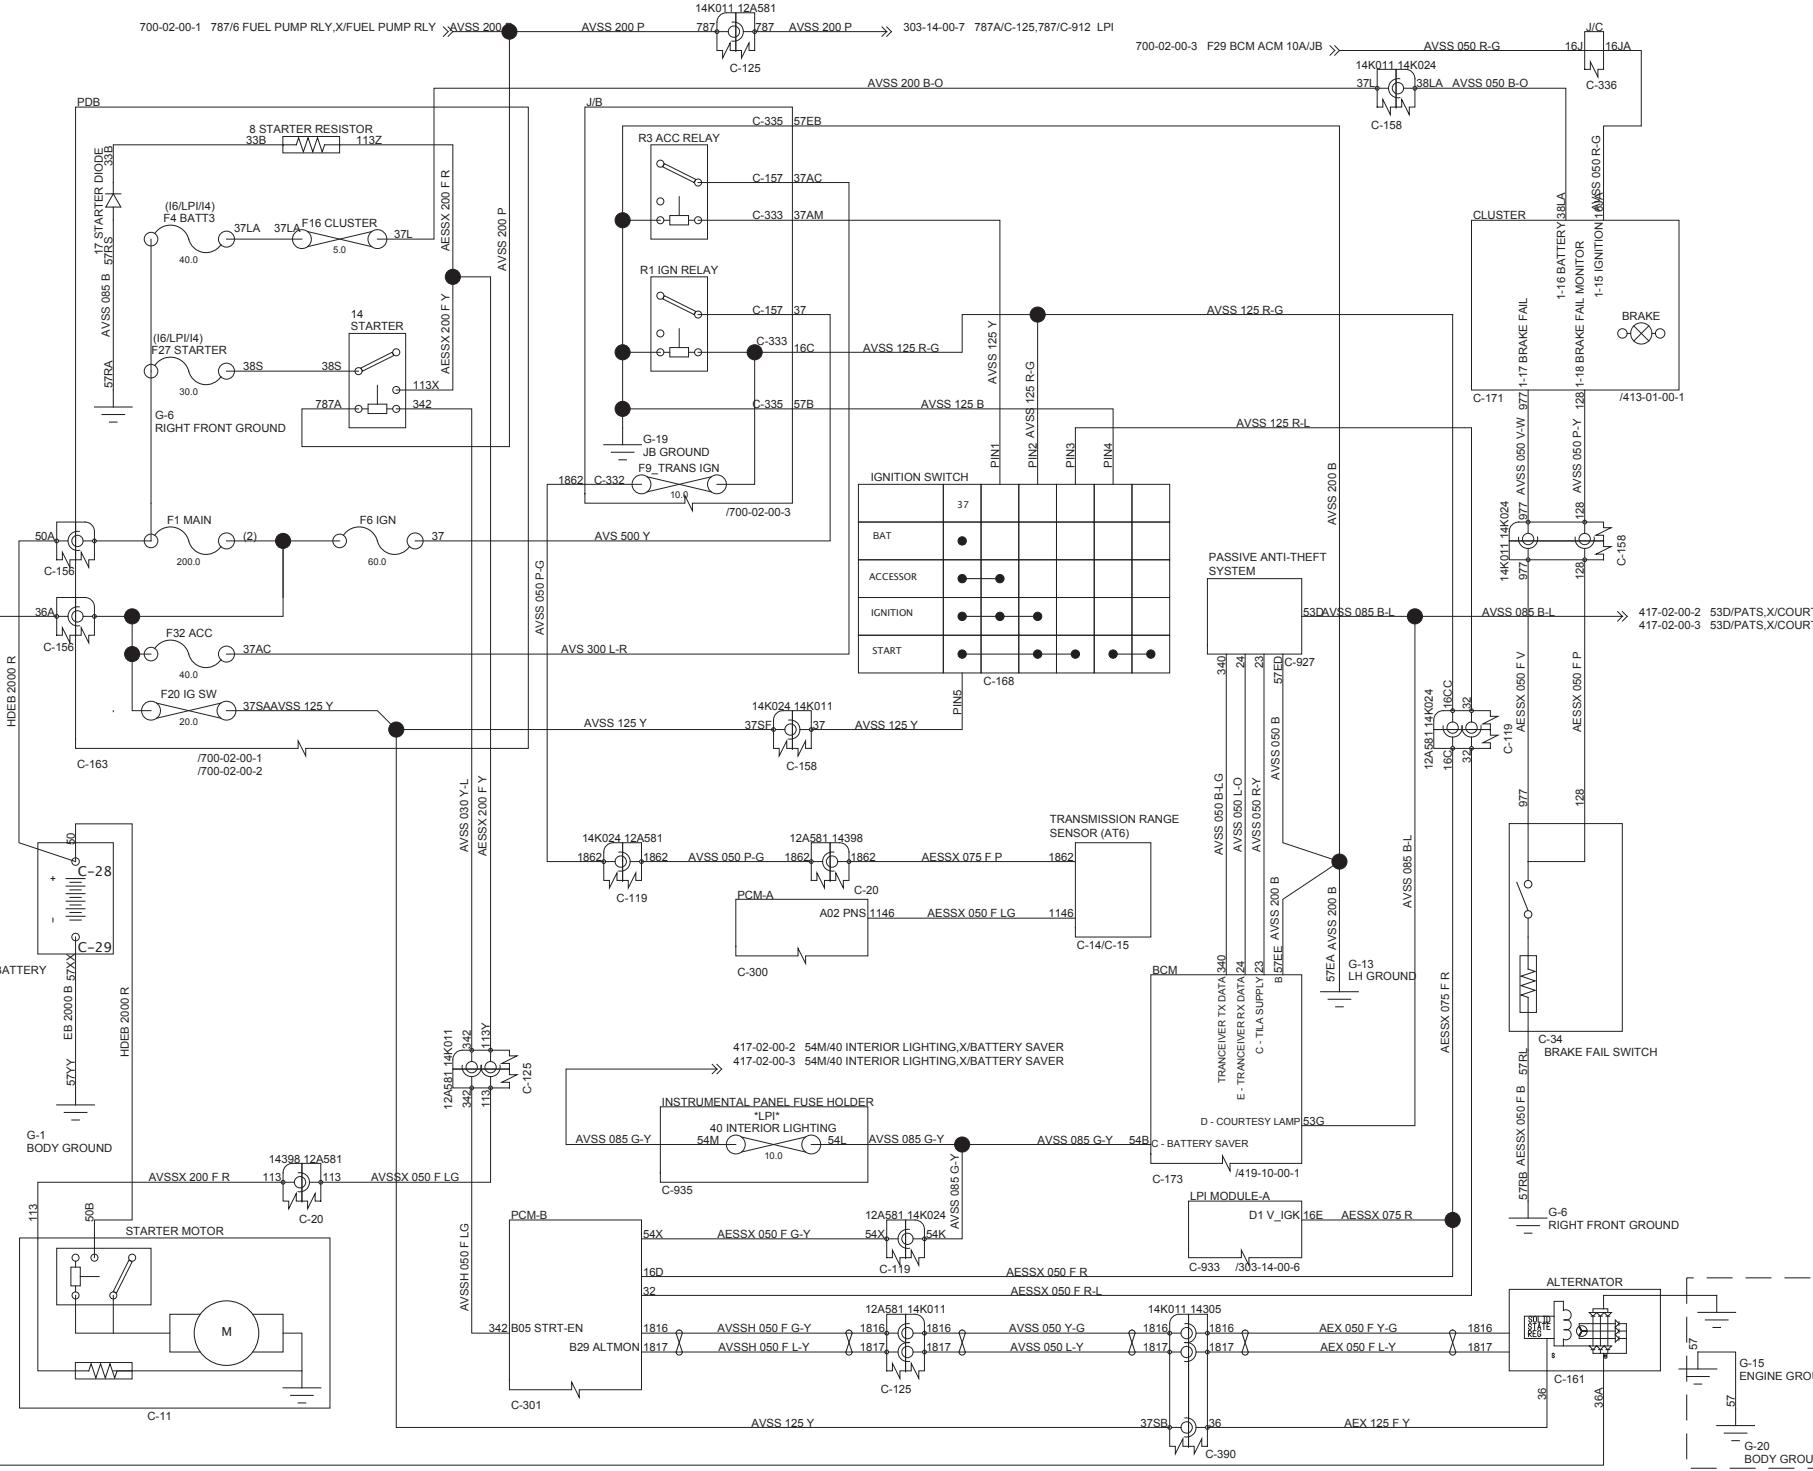



Login Tracking Code


SHT 14 OF 126

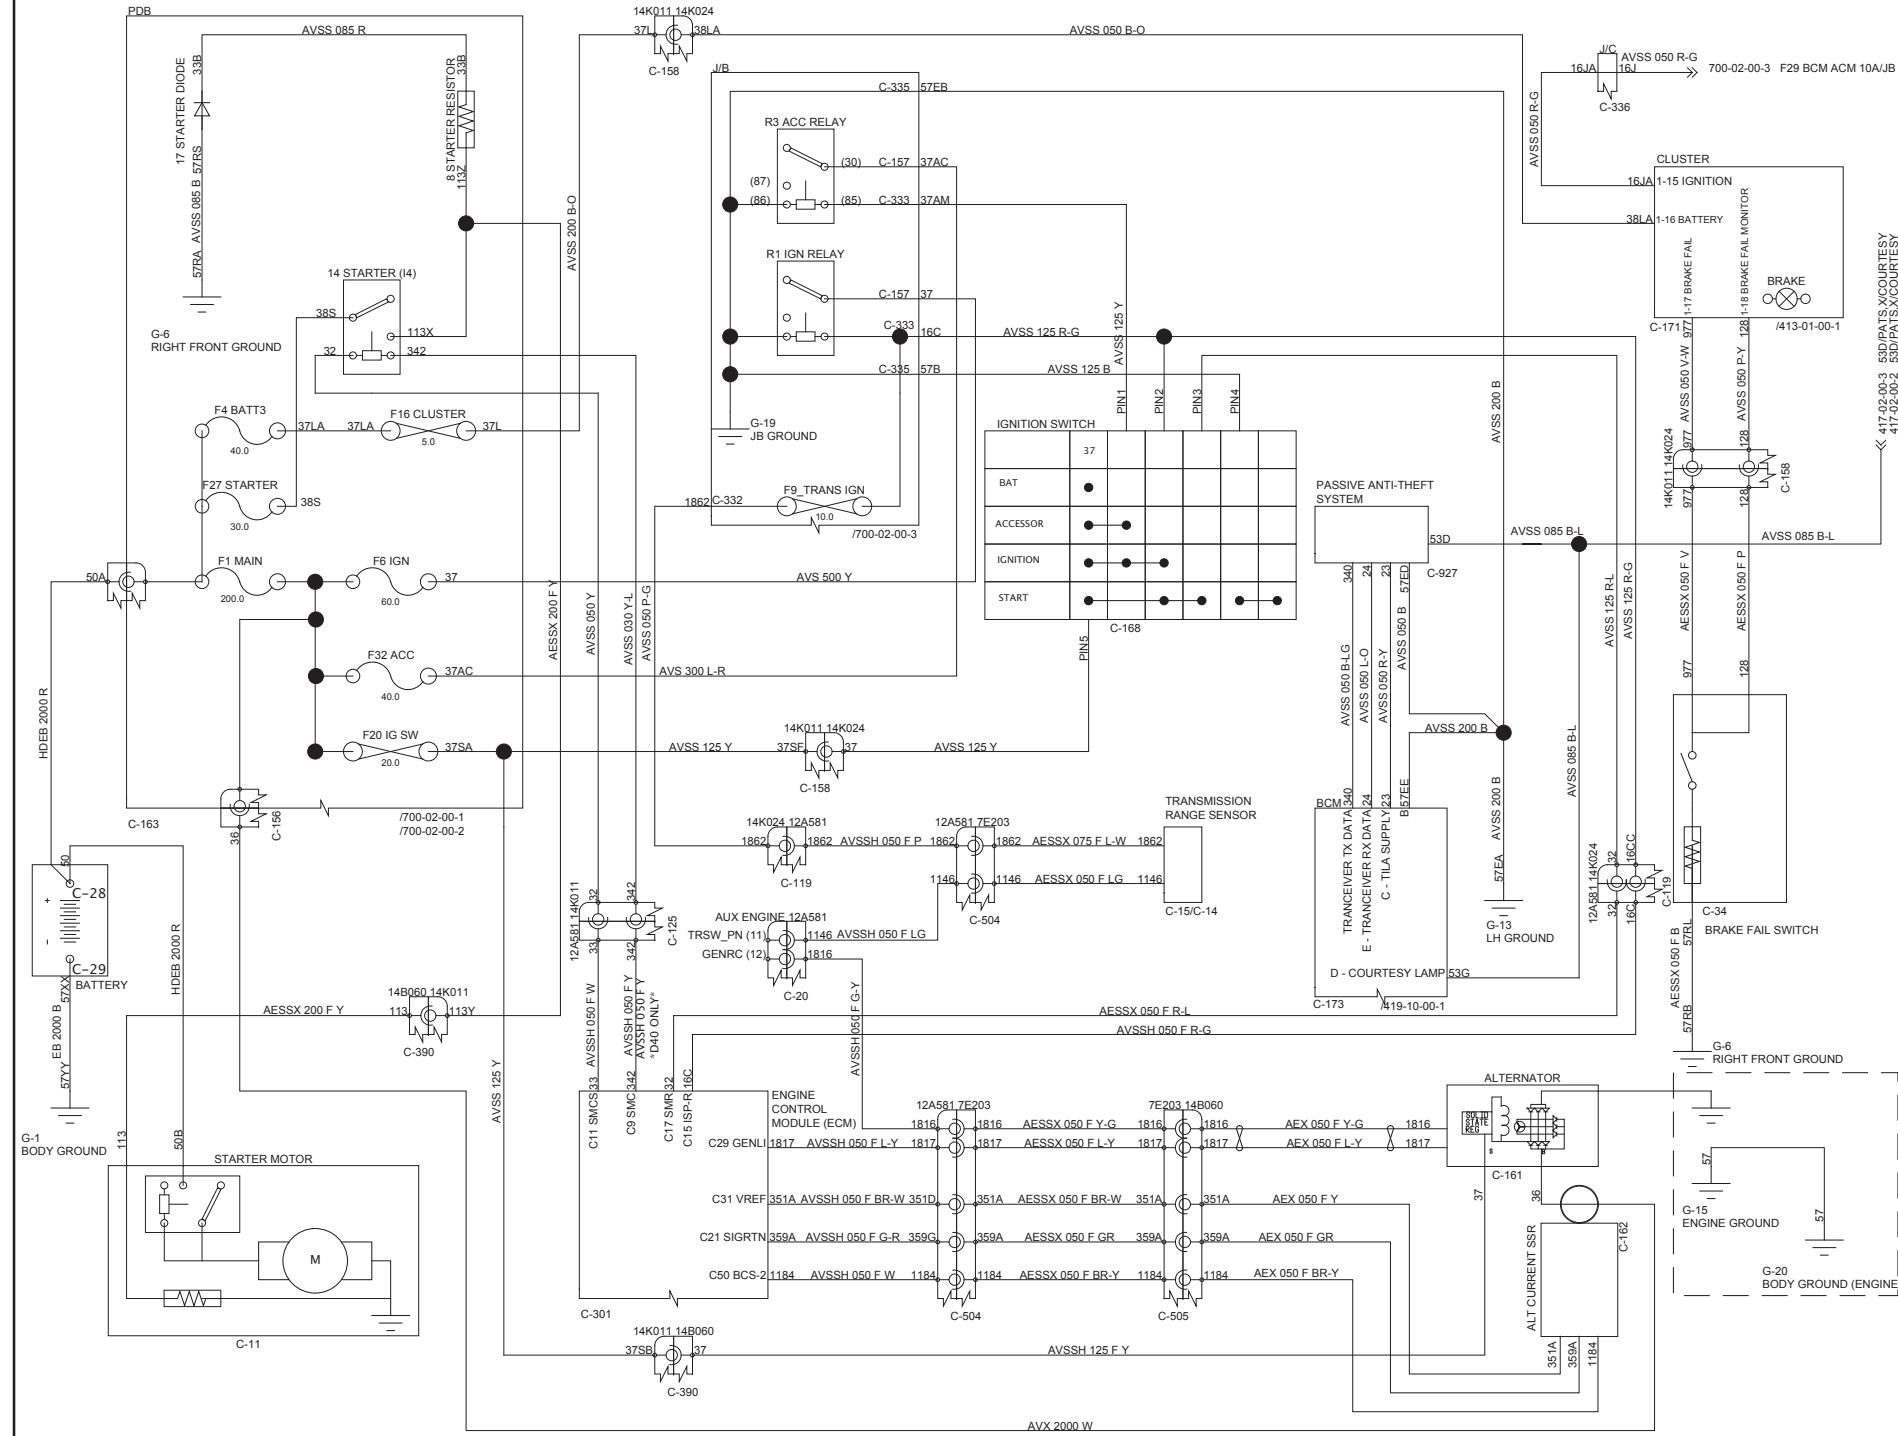


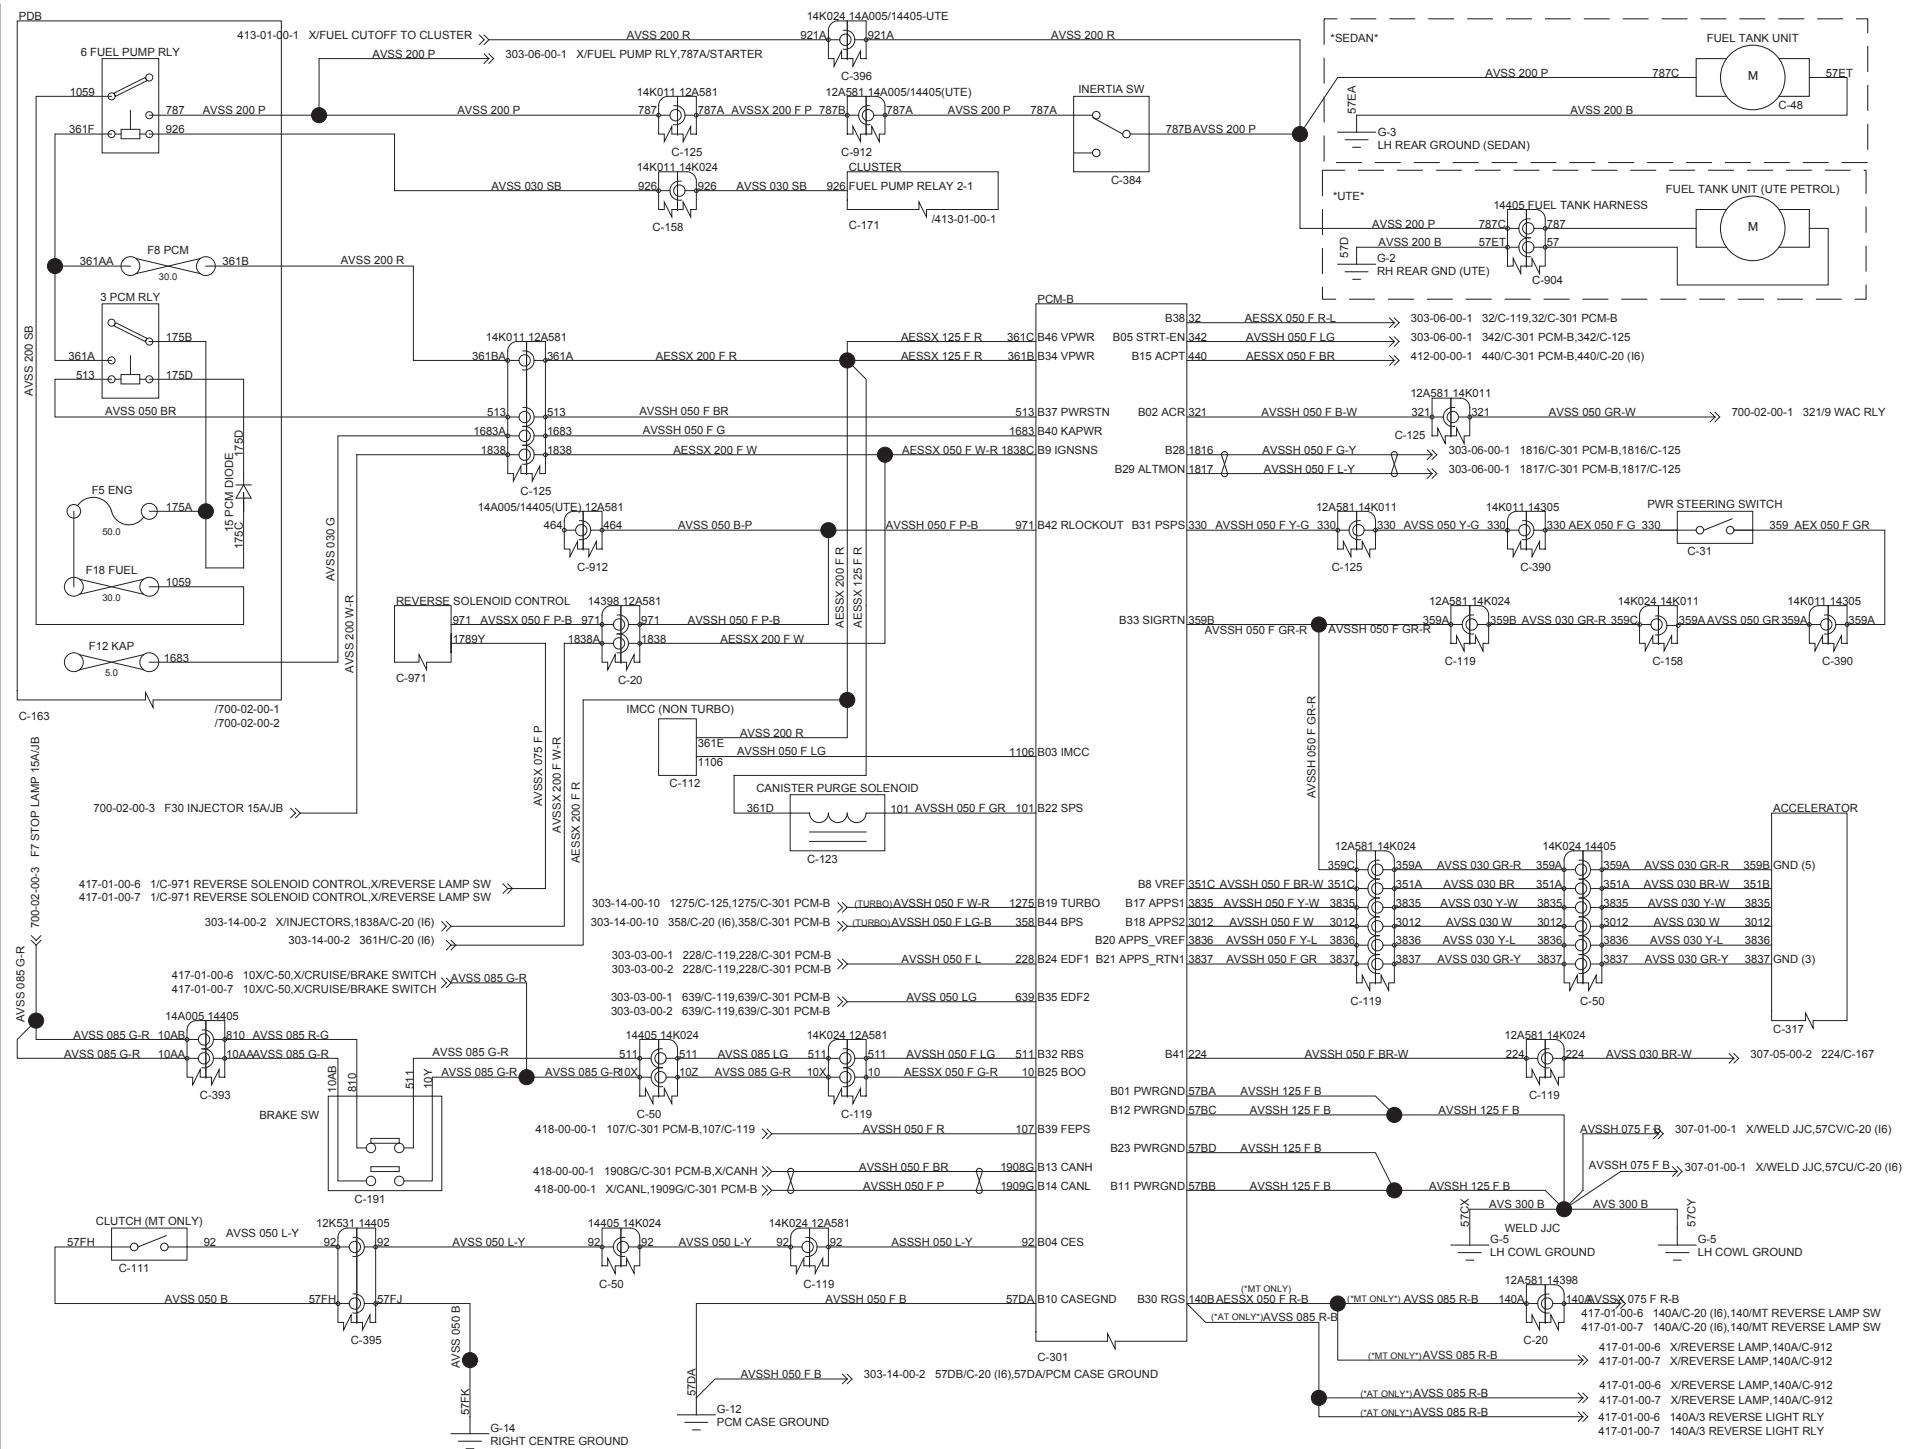


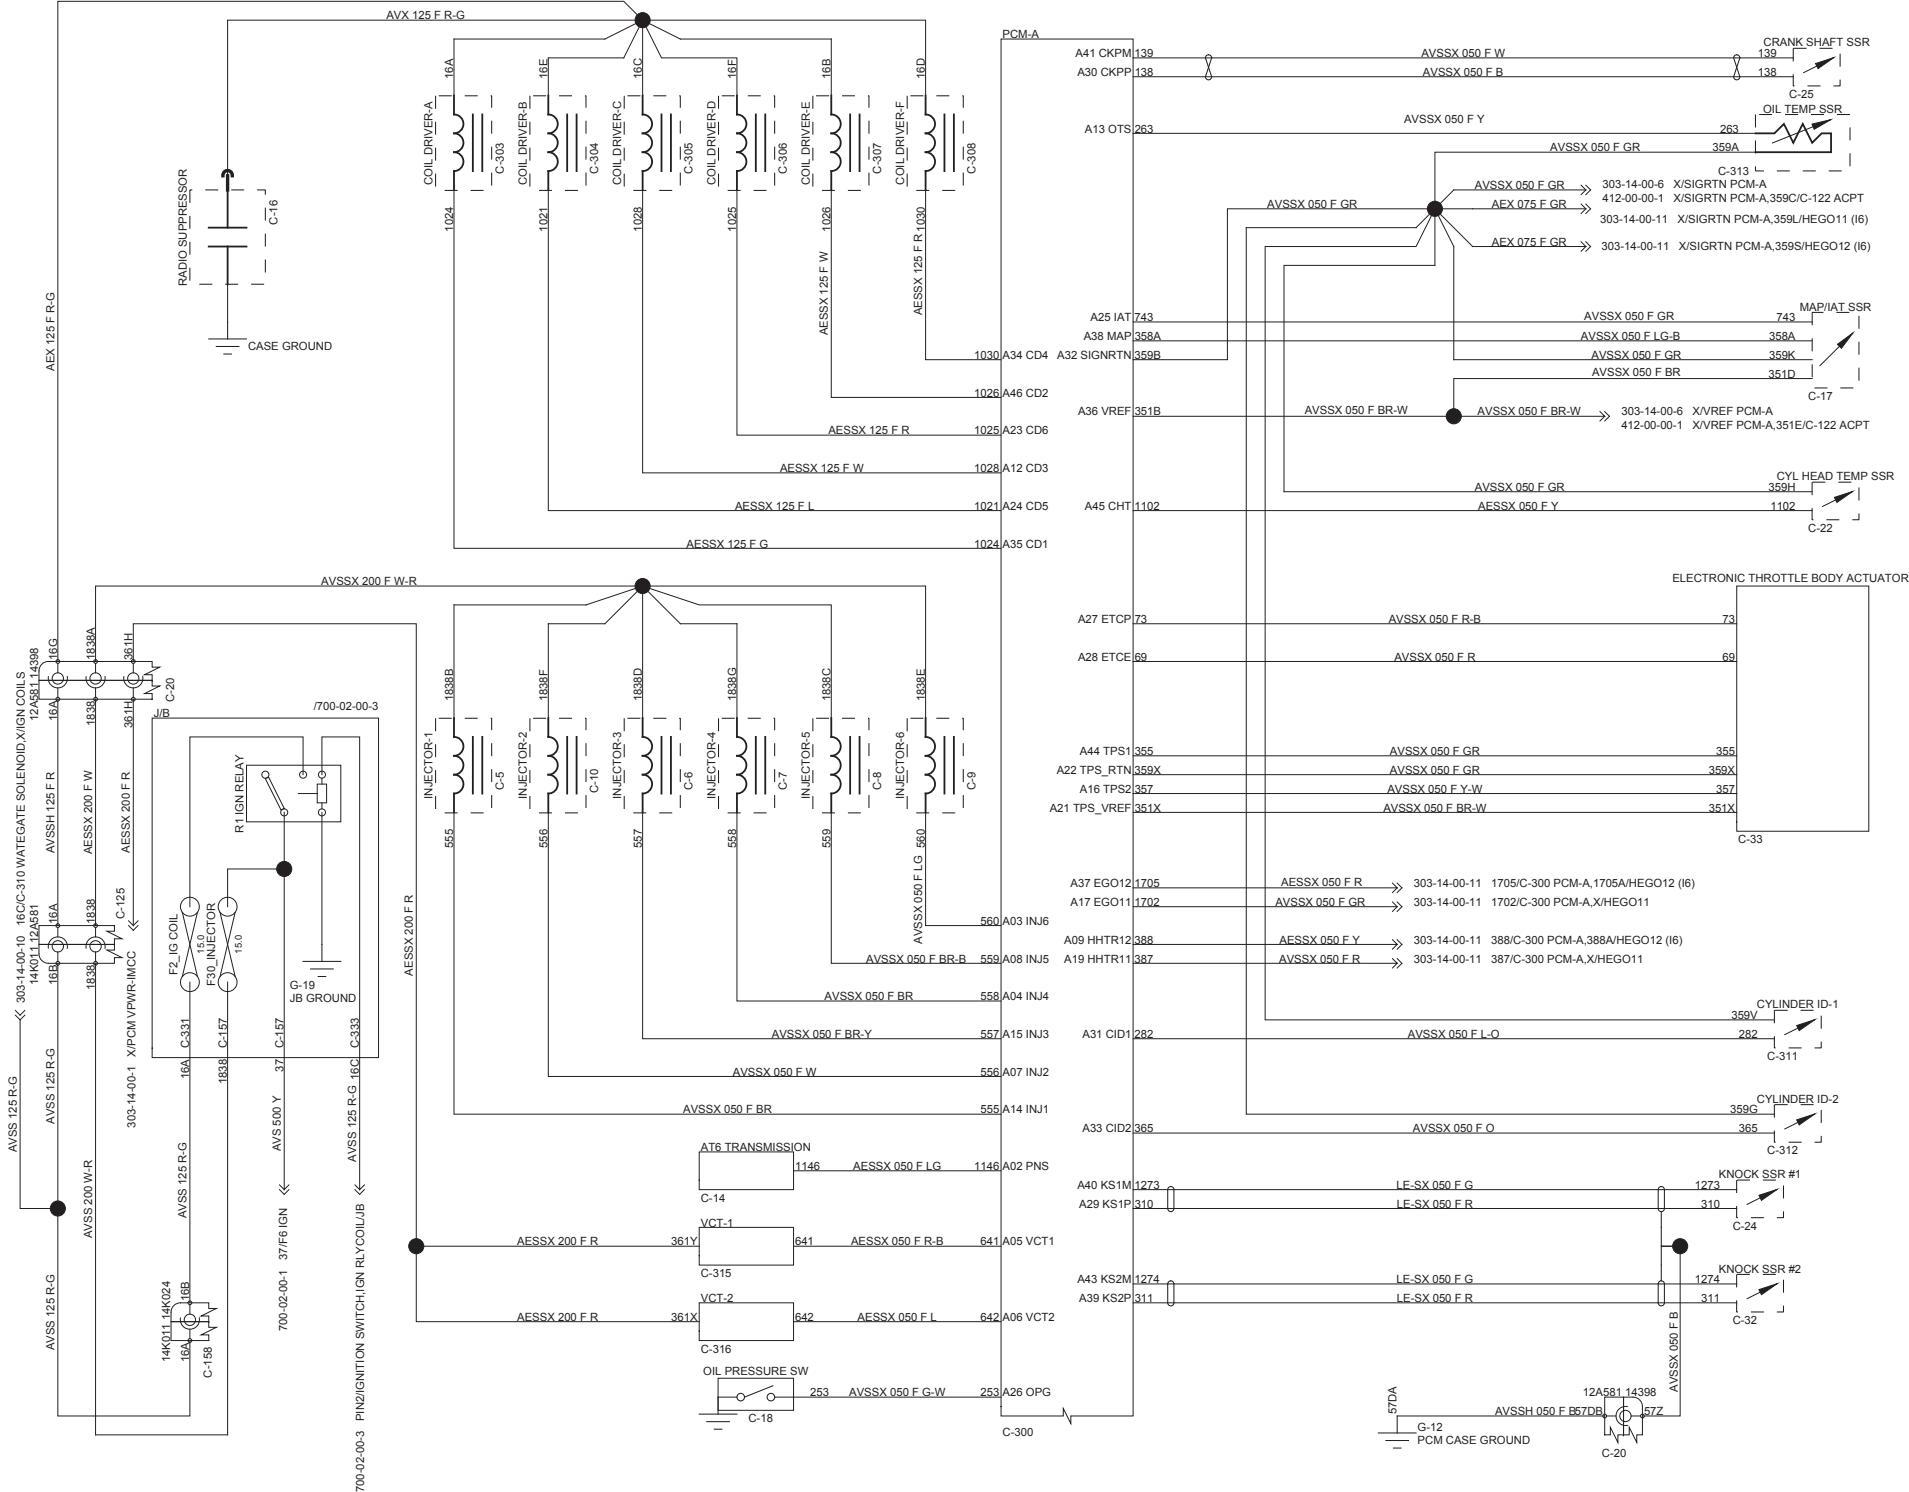


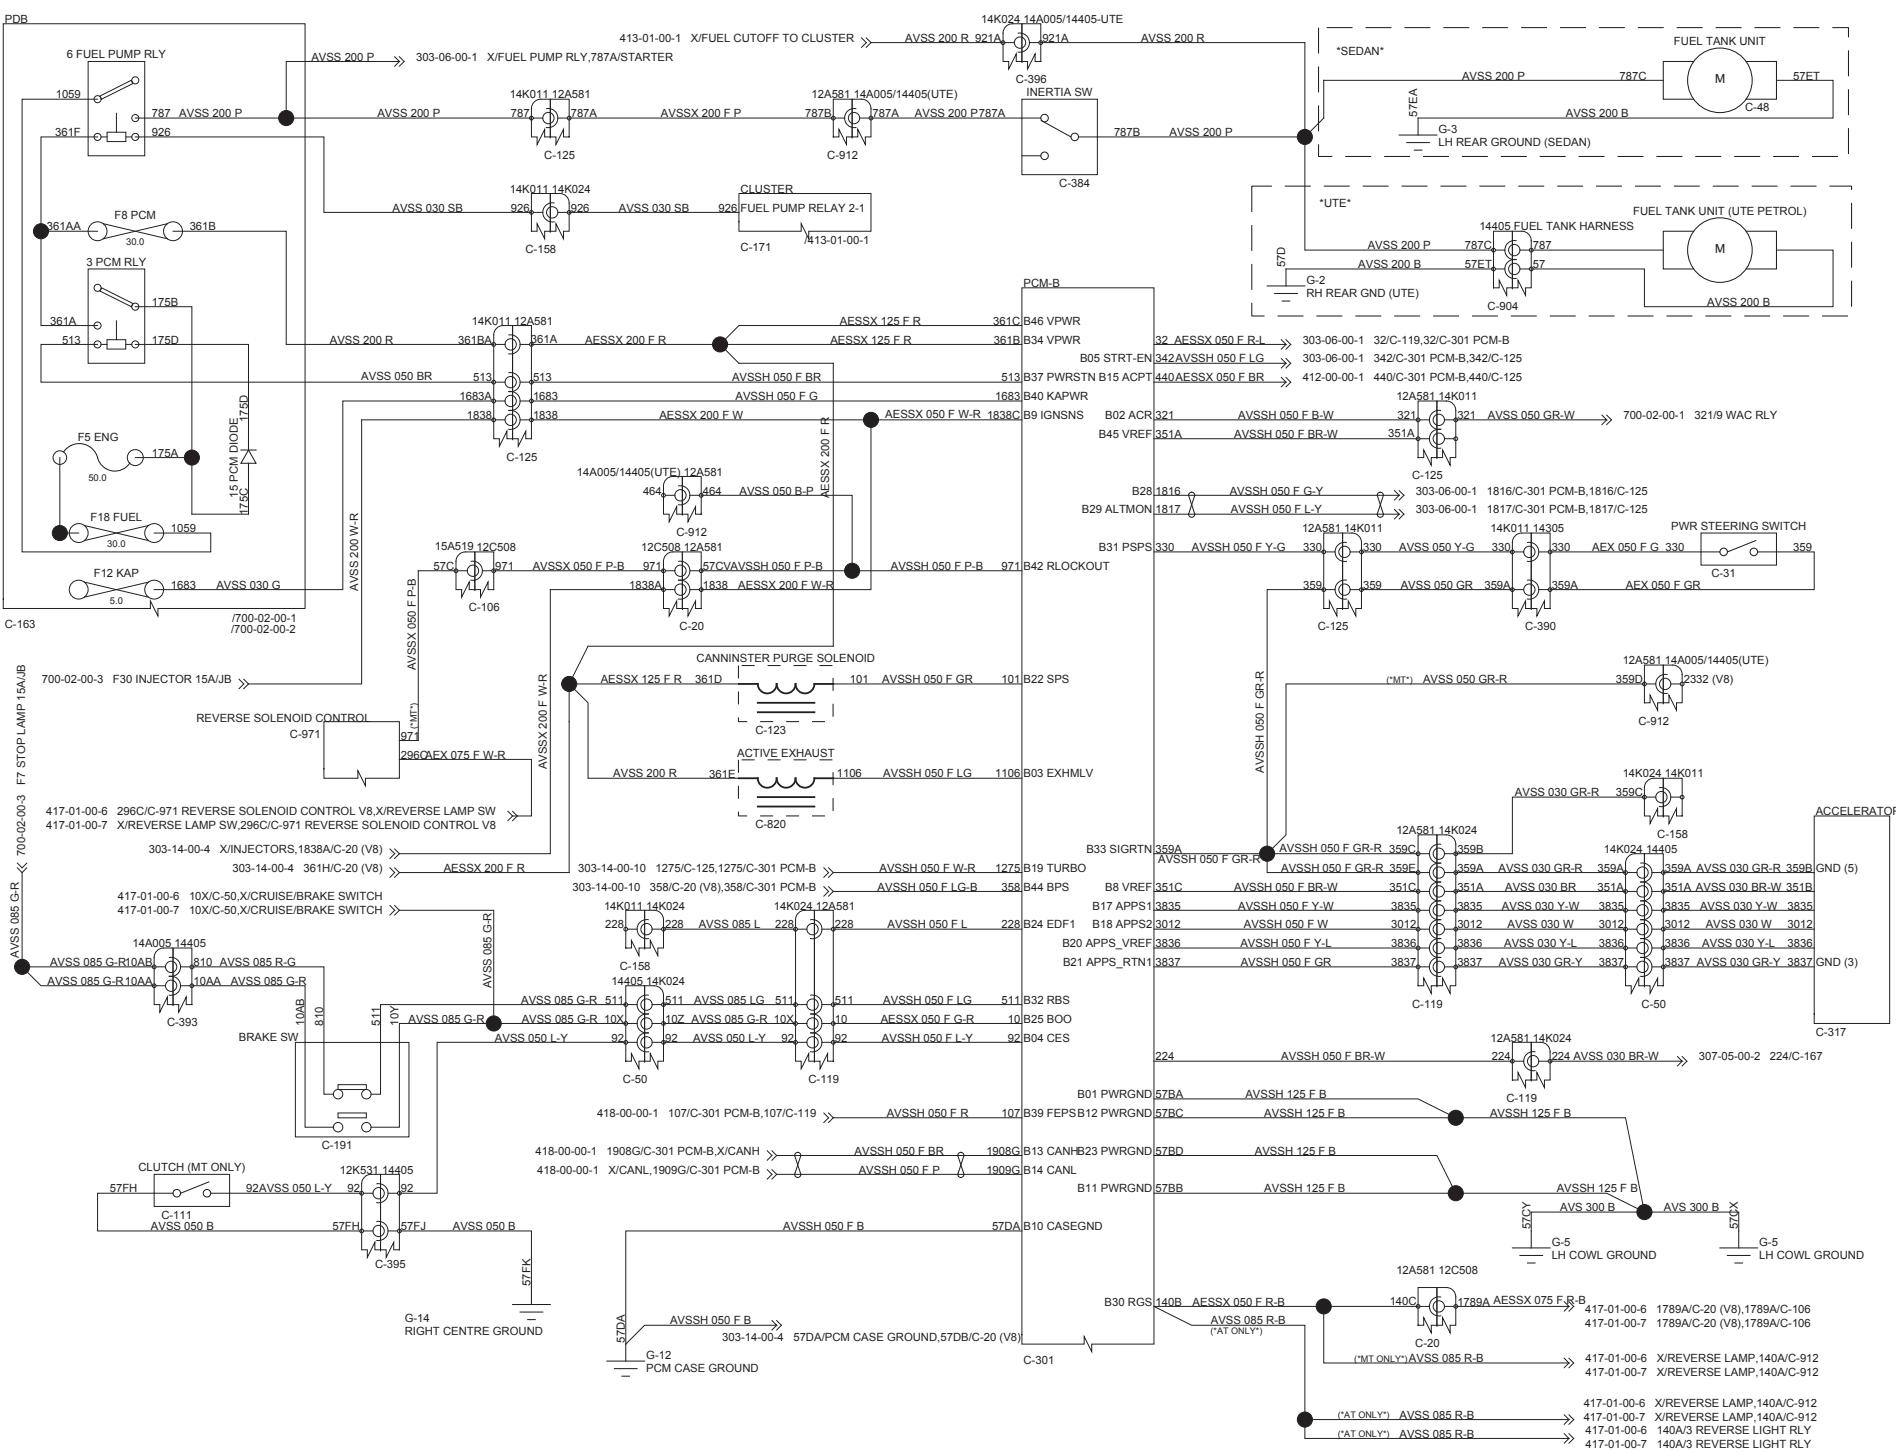

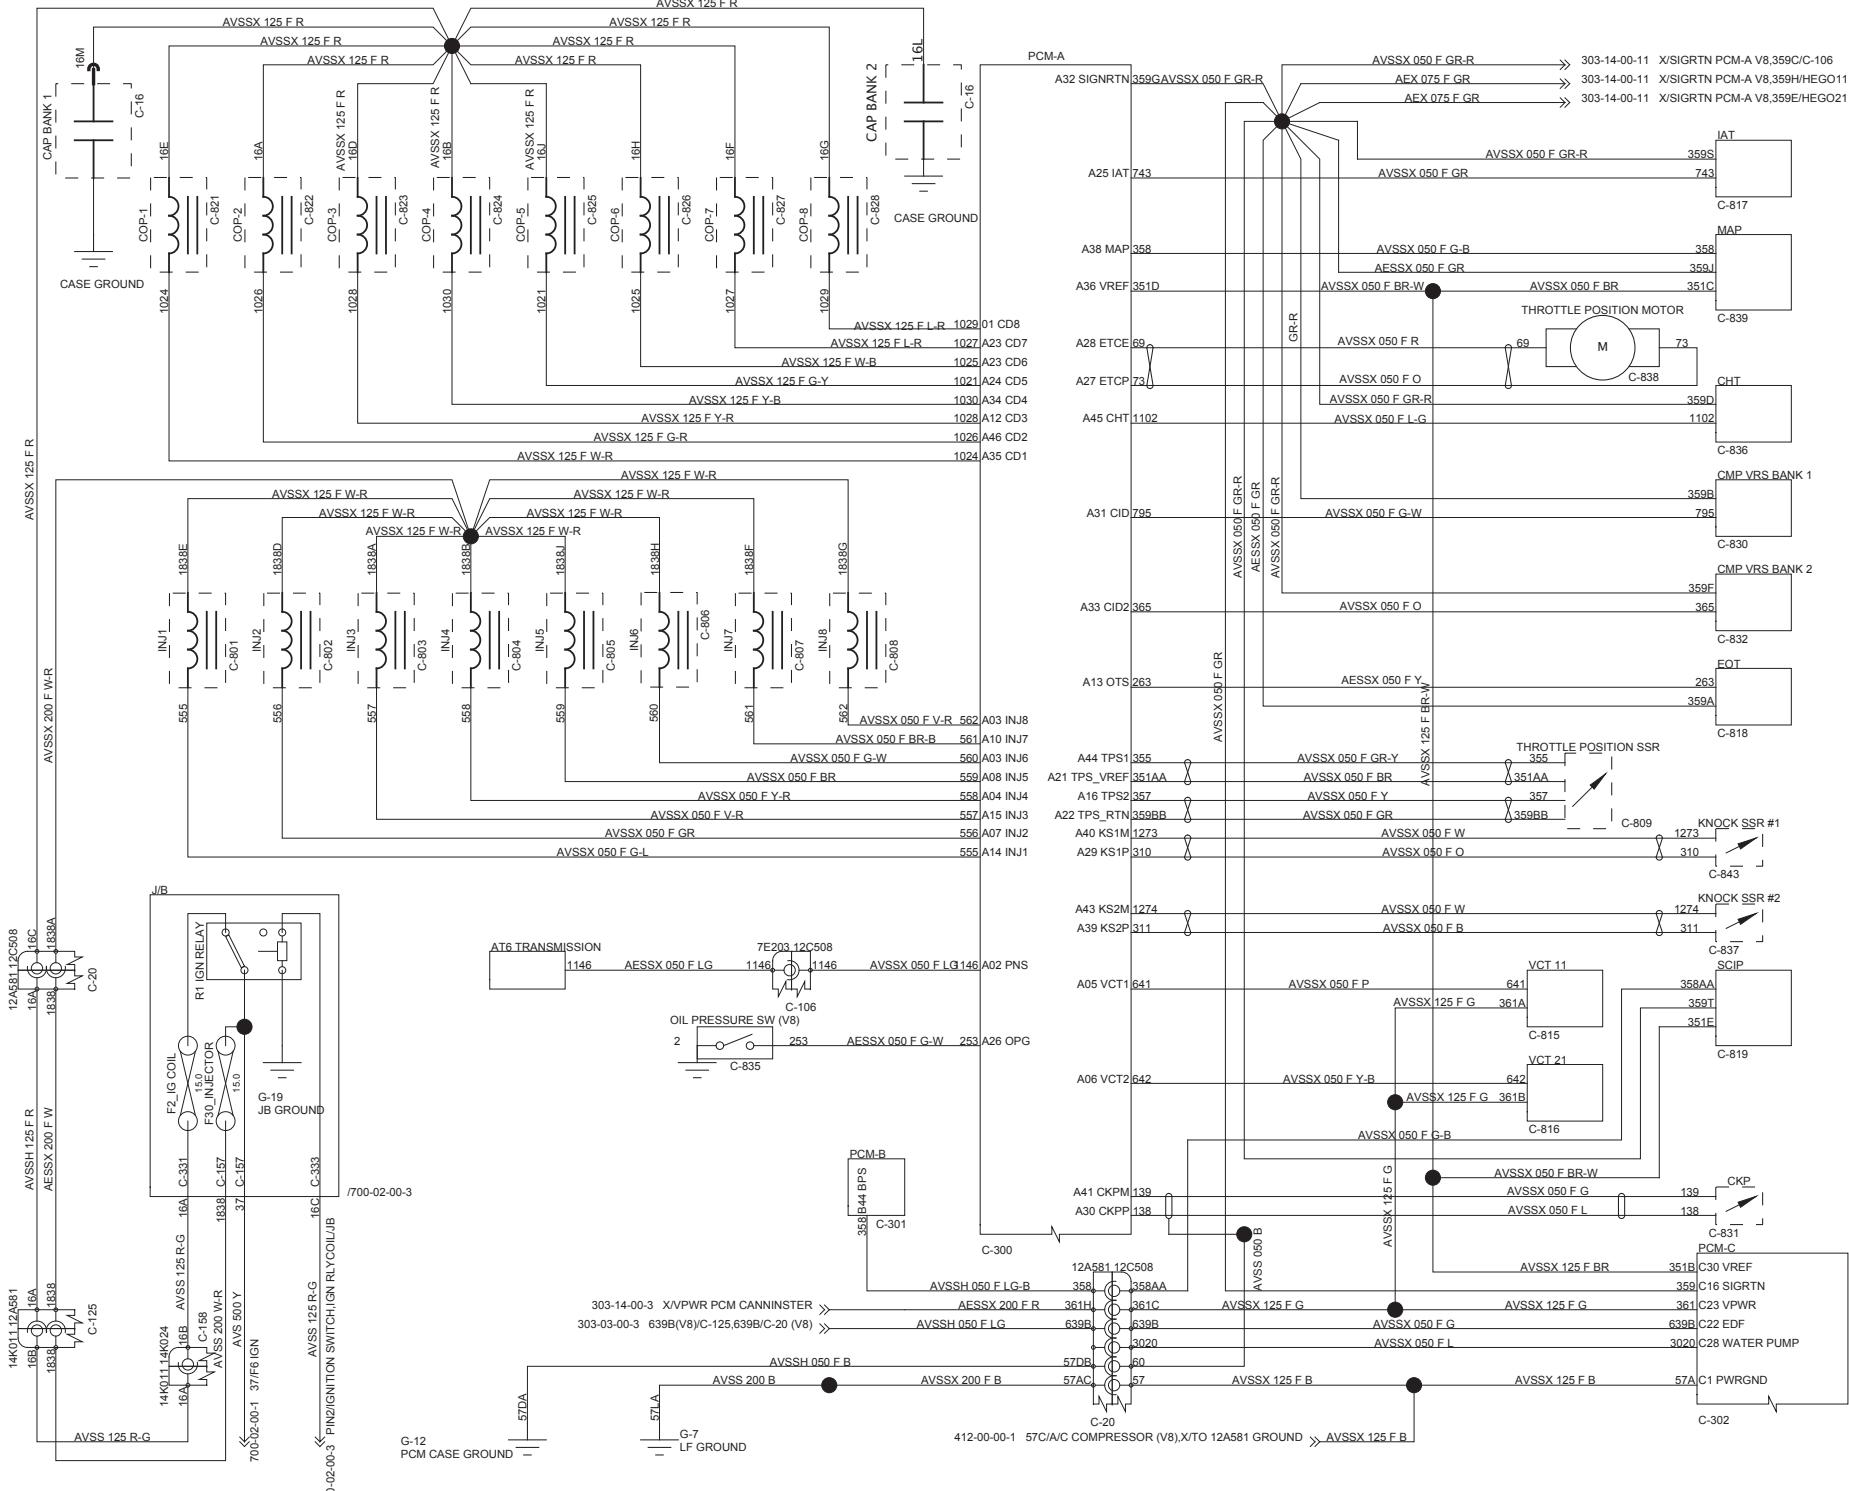


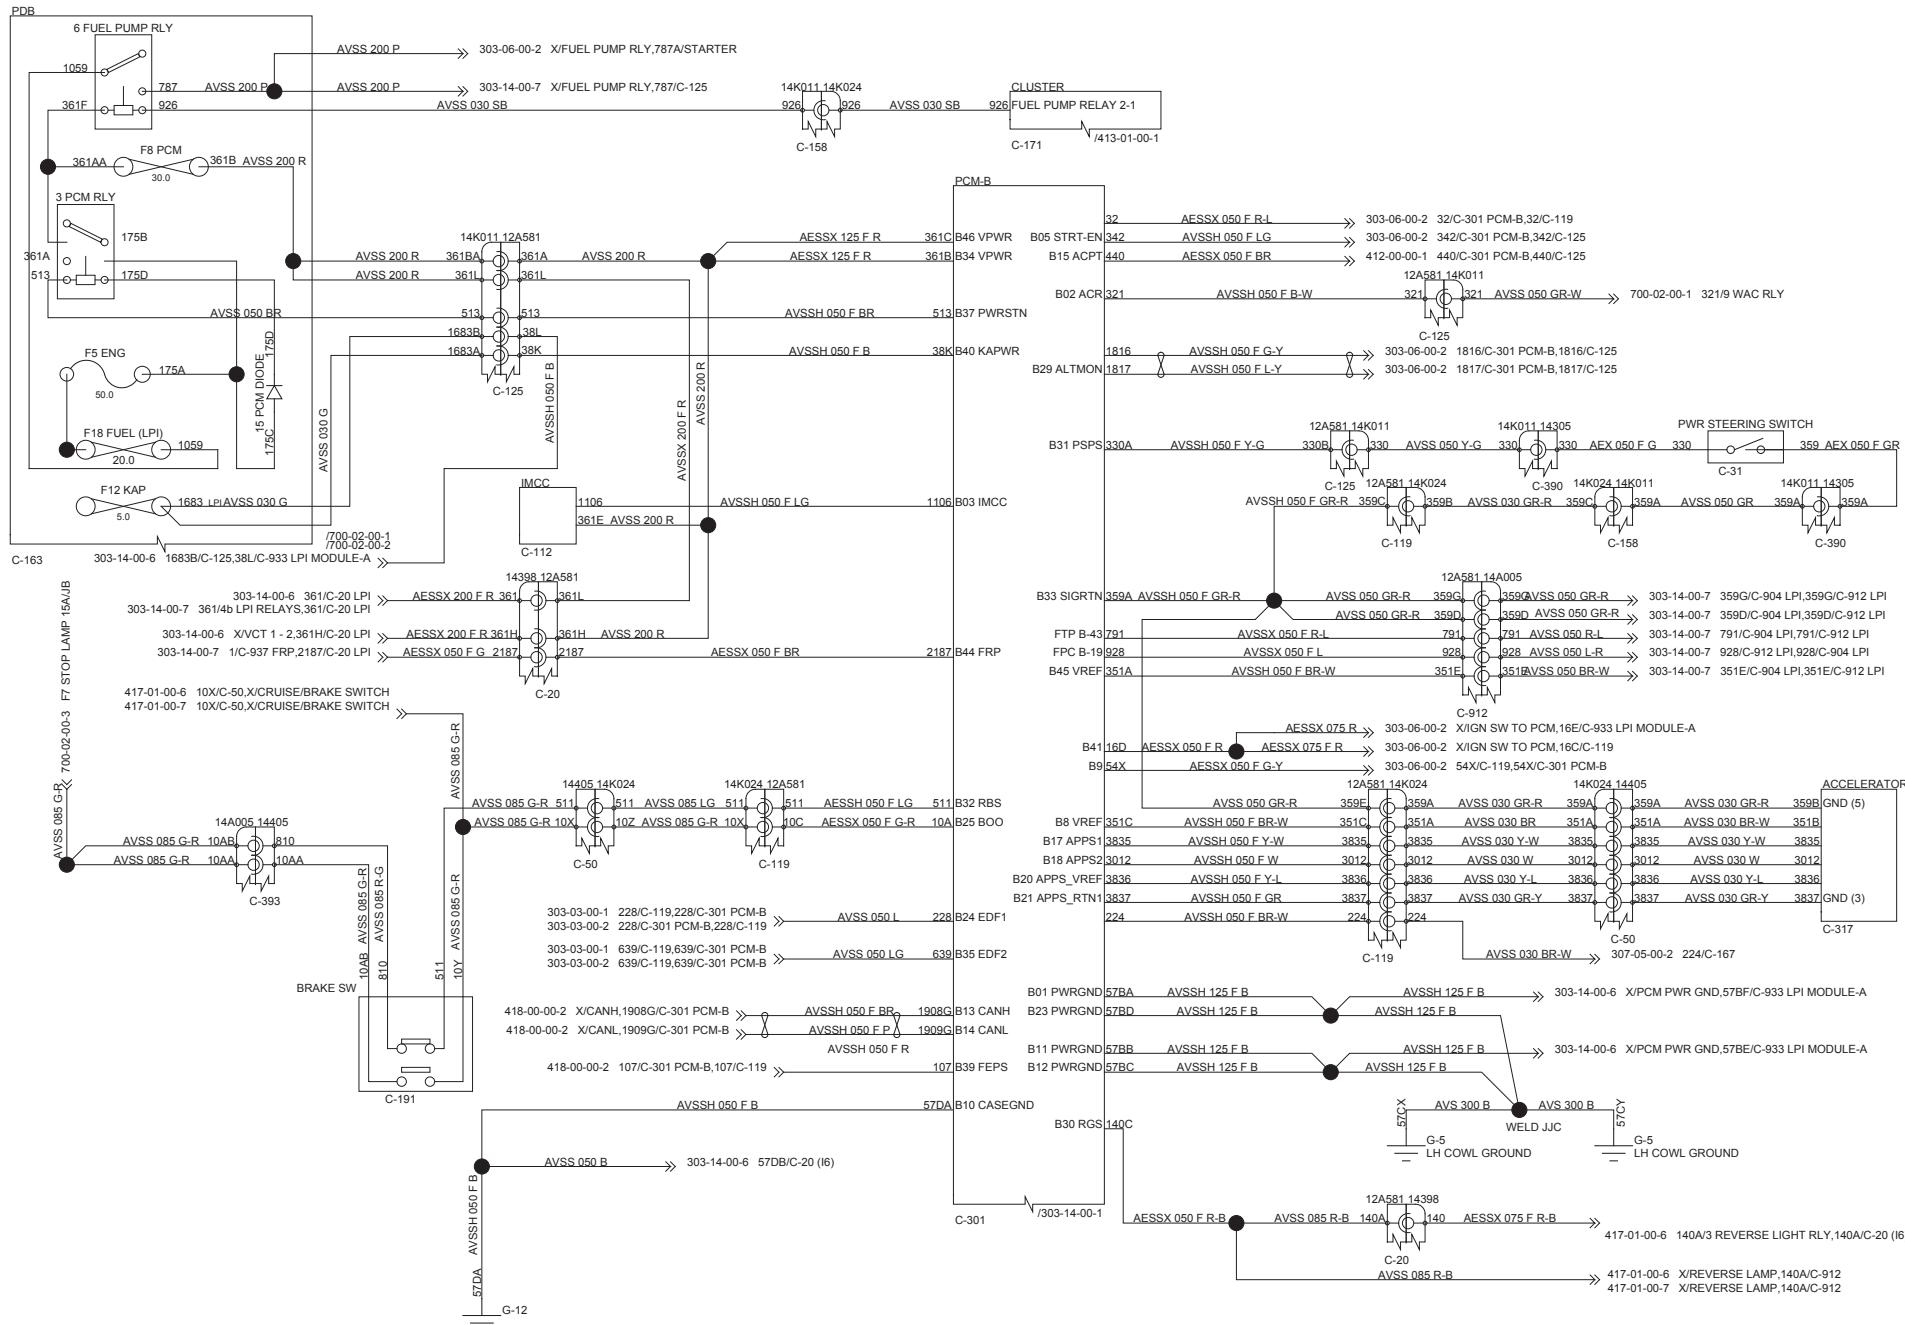

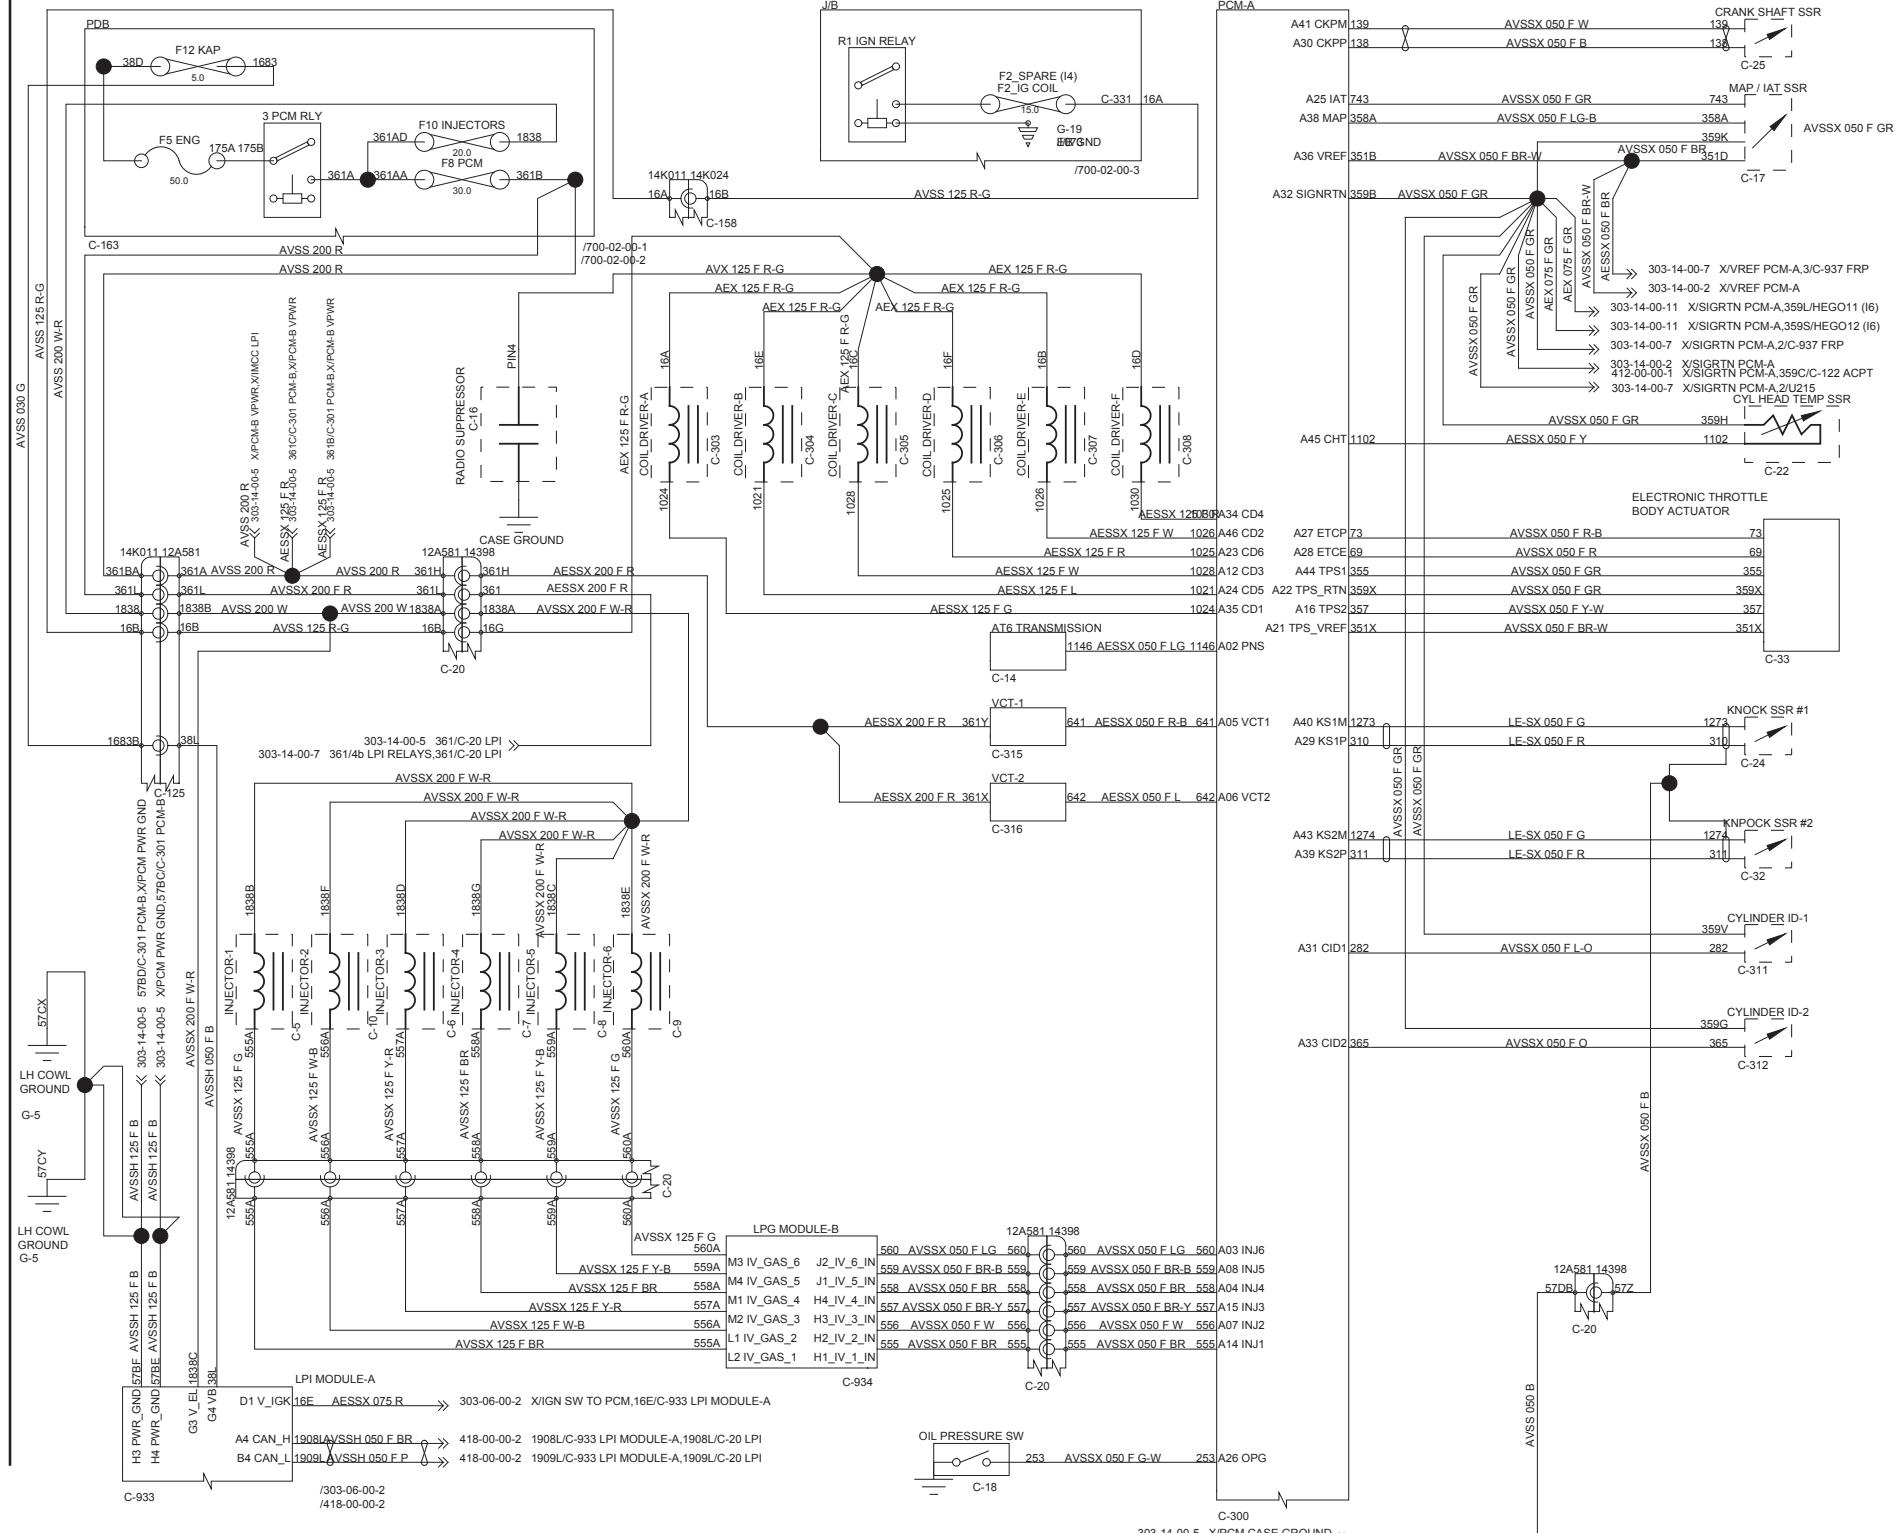


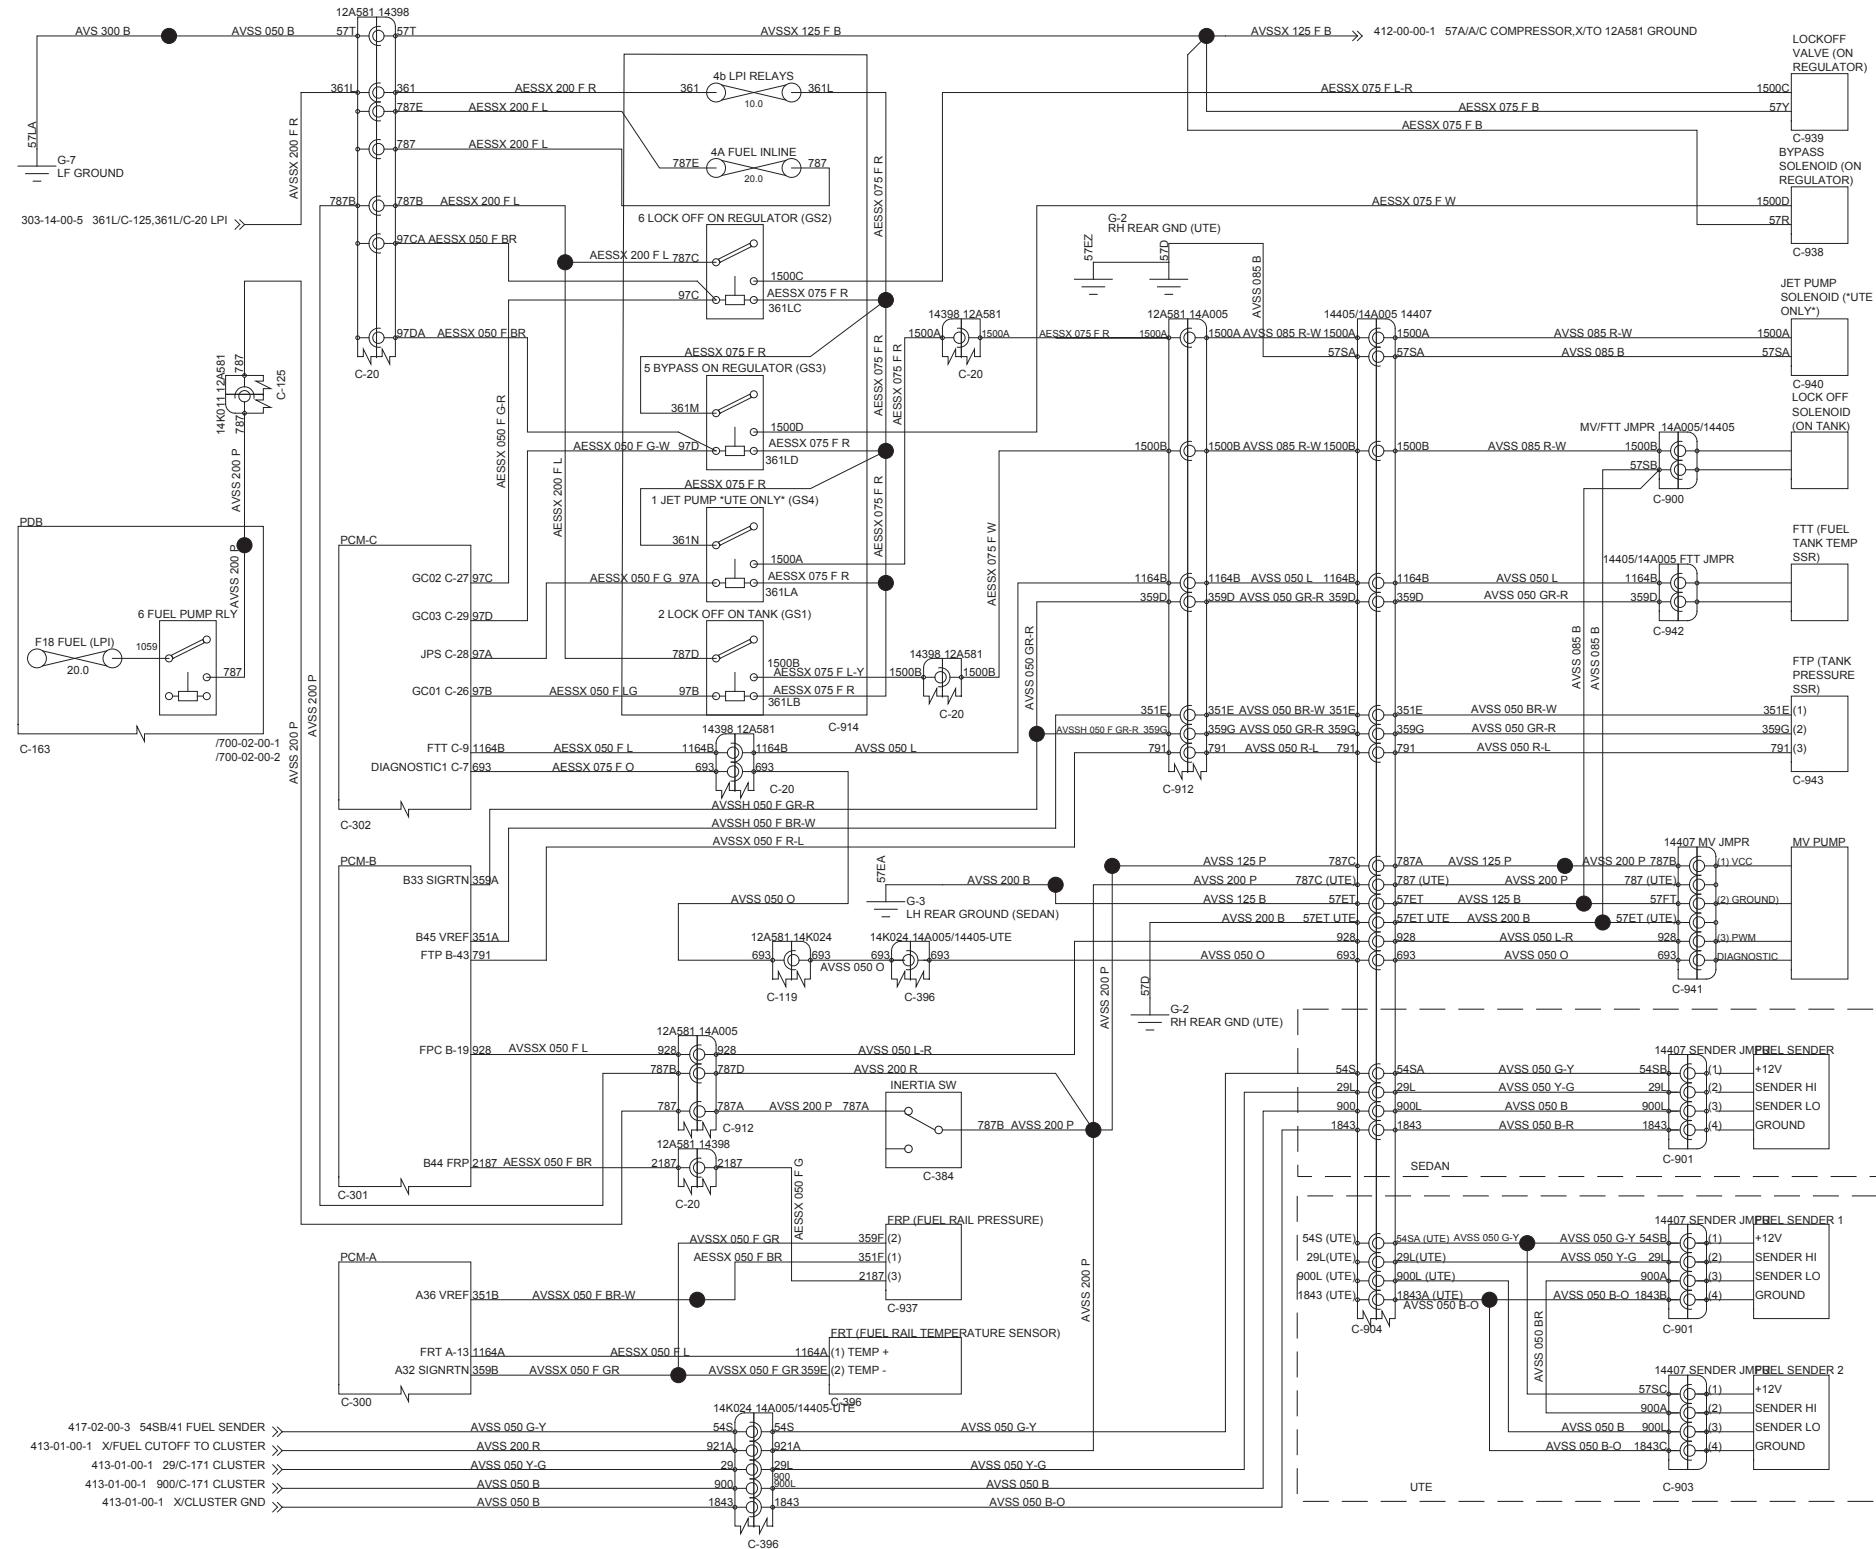


Login Tracking Code

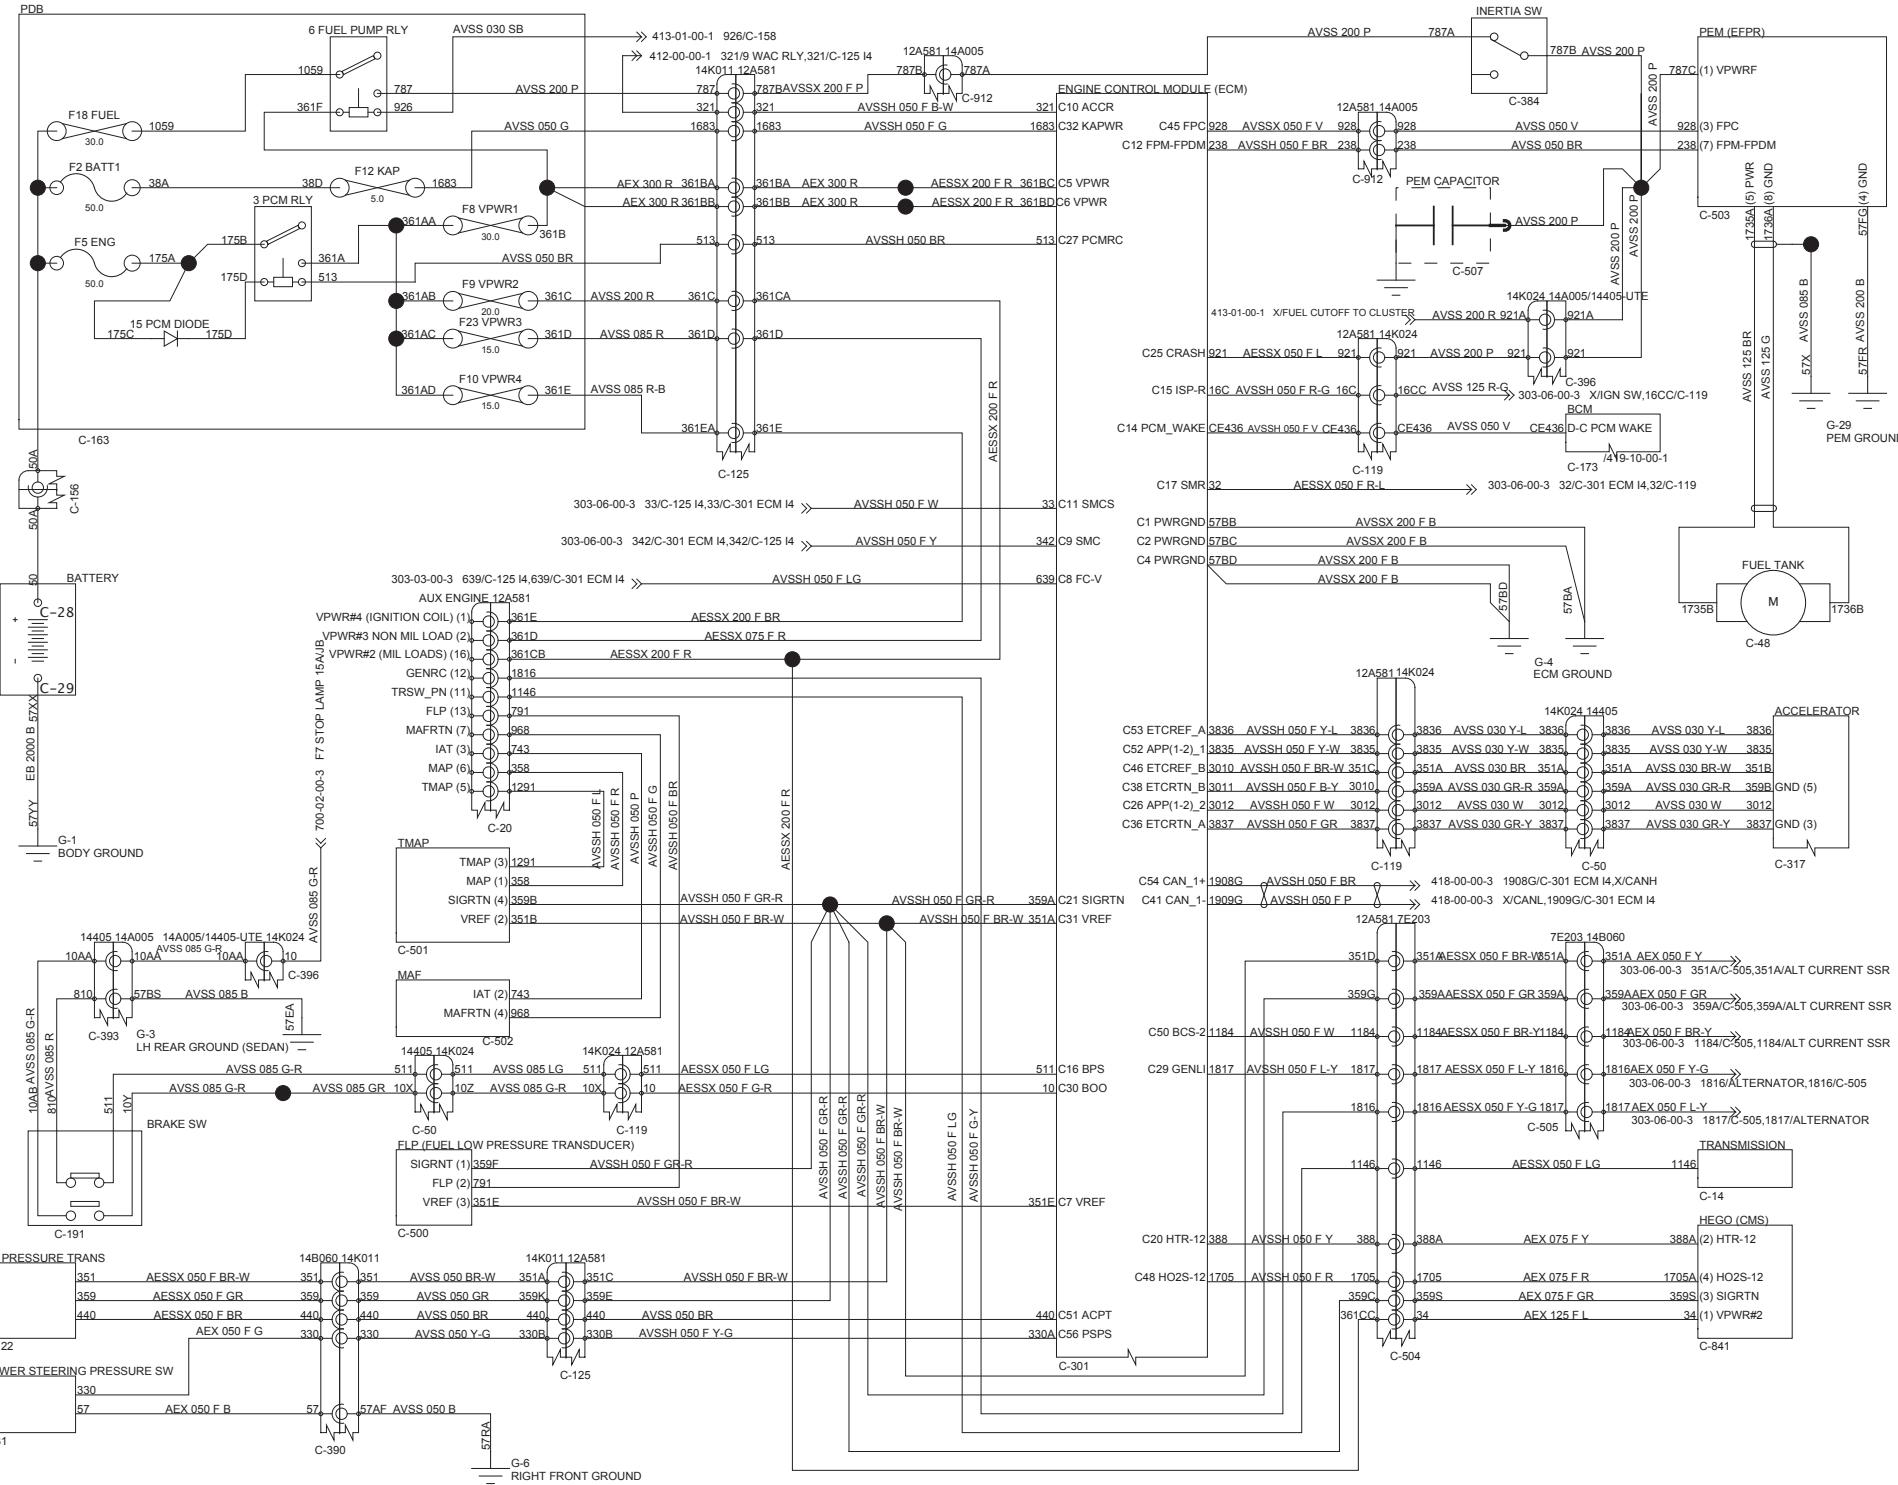


Login Tracking Code

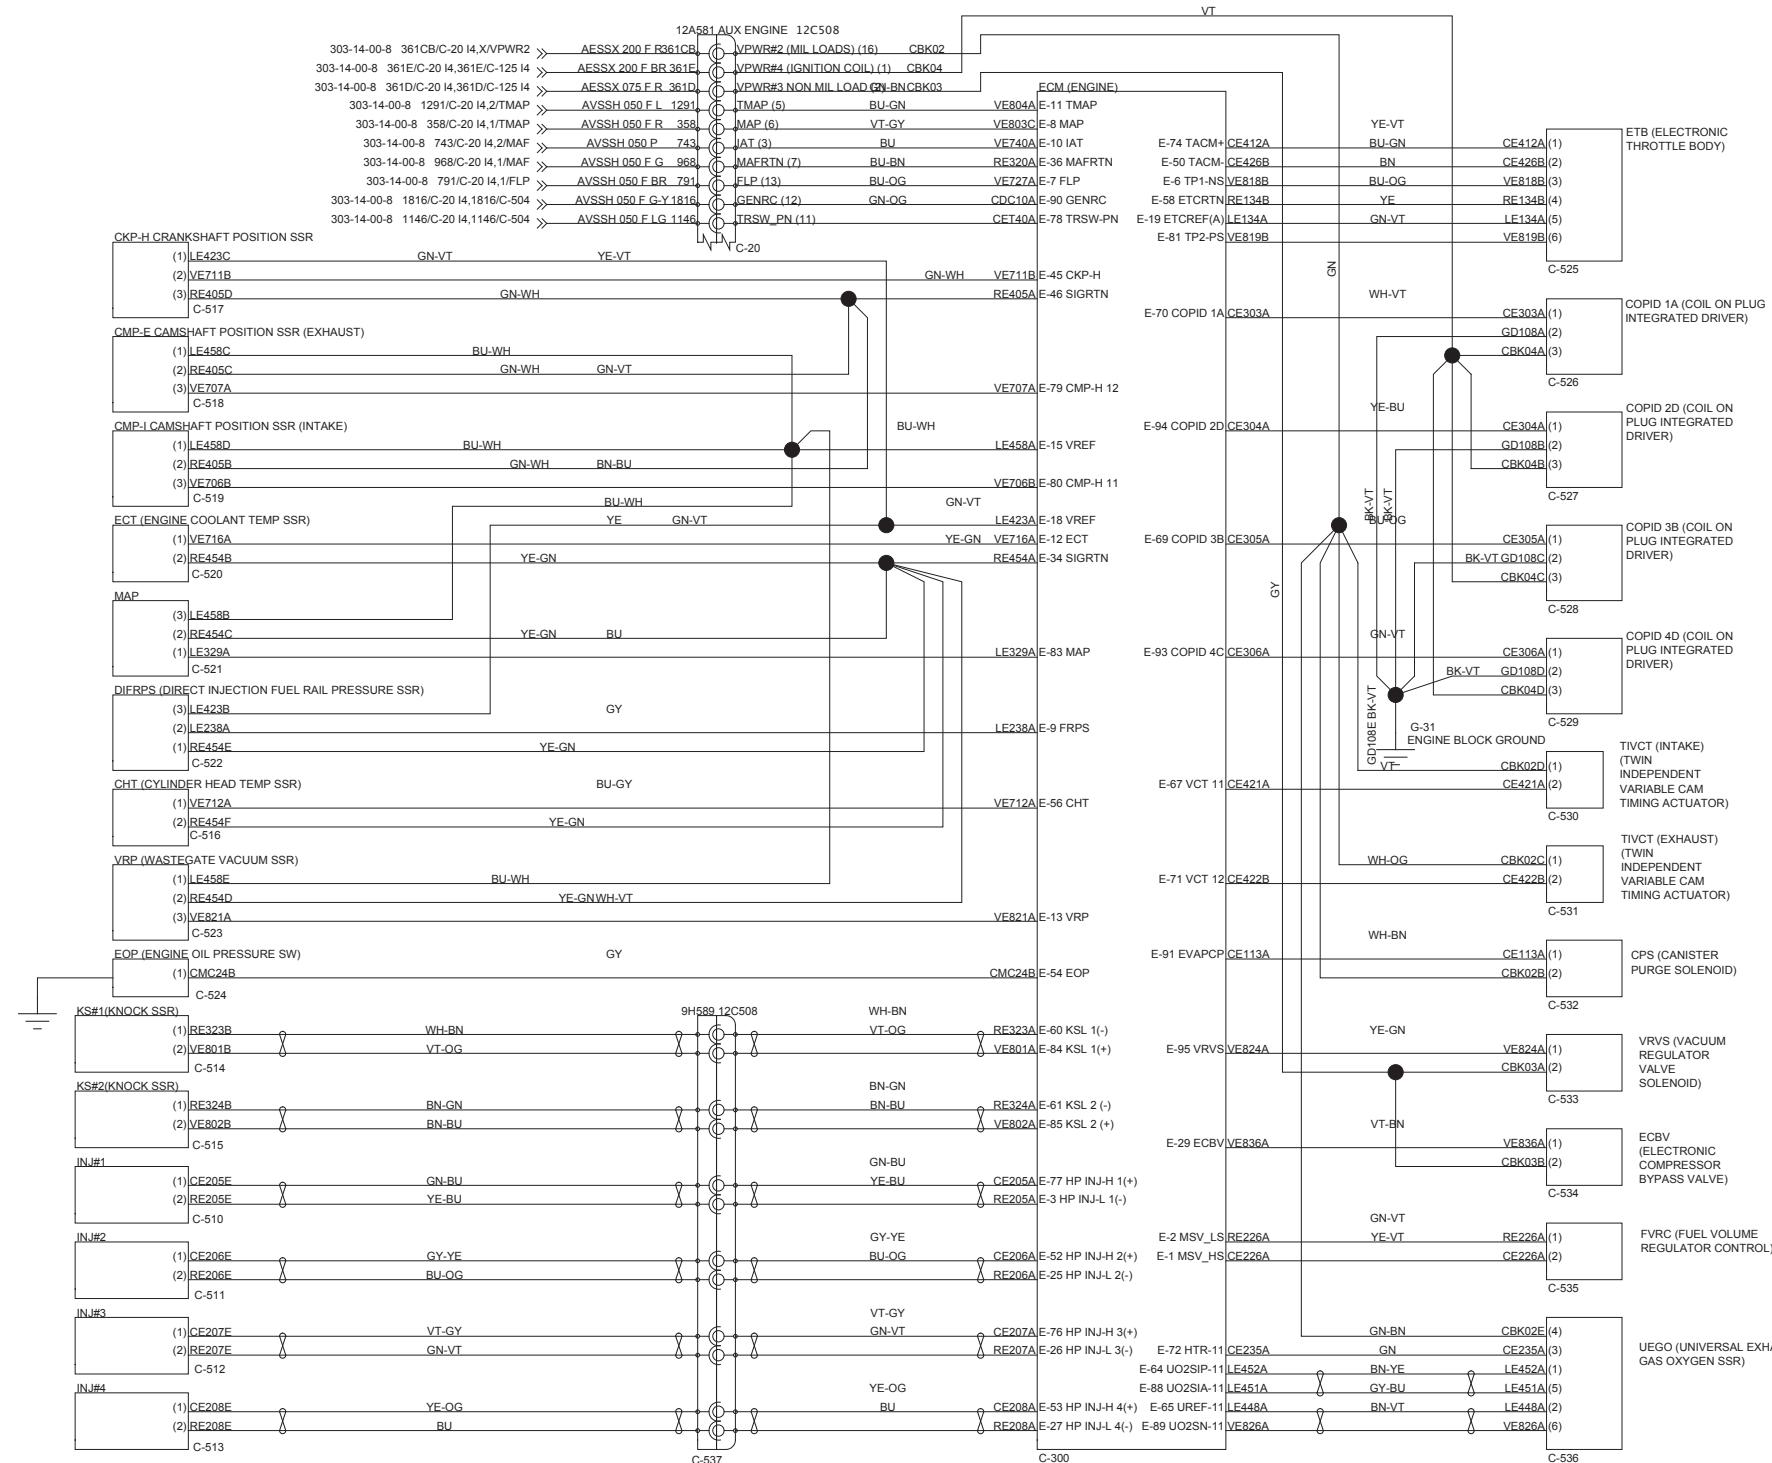

Login Tracking Code

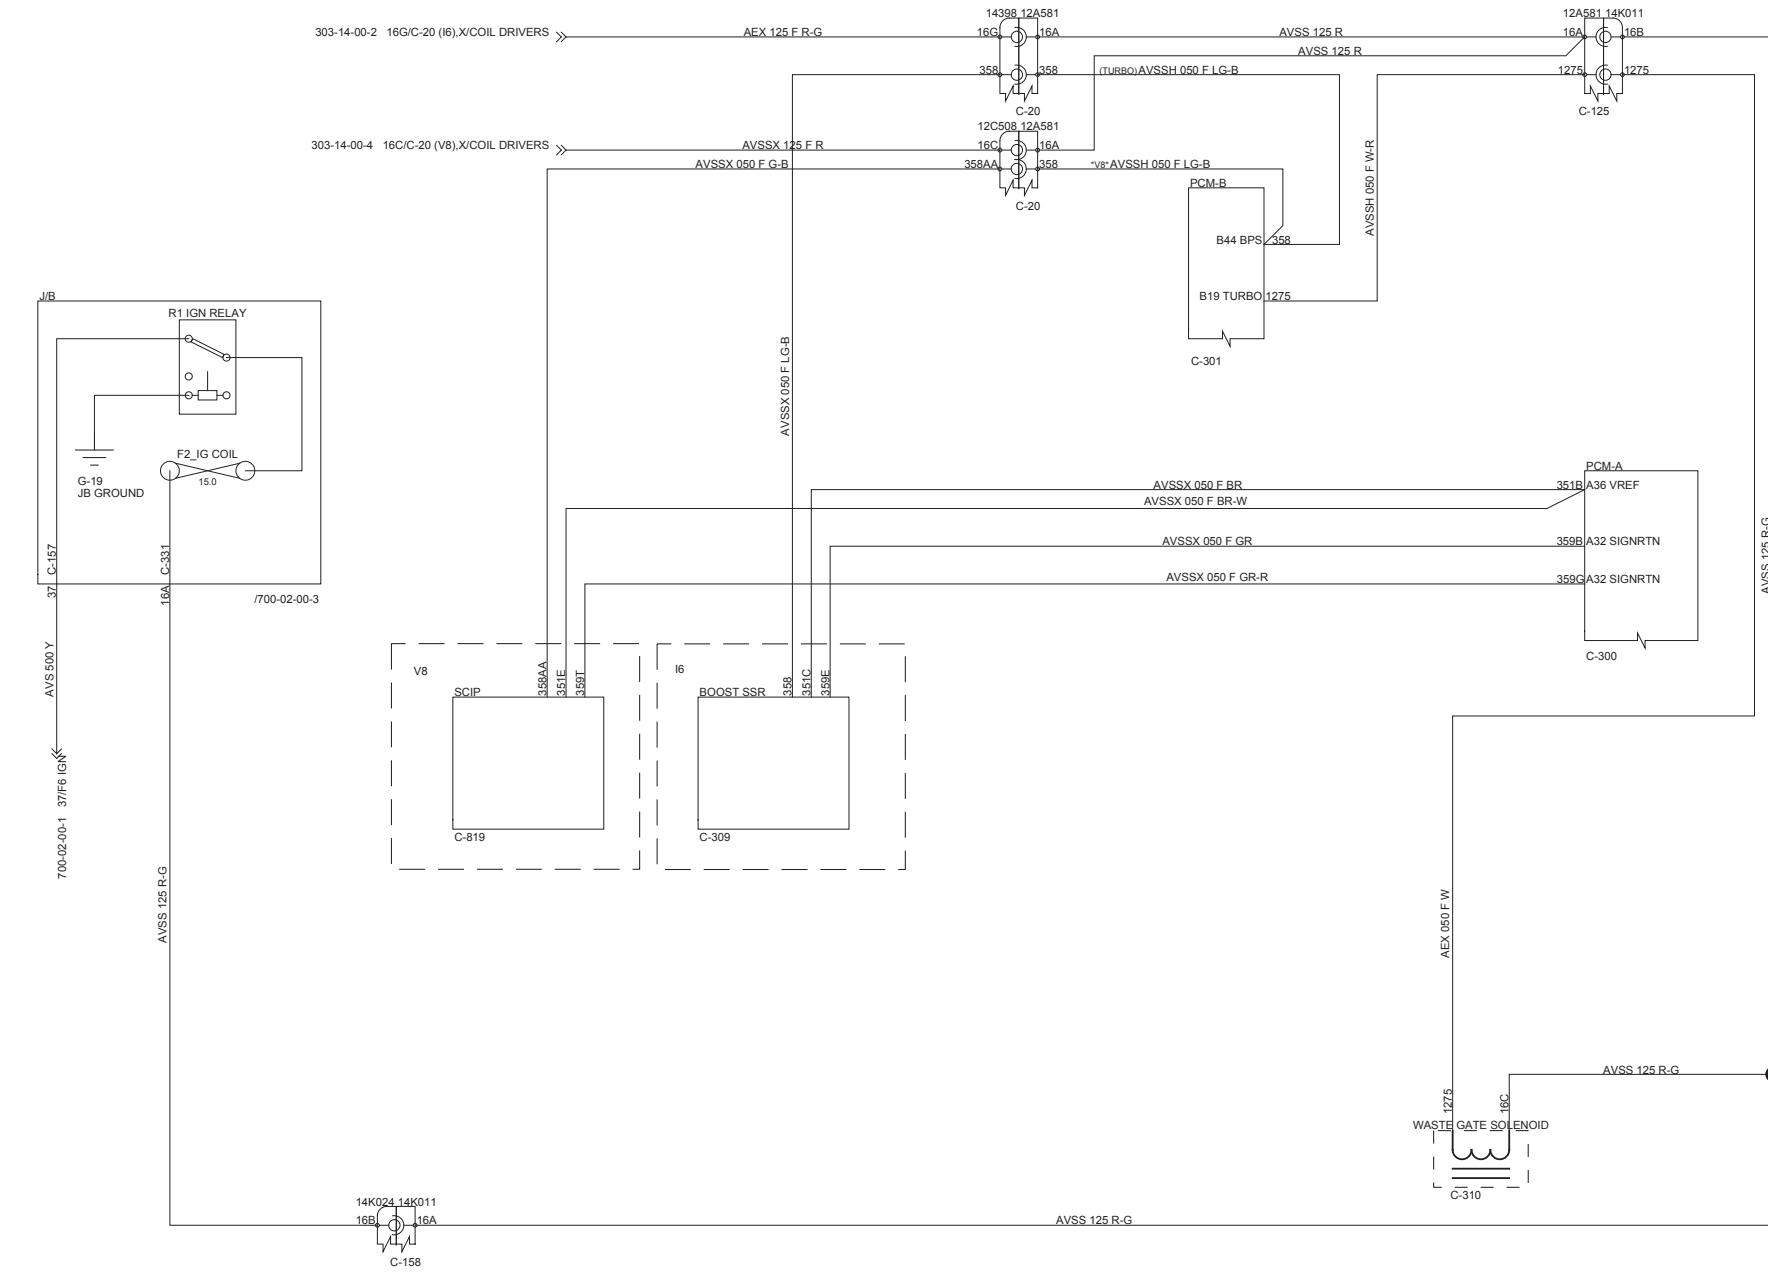

Login Tracking Code

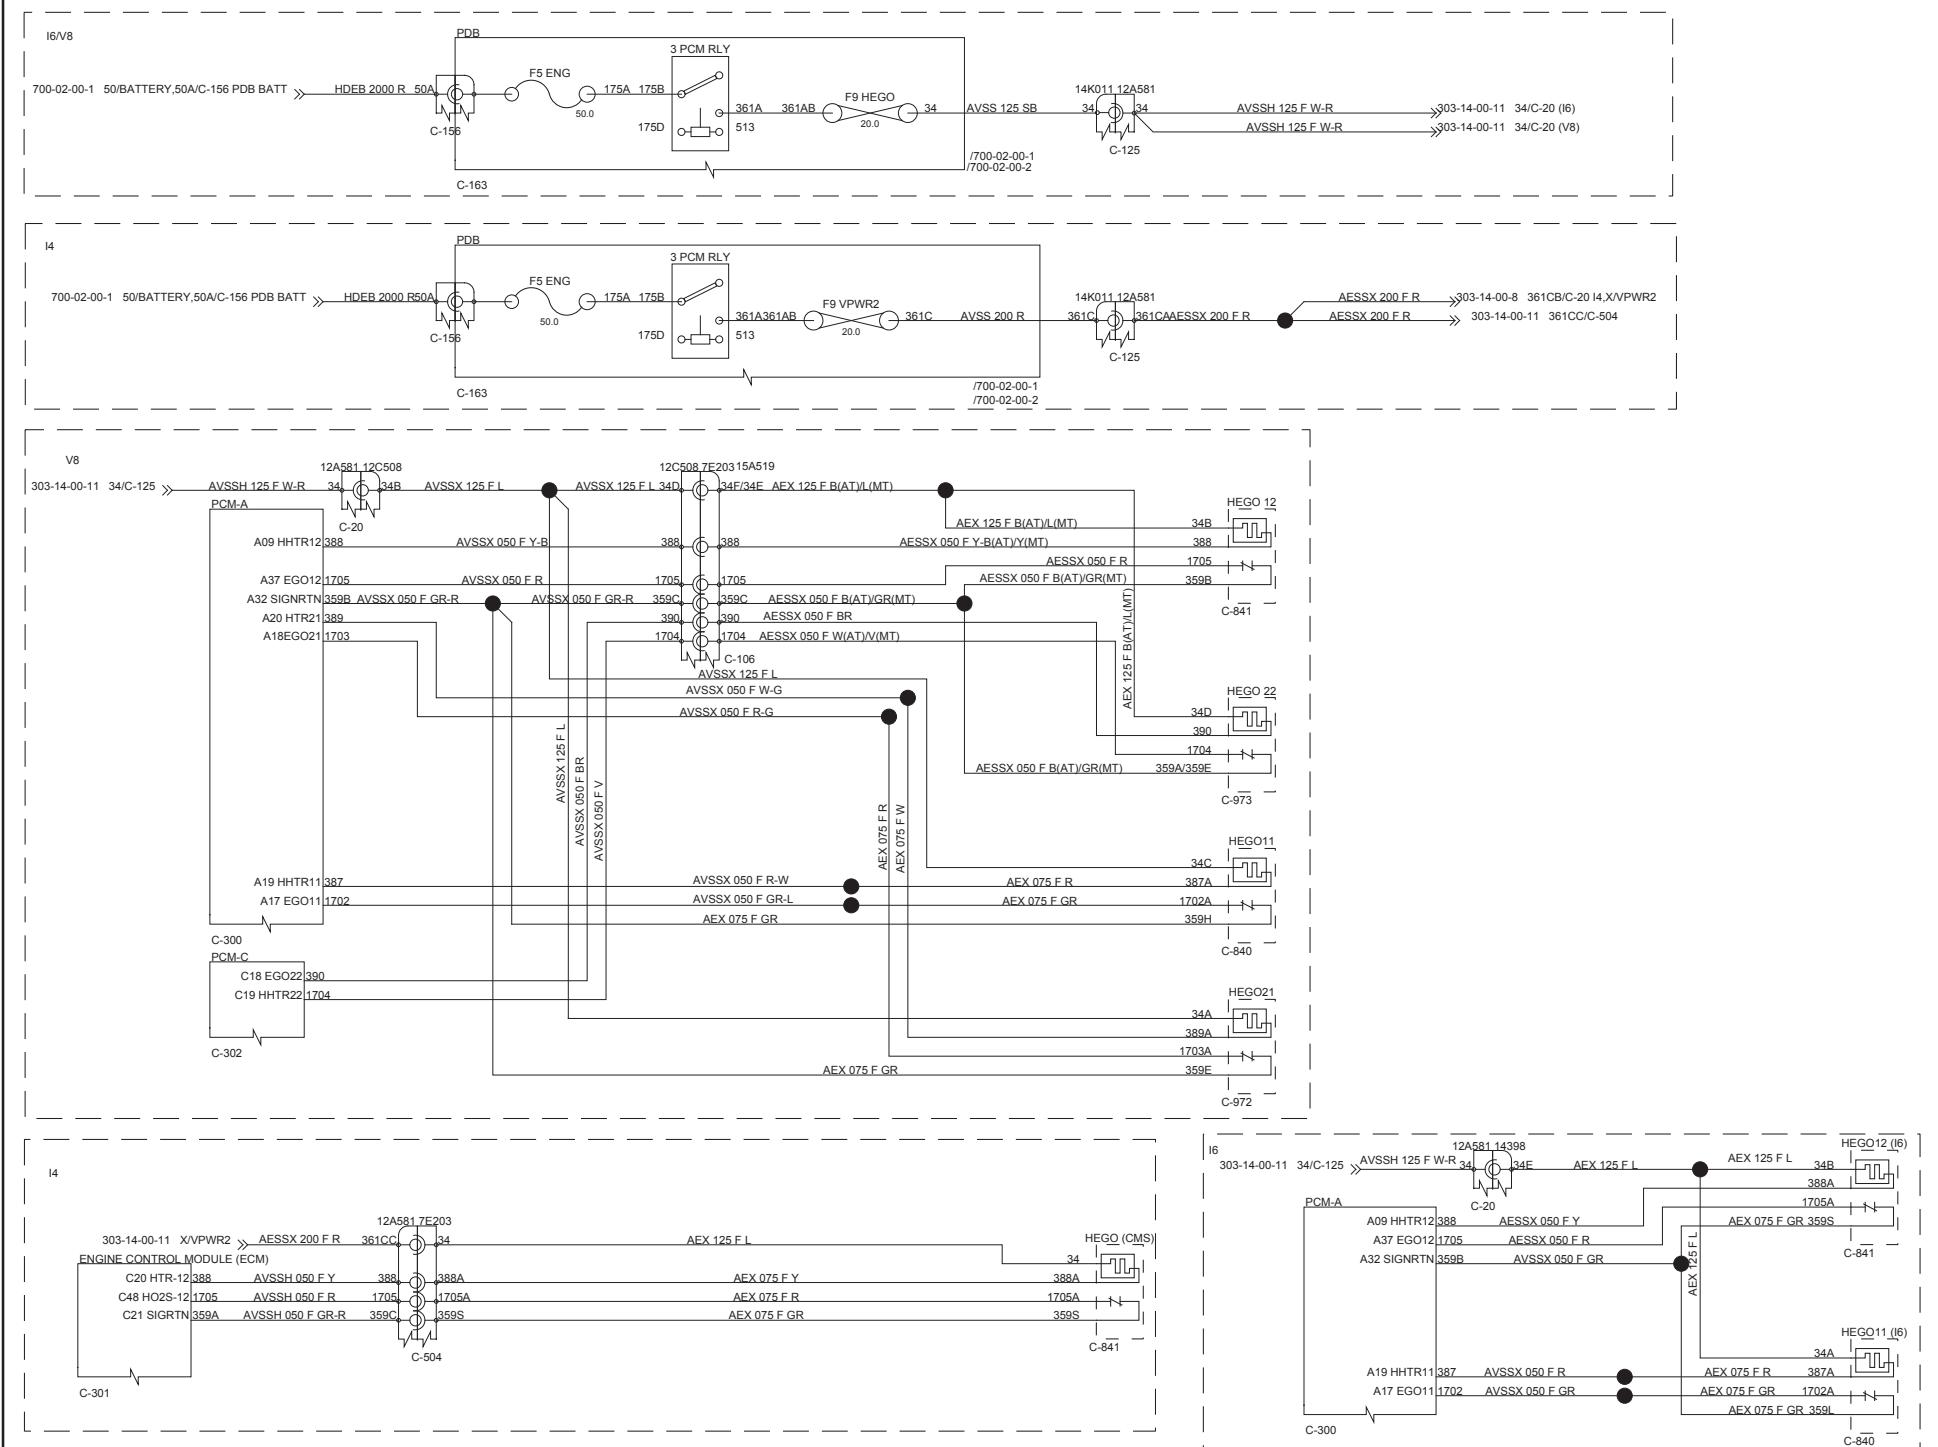


303-14-00-12

Vehicle Speed Control (Cruise Control)

303-14-00-12

SHT 27 OF 126

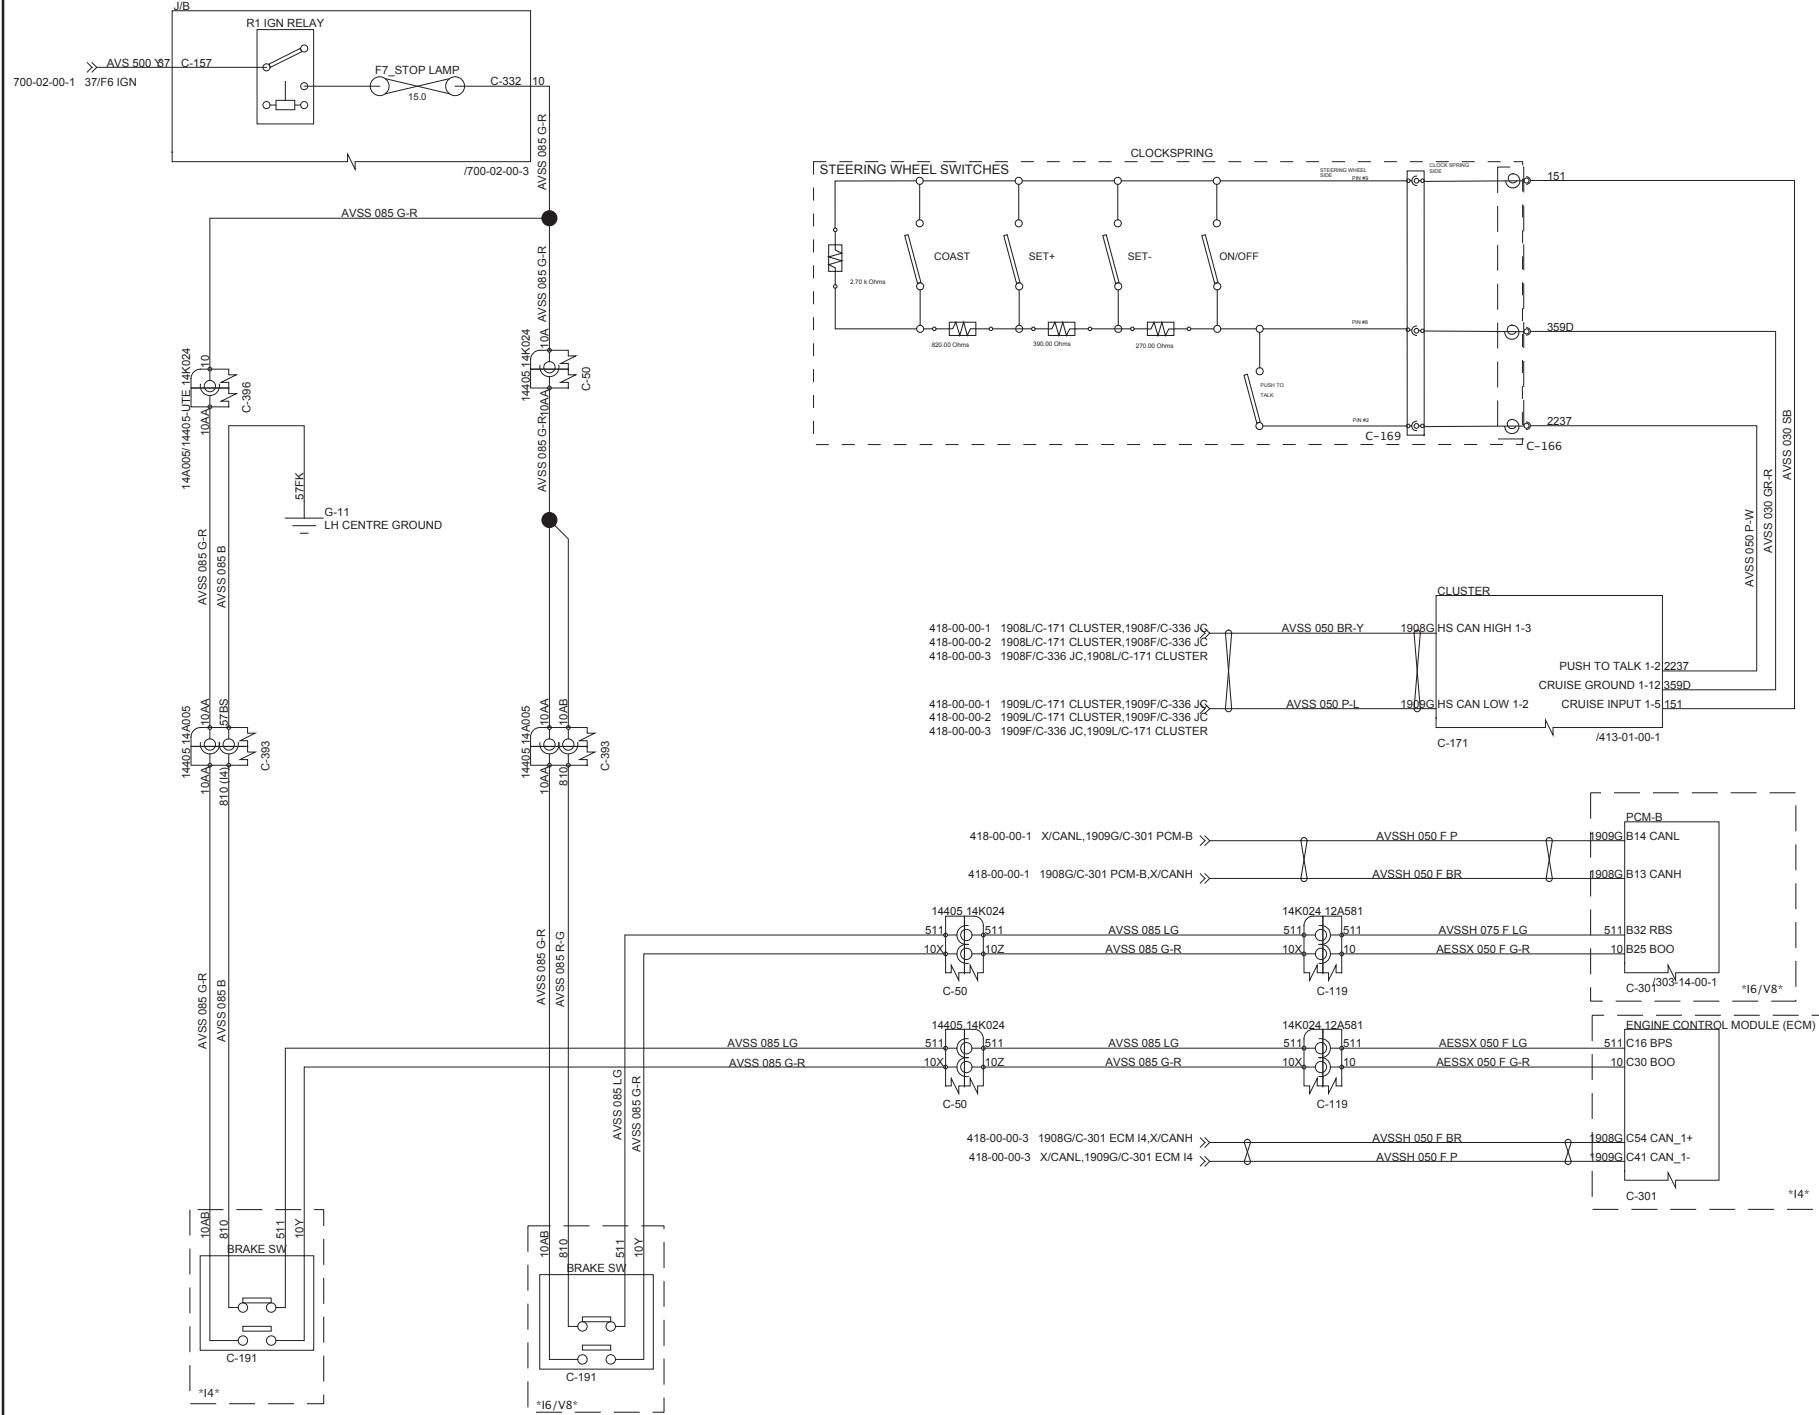


Login Tracking Code

307-01-00-1






Automatic Transmission/Transaxle - 16

307-01-00-1

AT6 TRANSMISSION

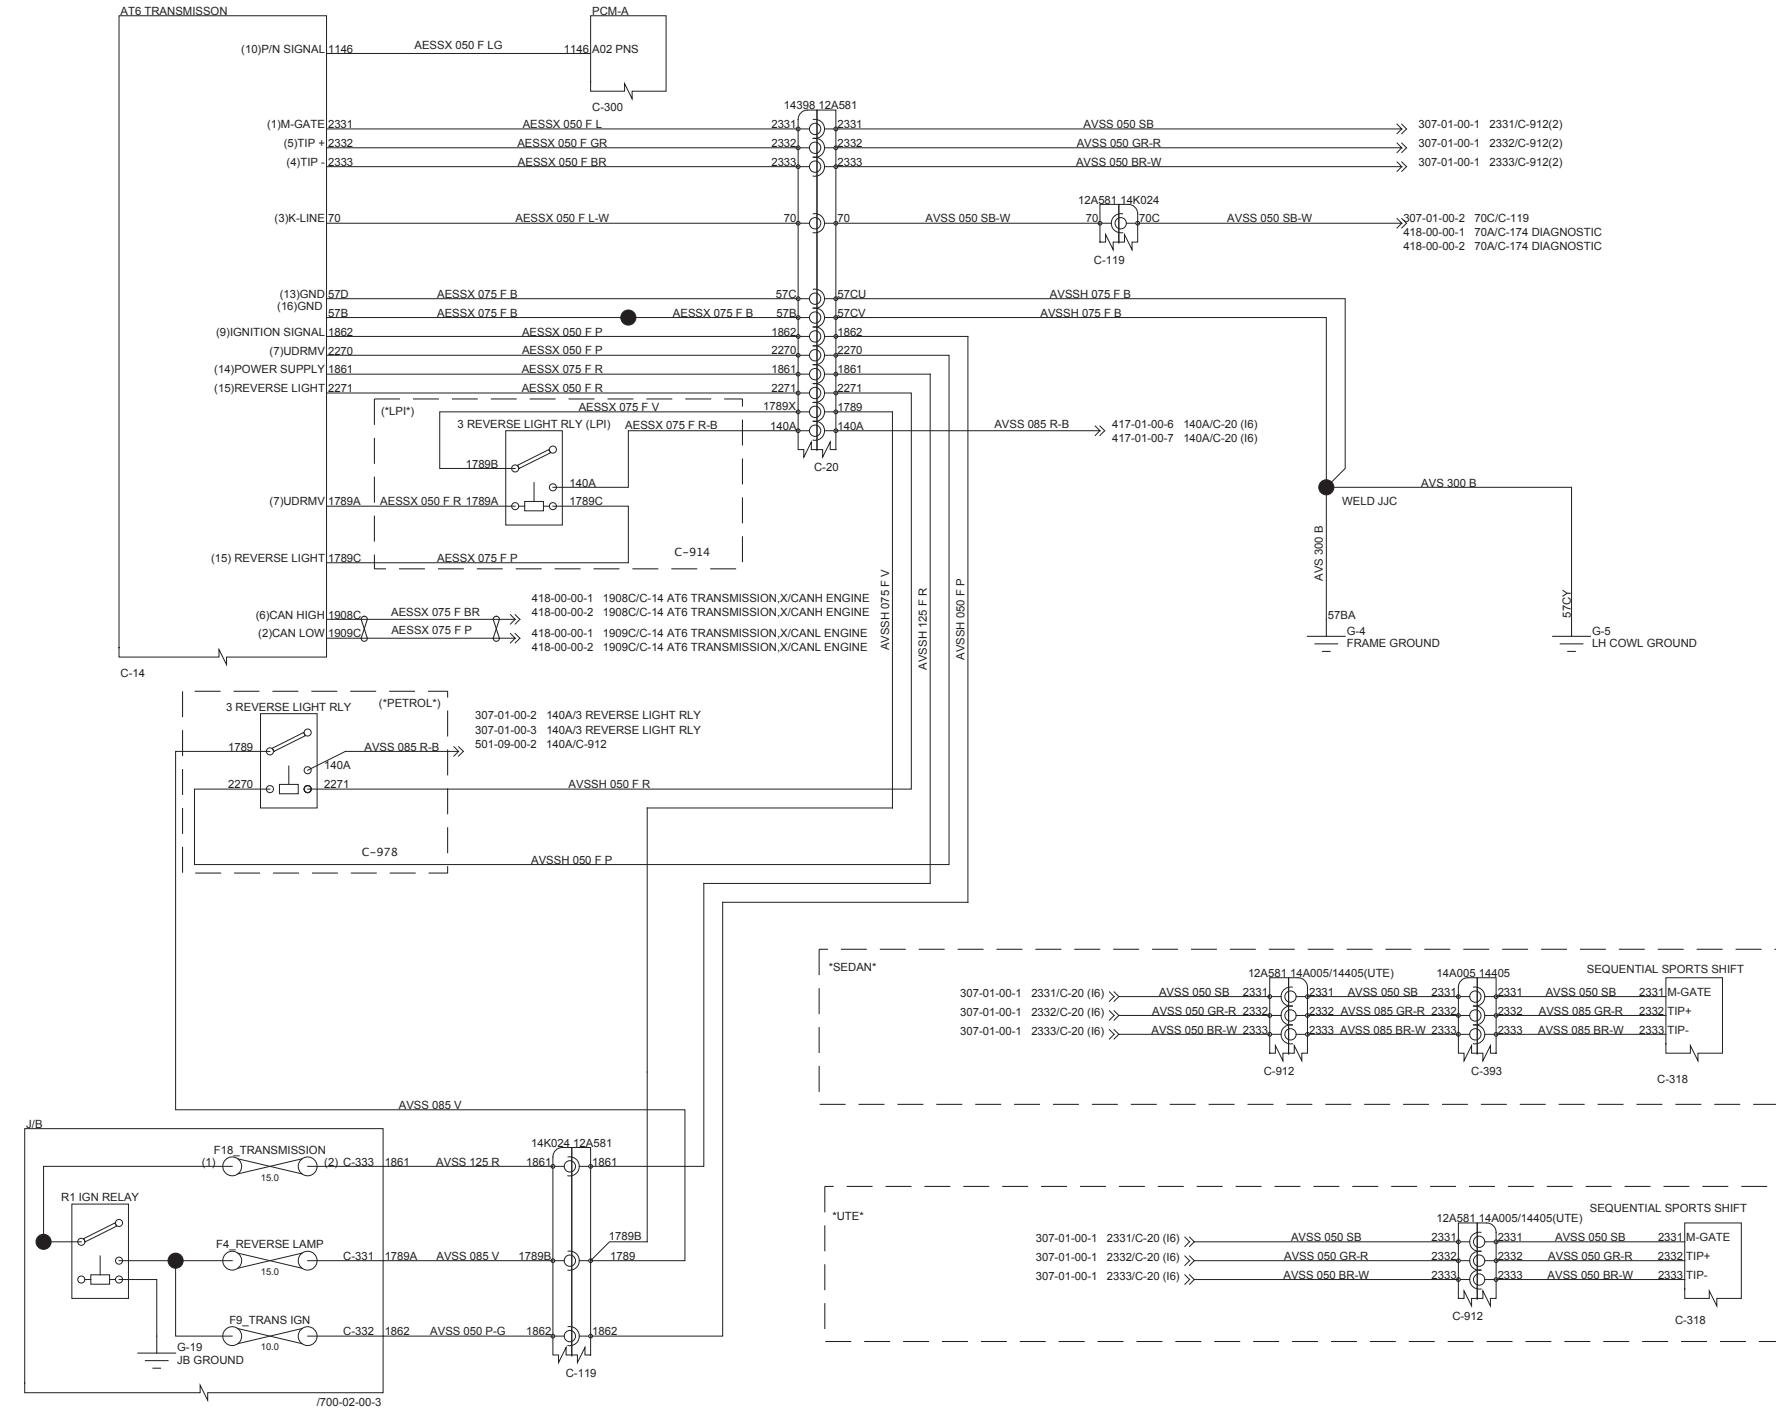


Login Tracking Code

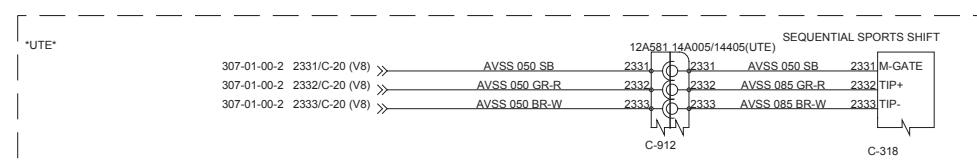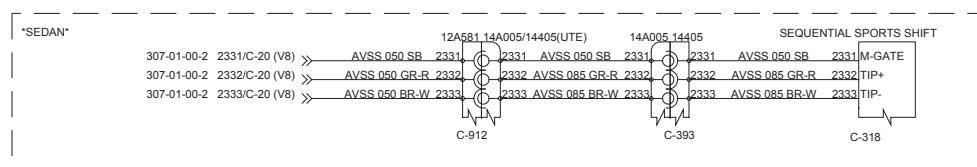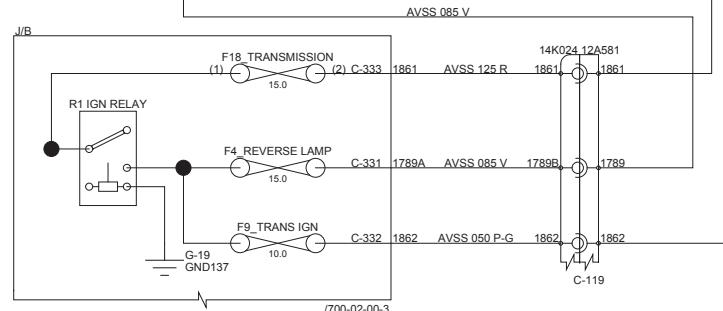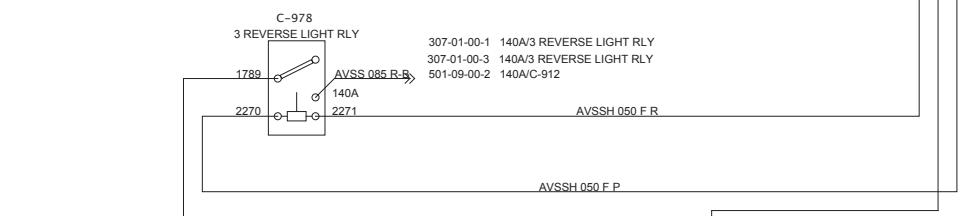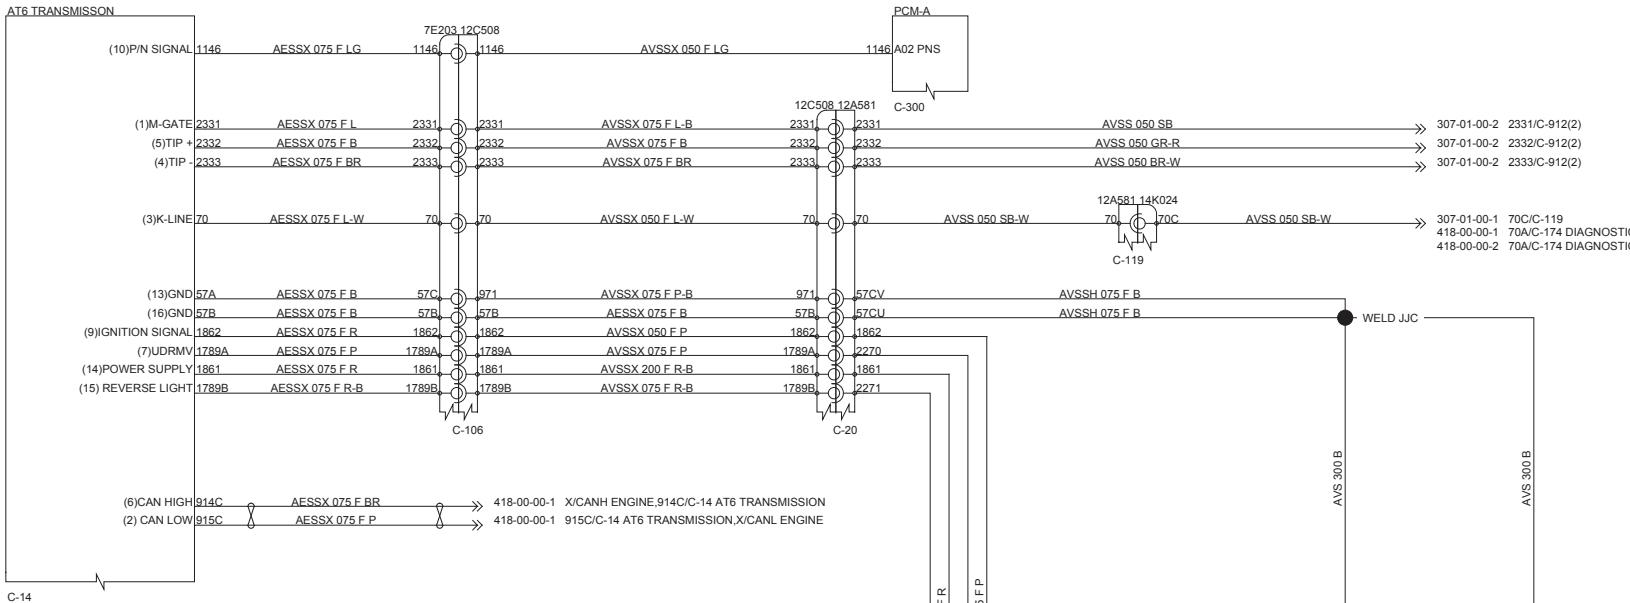

307-01-00-3

Automatic Transmission/Transaxle - 14

307-01-00-3

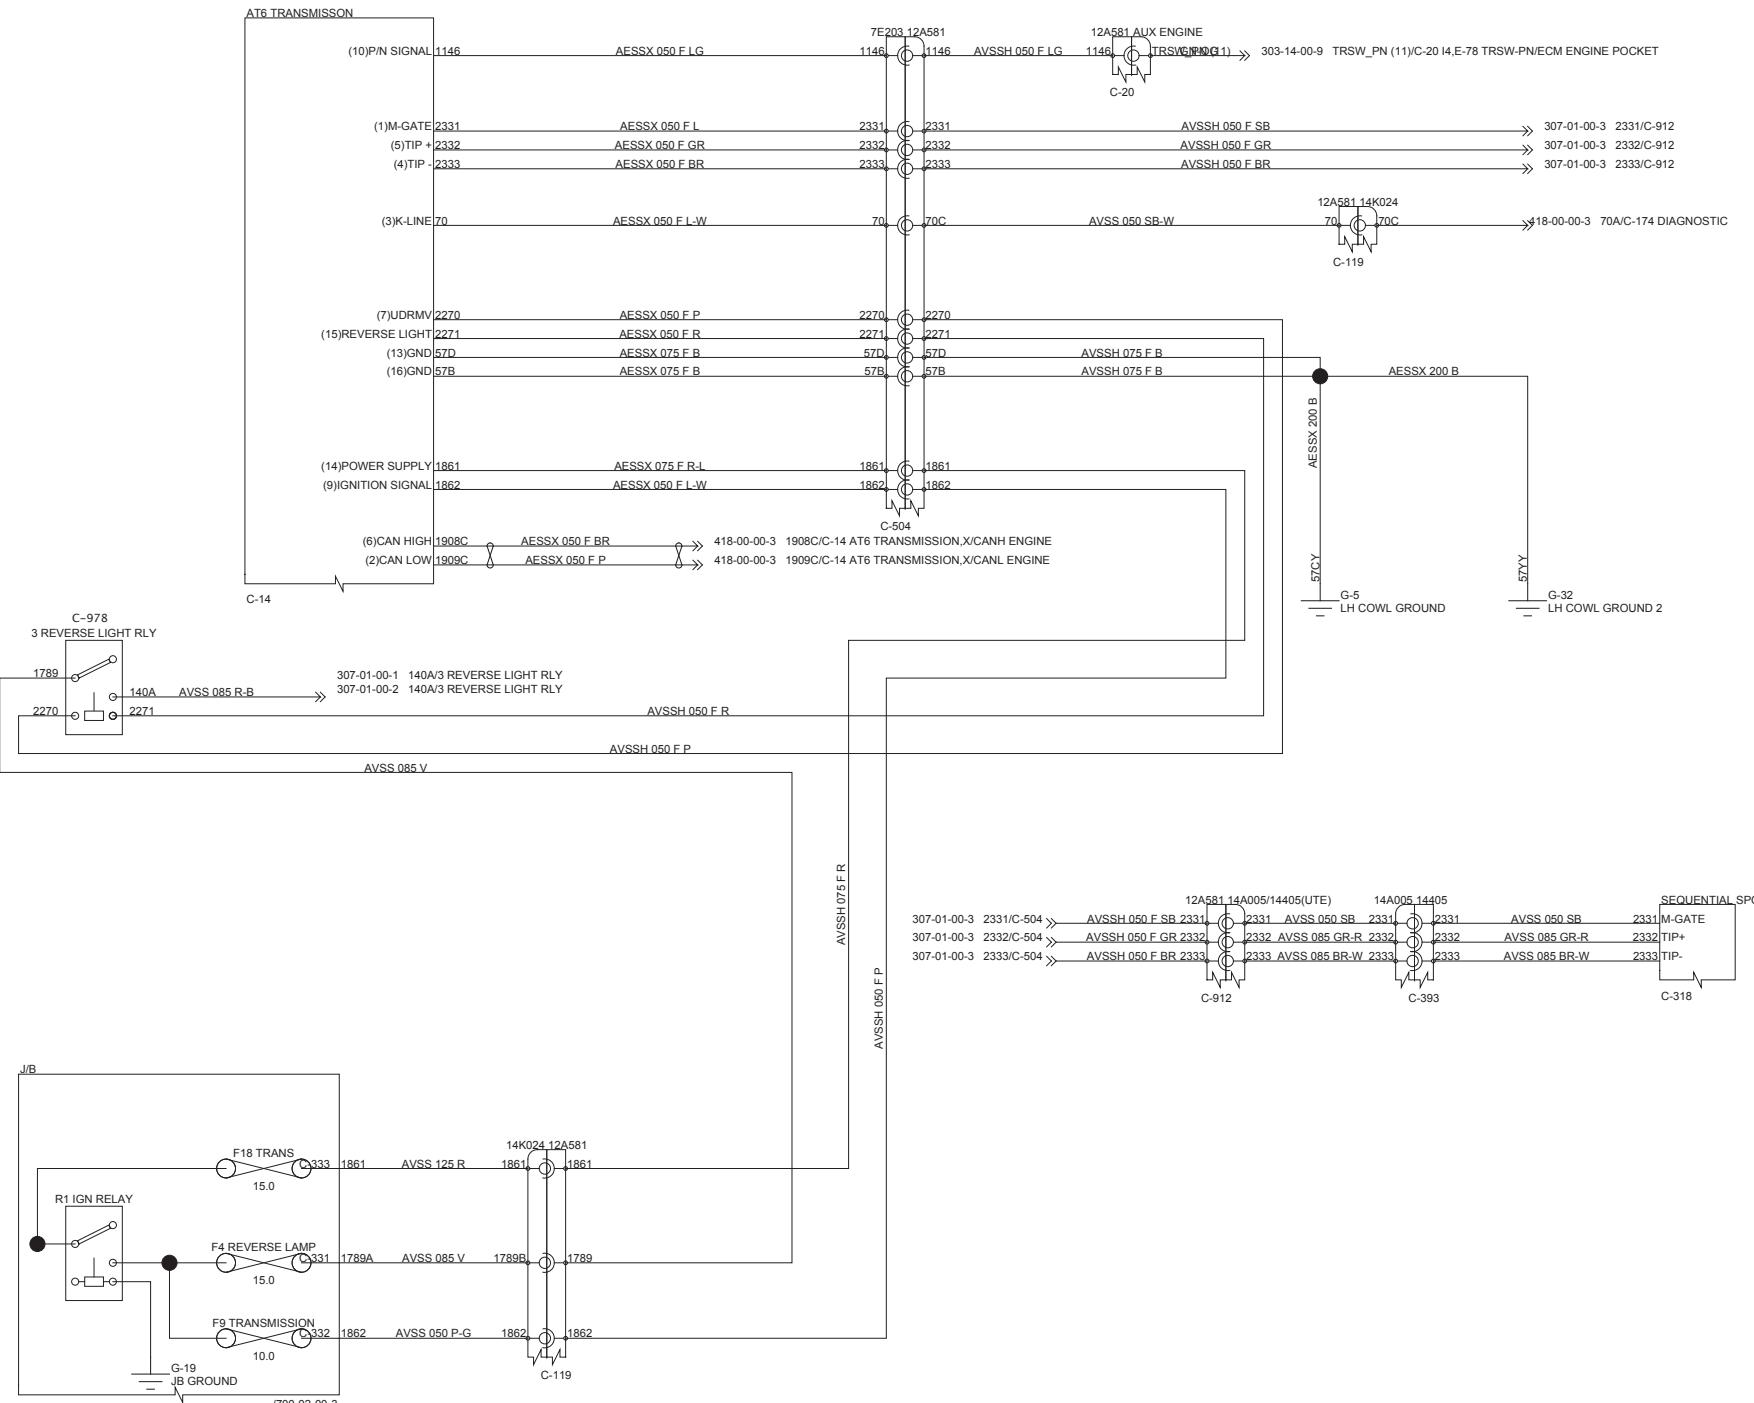


卷之三


307-05-00-1

Automatic Transmission - Sequential Sport Shift

307-05-00-1

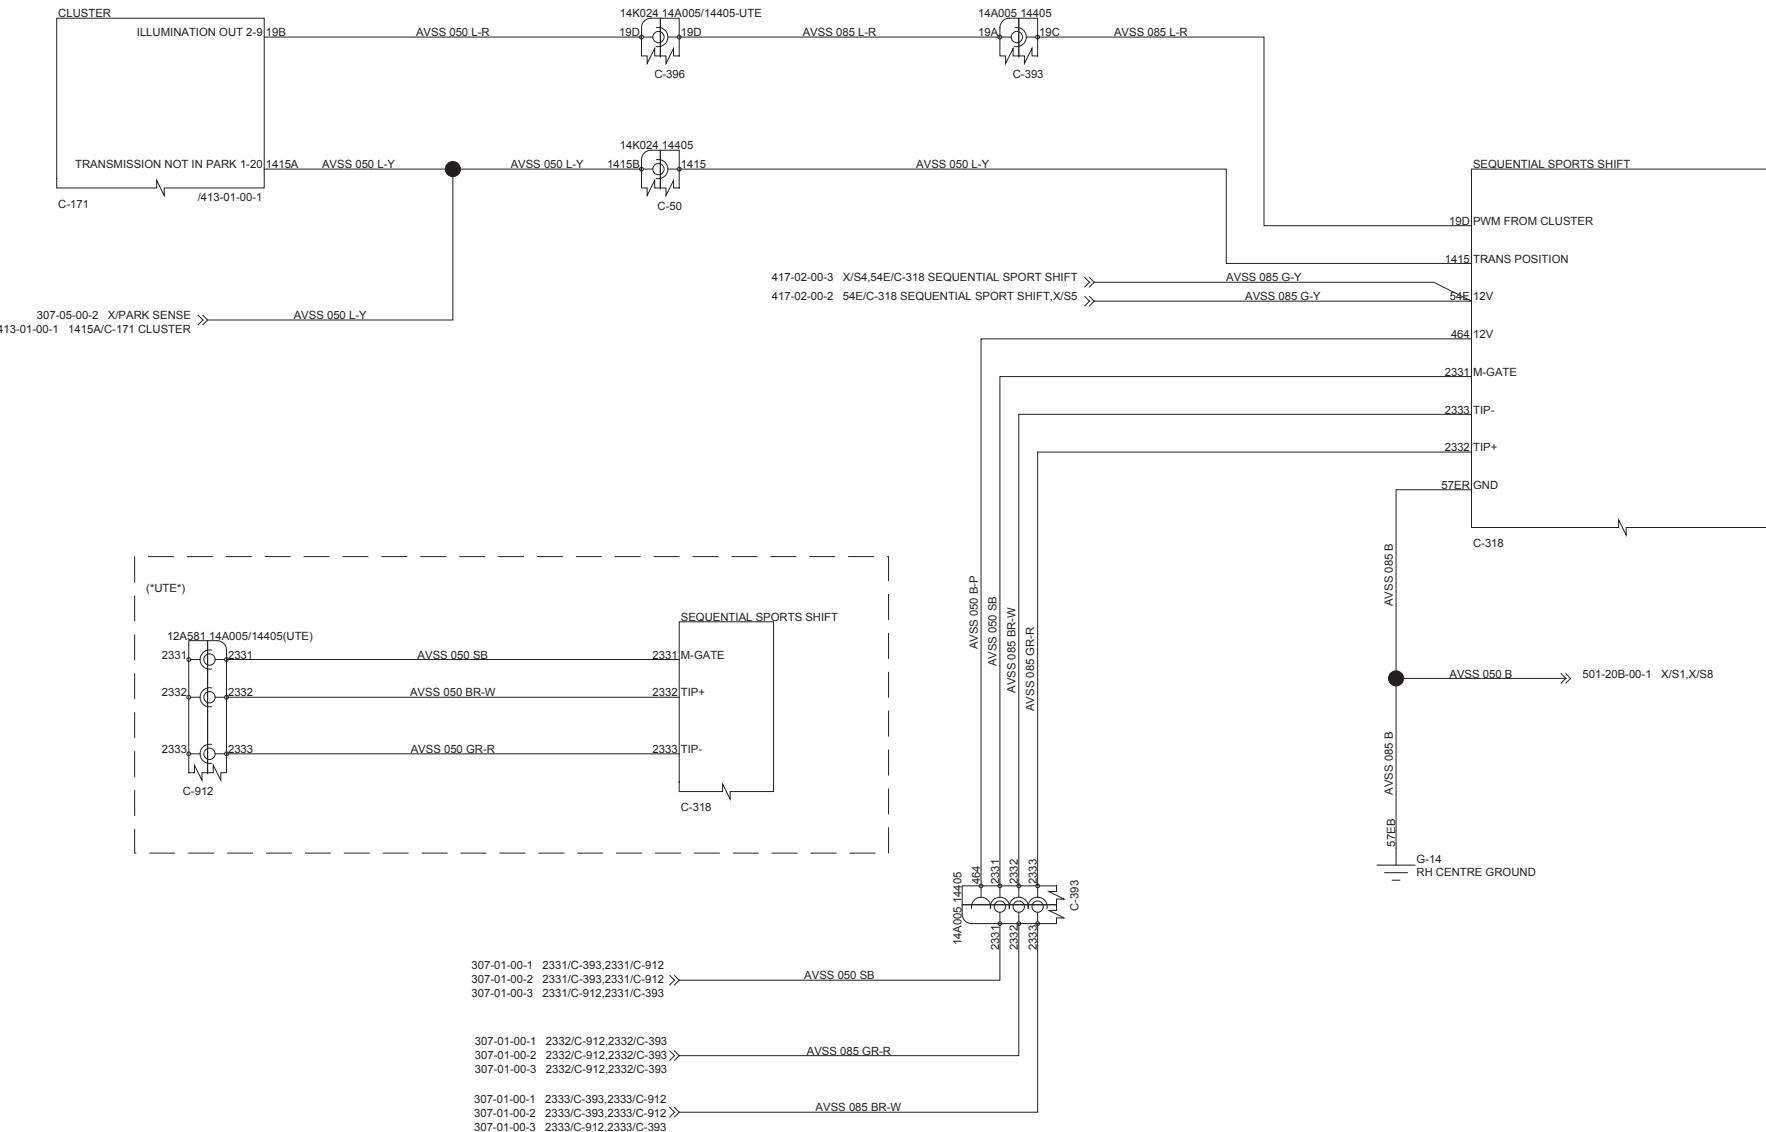

Login Tracking Code

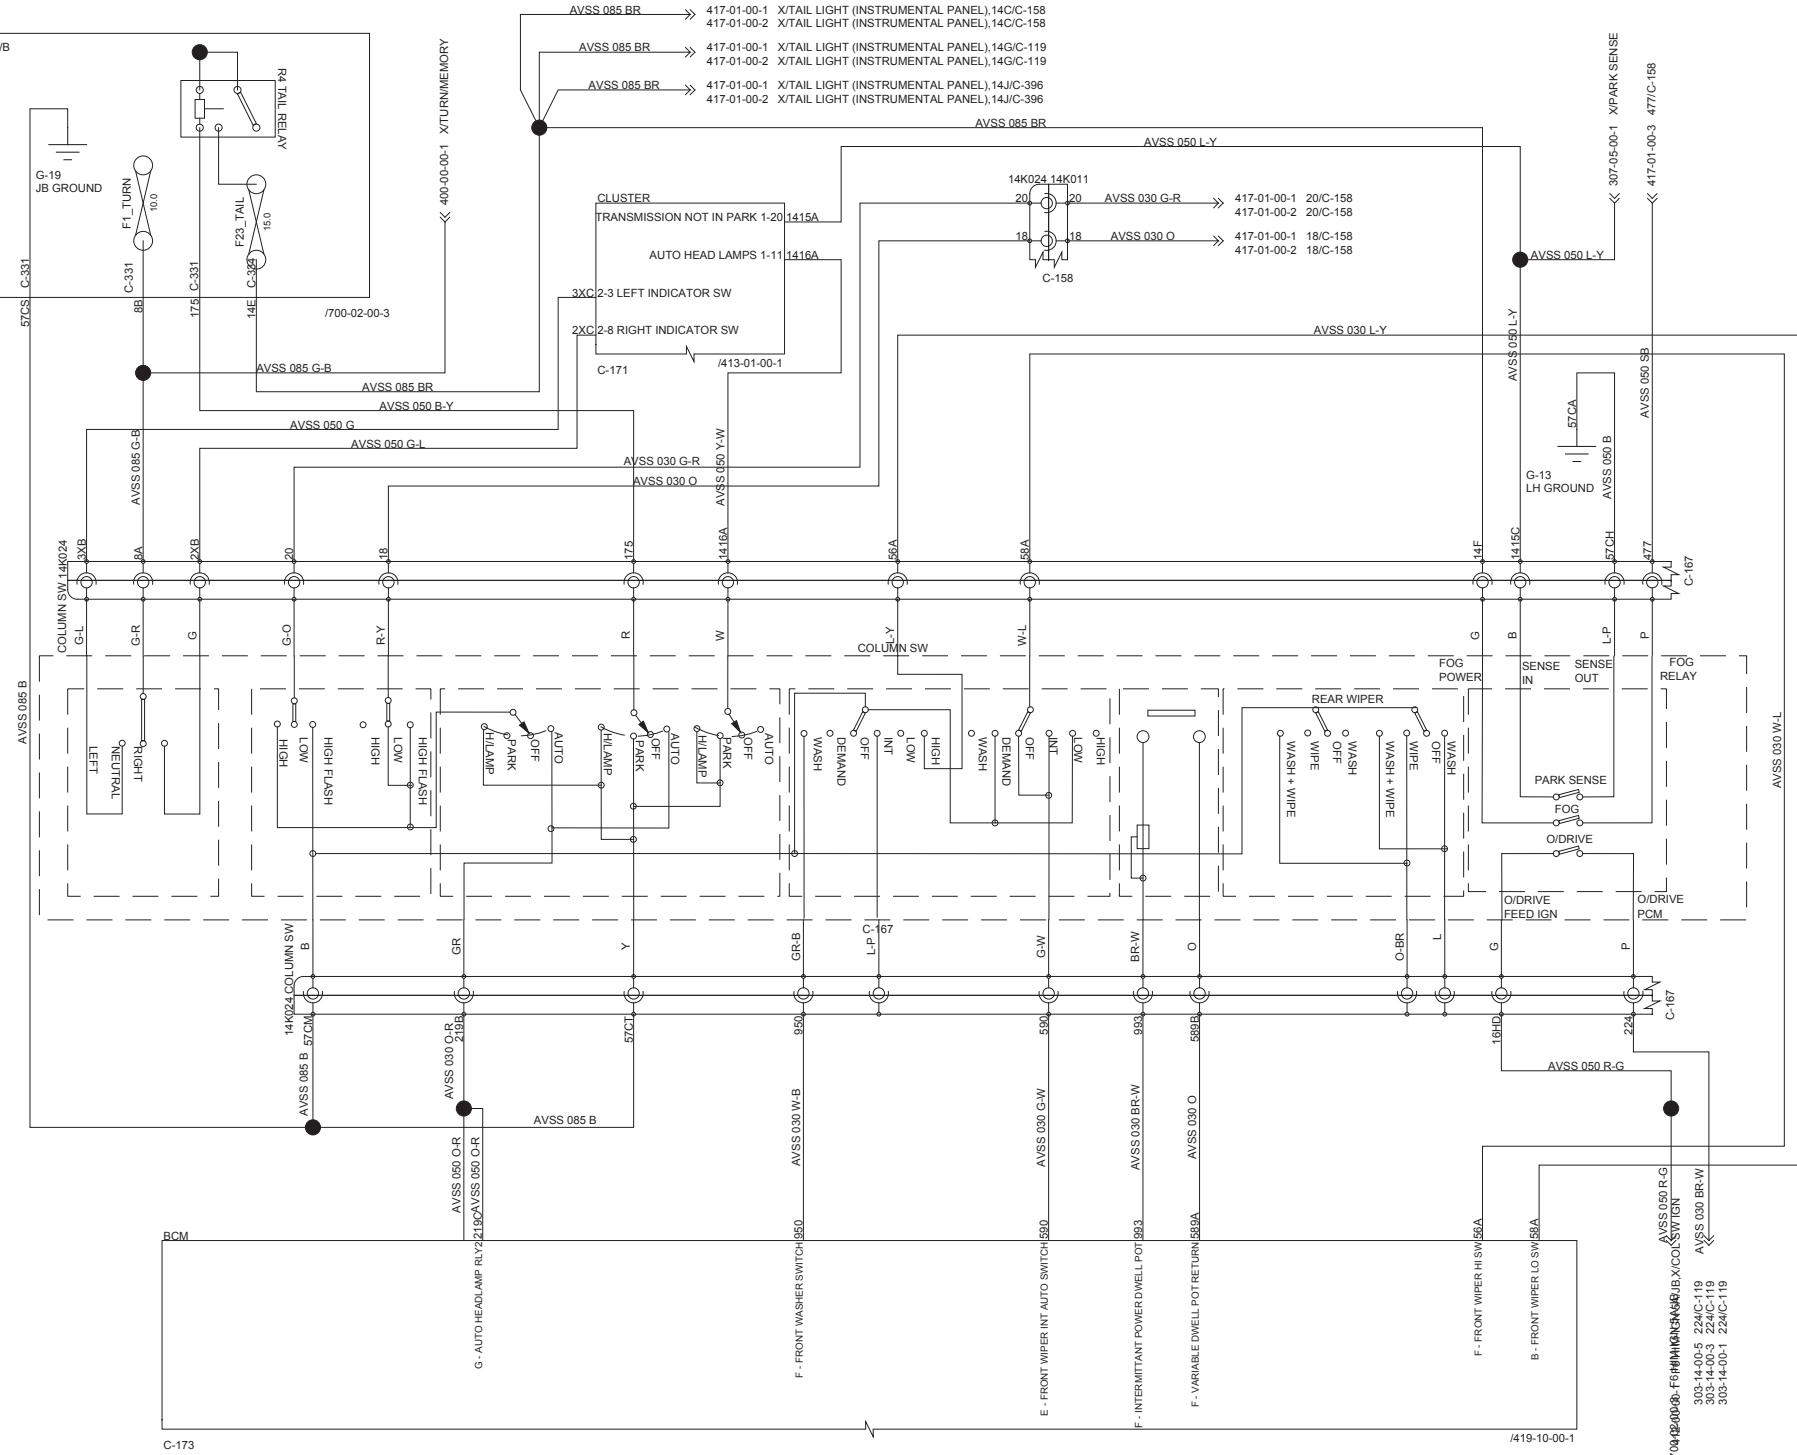


400-00-00-01


Memory Module - Seat, Mirror and Pedal


400-00-00-01

400-00-00-01

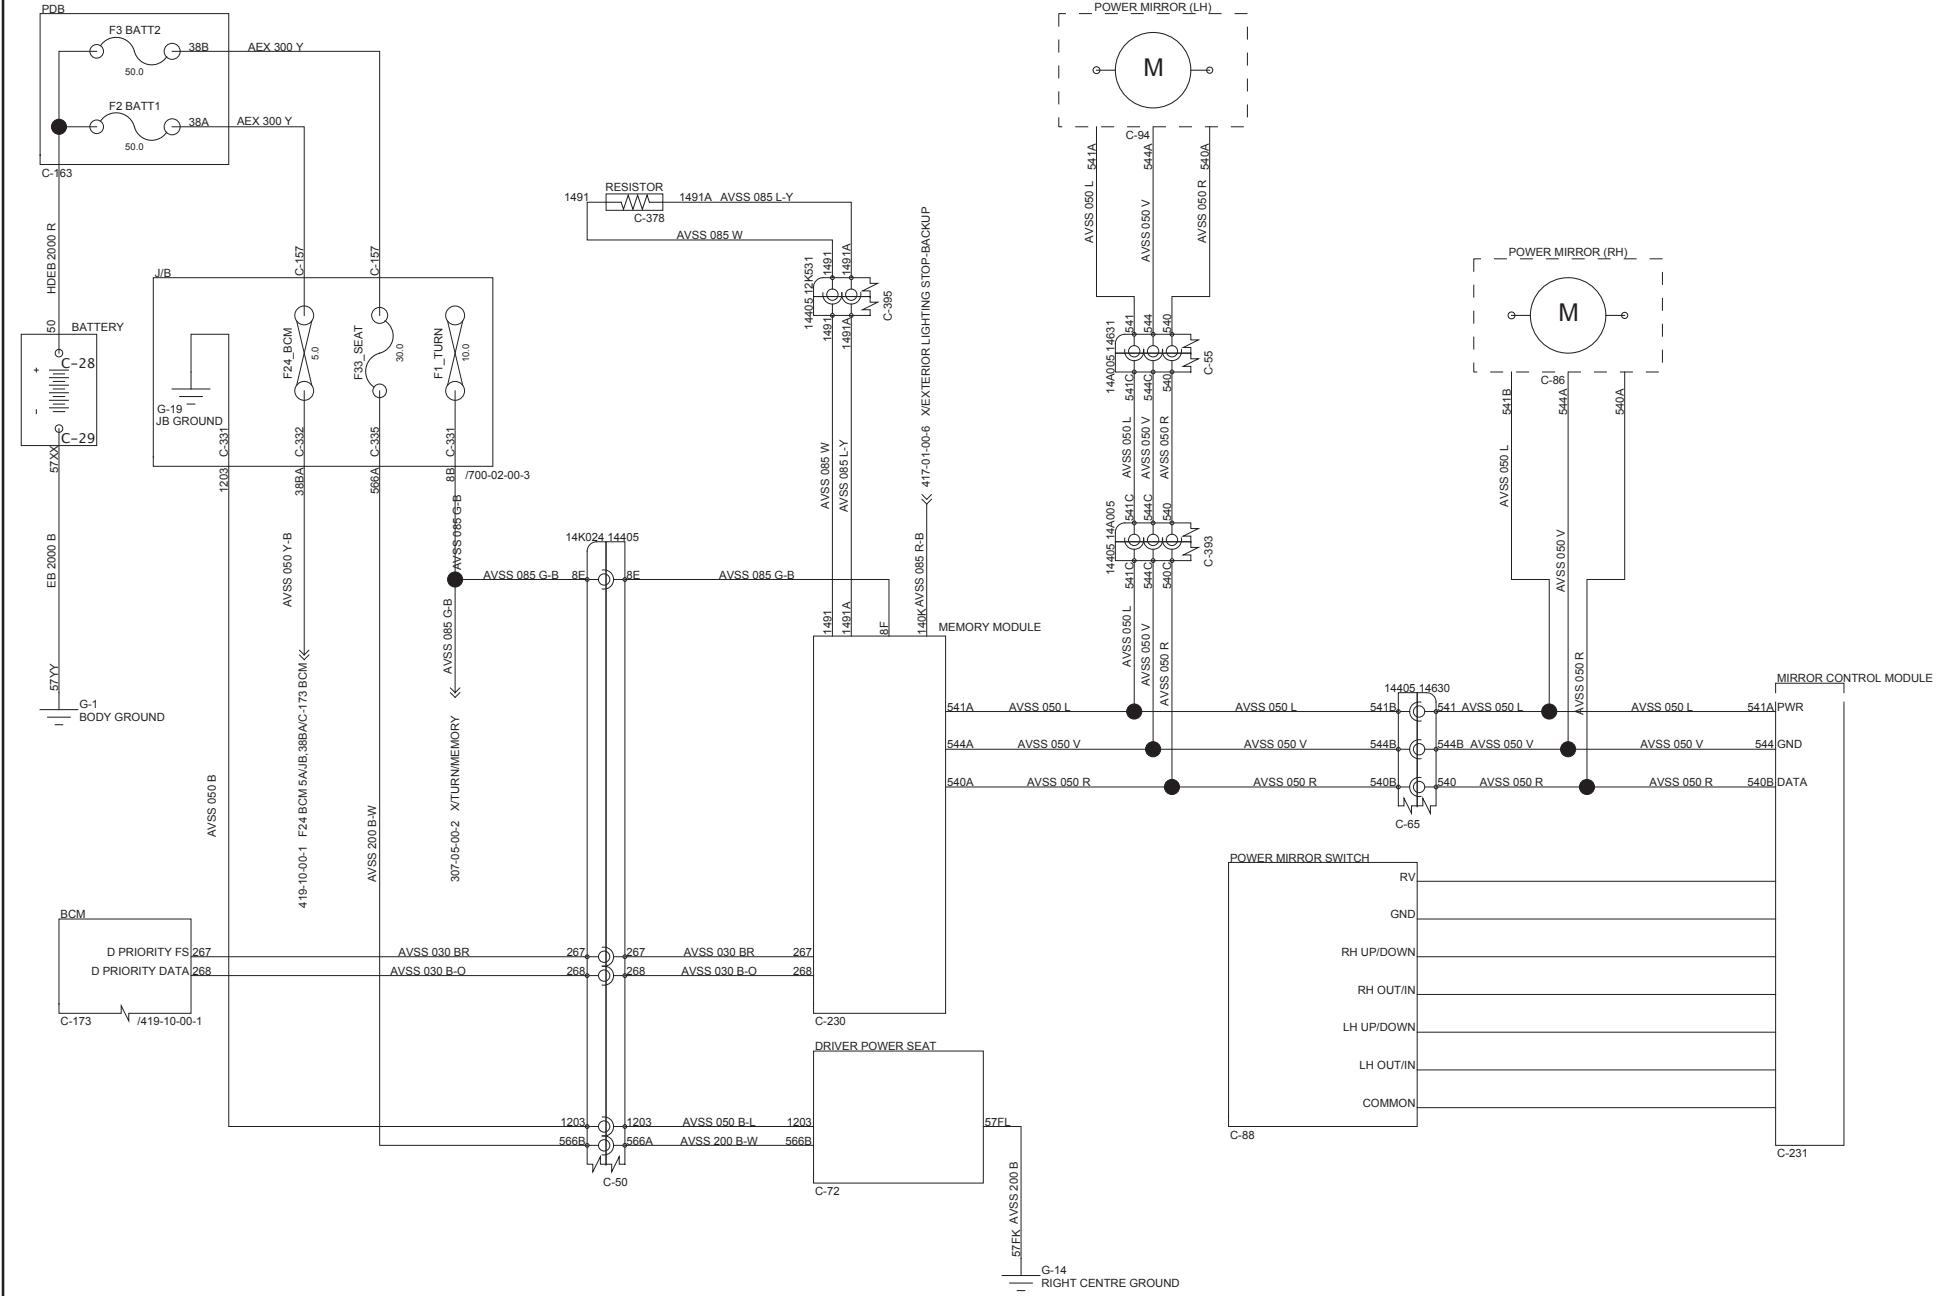

Login Tracking Code

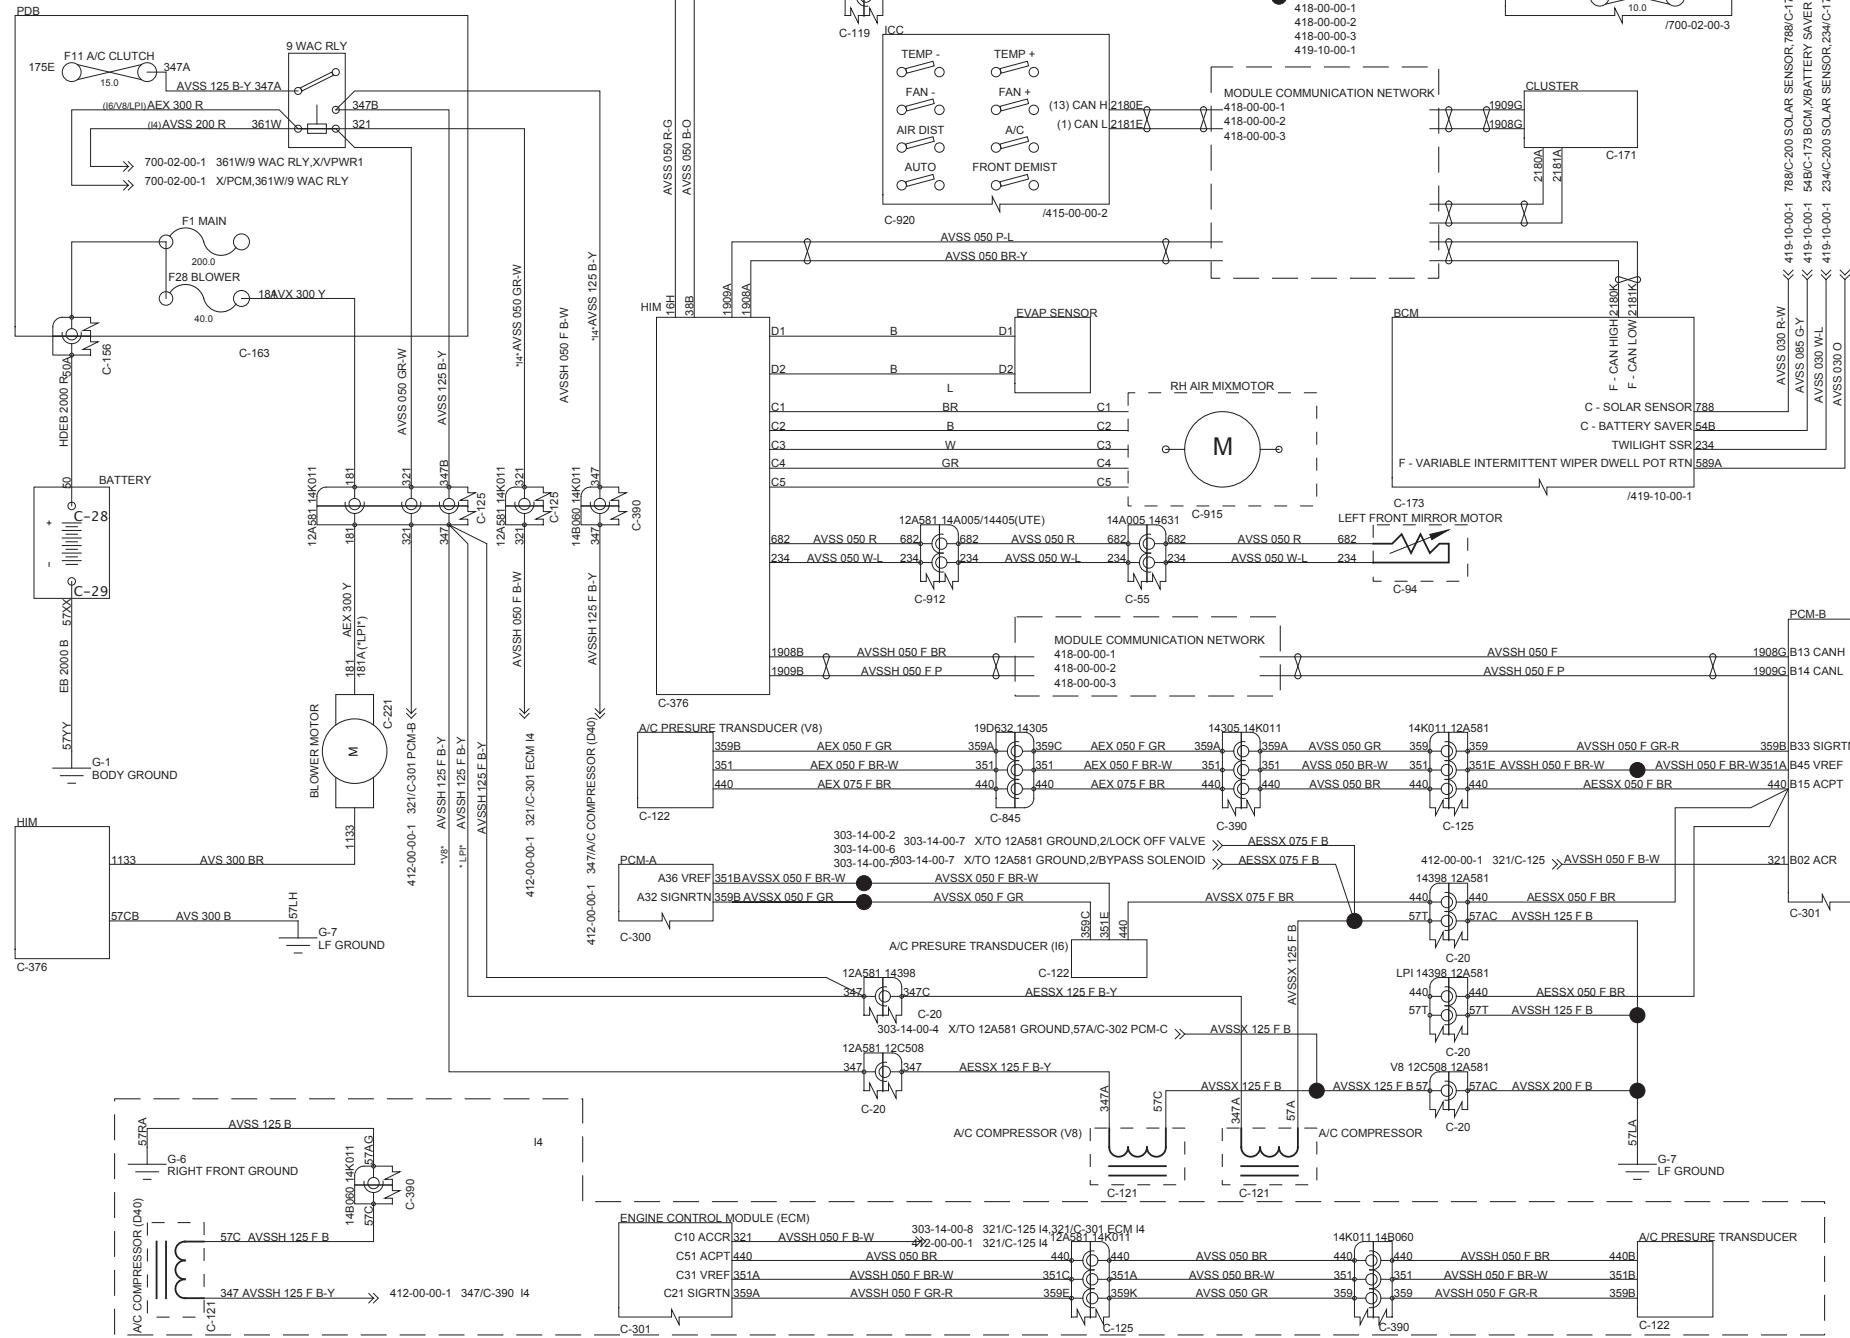


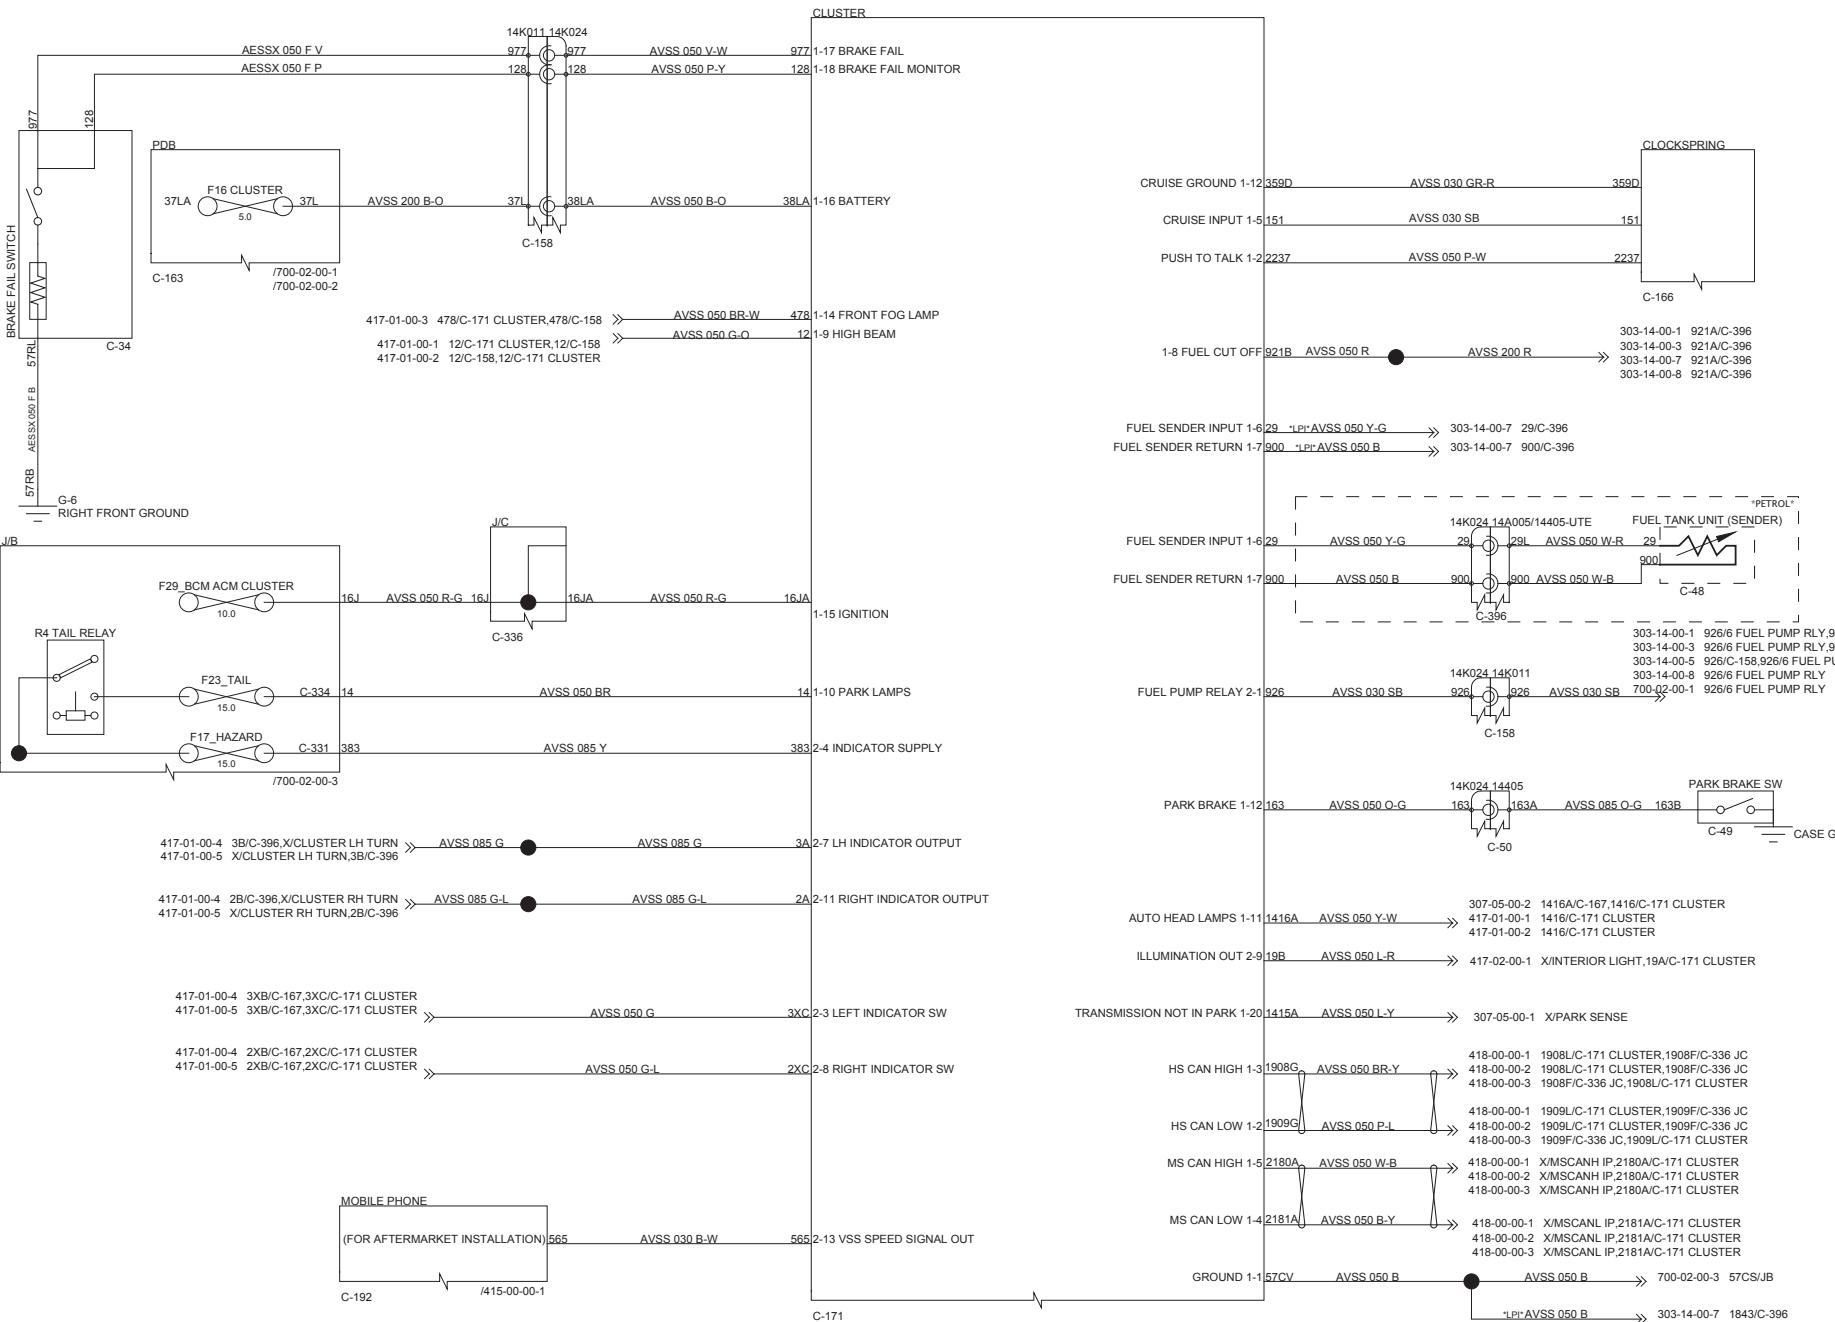

413-06-00-1

Horn

413-06-00-1

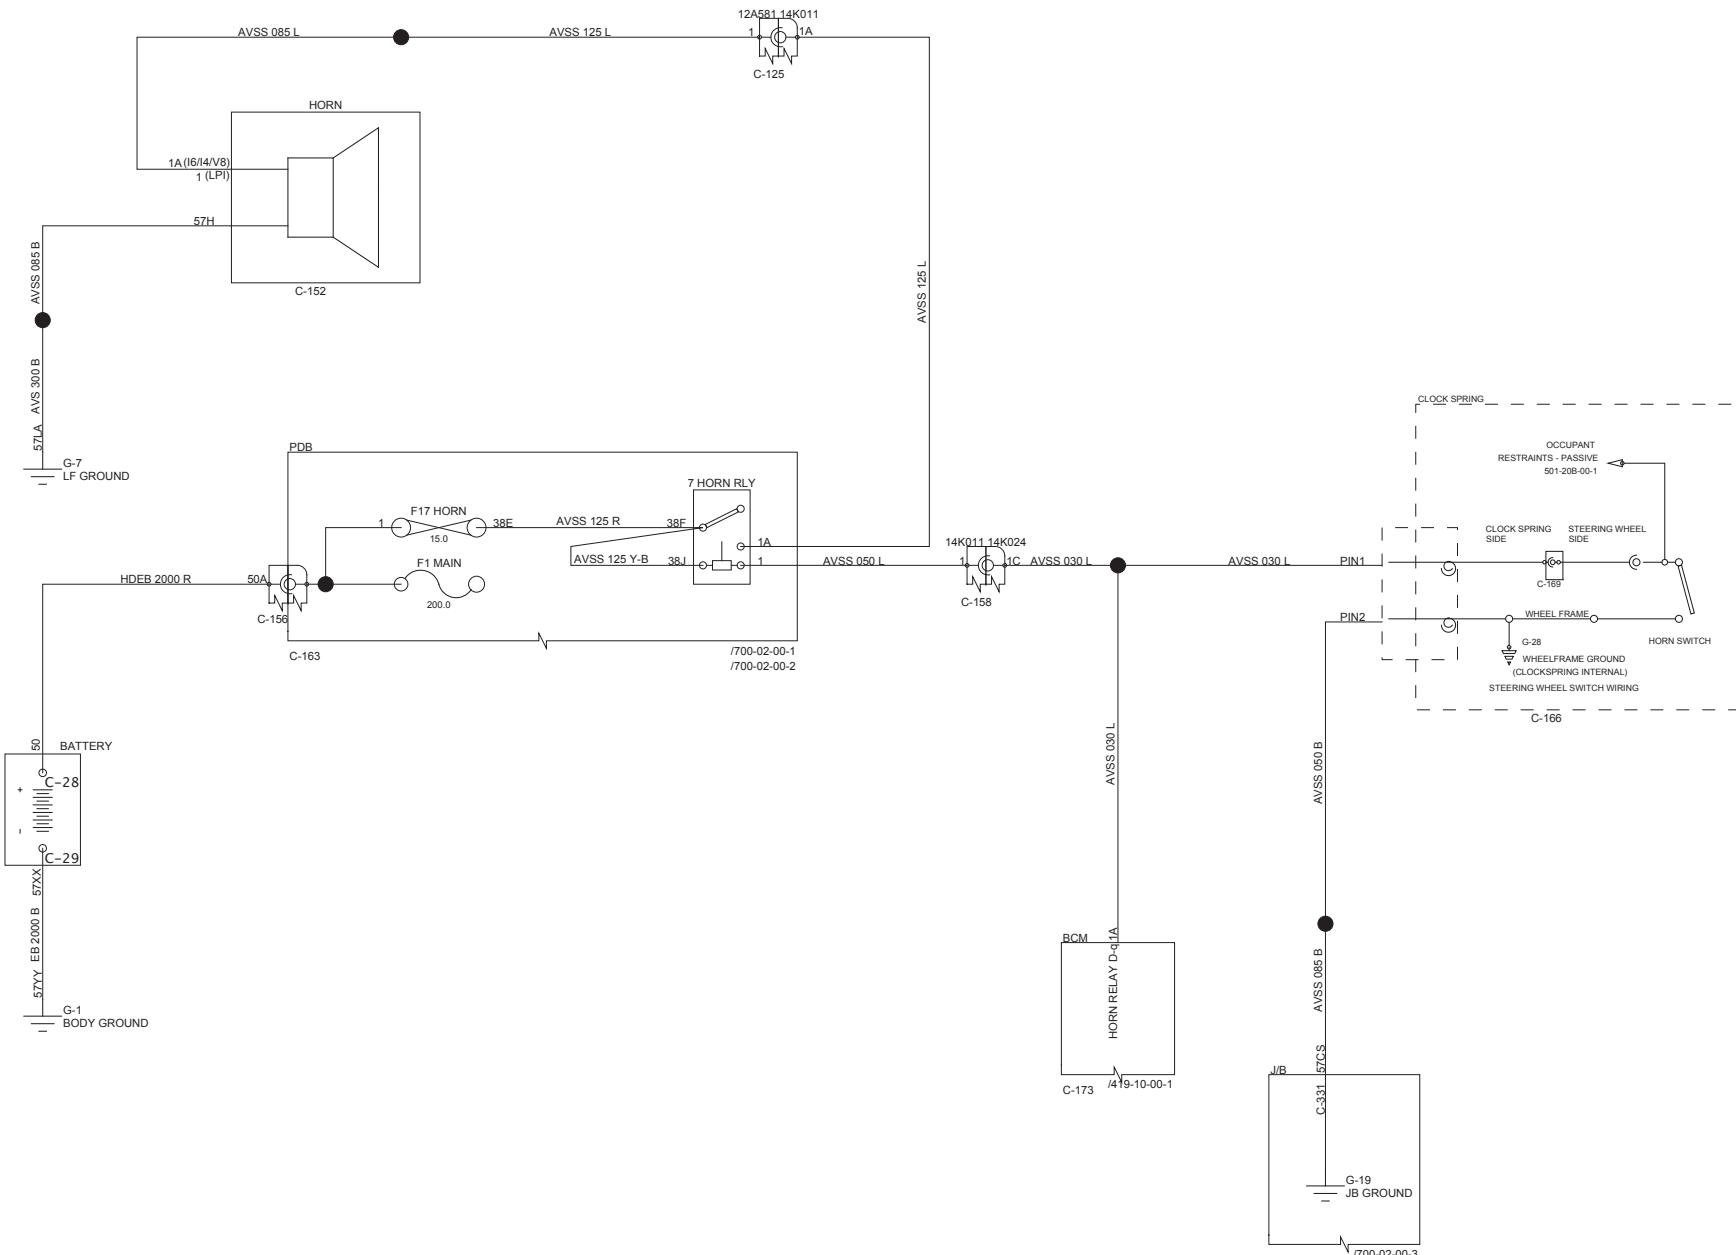


Login Tracking Code


SHT 36 OF 126


413-13-00-1


Parking Aid


413-13-00-1

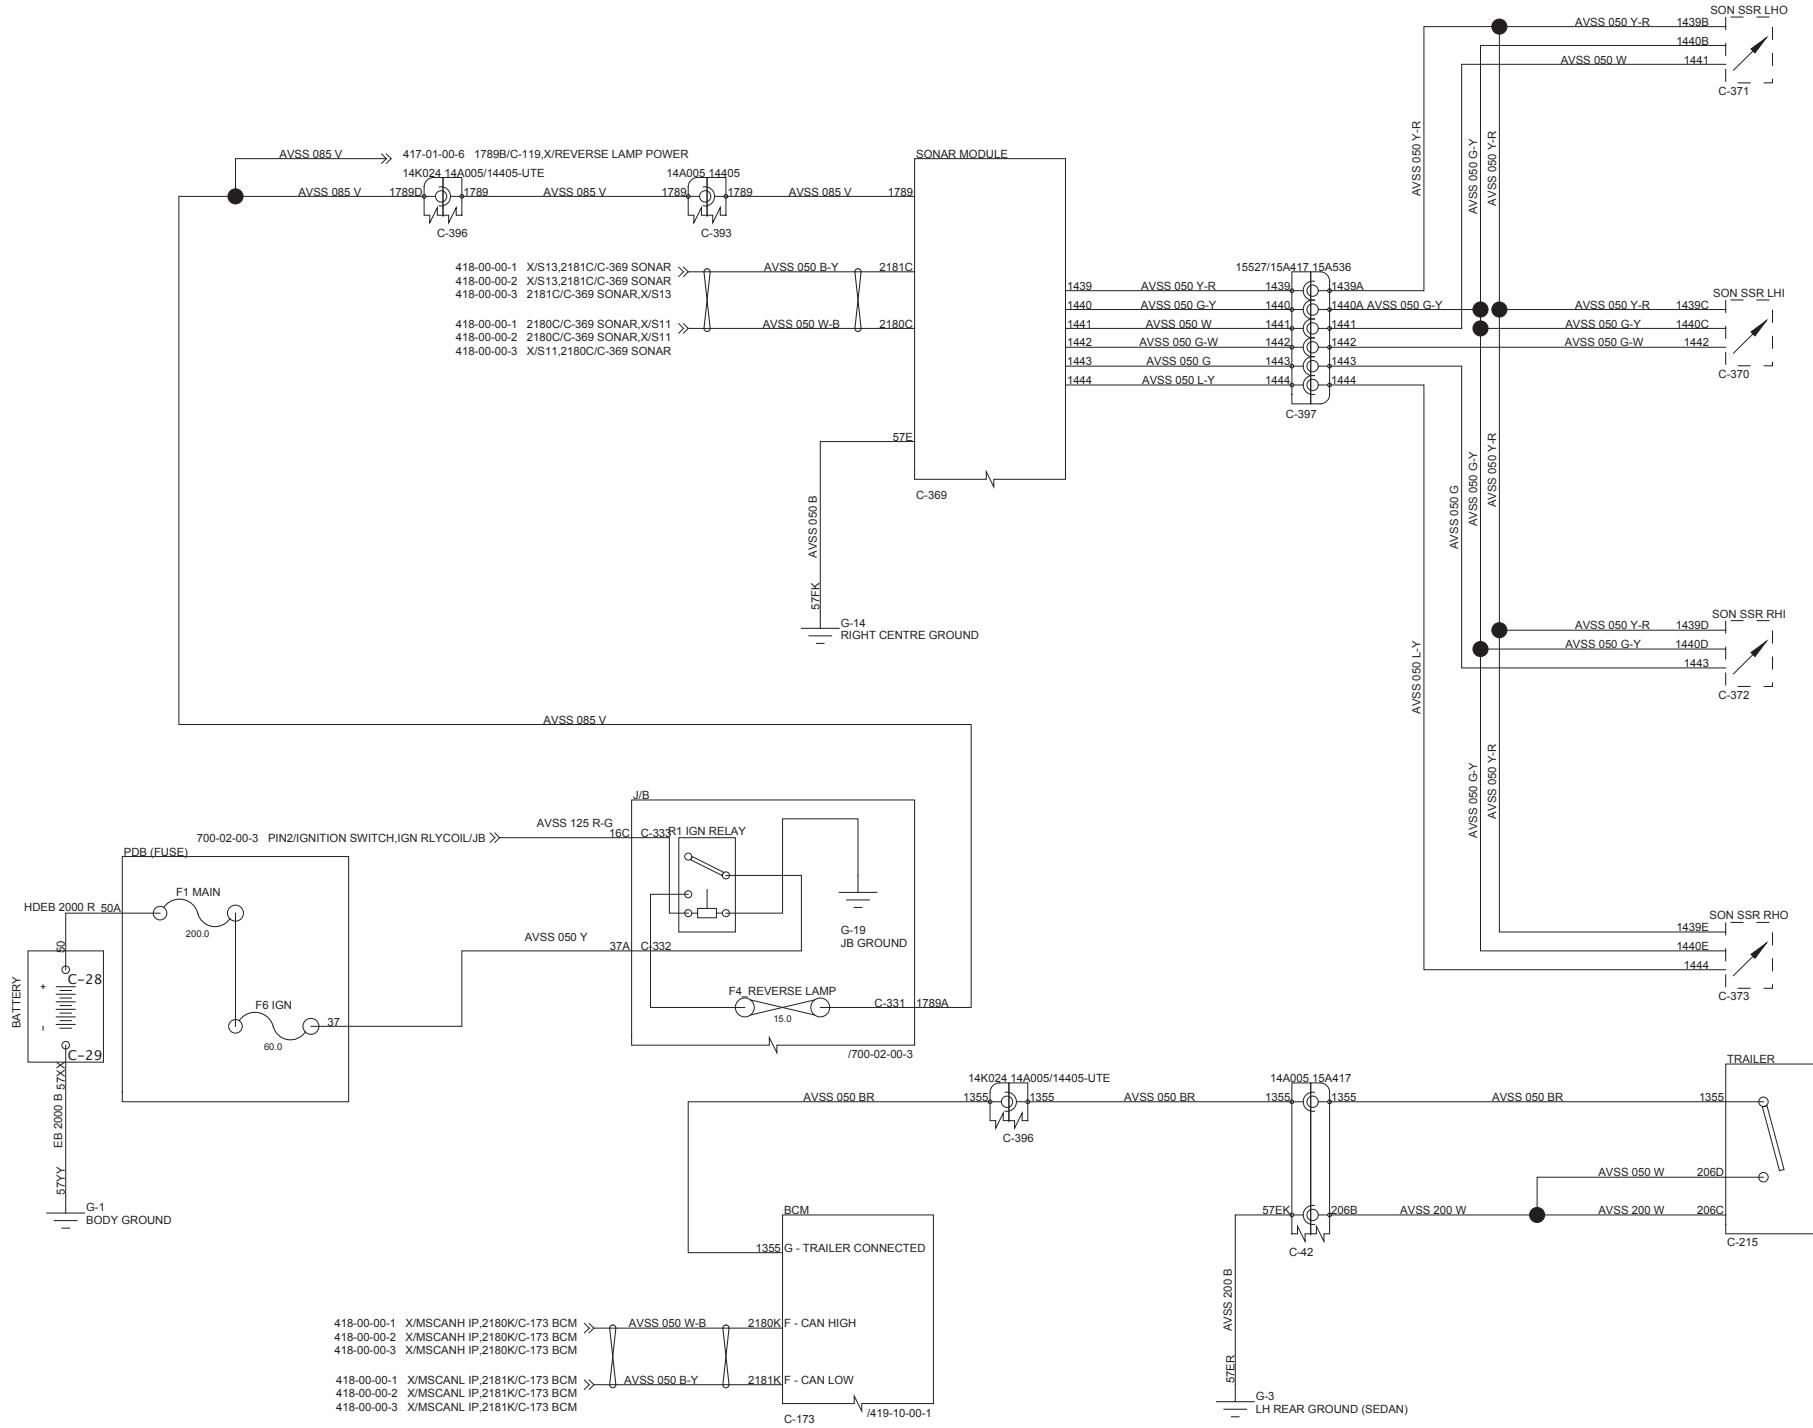

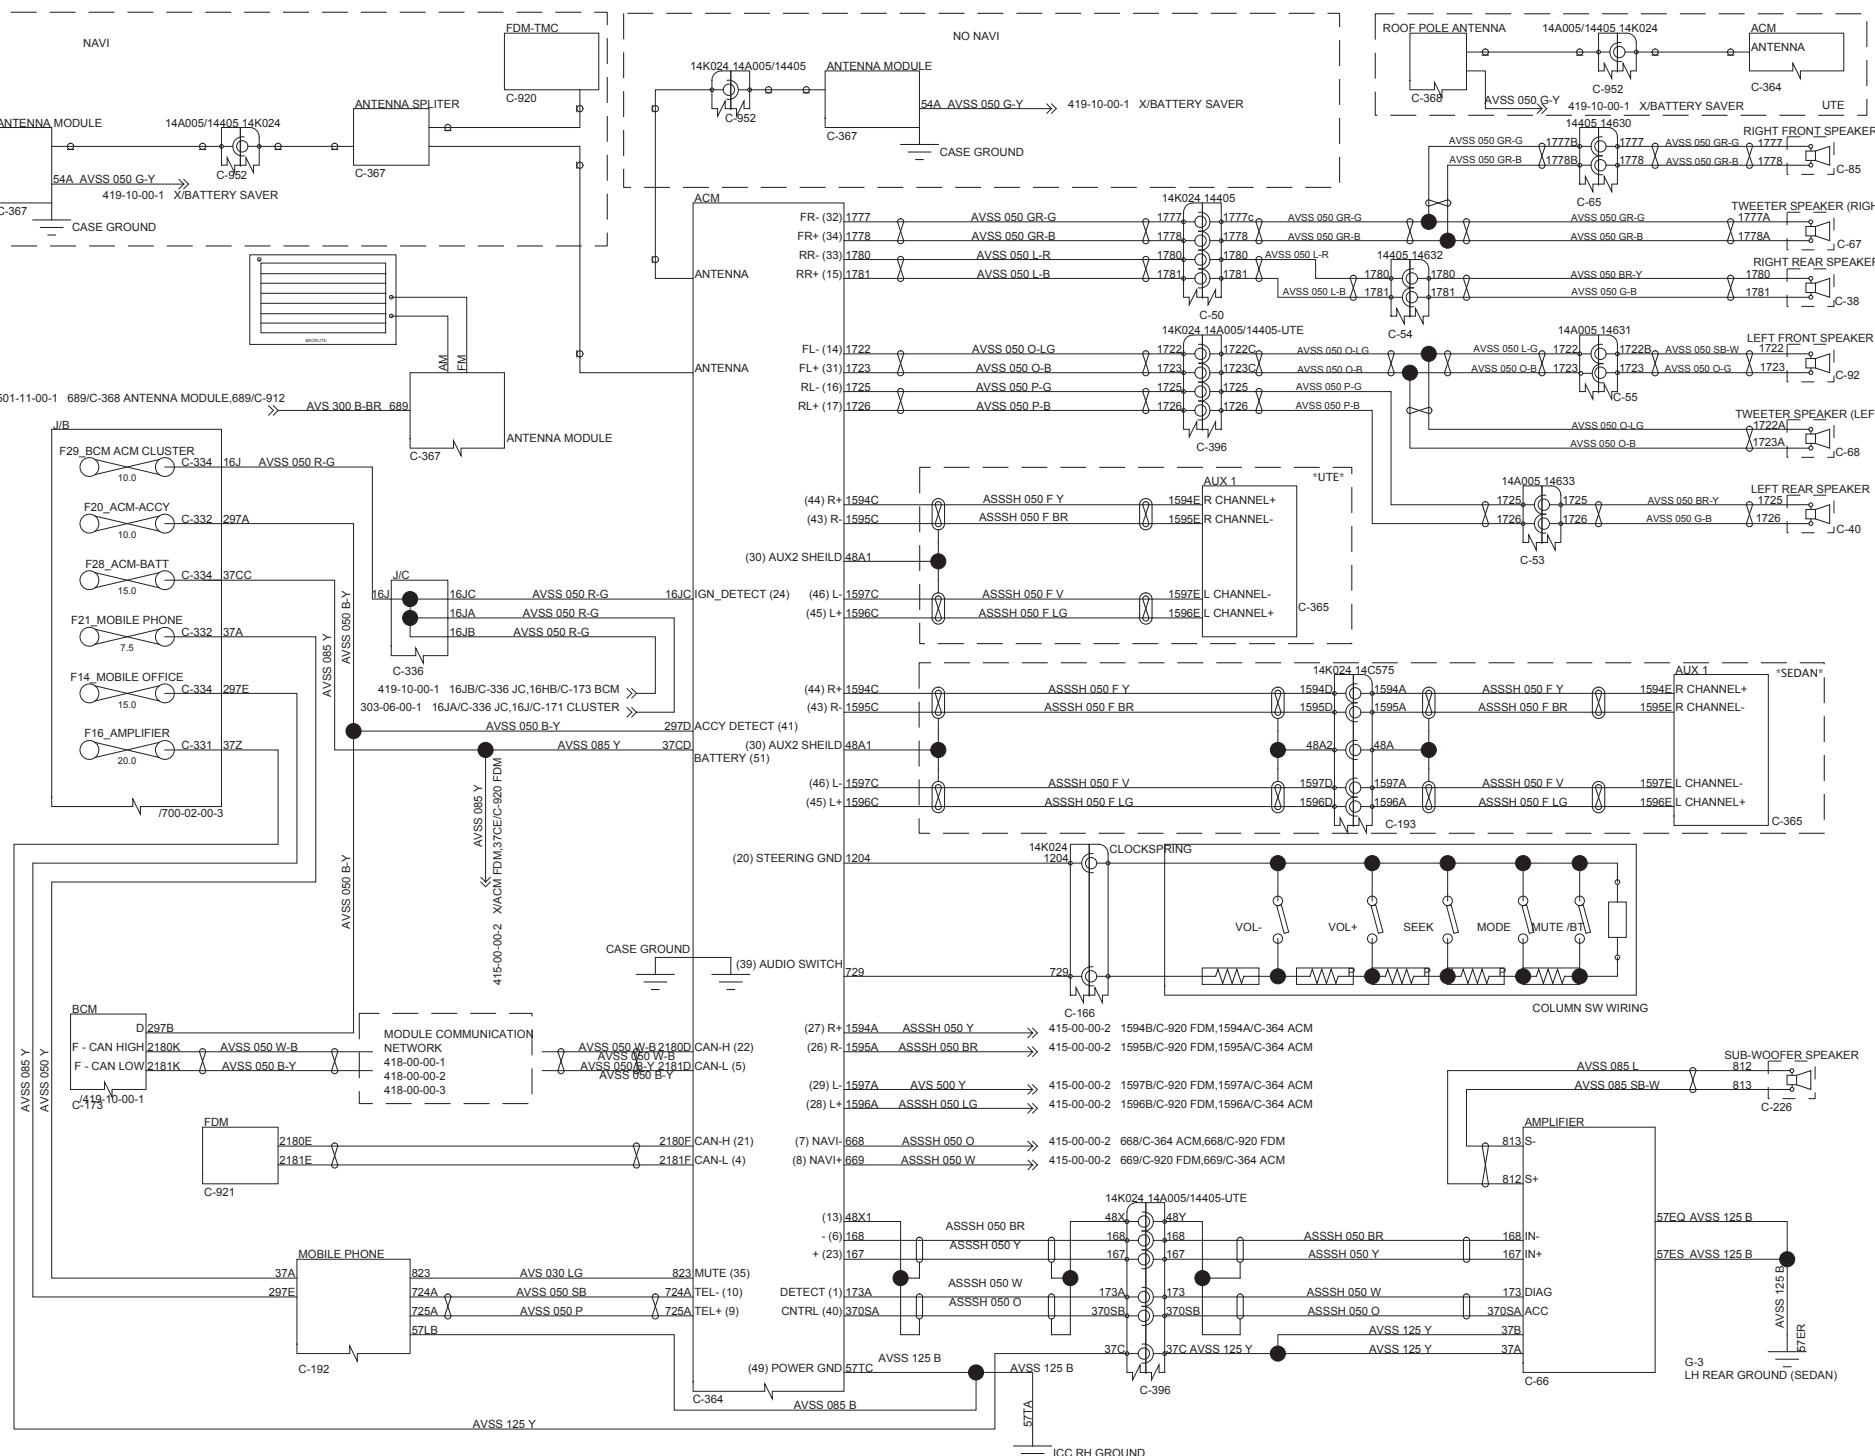

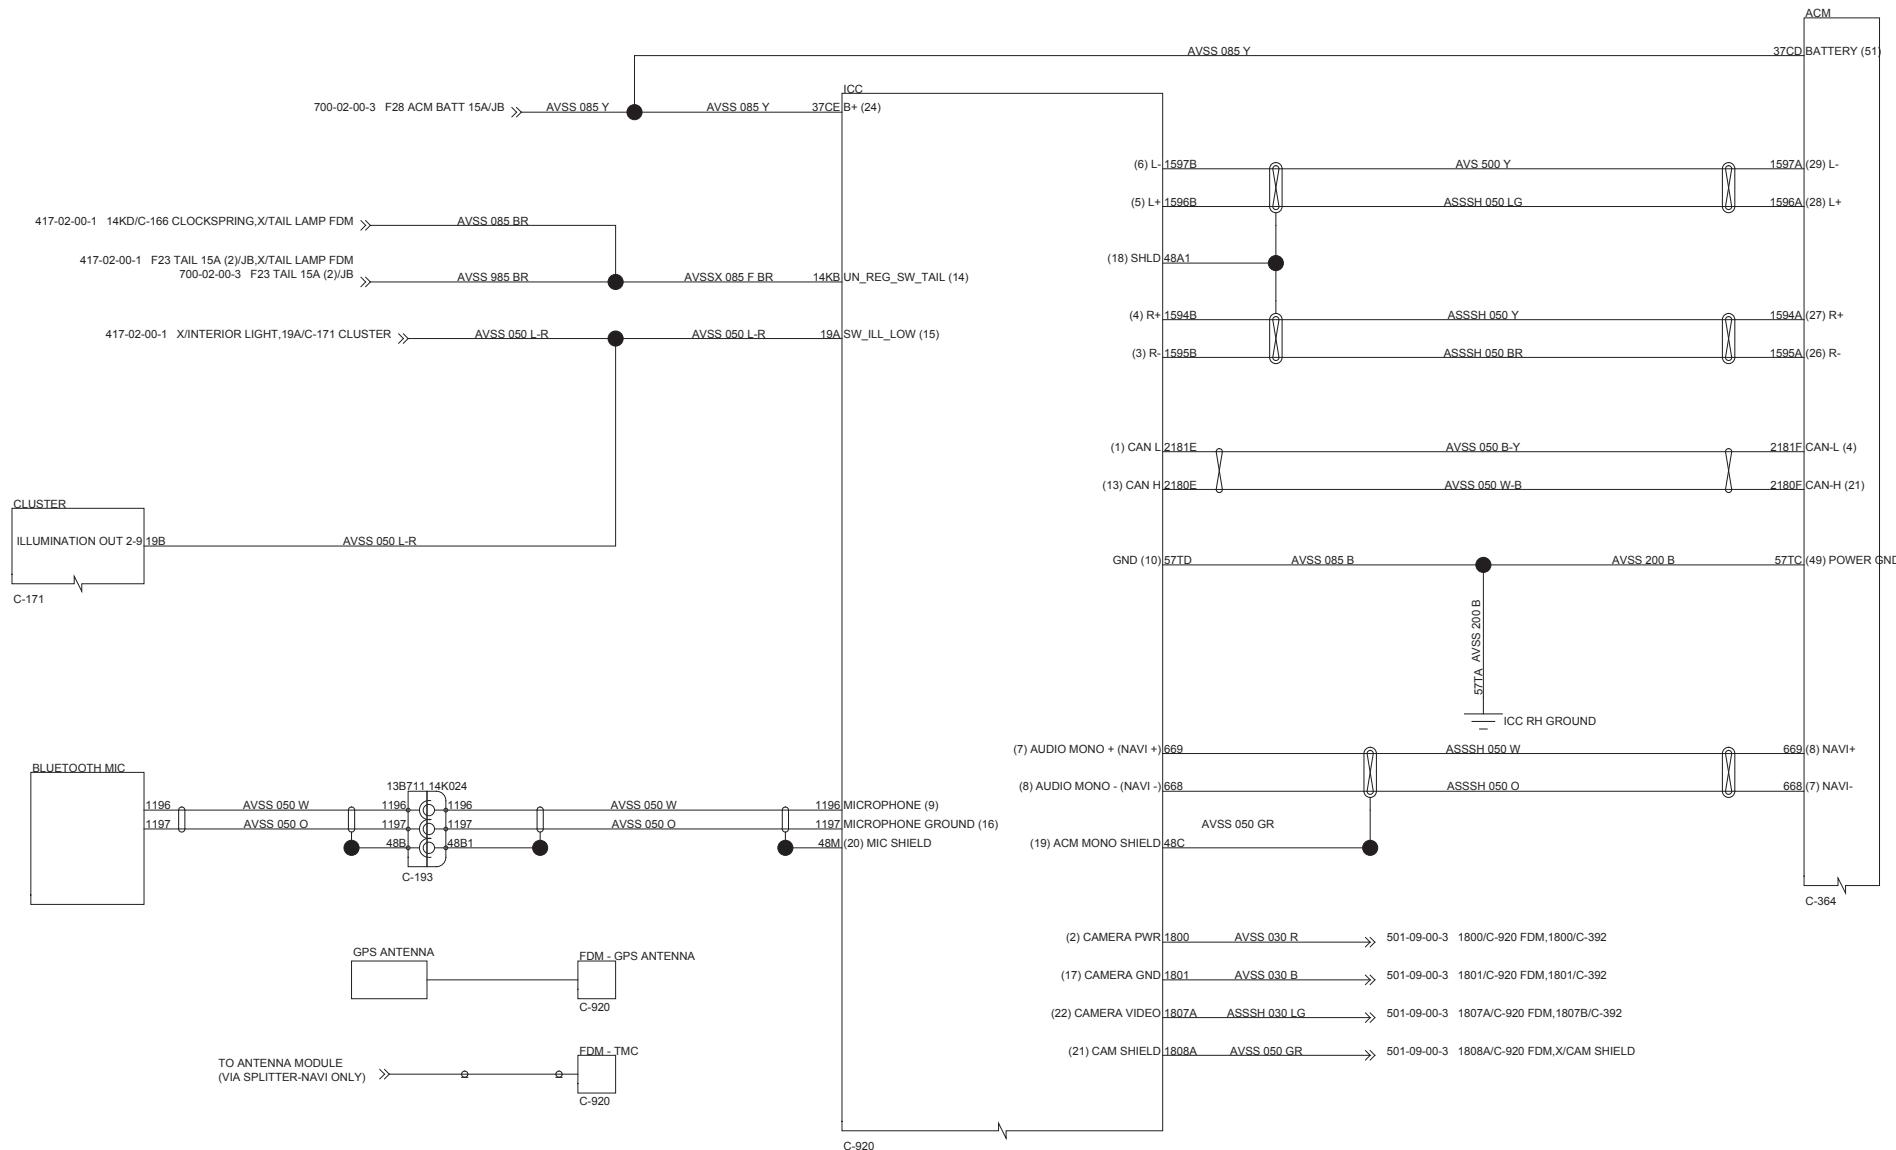

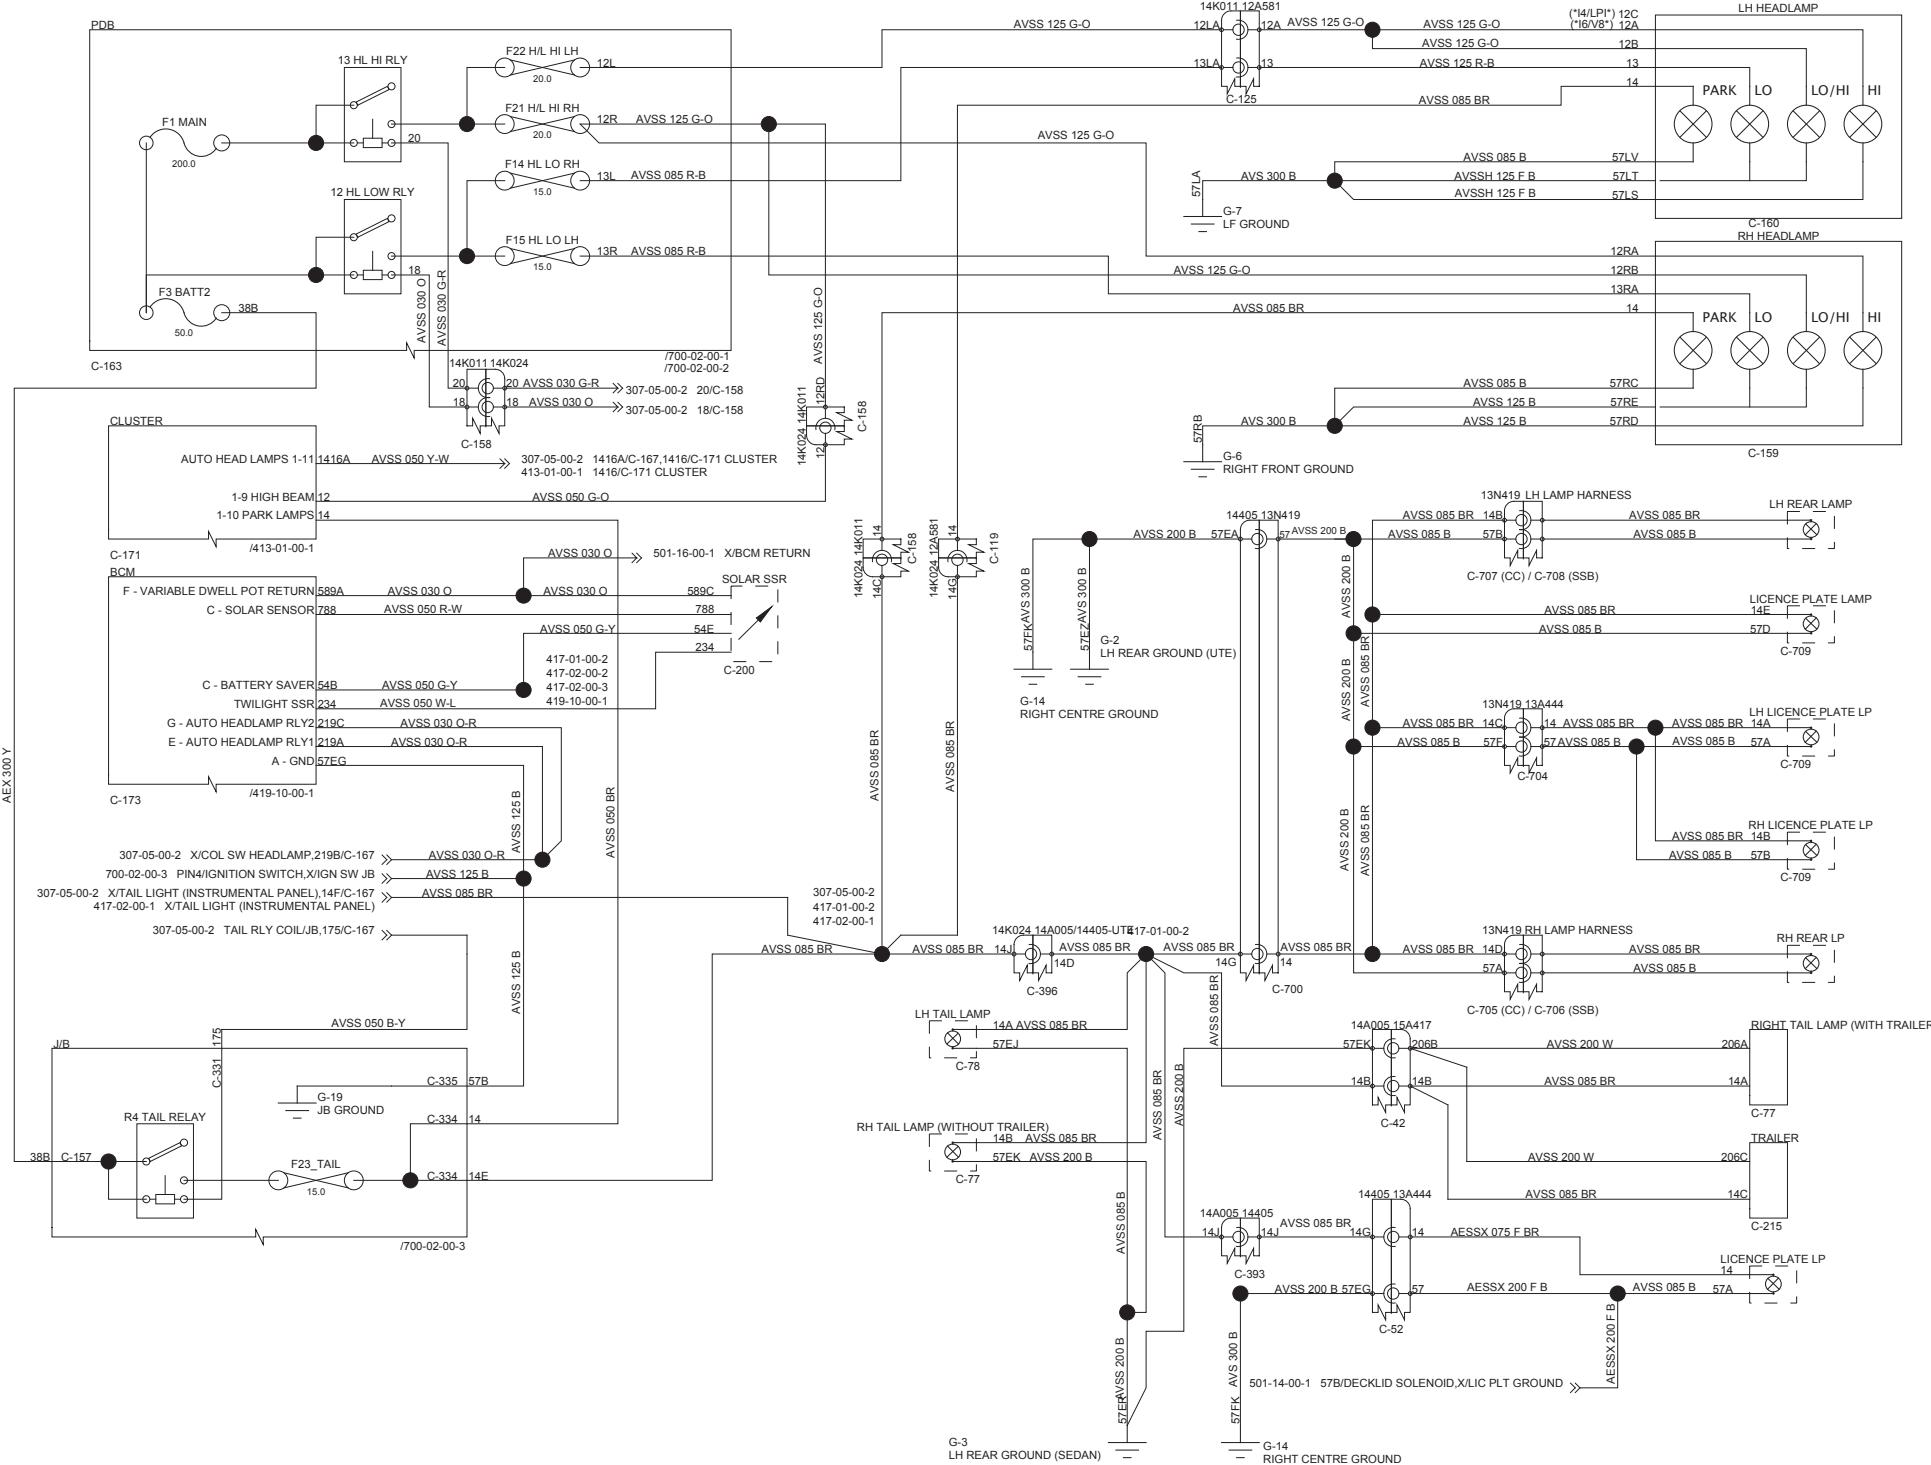


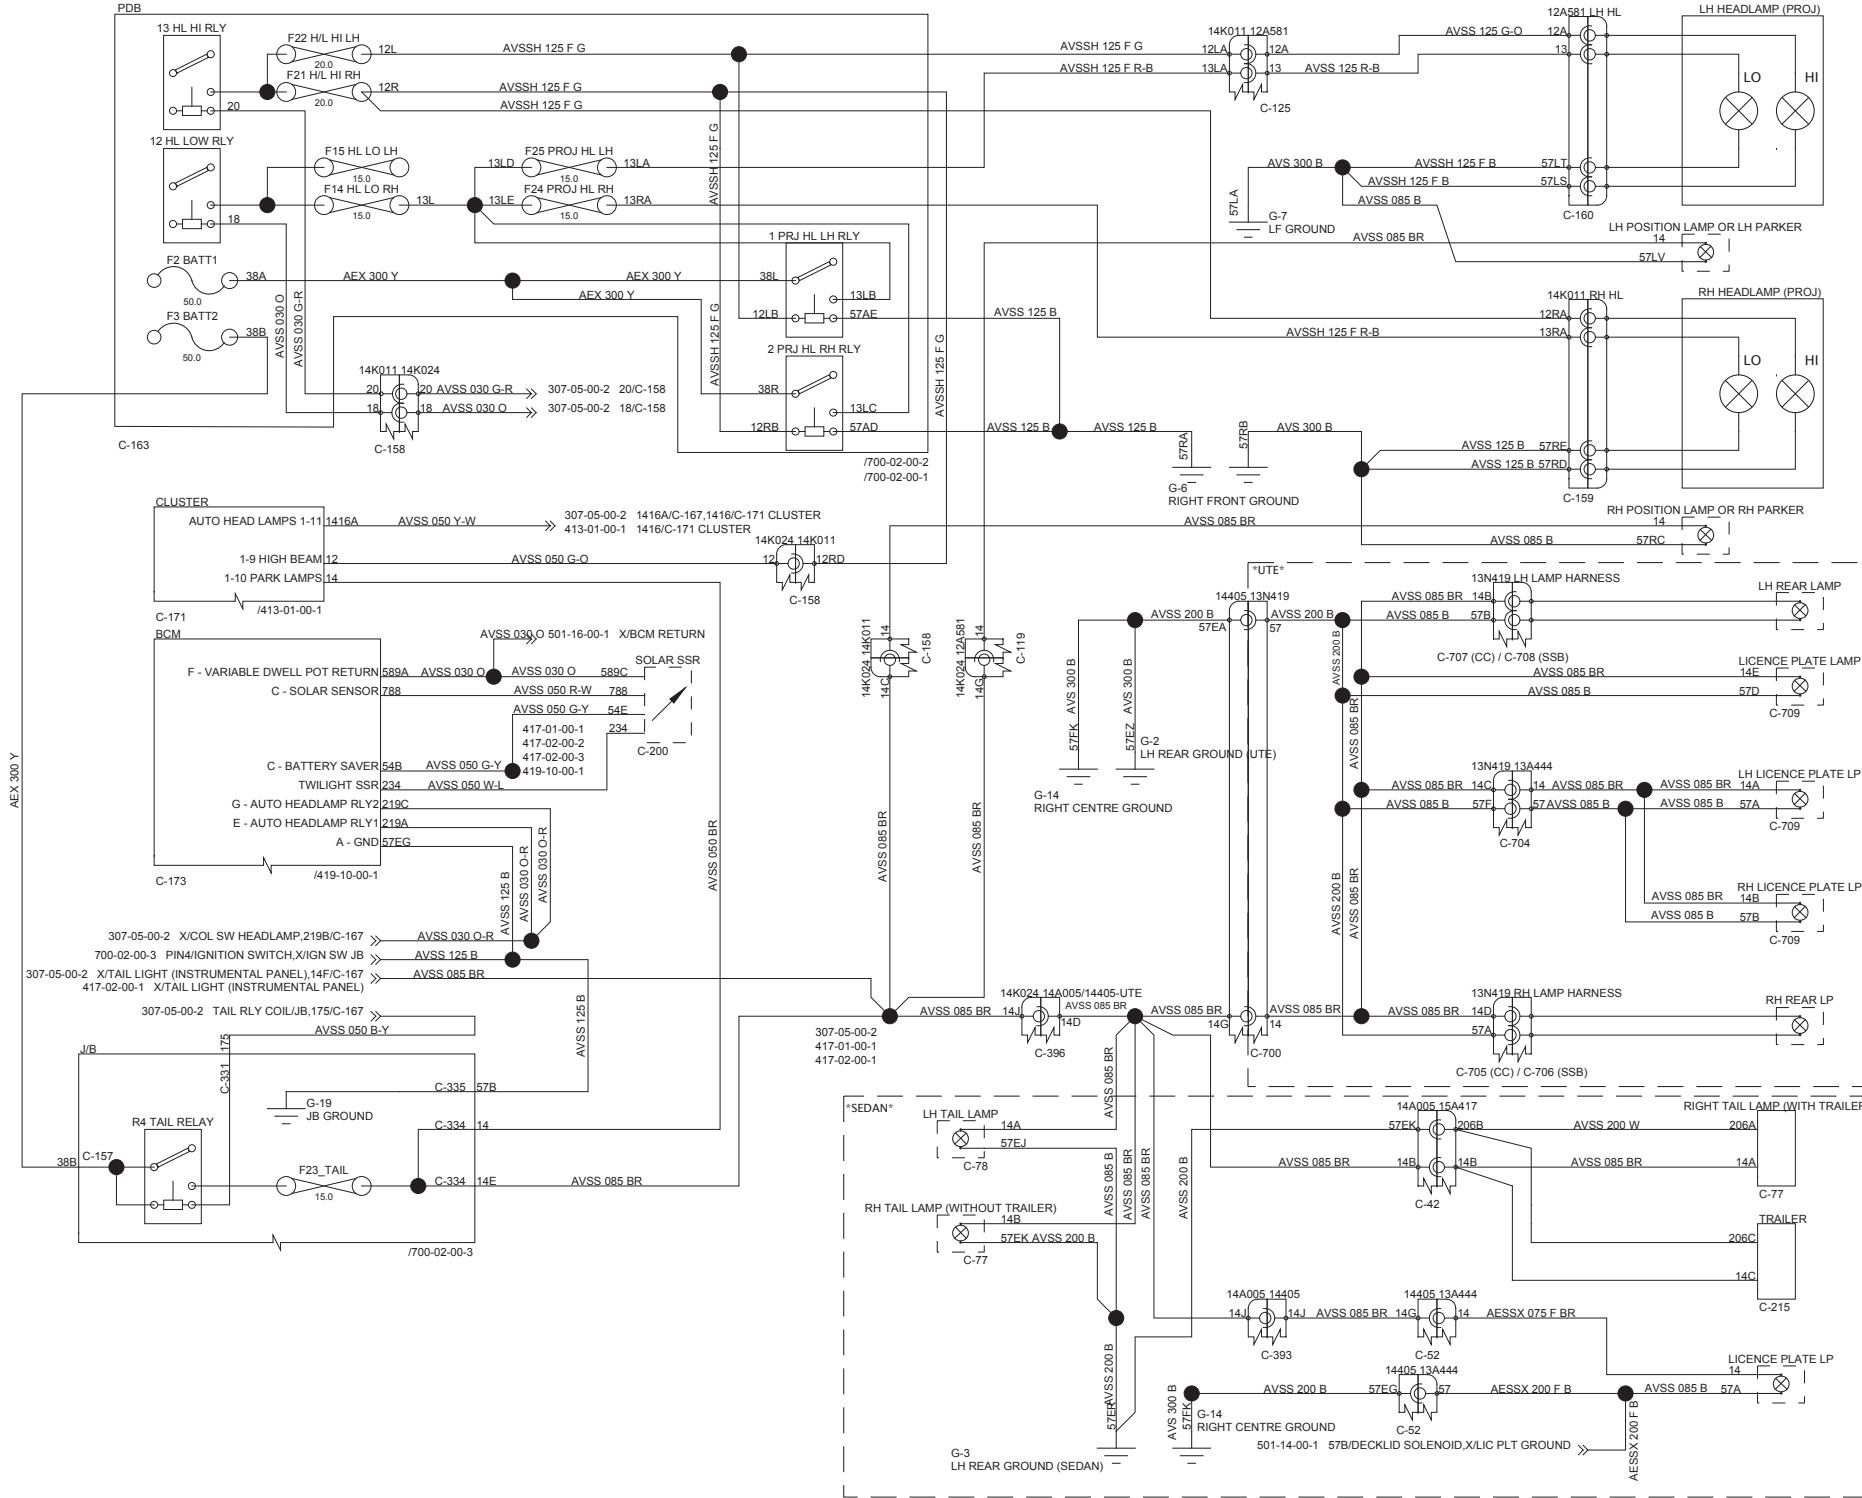

417-01-00-3

Exterior Lighting - Fog

417-01-00-3




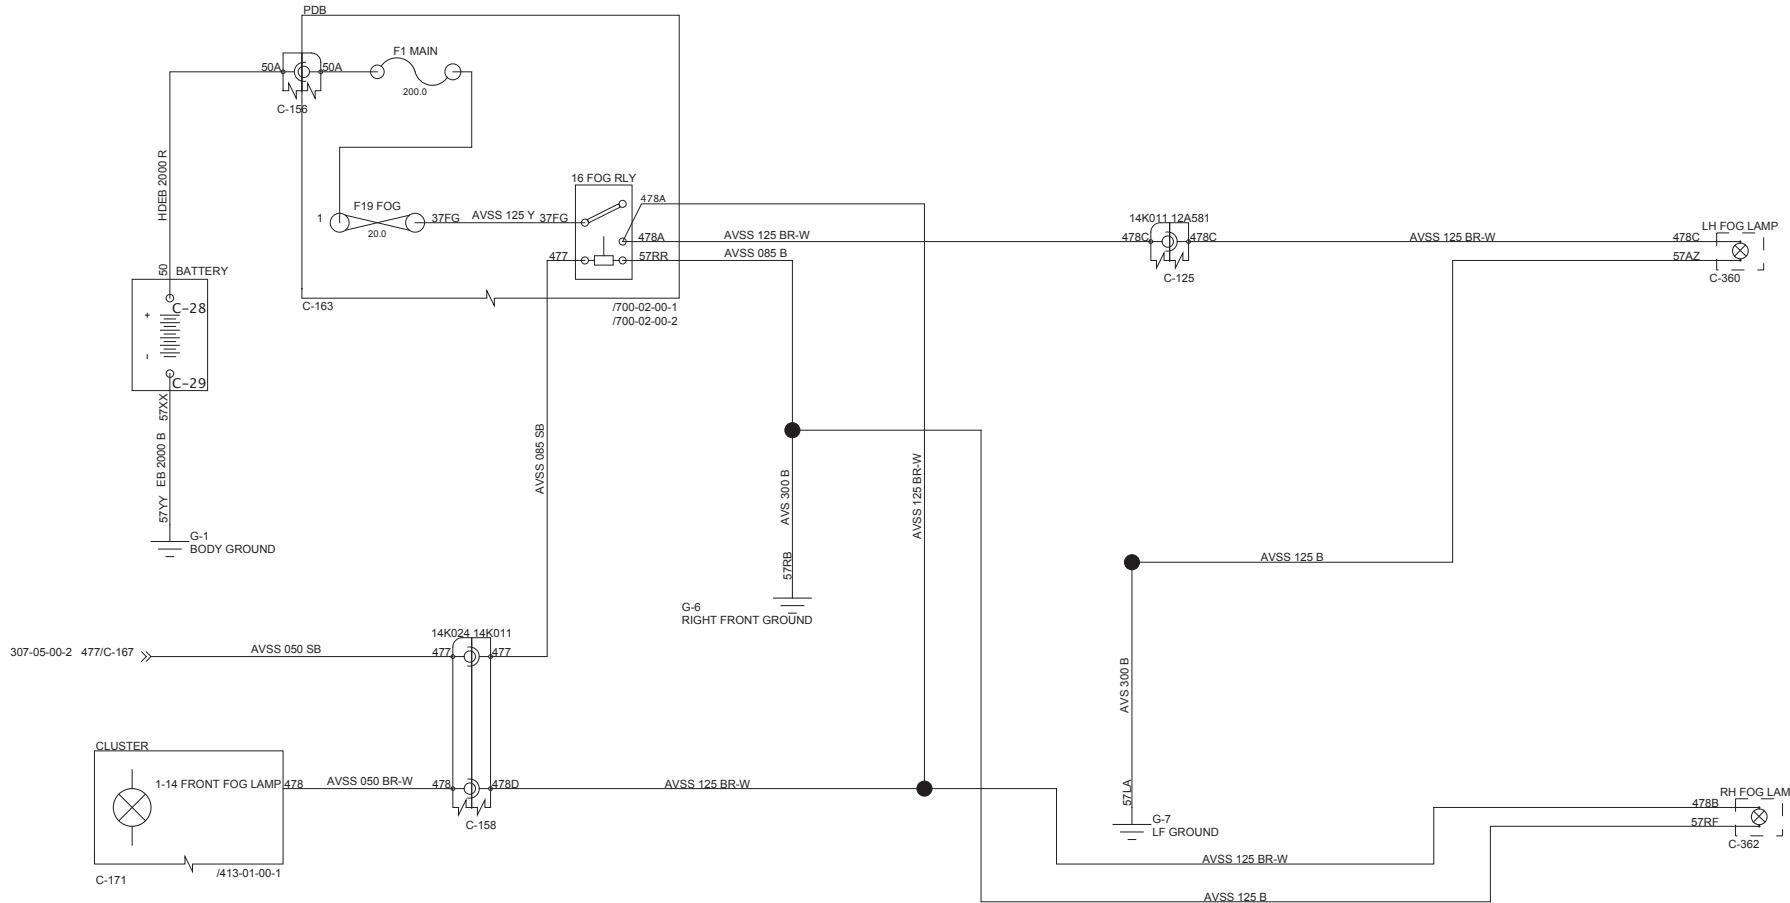


A standard linear barcode consisting of vertical black bars of varying widths on a white background.

417-01-00-4

Exterior Lighting - Turn/Hazard Sedan

417-01-00-4

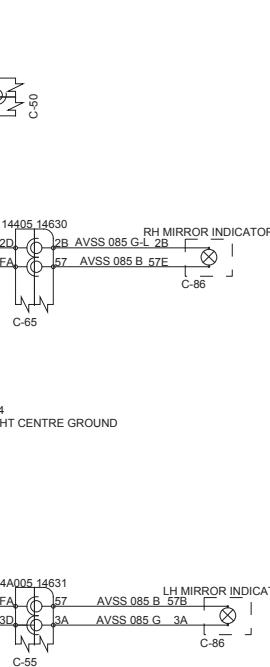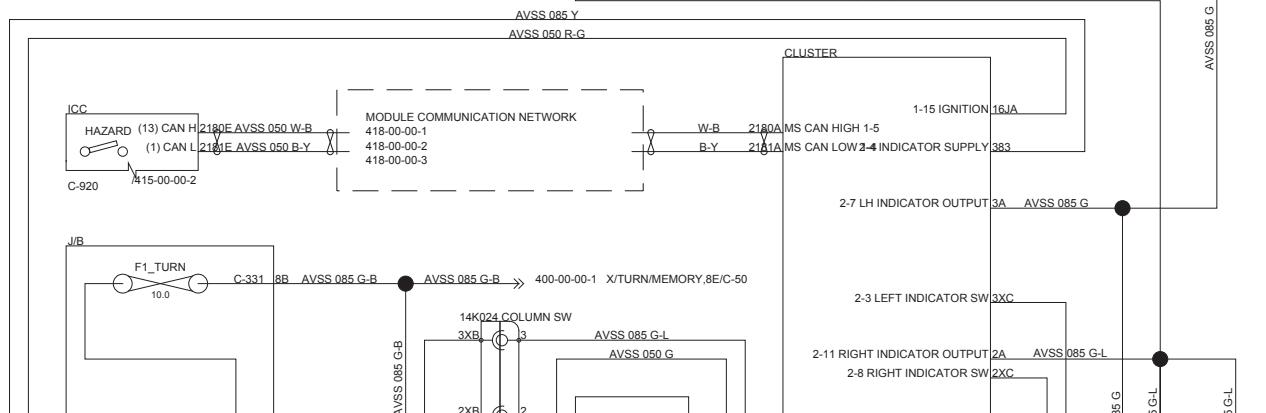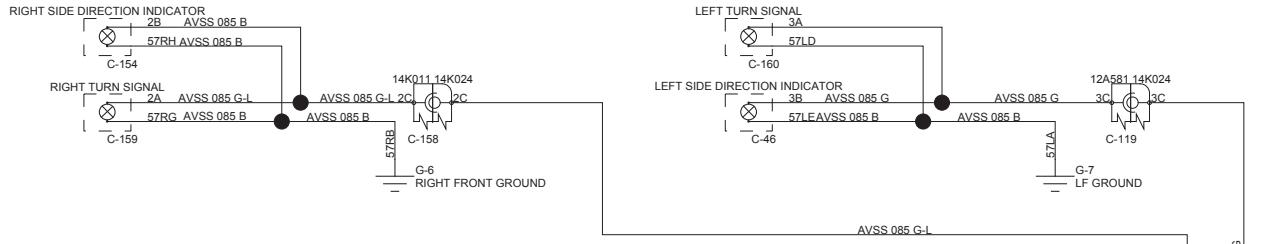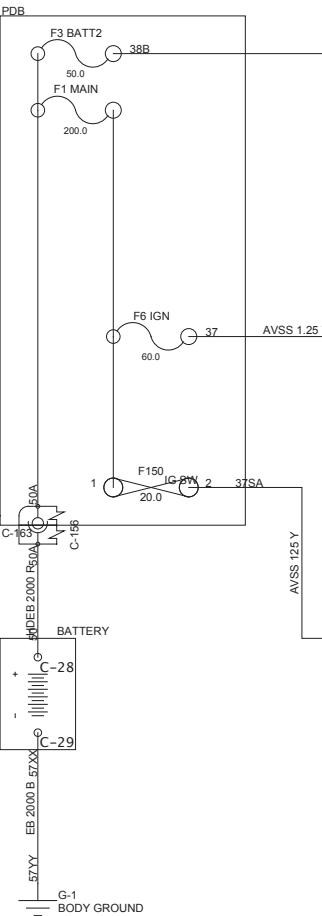

	37		
BAT	●		
ACCESSOR	●	●	
IGNITION	●	●	●
START	●	●	●
	37	PIN1 IG-SW	PIN3 PIN4
	C-168	16C	




Login Tracking Code


417-01-00-5

Exterior Lighting - Turn/Hazard UTE

417-01-00-5

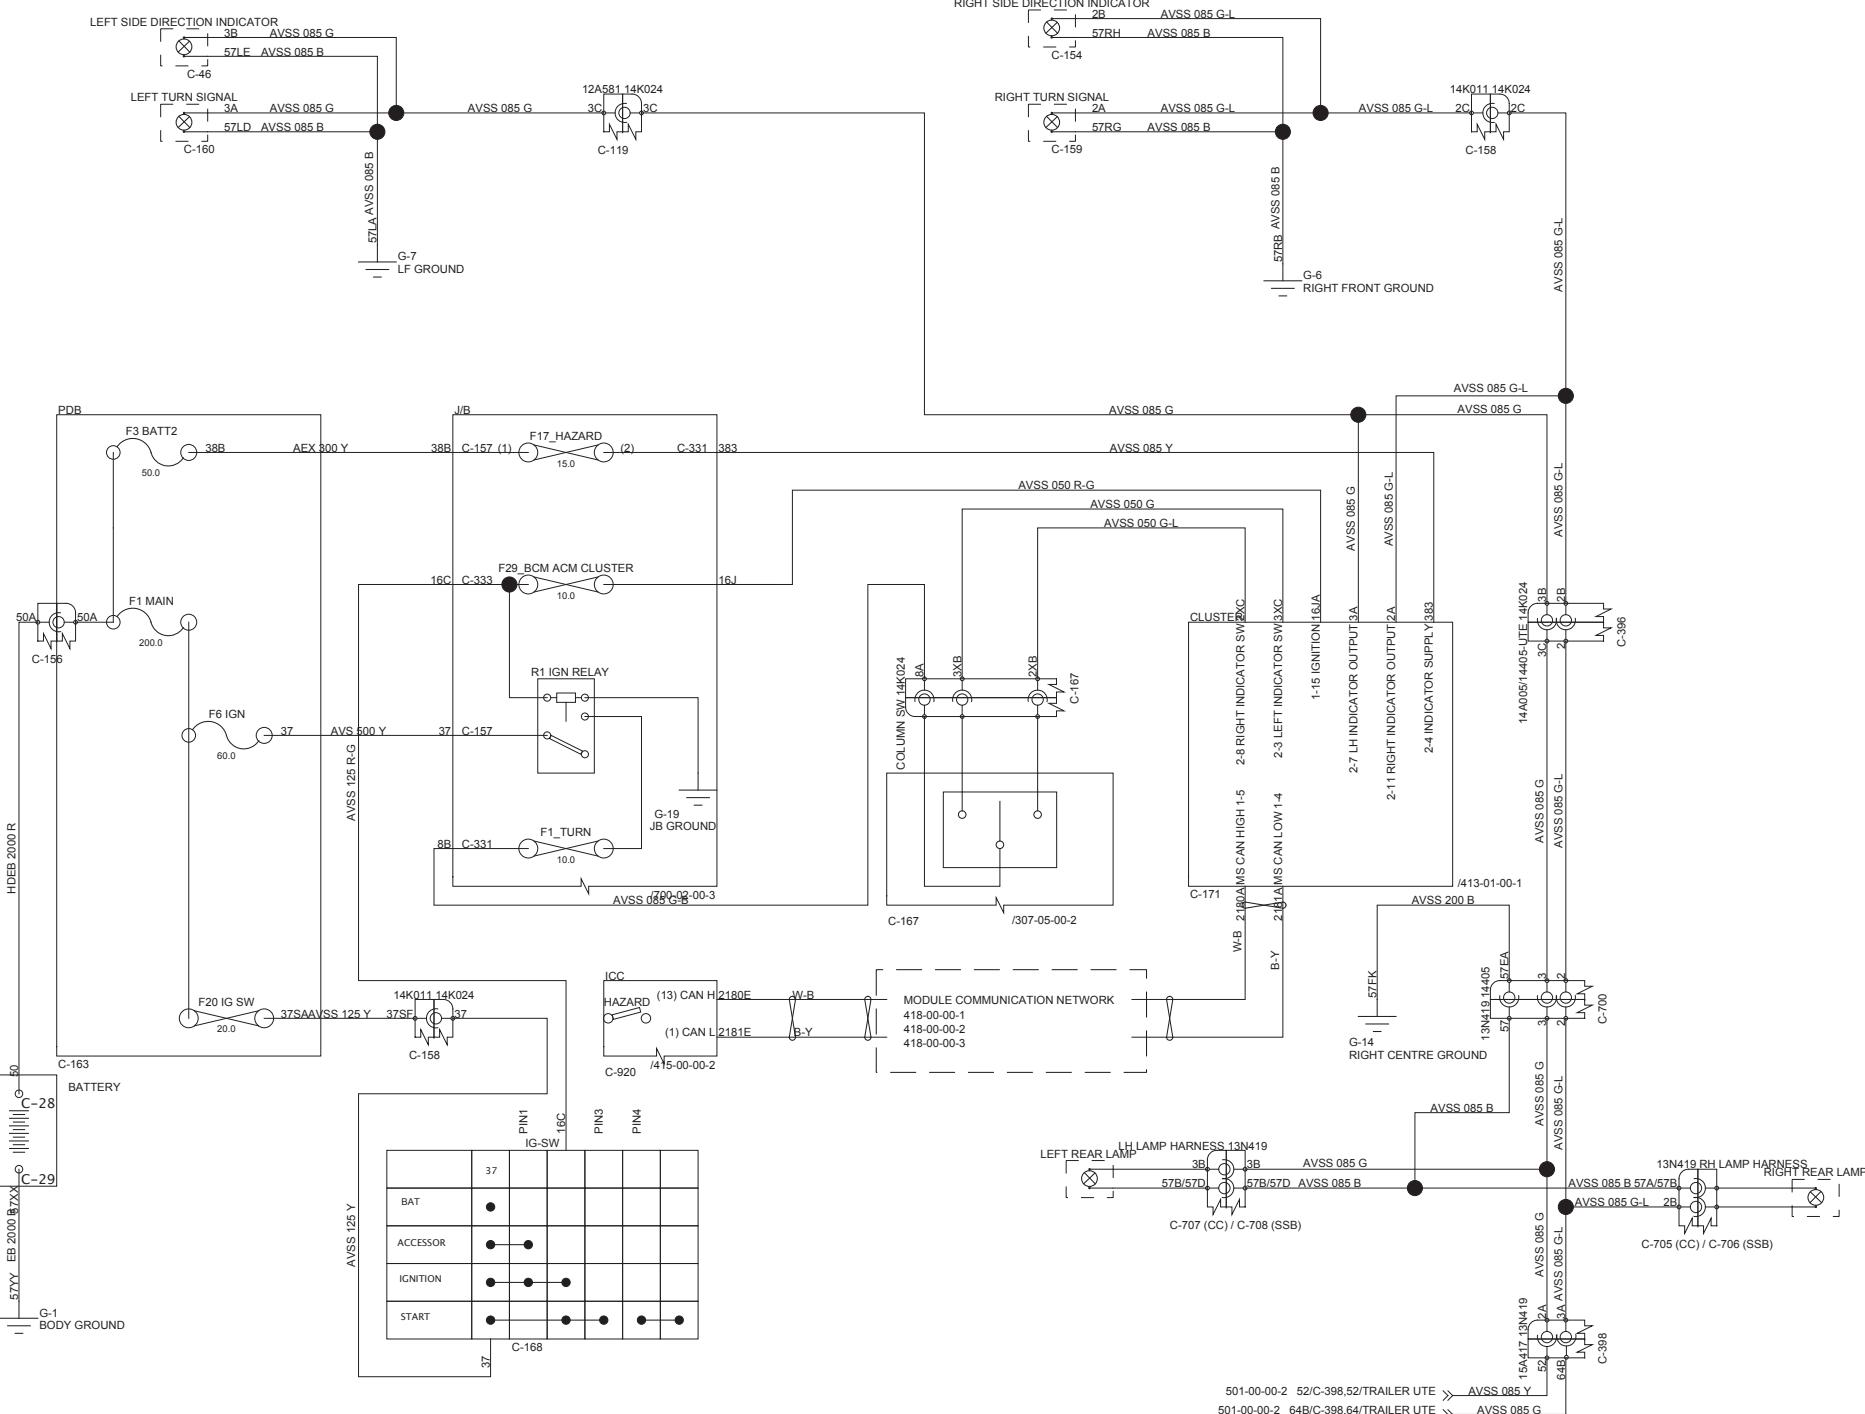

Login Tracking Code

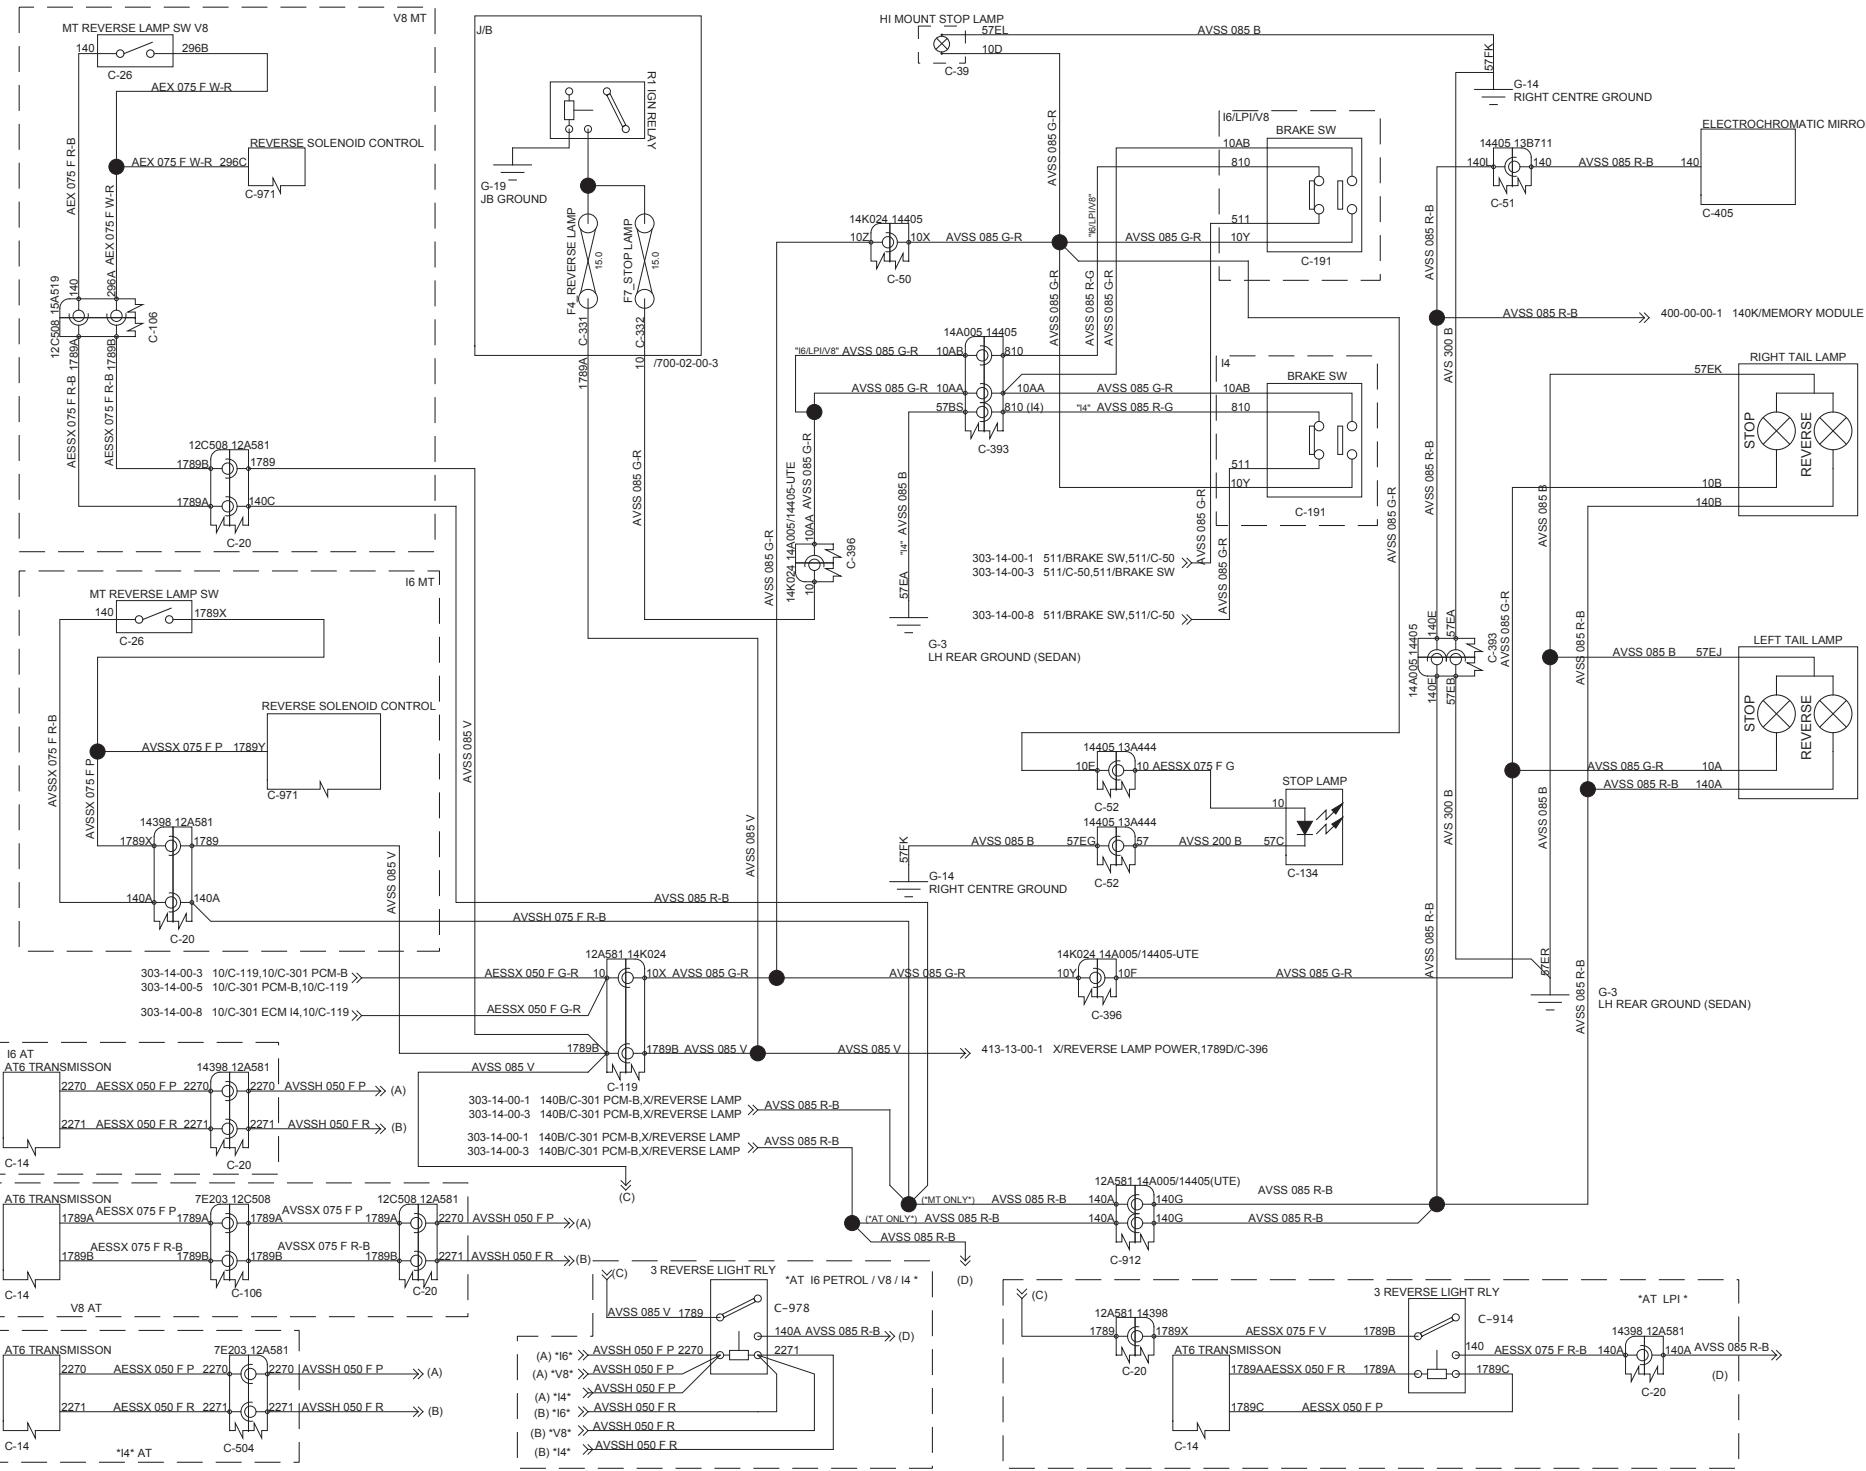


Login Tracking Code

417-01-00-7


Exterior Lighting - Stop Backup UTE


417-01-00-7

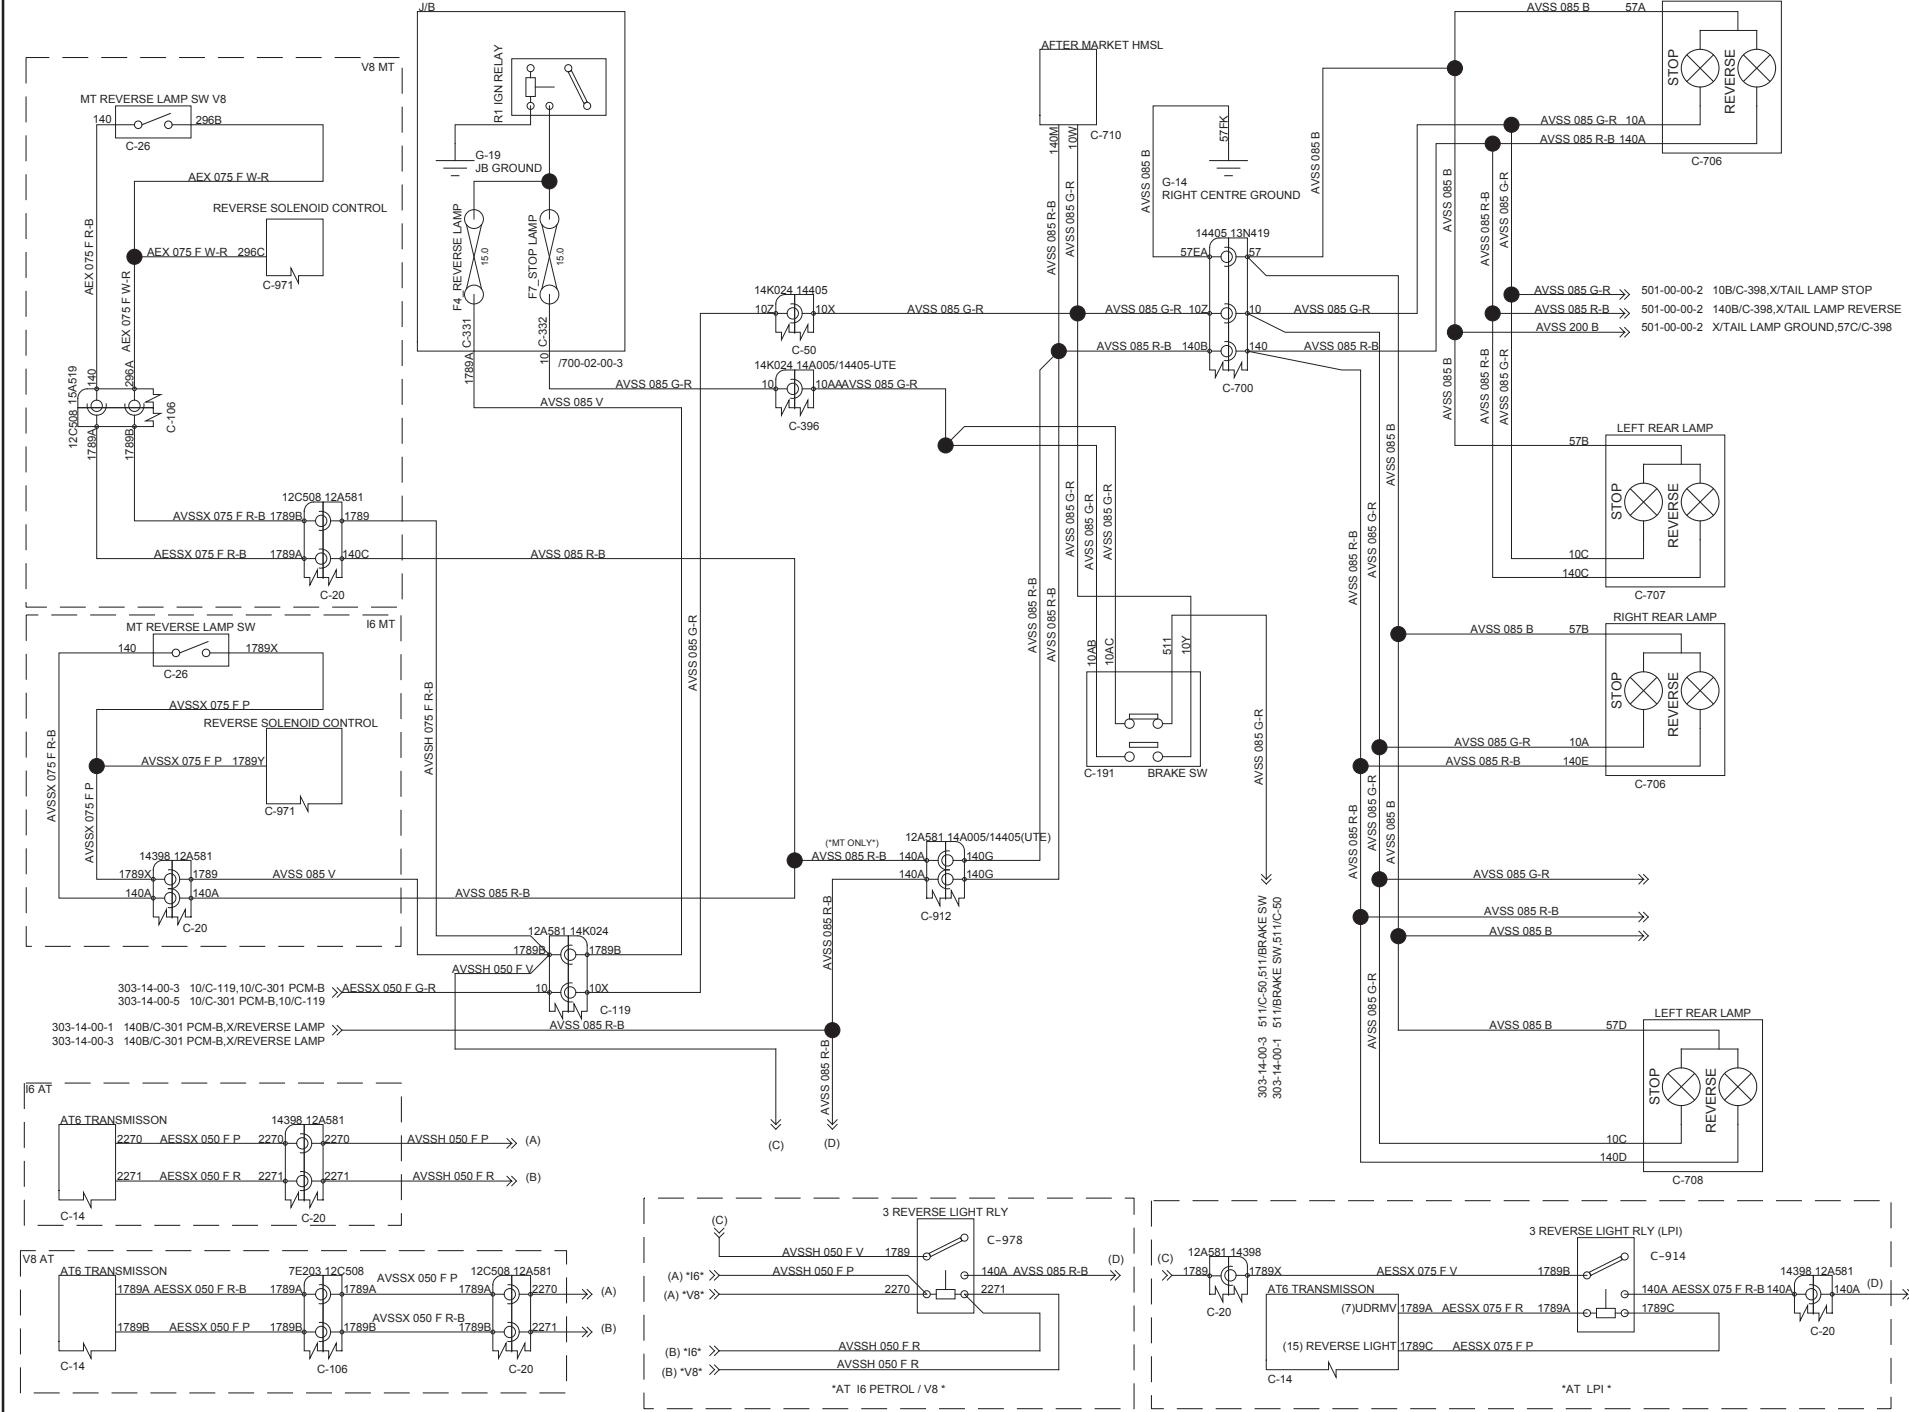



Login Tracking Code


SHT 46 OF 126

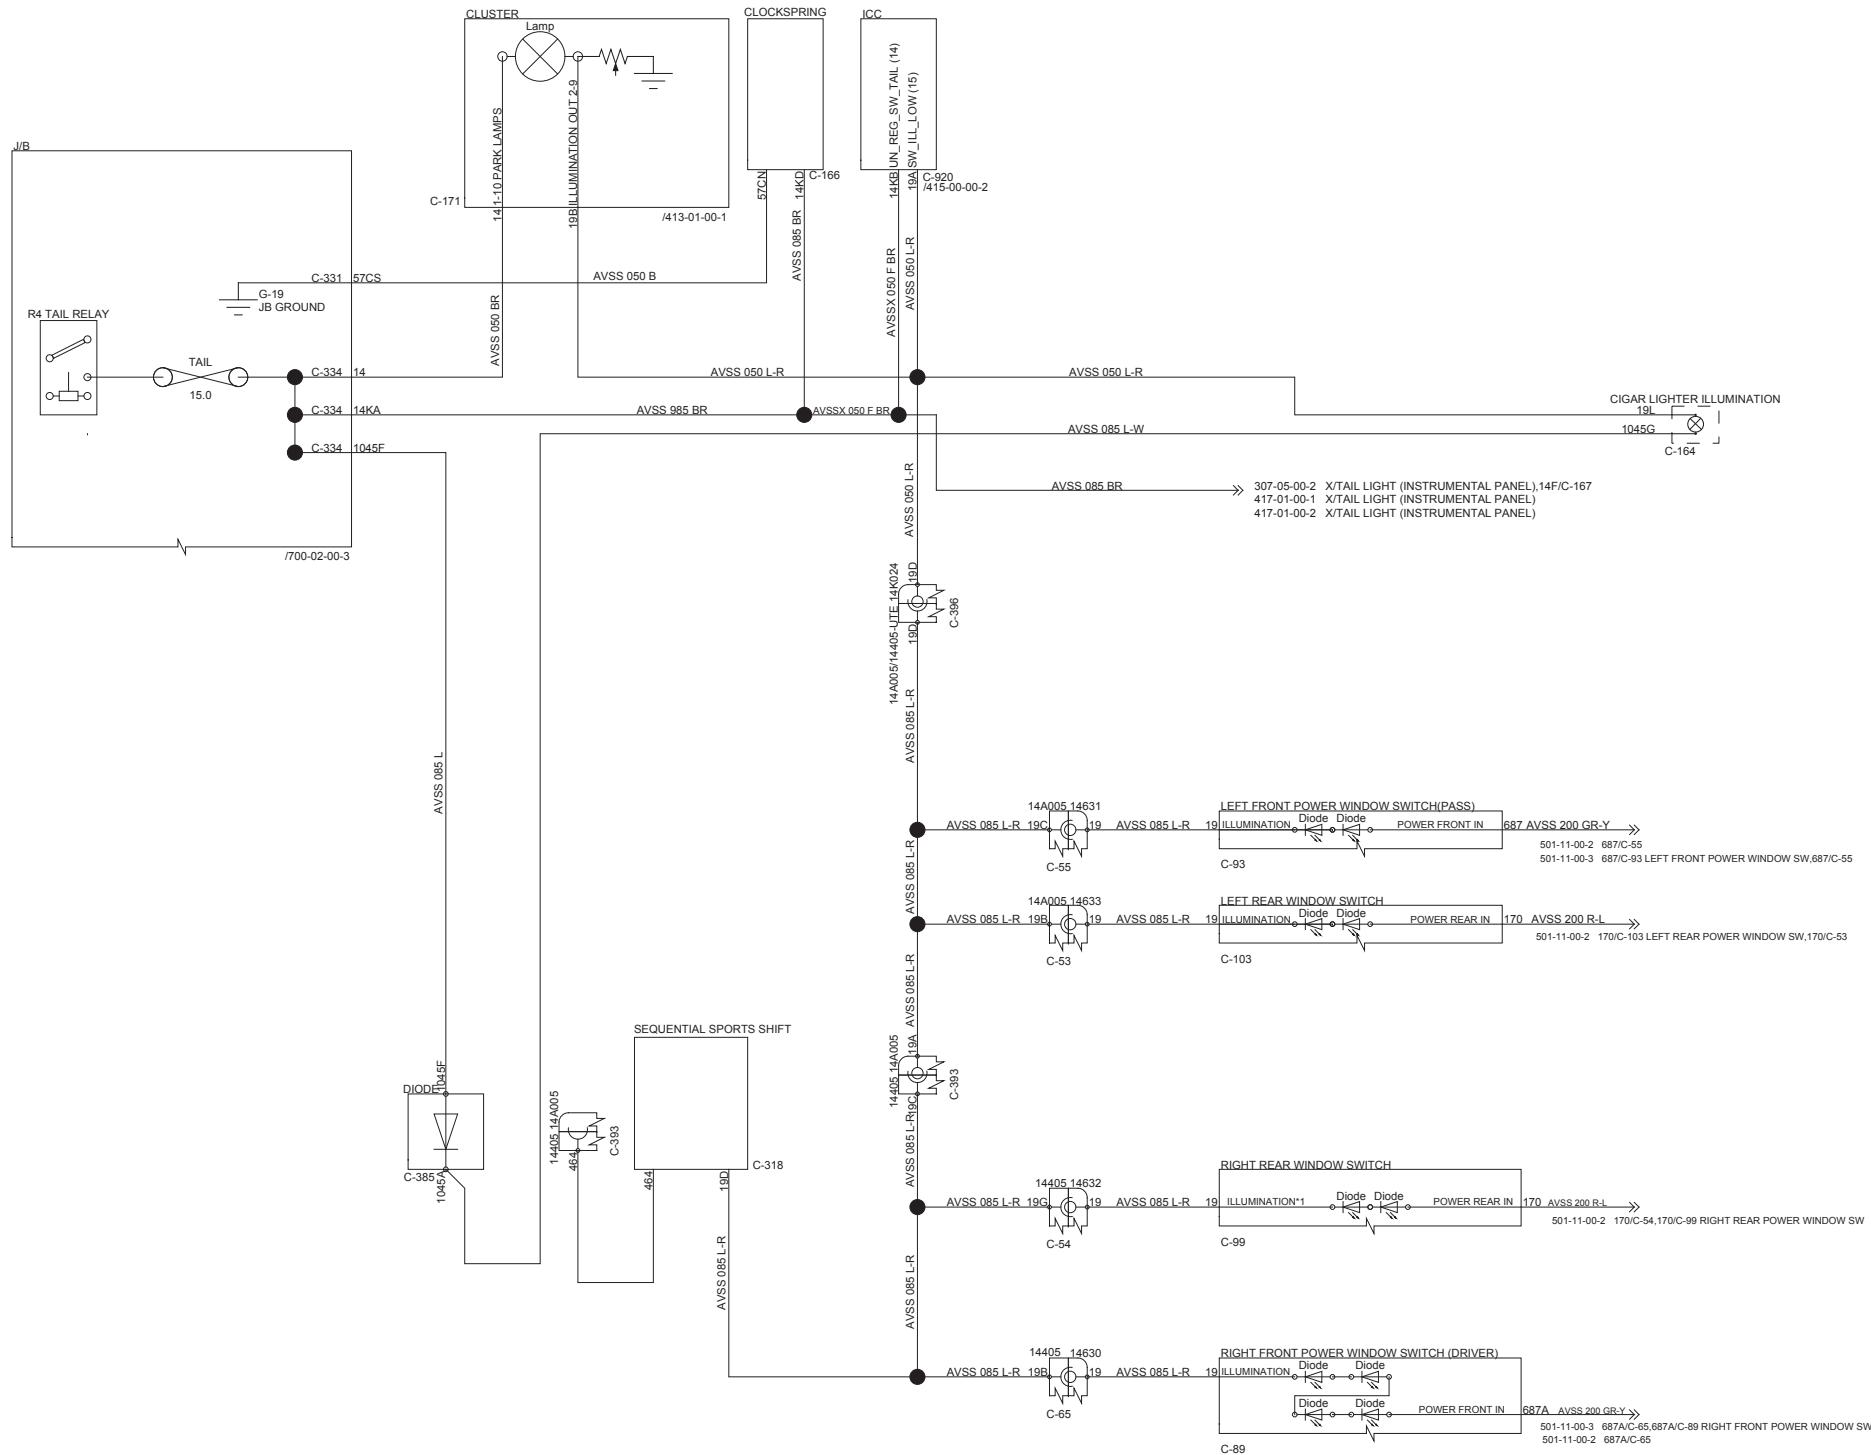


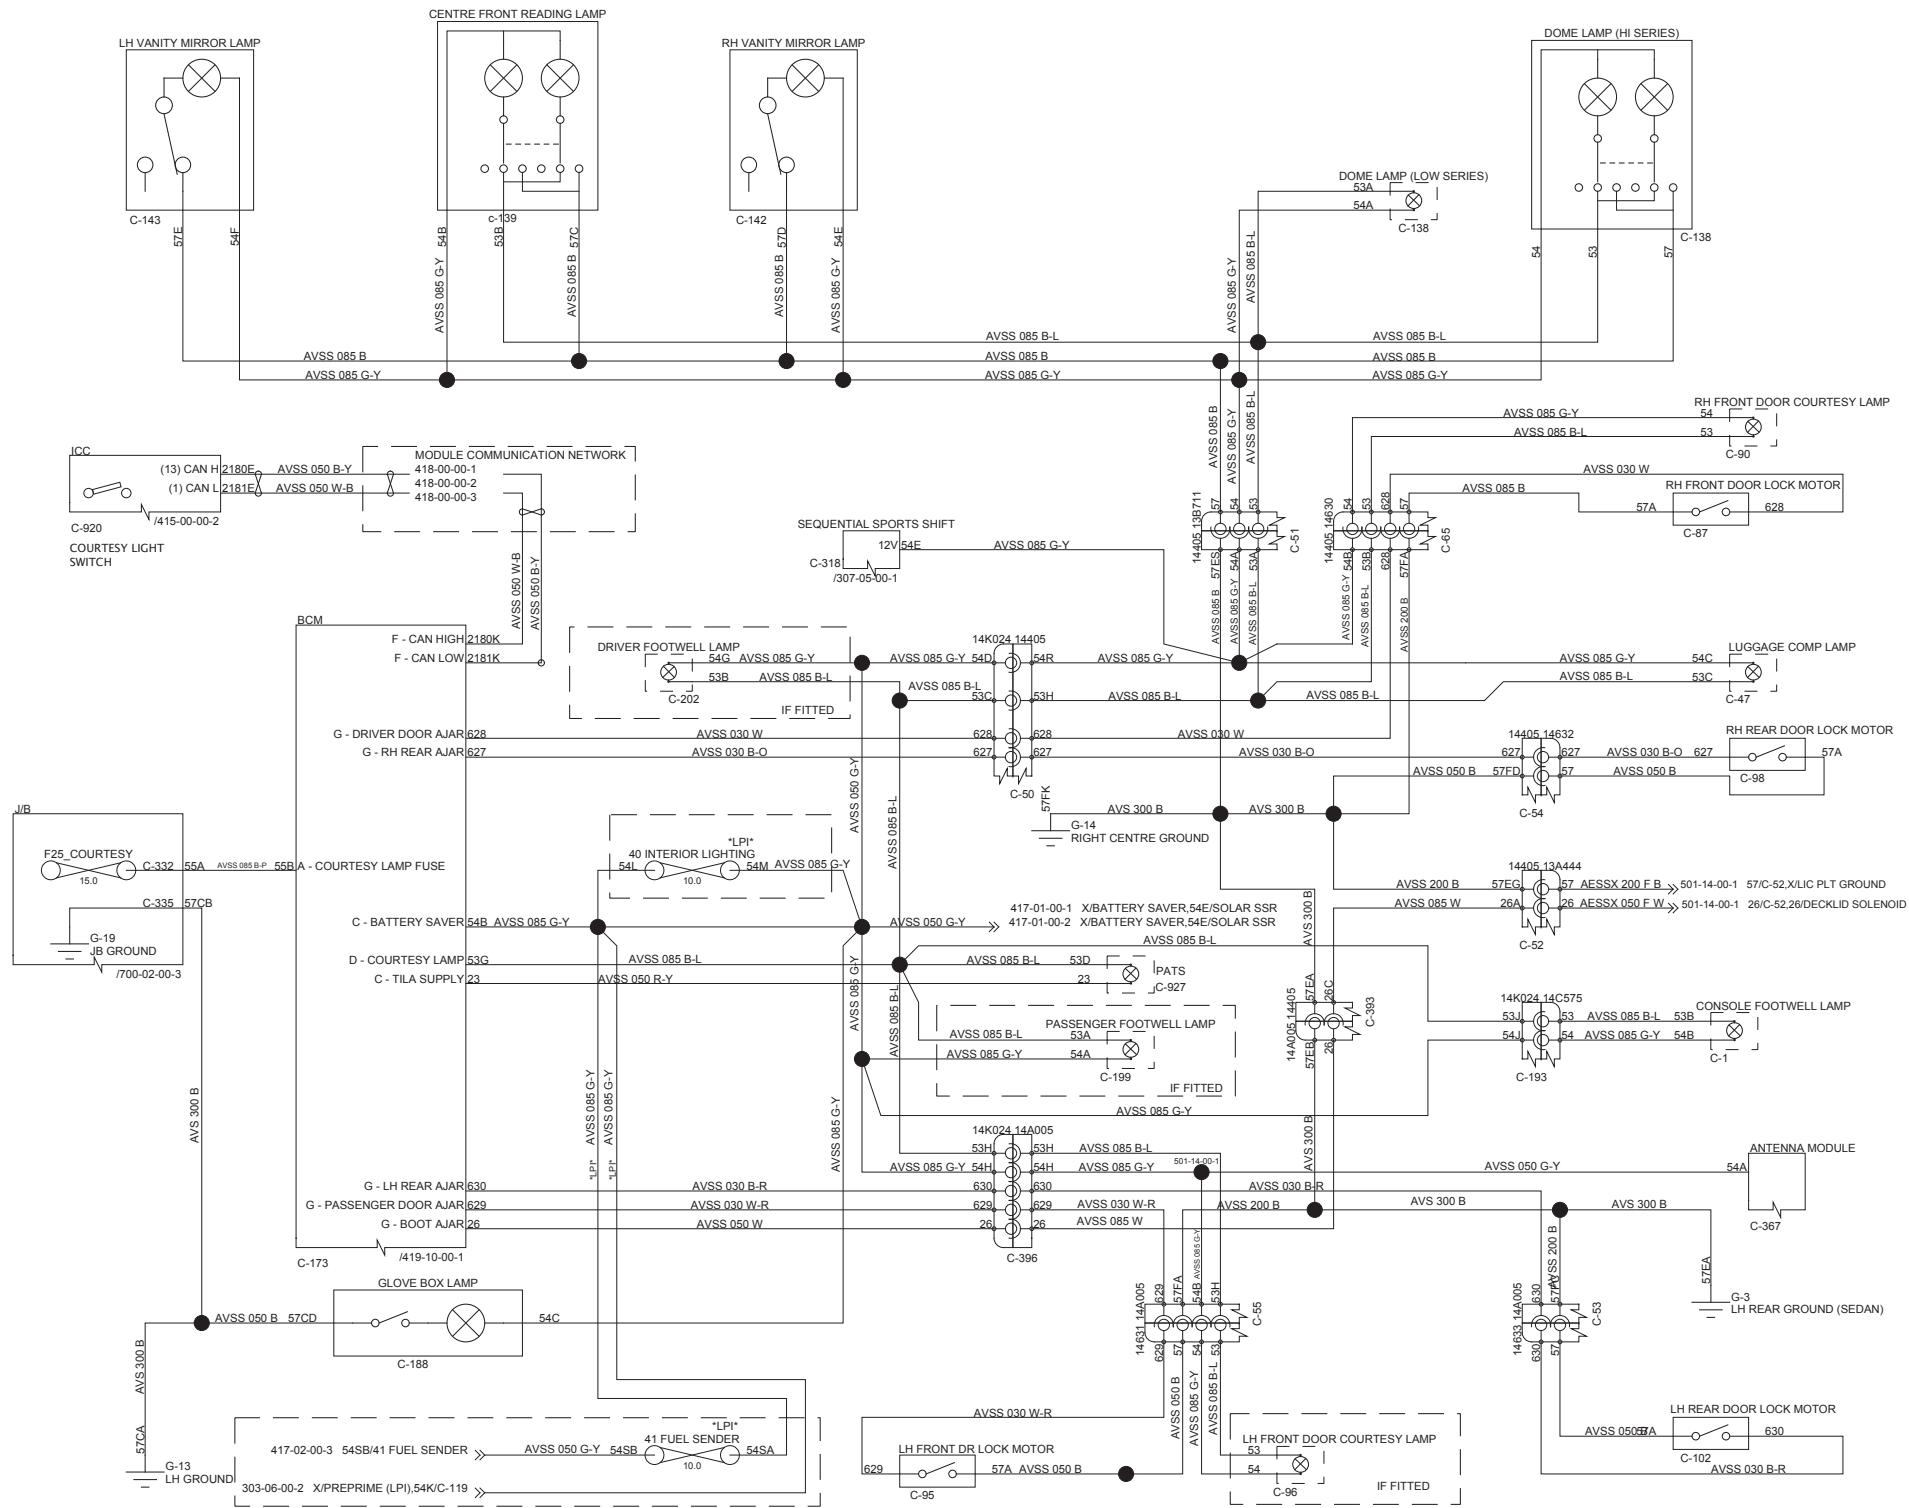

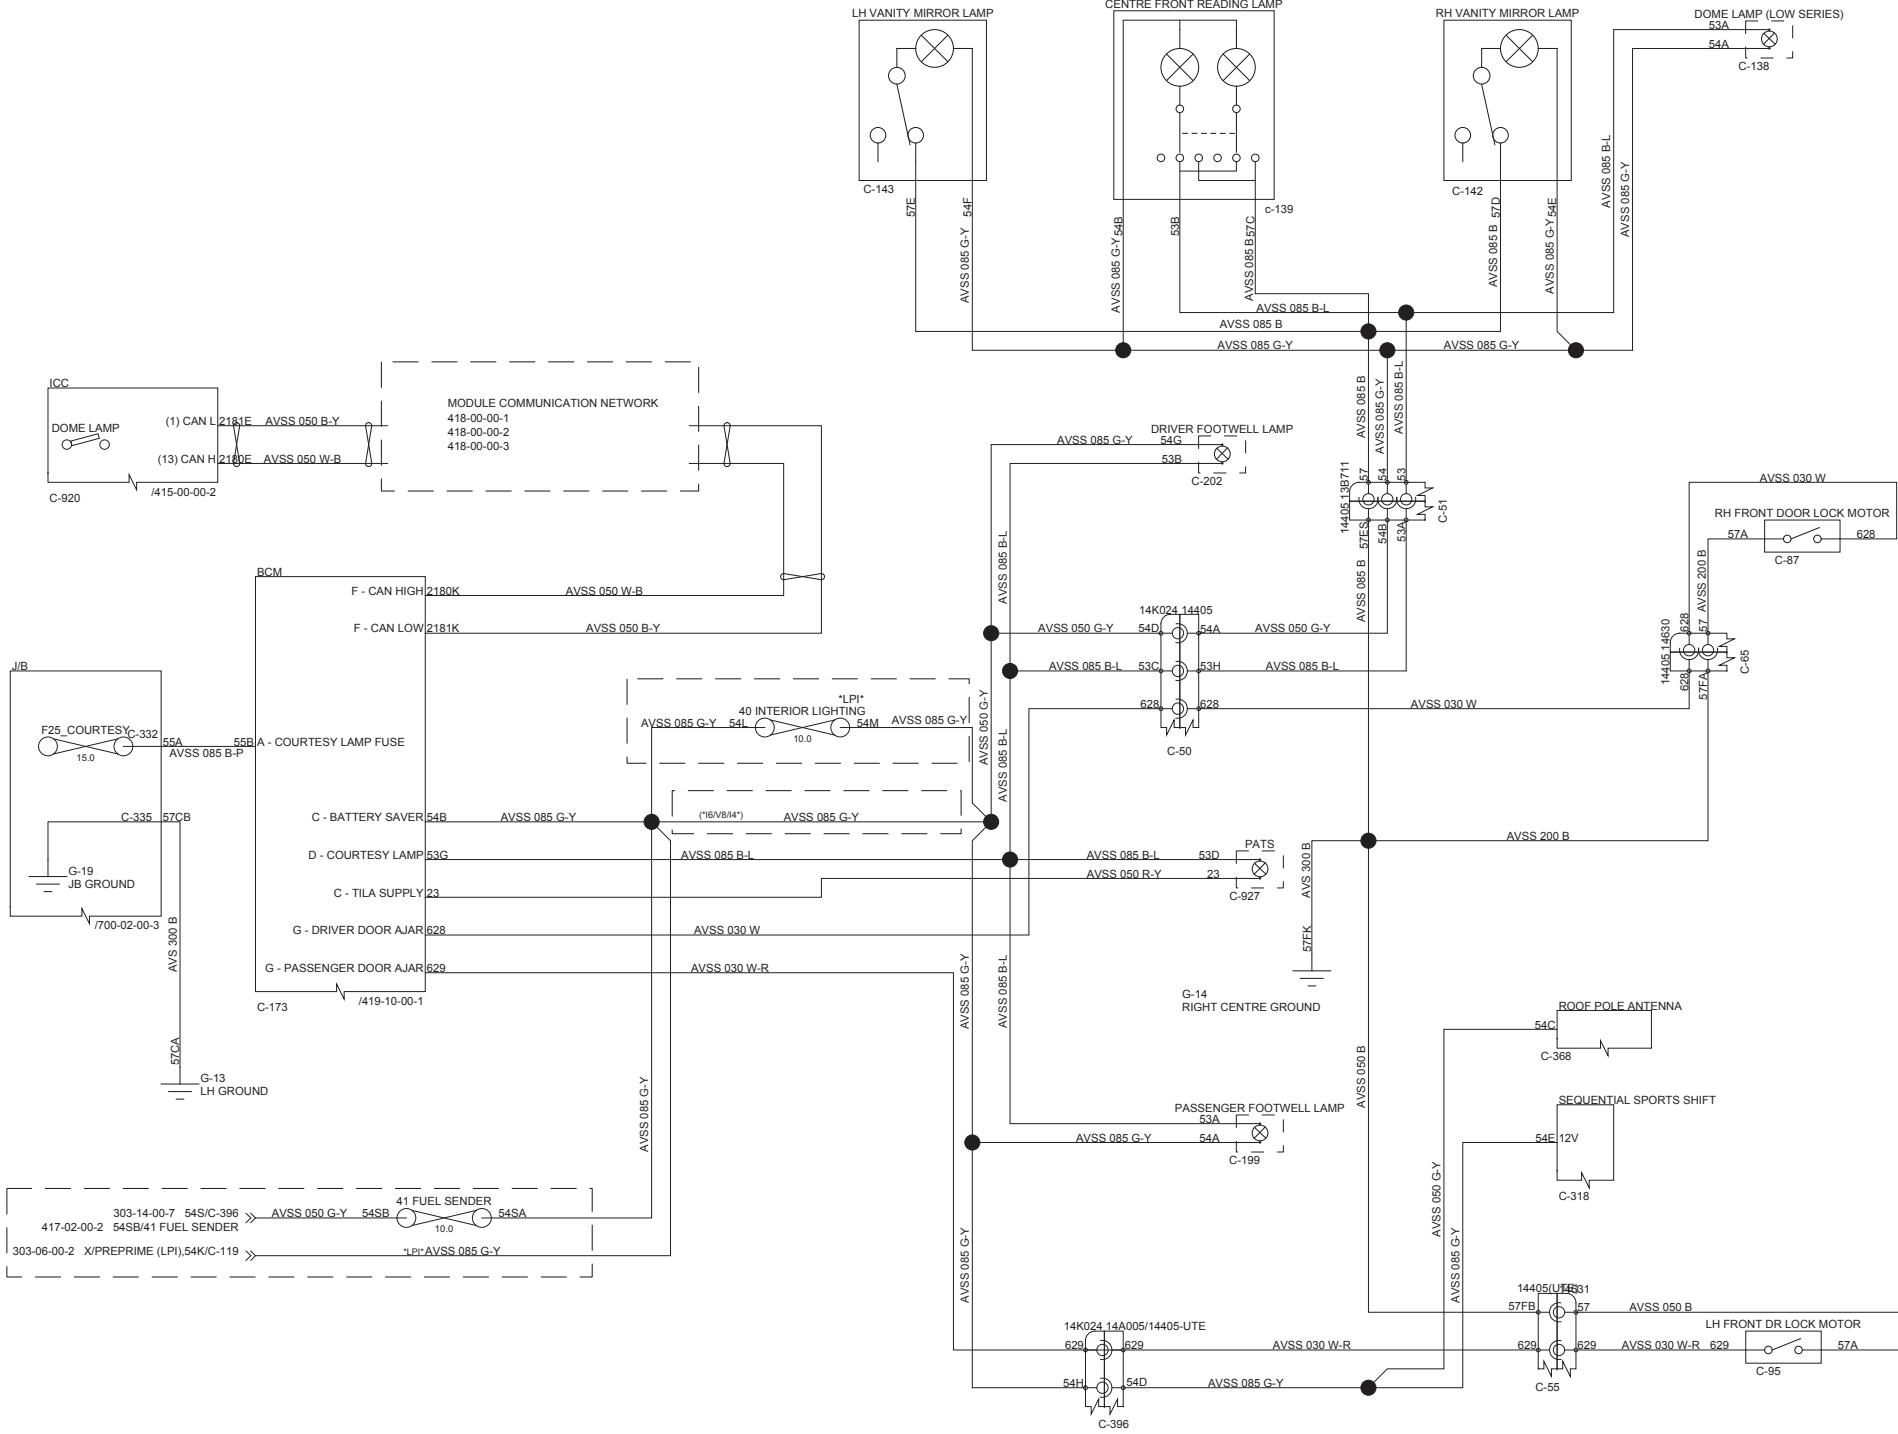

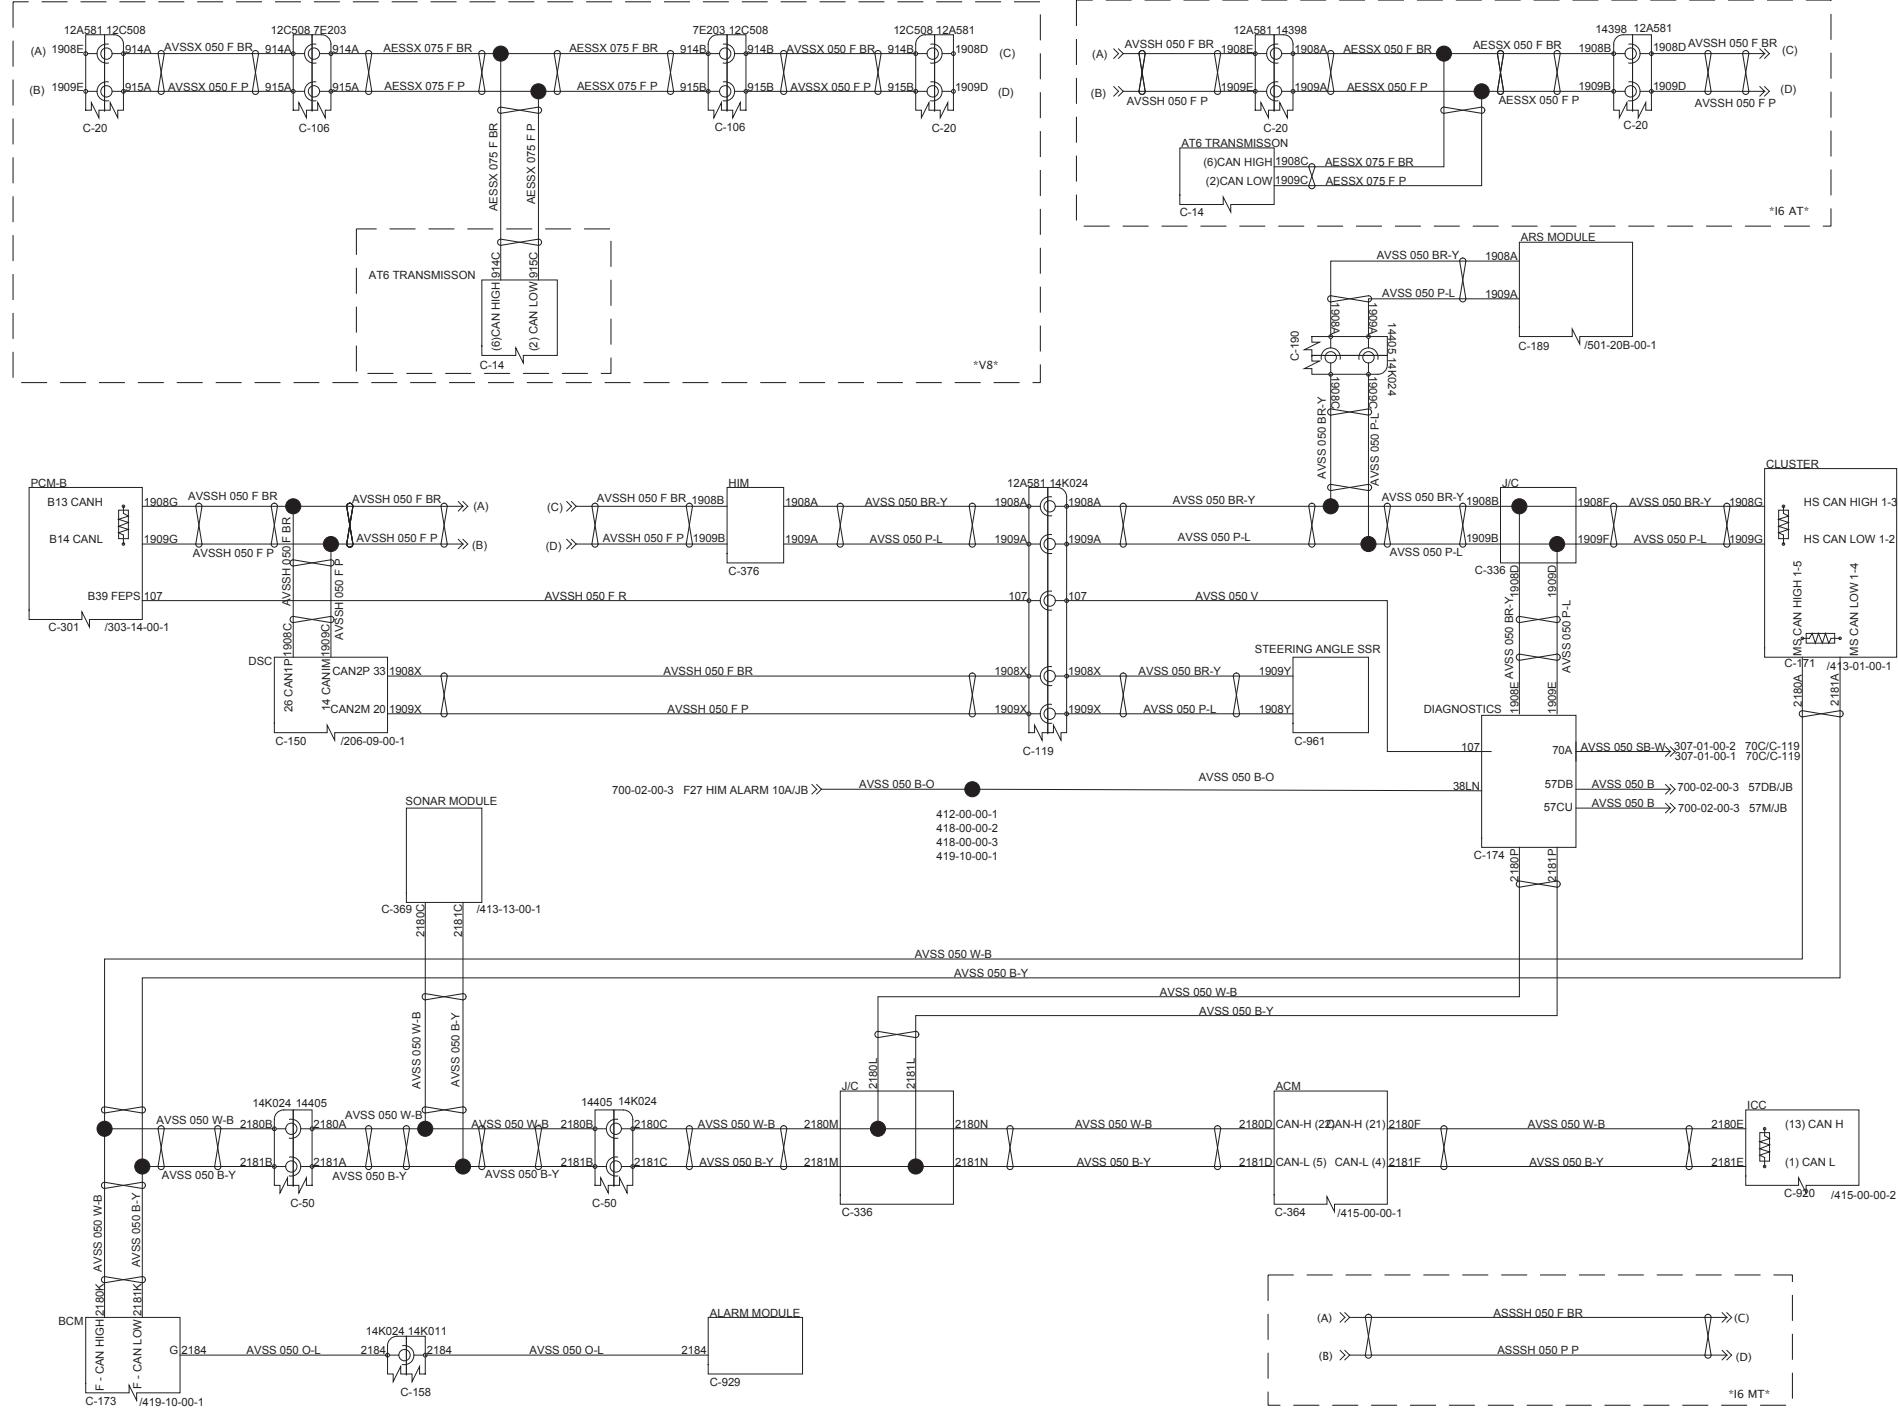

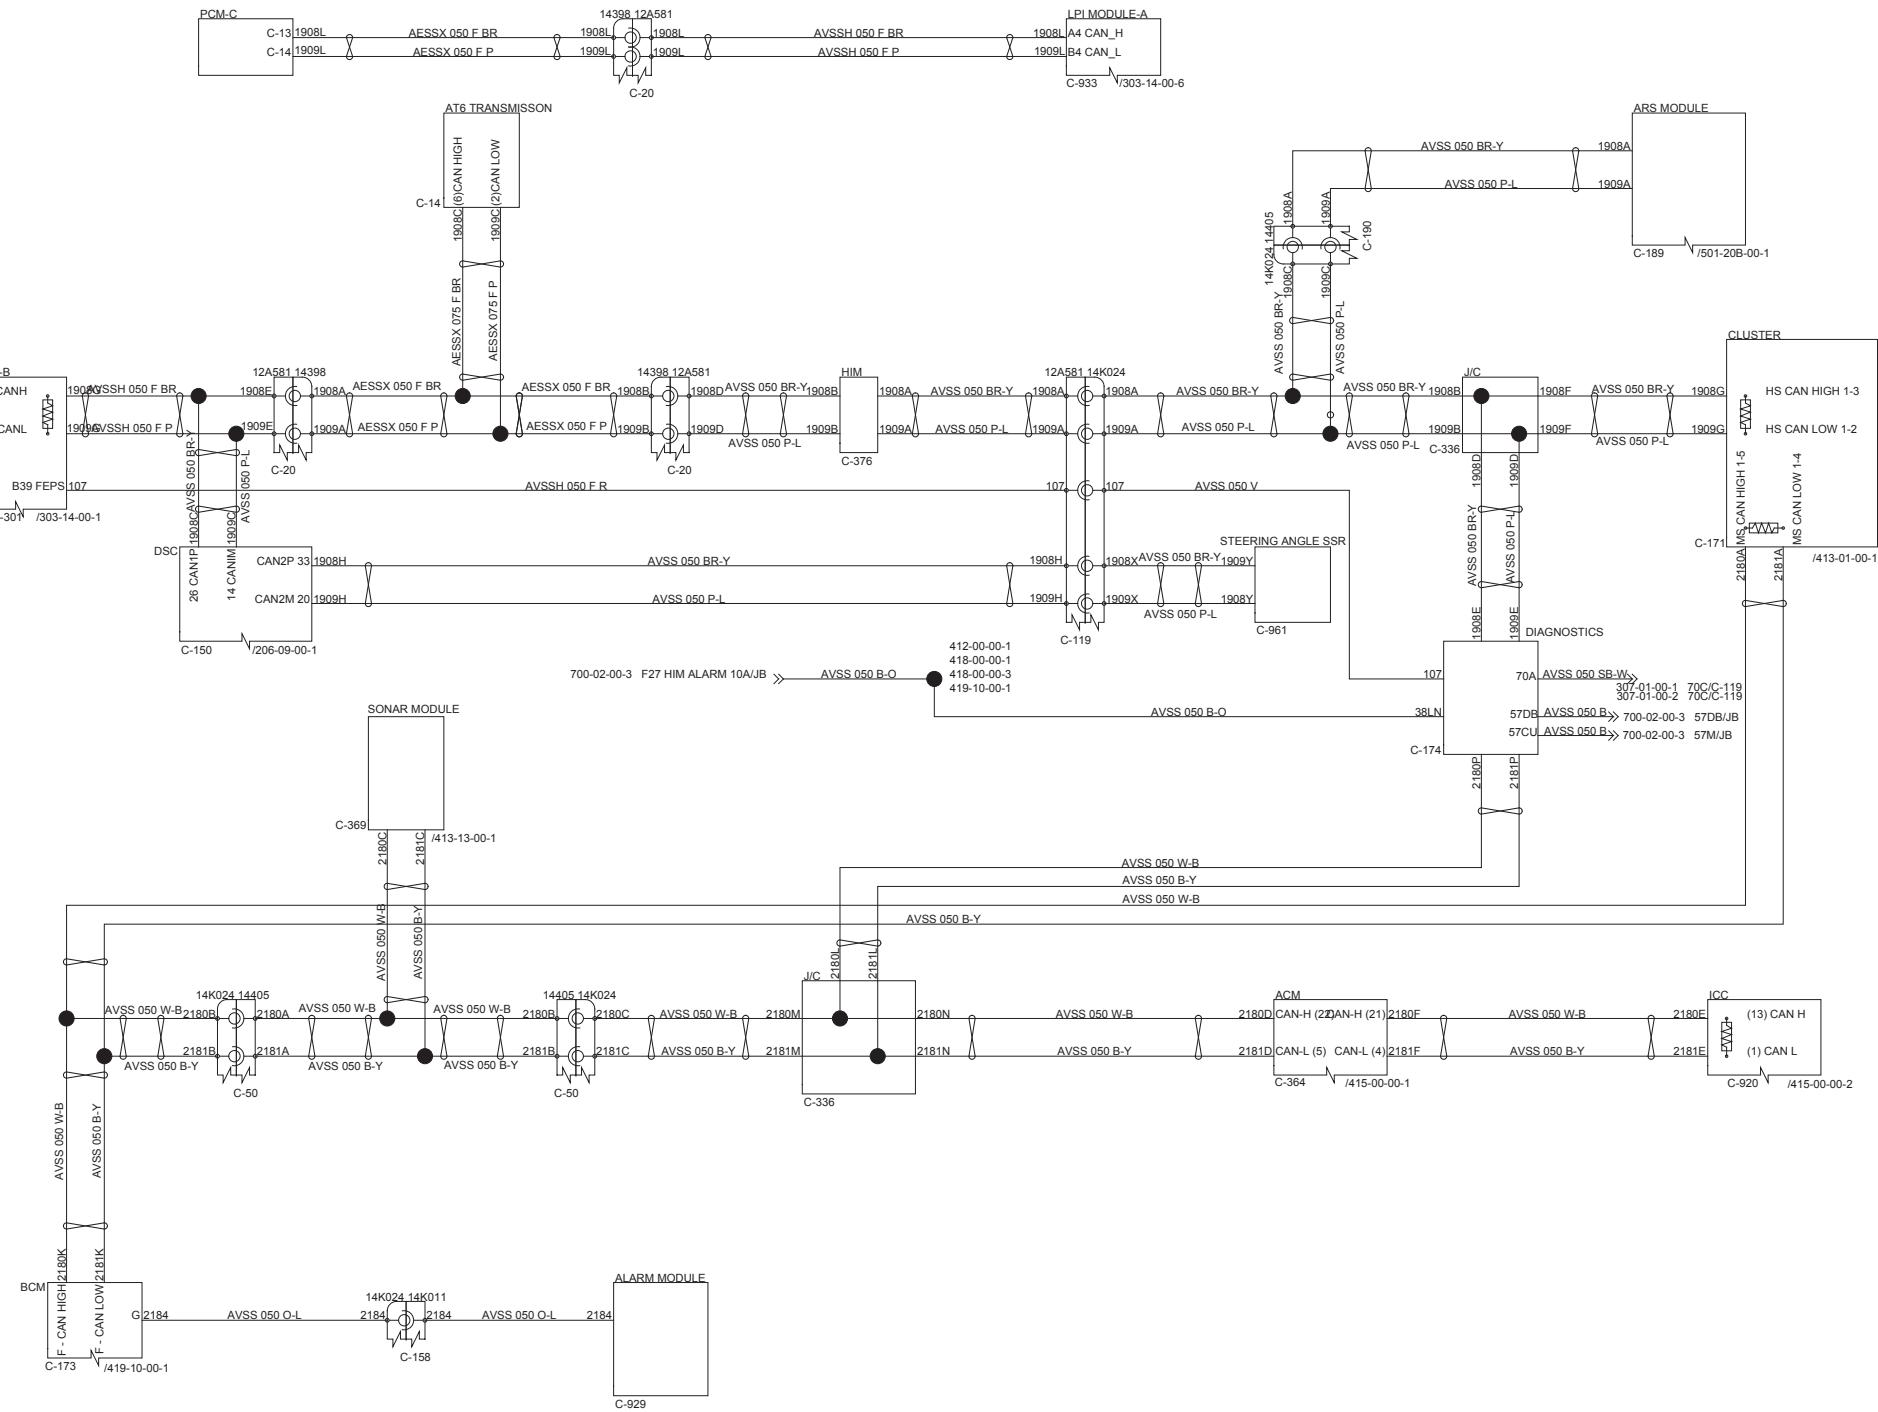

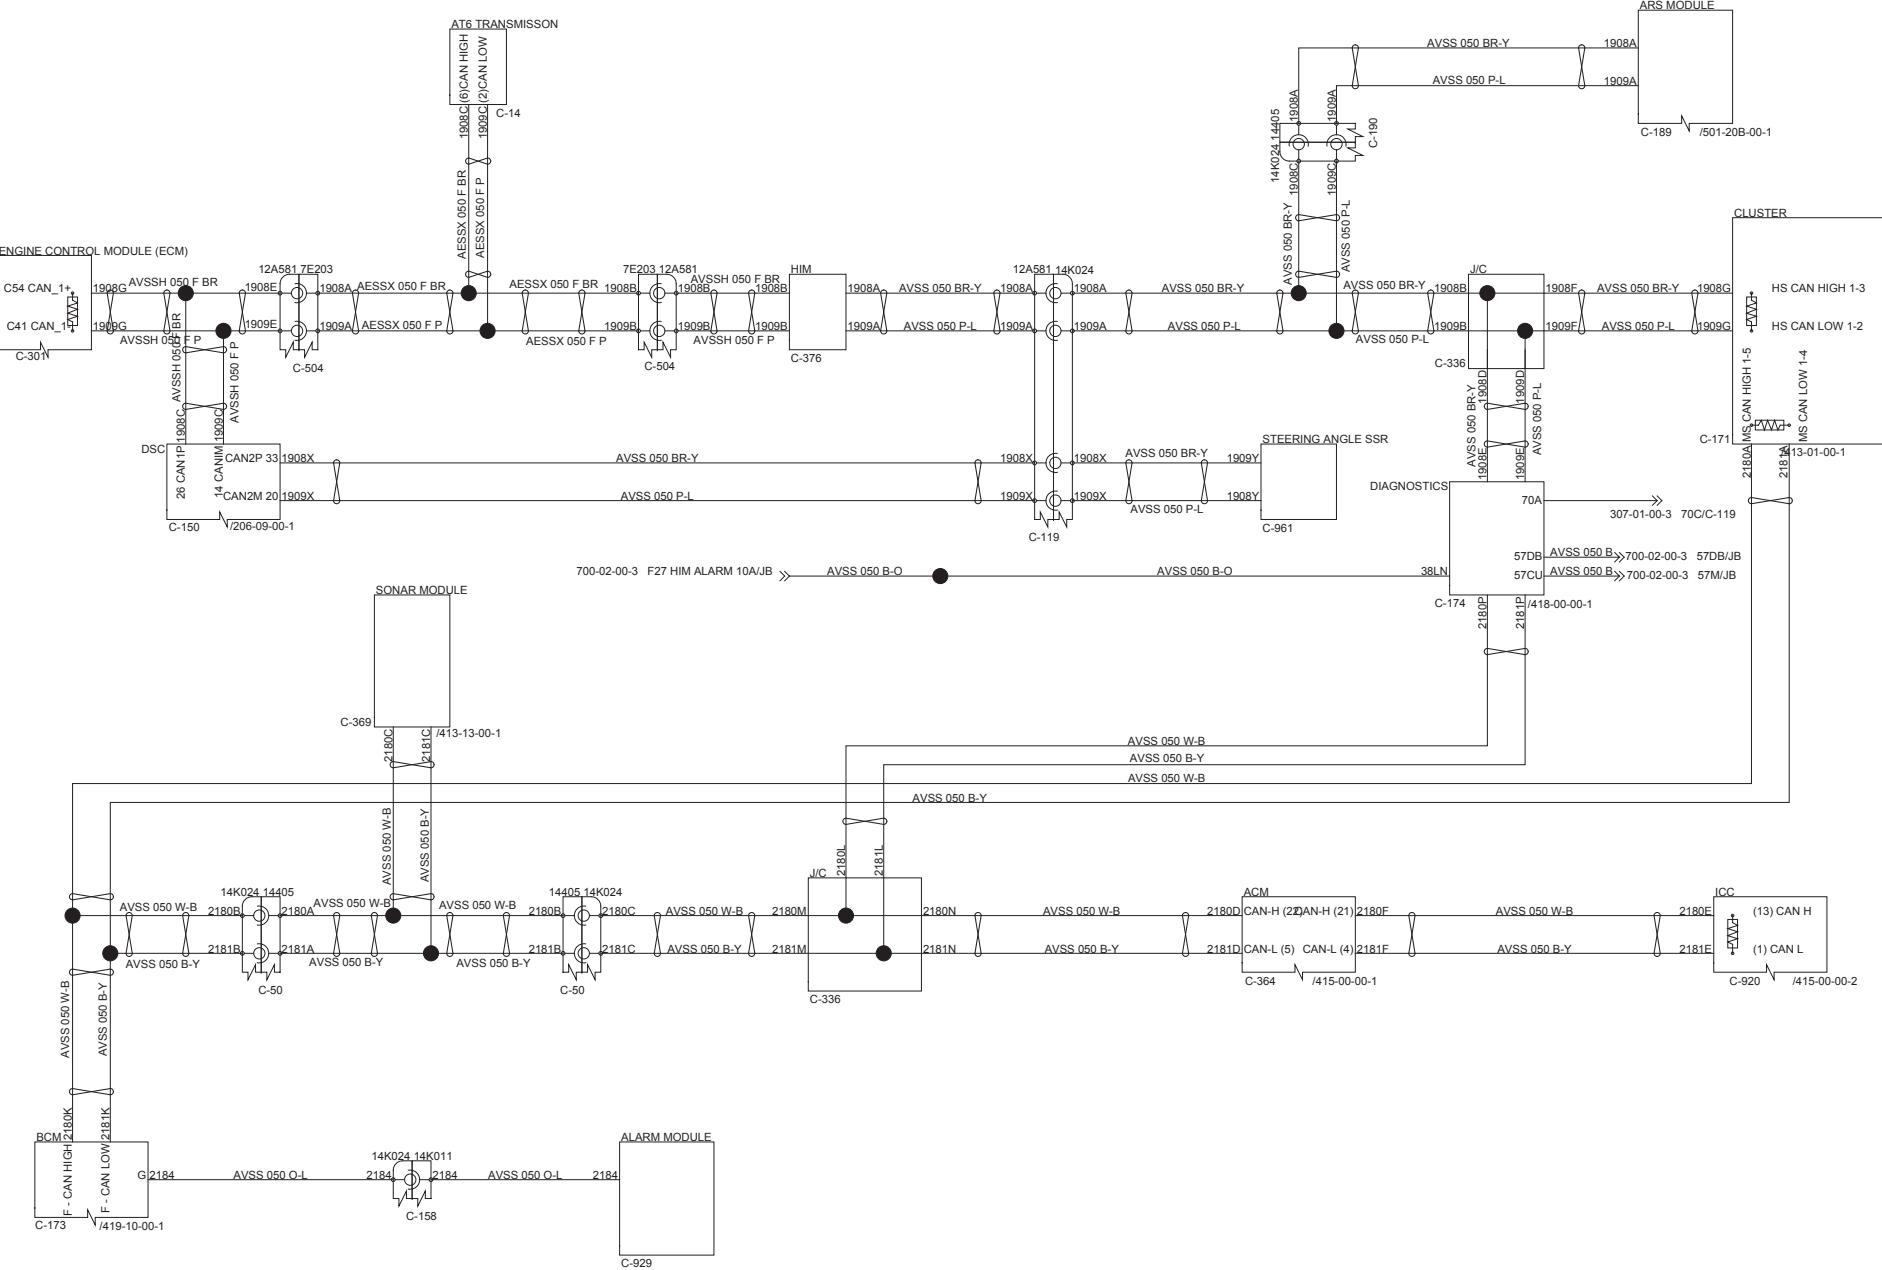


Login Tracking Code


419-10-00-1


Body Control Module


419-10-00-1

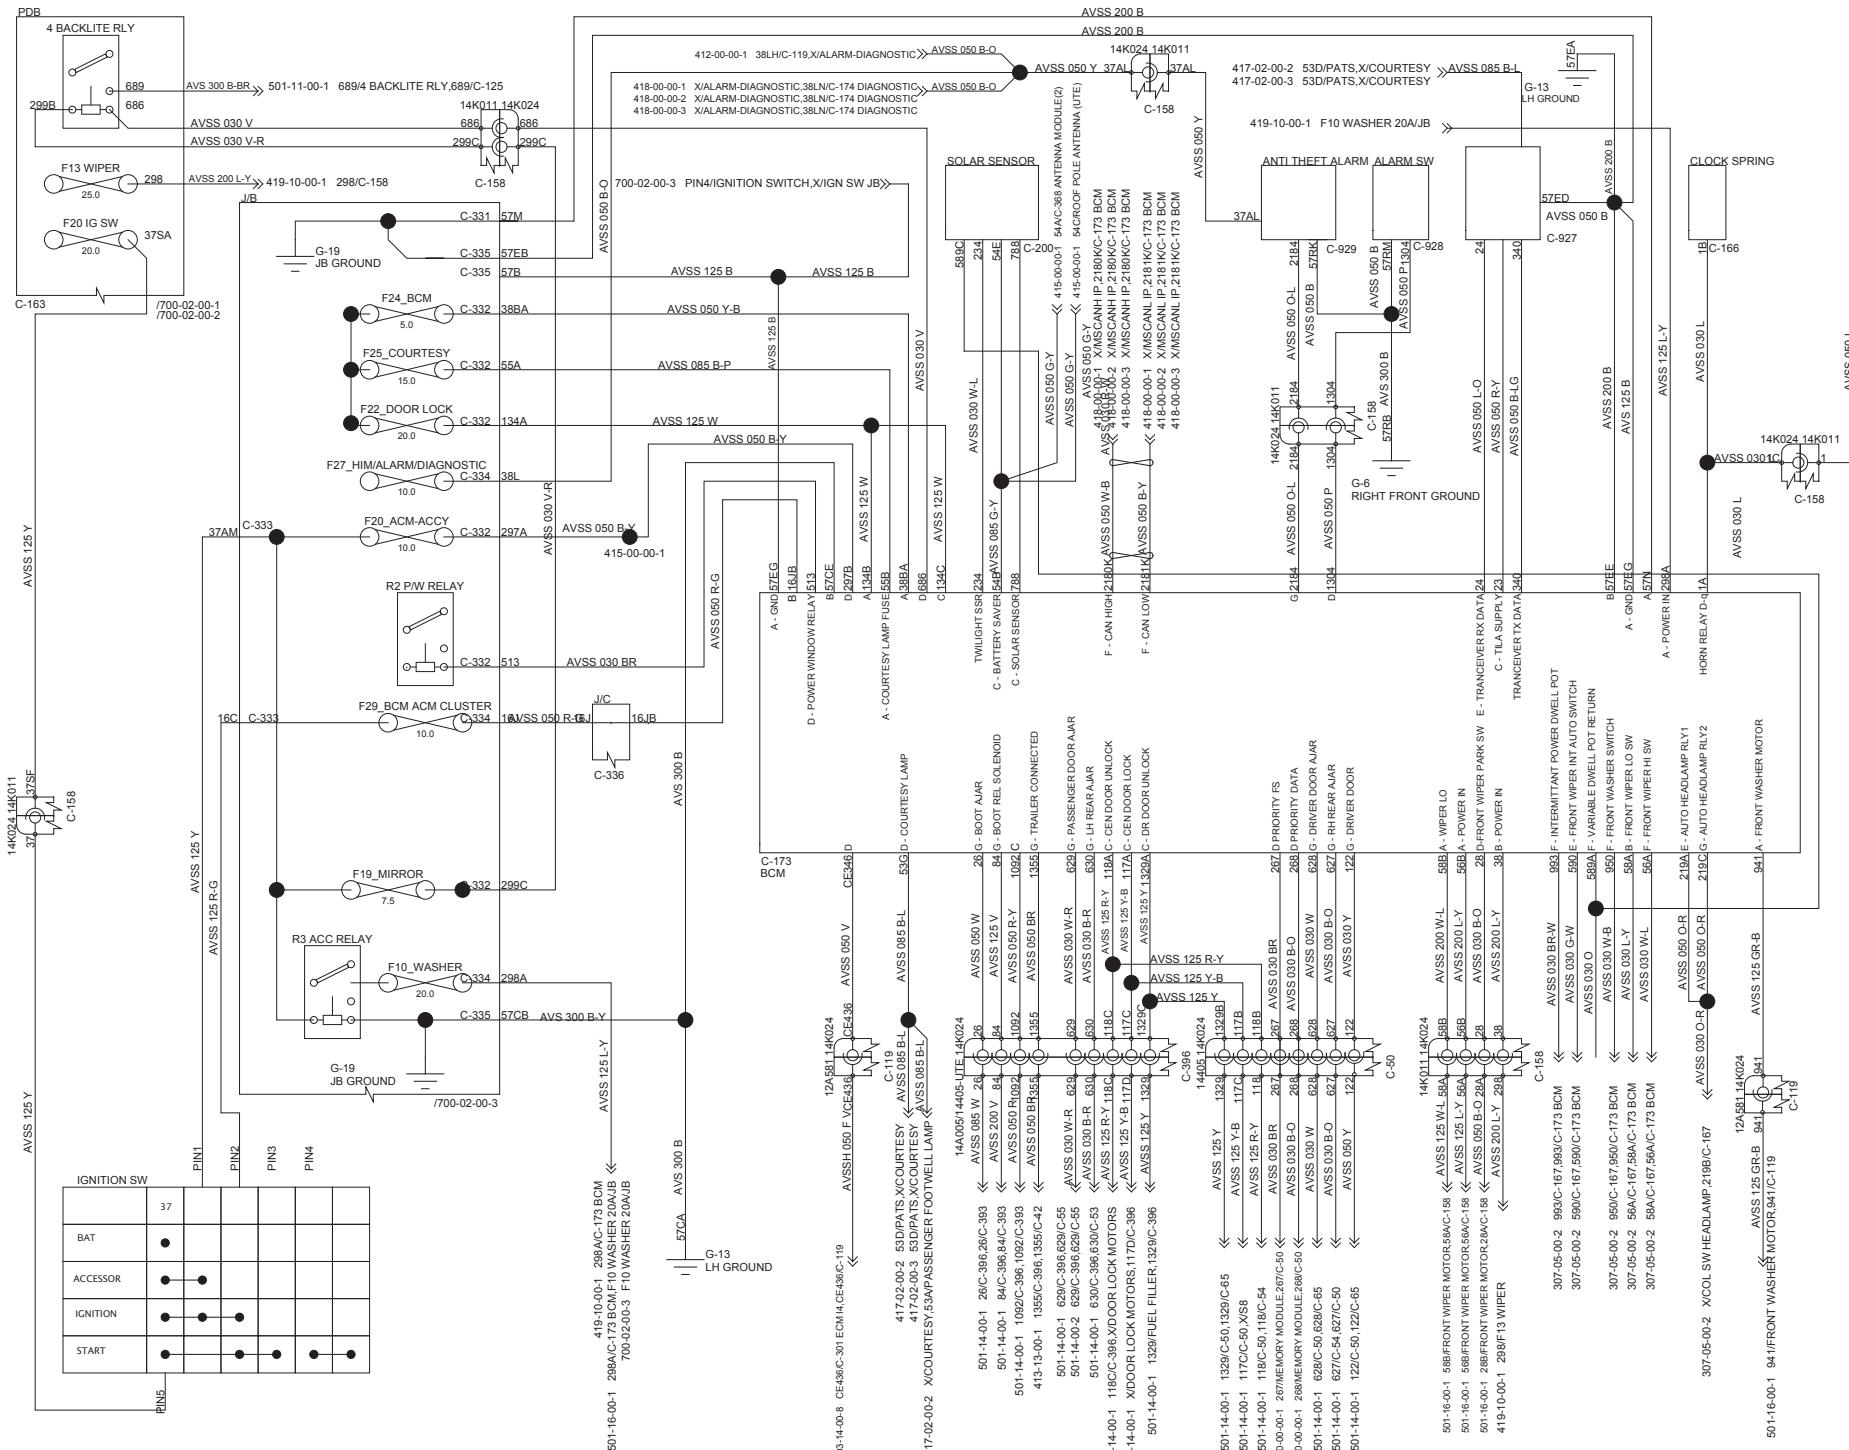

卷之三

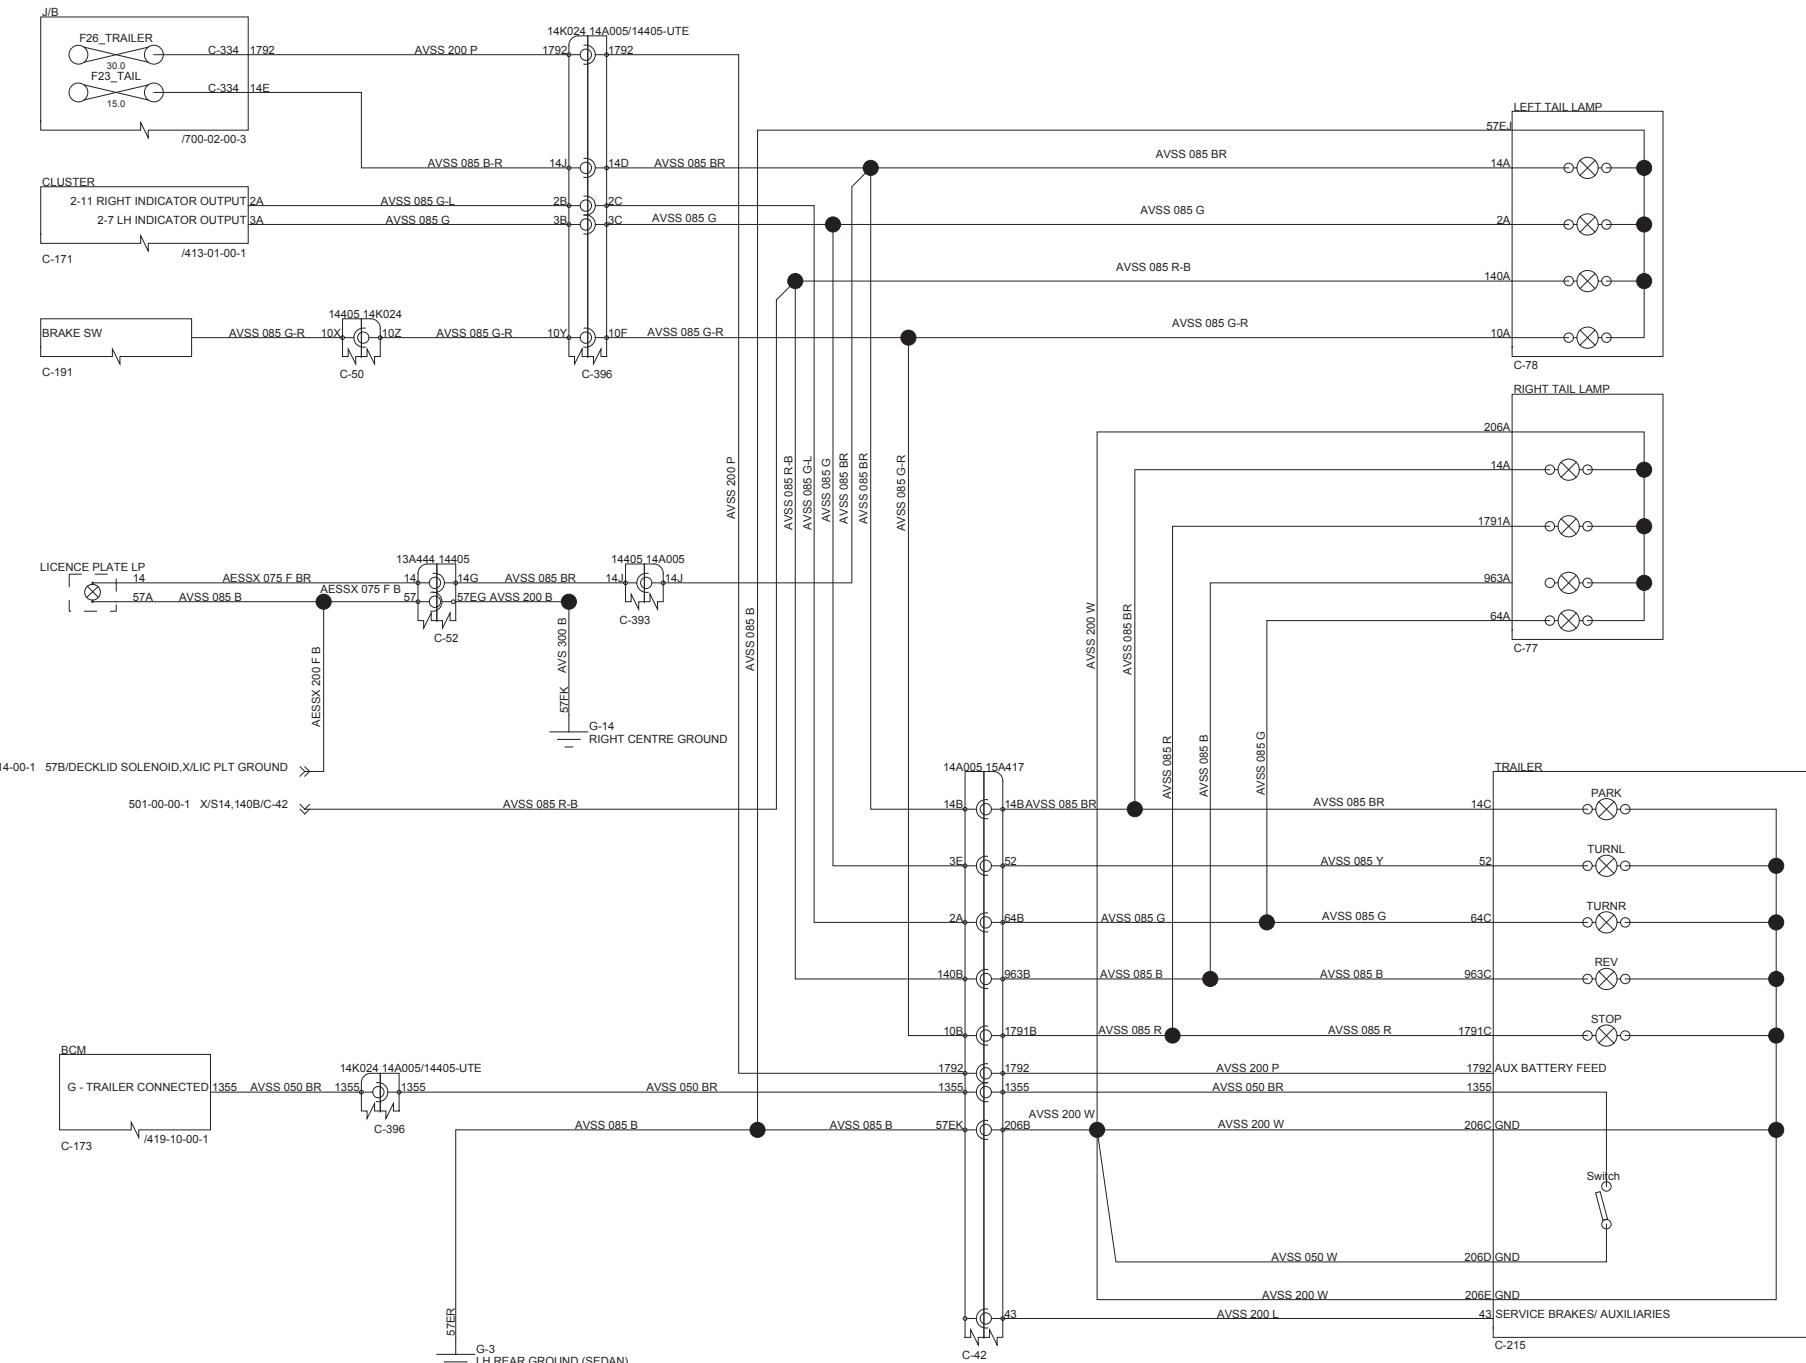

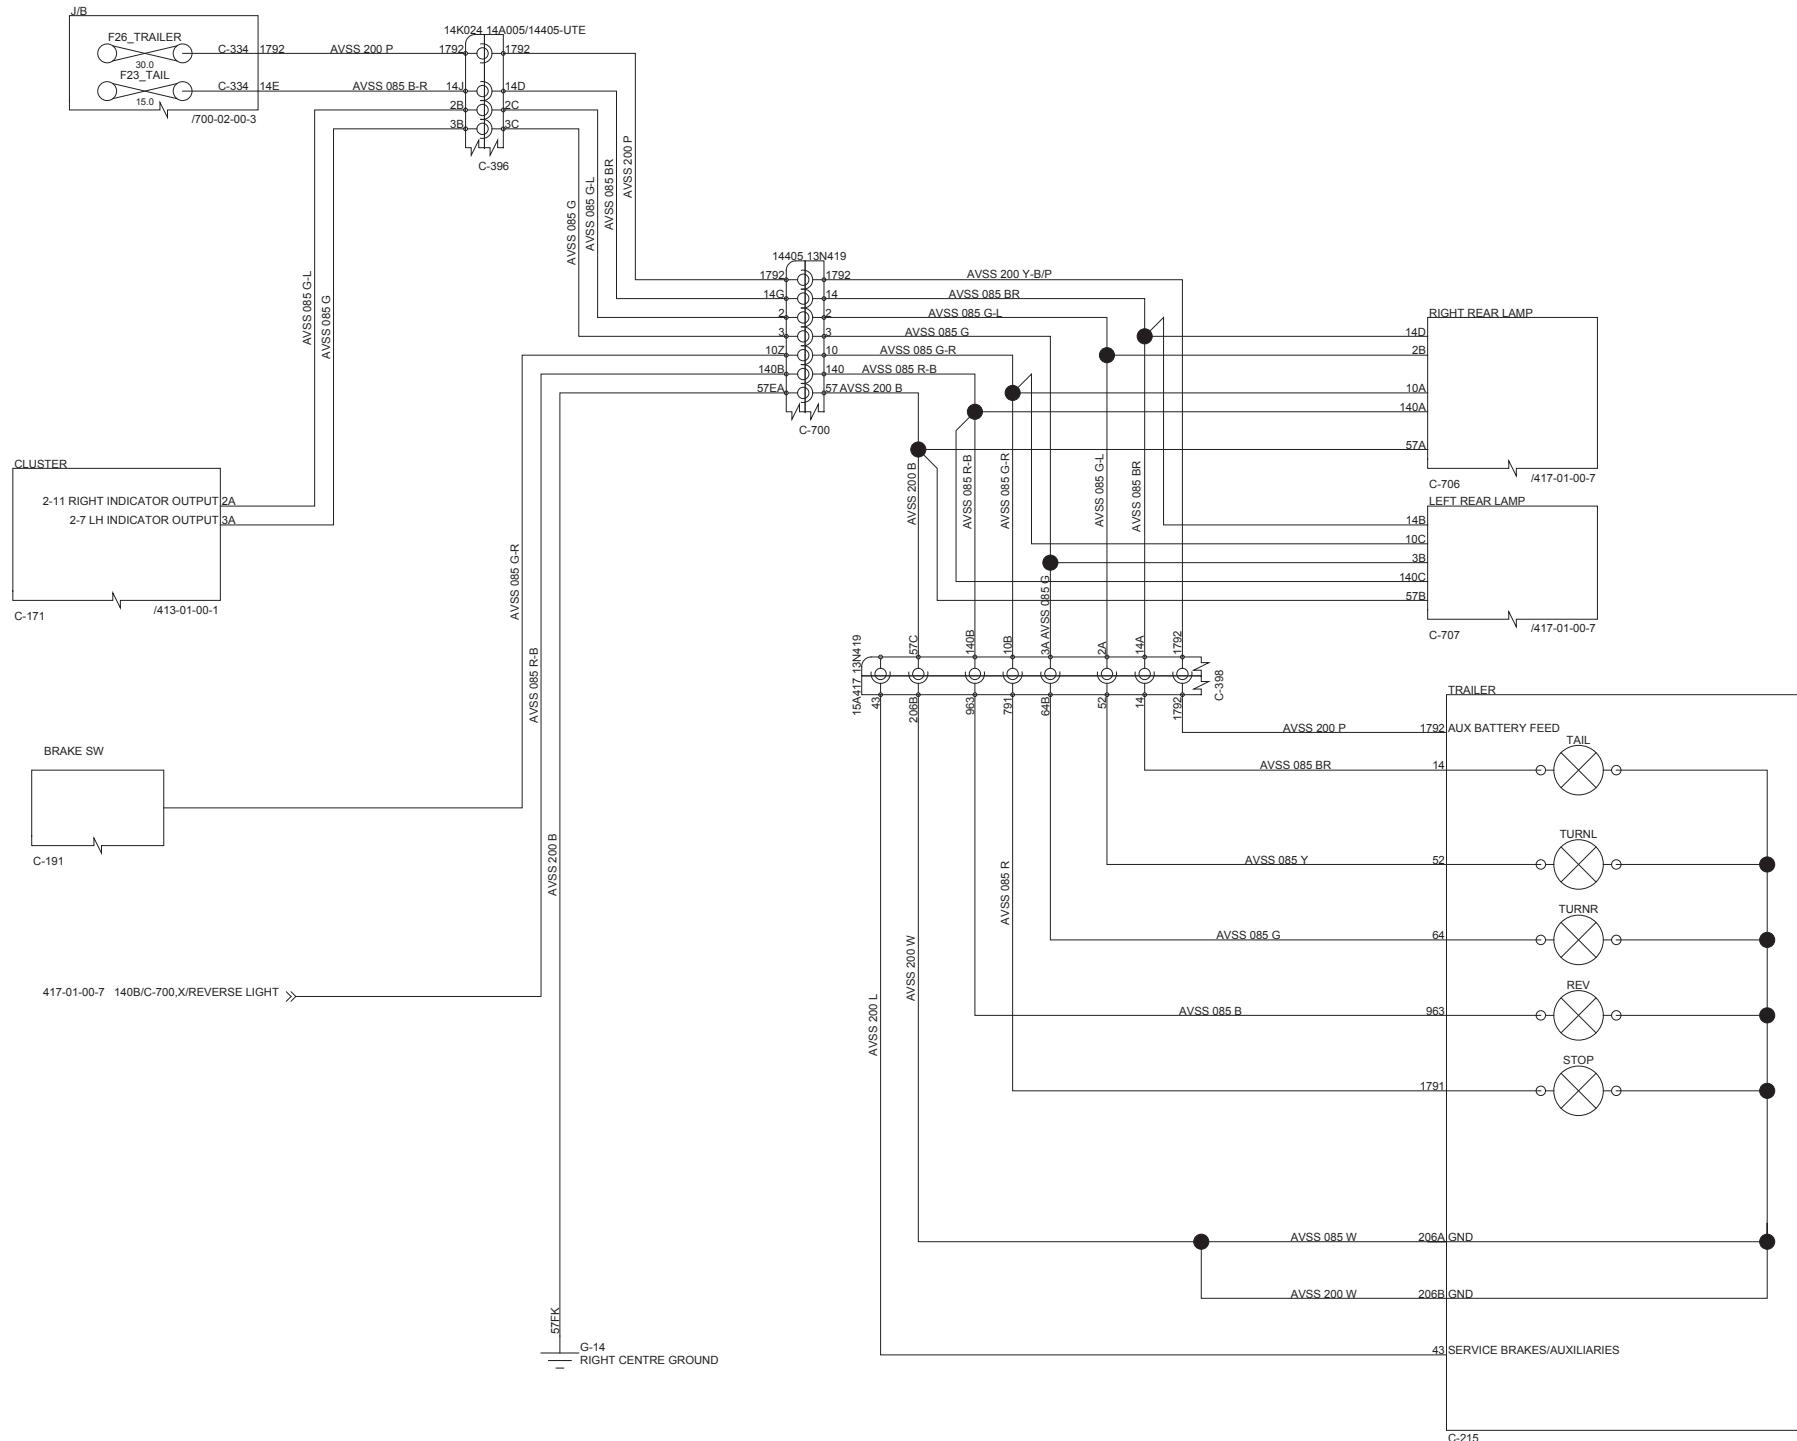

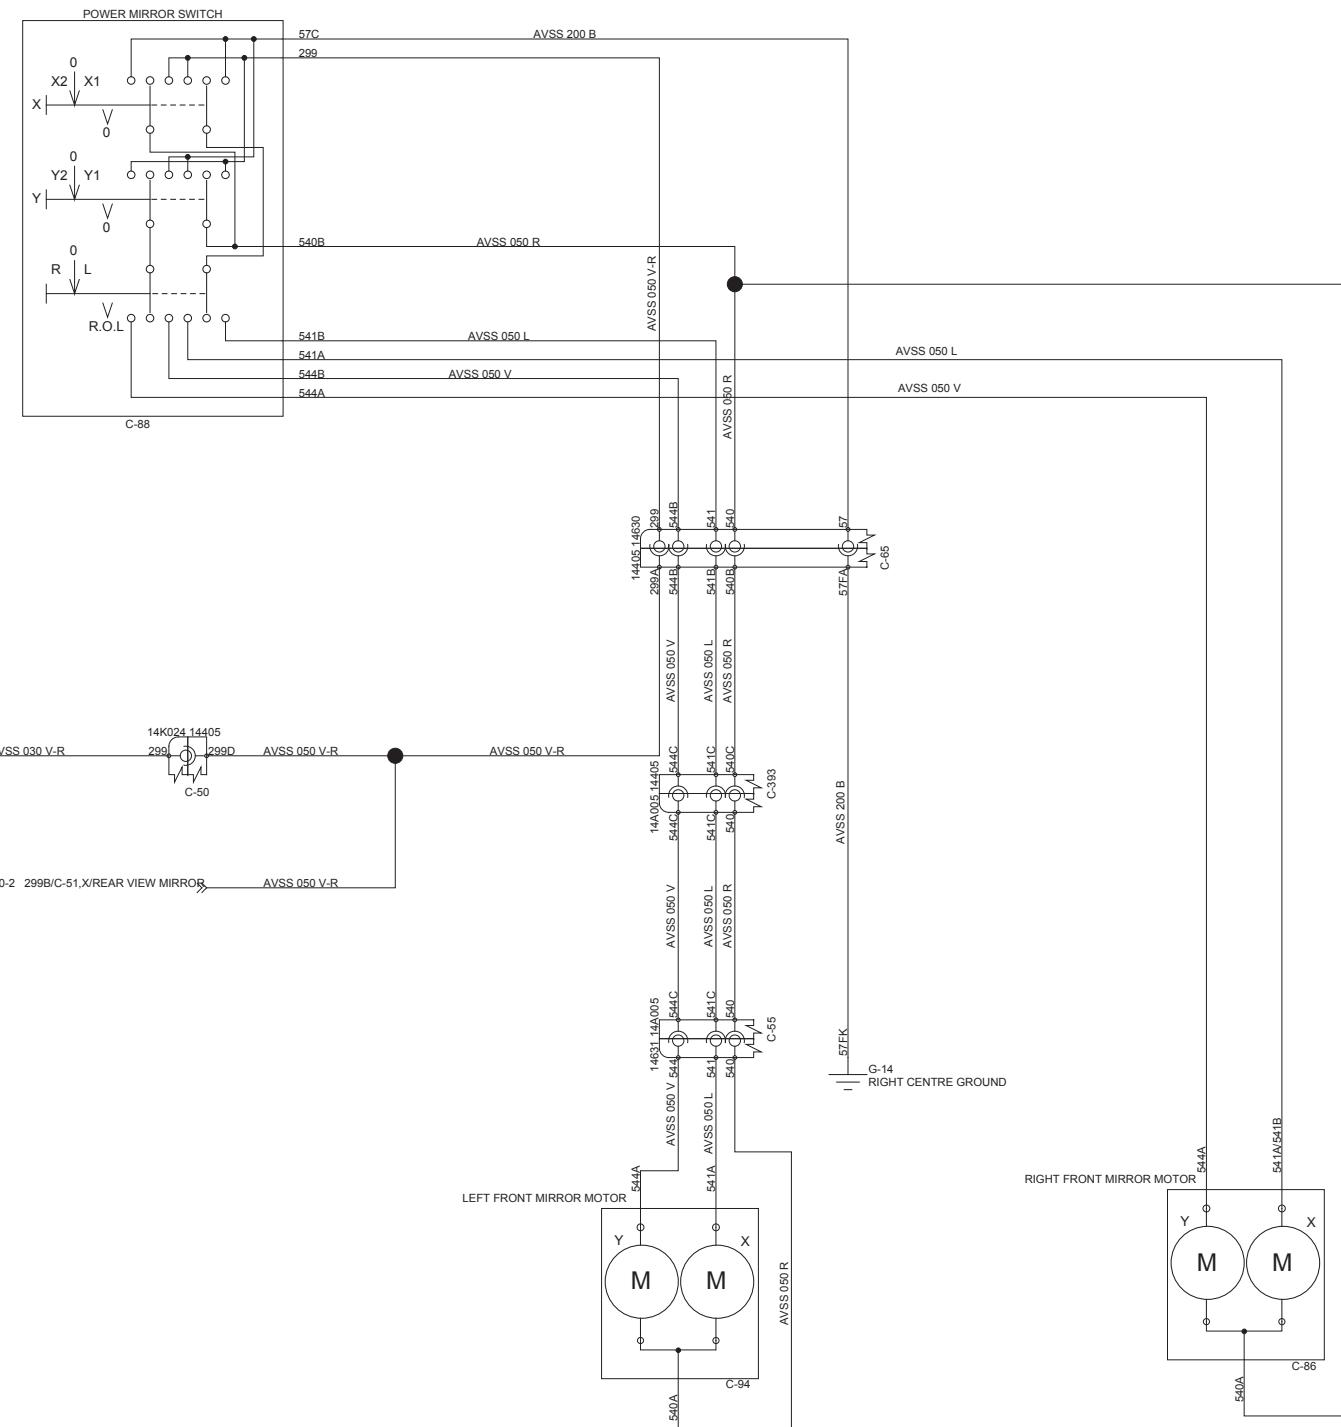


Login Tracking Code

501-09-00-2

Rear View Mirrors - Electrochromatic

501-09-00-2

417-01-00-6 X/REVERSE LIGHT TO TAIL LAMPS,X/REVERSE LIGHT
417-01-00-7 140B/C-700,X/REVERSE LIGHT

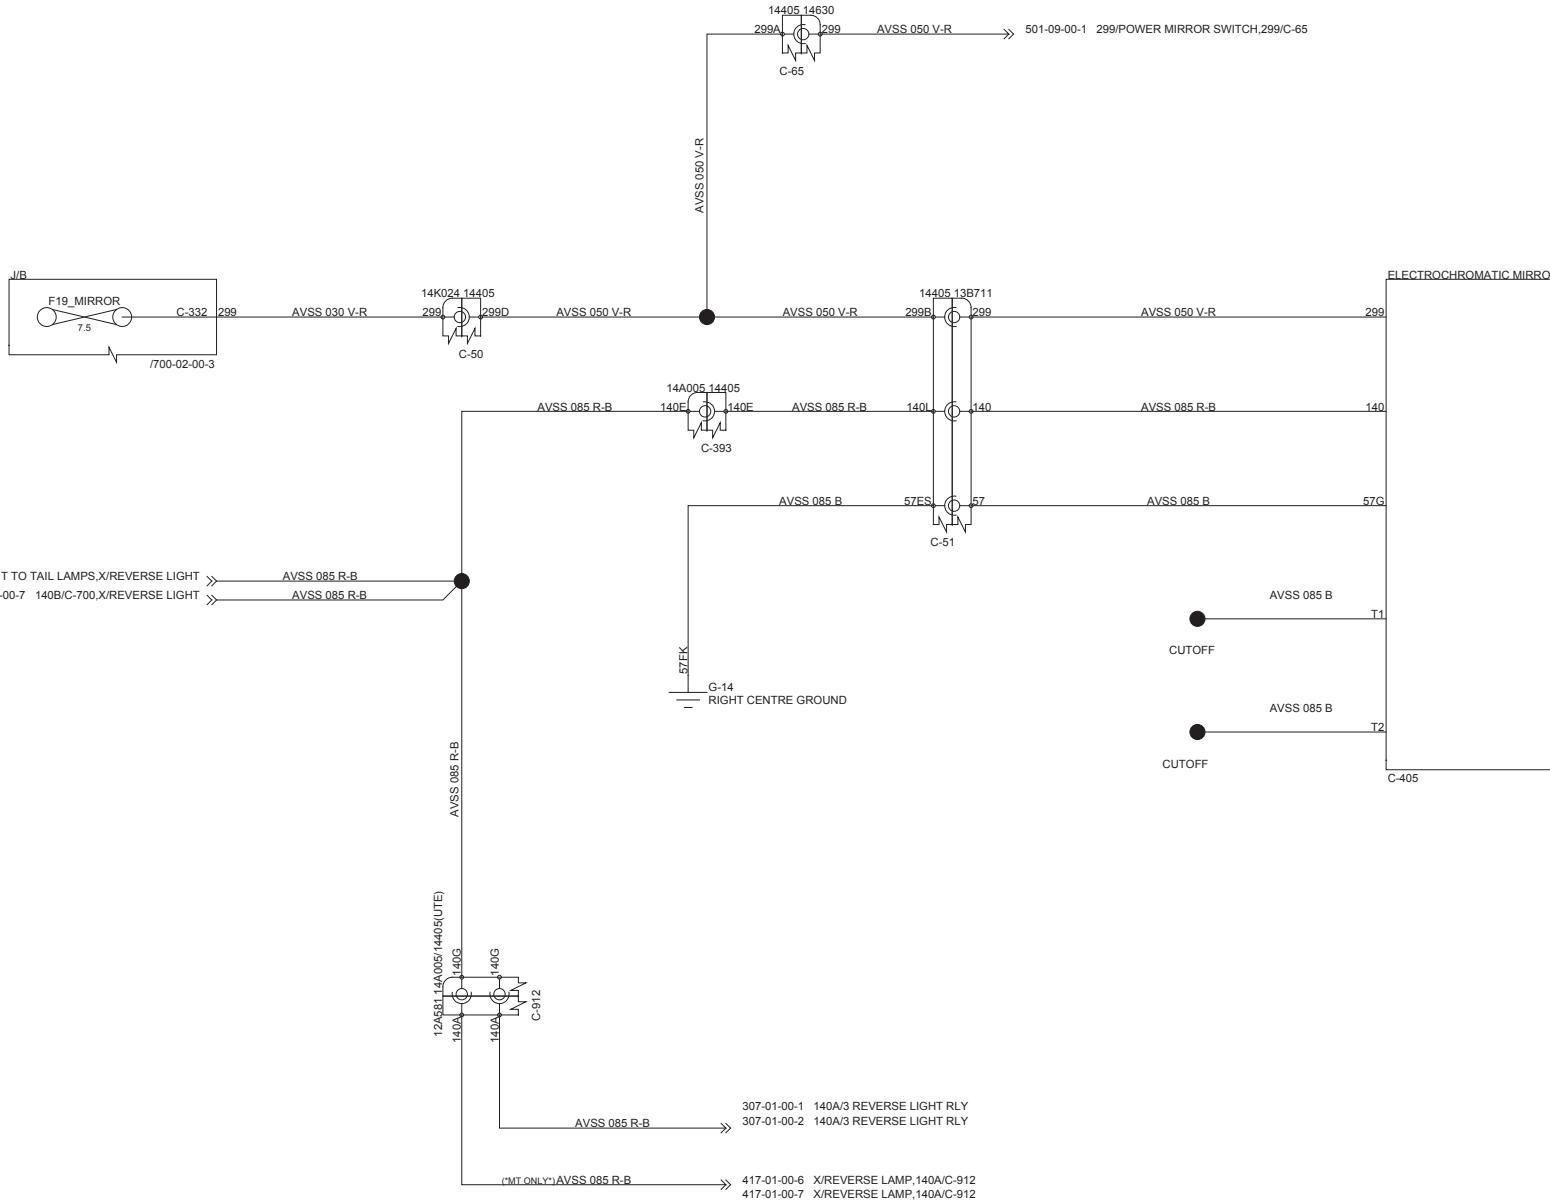


Login Tracking Code

Rear View Camera

501-09-00-3

501-09-00-3

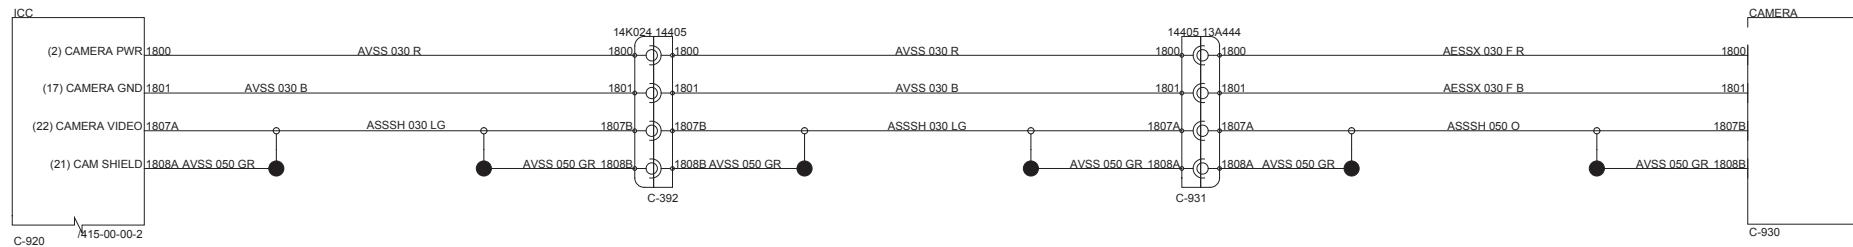


A standard linear barcode is positioned vertically on the left side of the page. To its right, the words "Login Tracking Code" are printed vertically in a bold, black, sans-serif font.

501-10-00-1


Seating

501-10-00-1

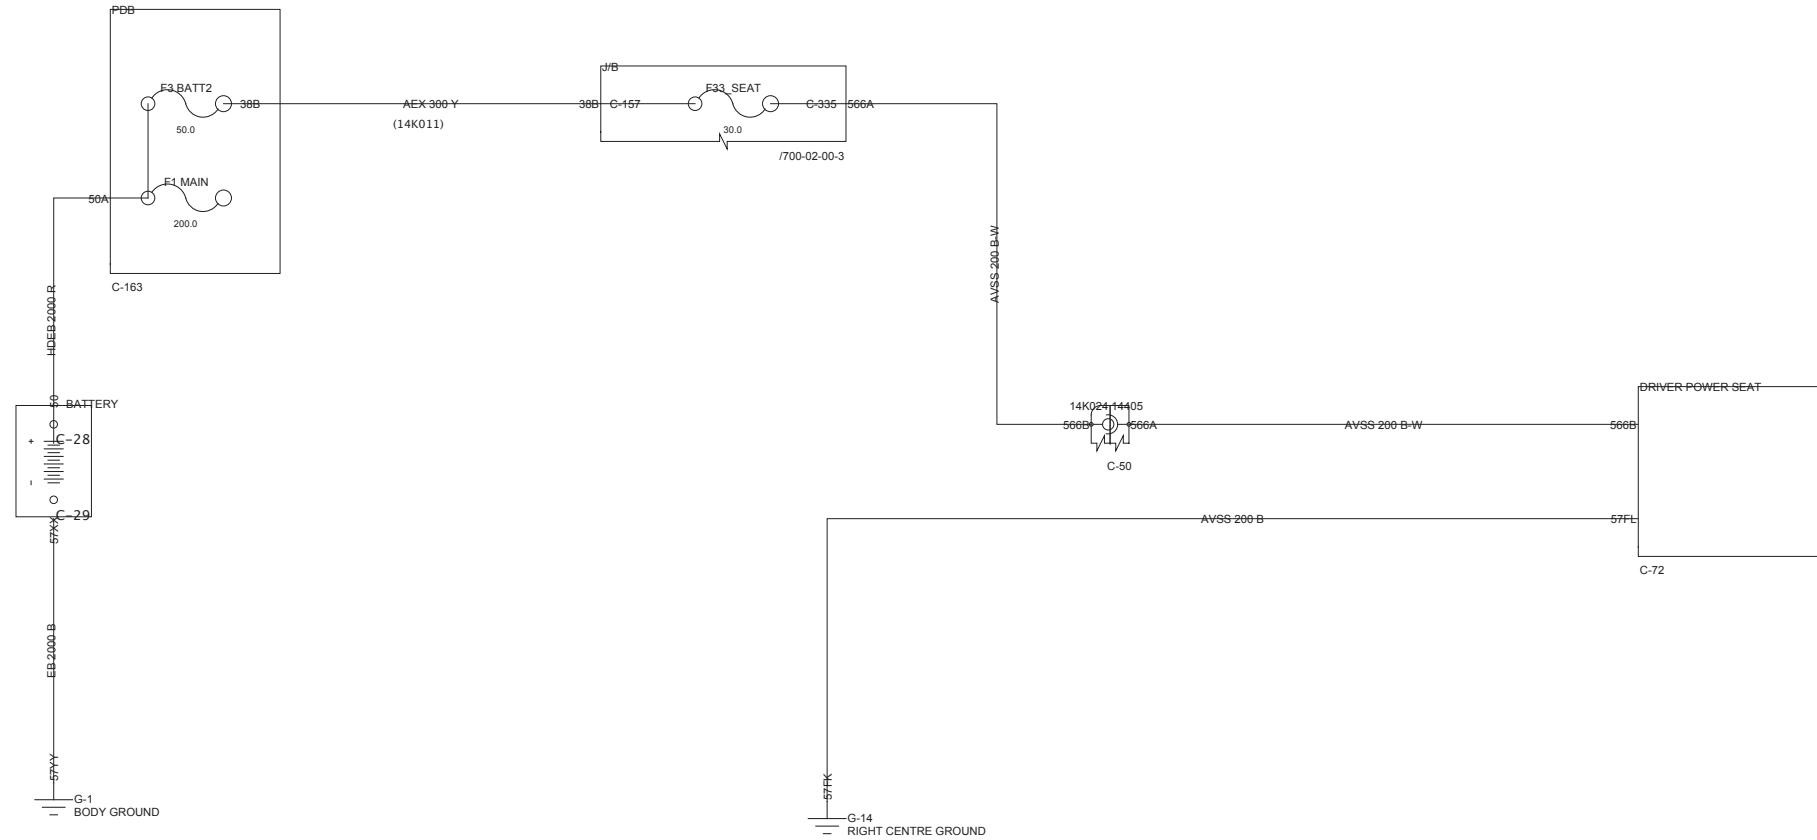




Login Tracking Code

SHT 59 OF 126

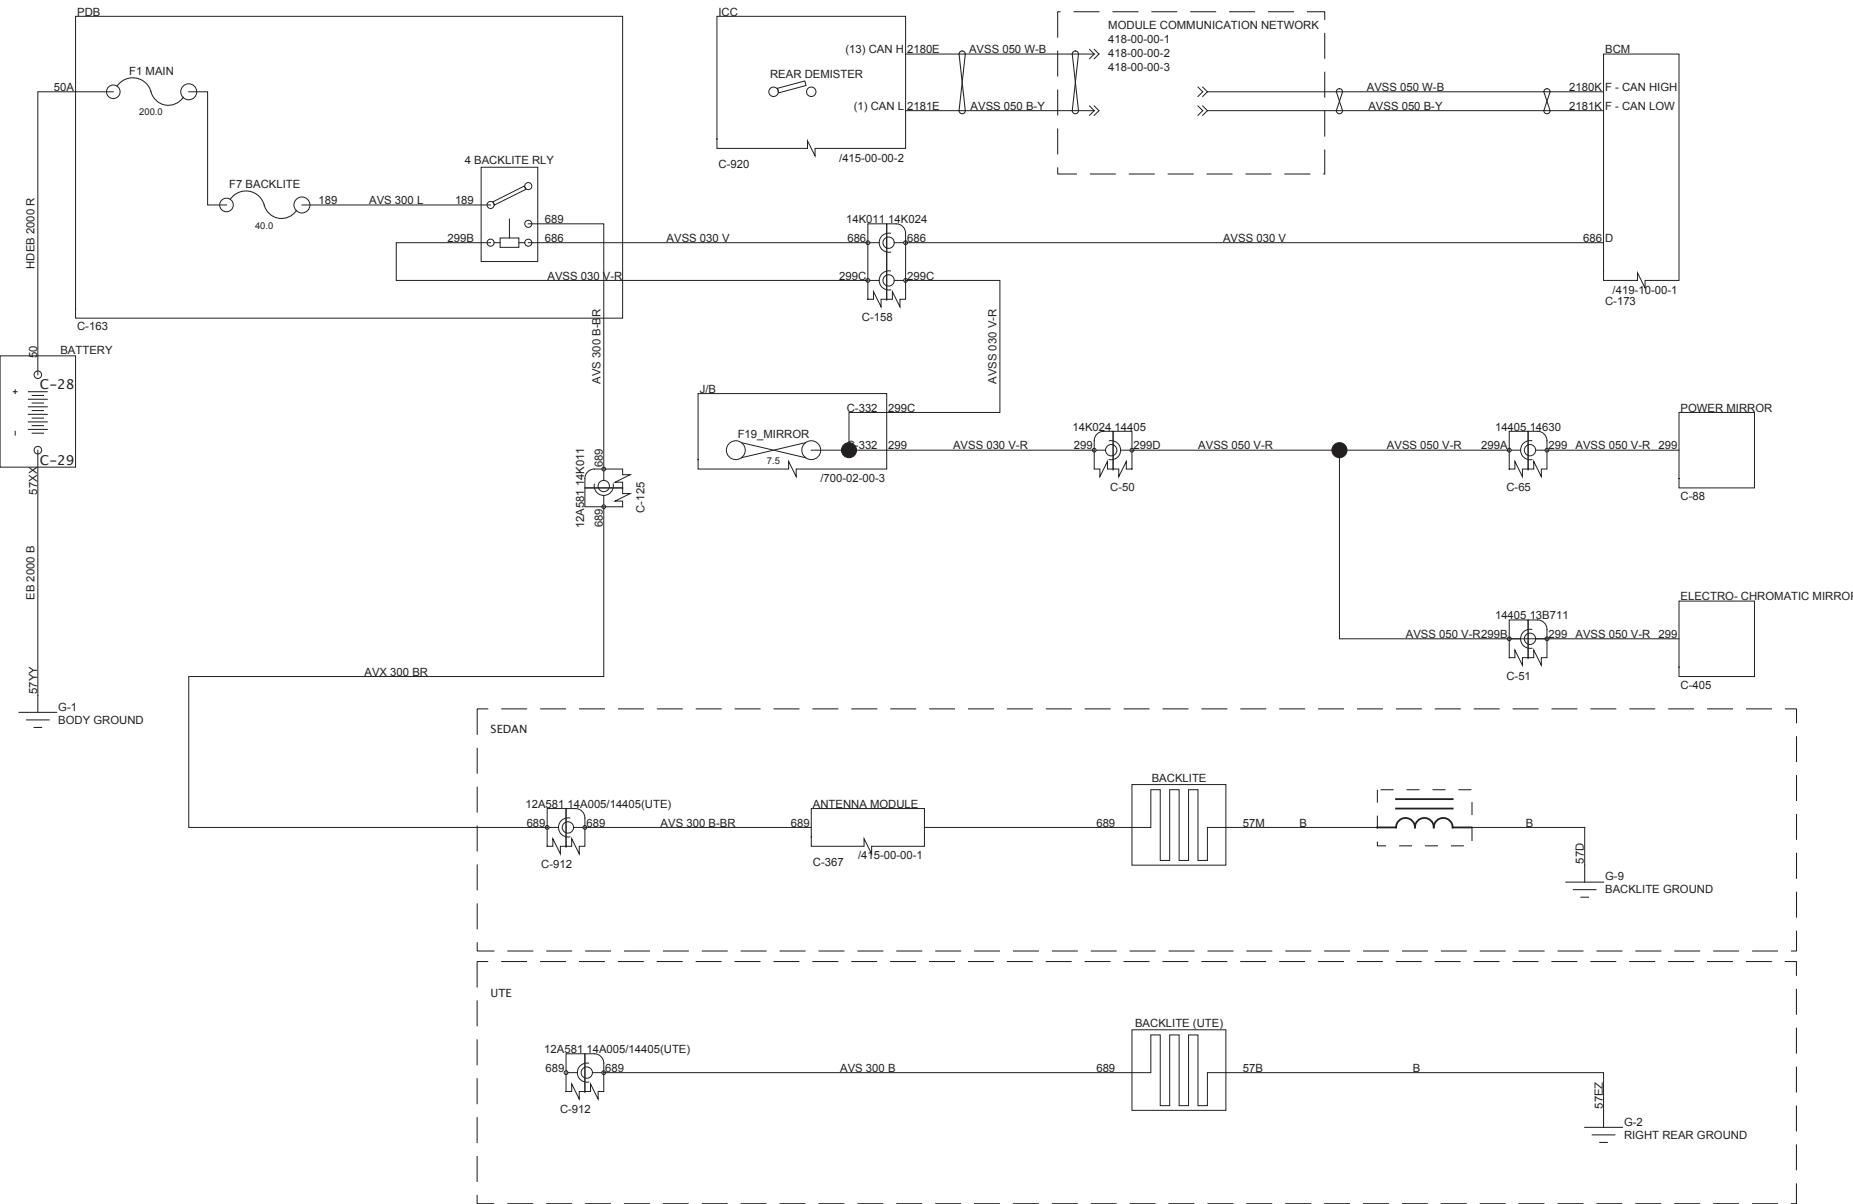

Login Tracking Code

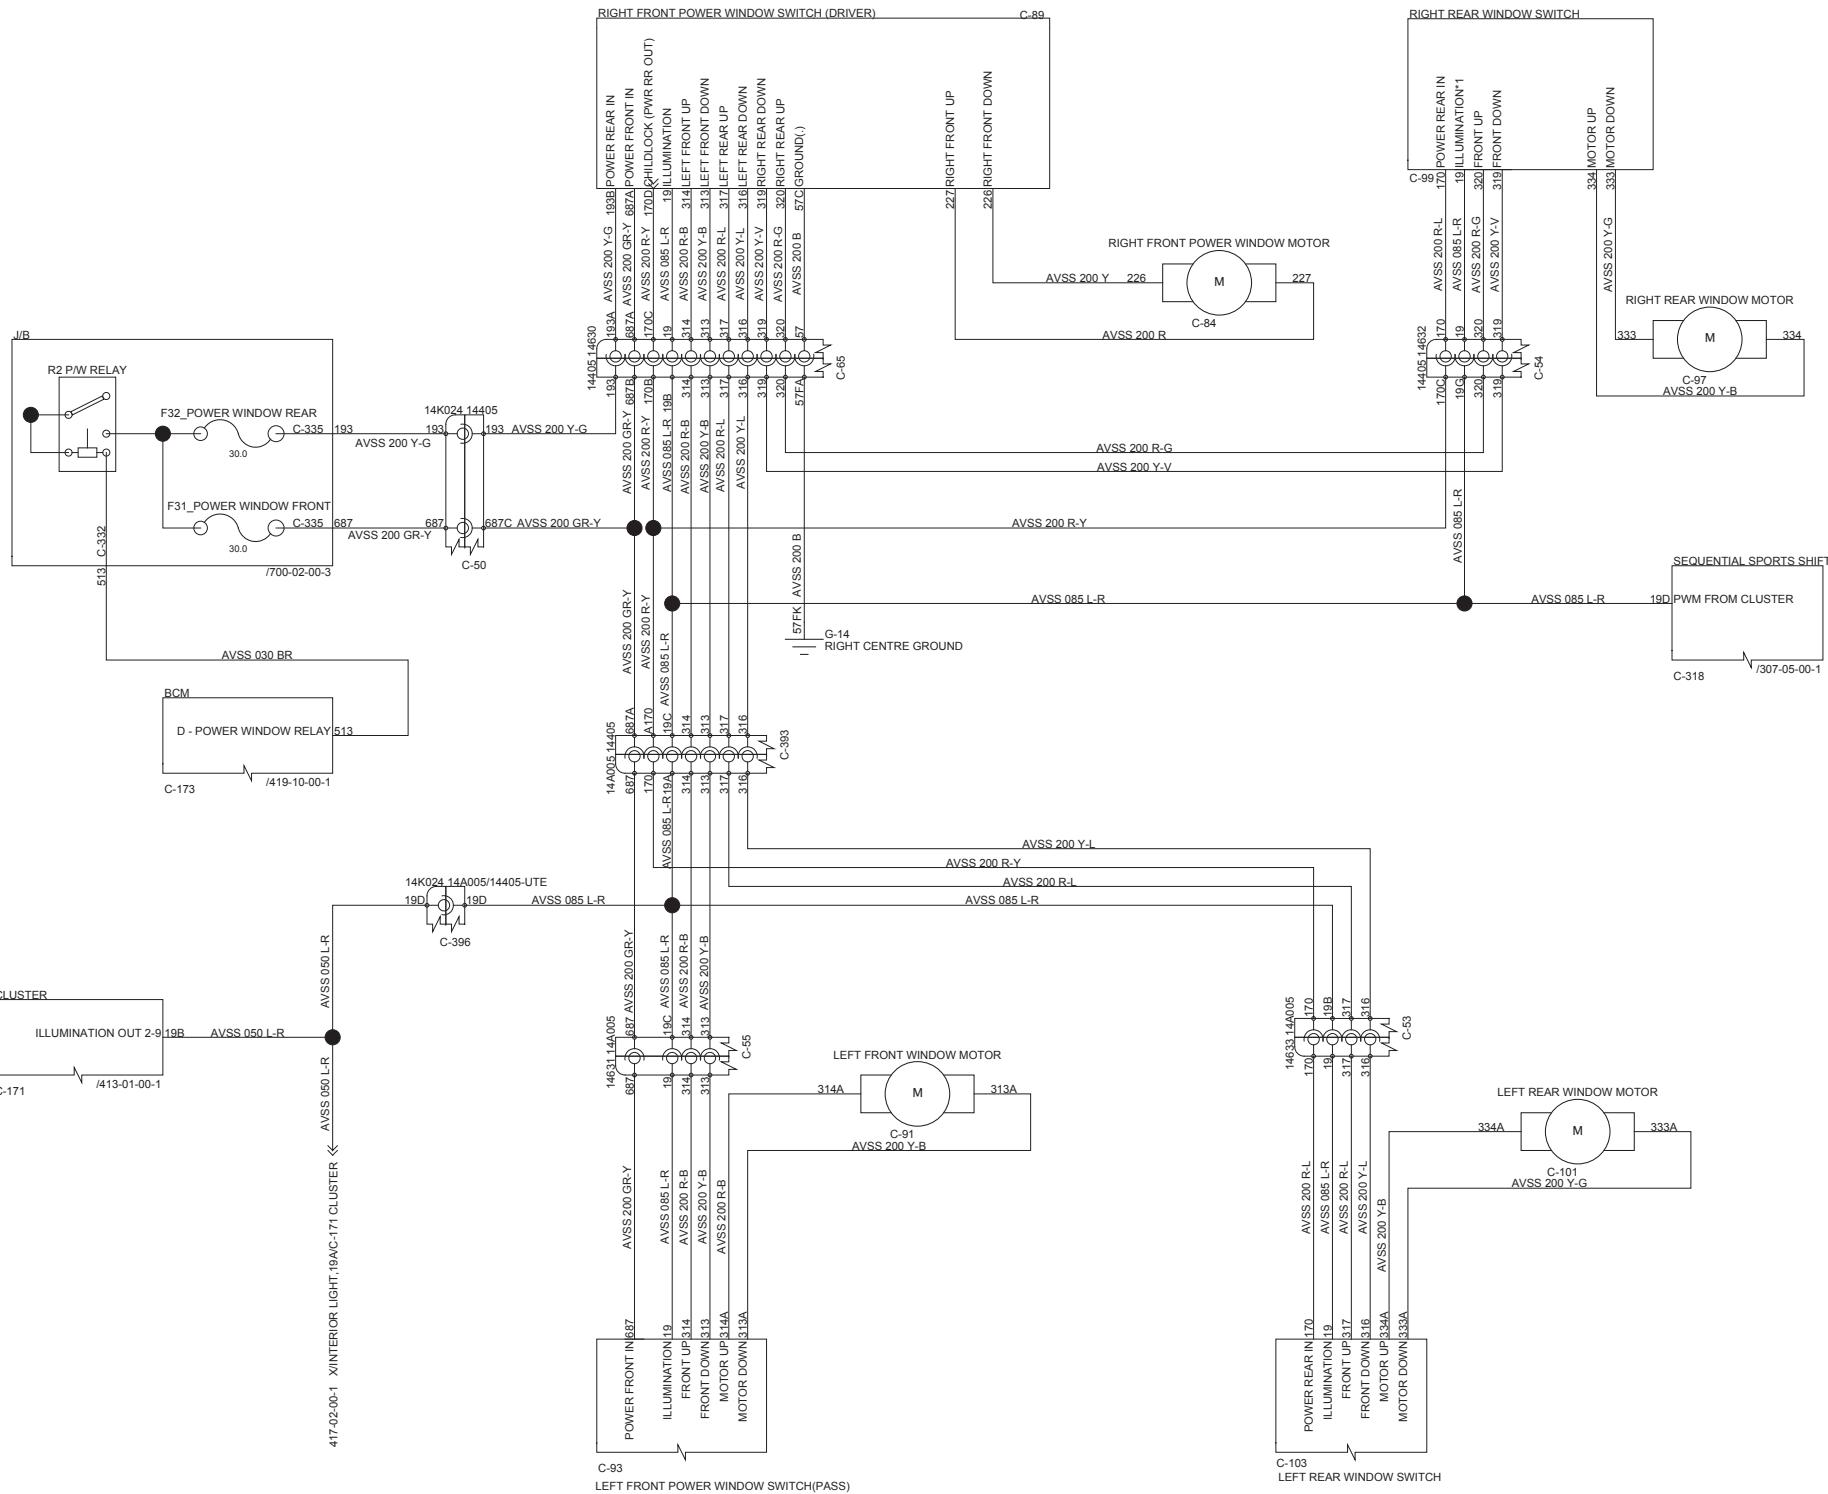


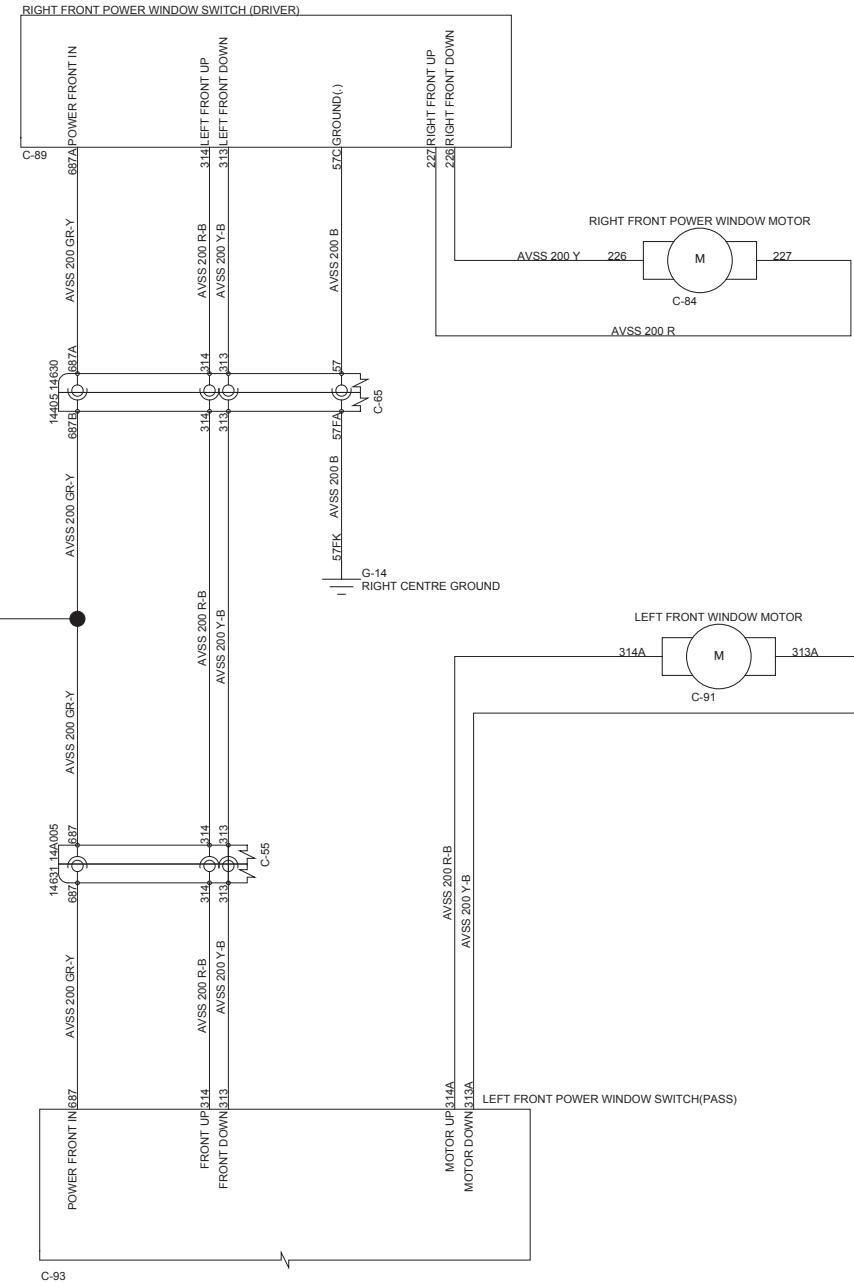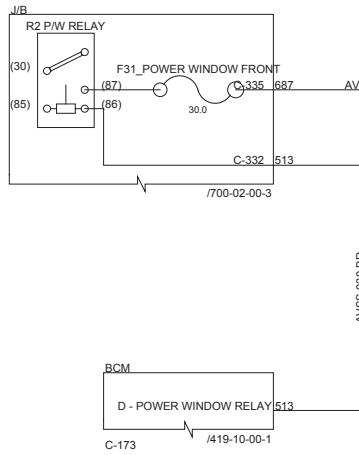


501-12-00-1

Cigar Lighter

501-12-00-1

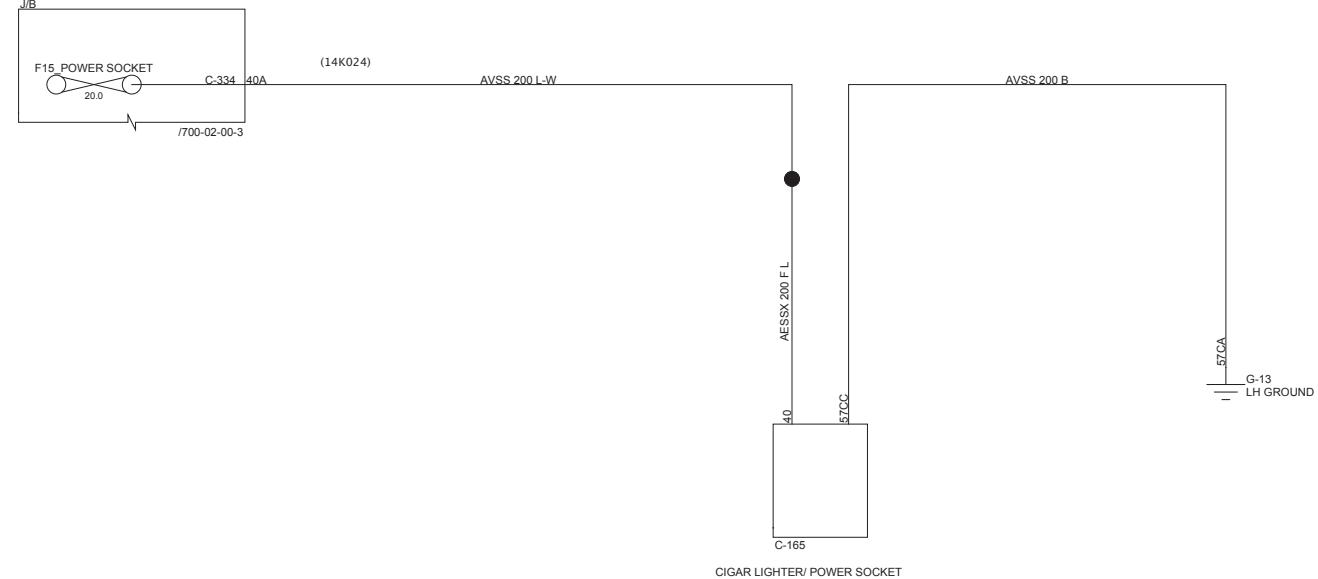


Login Tracking Code

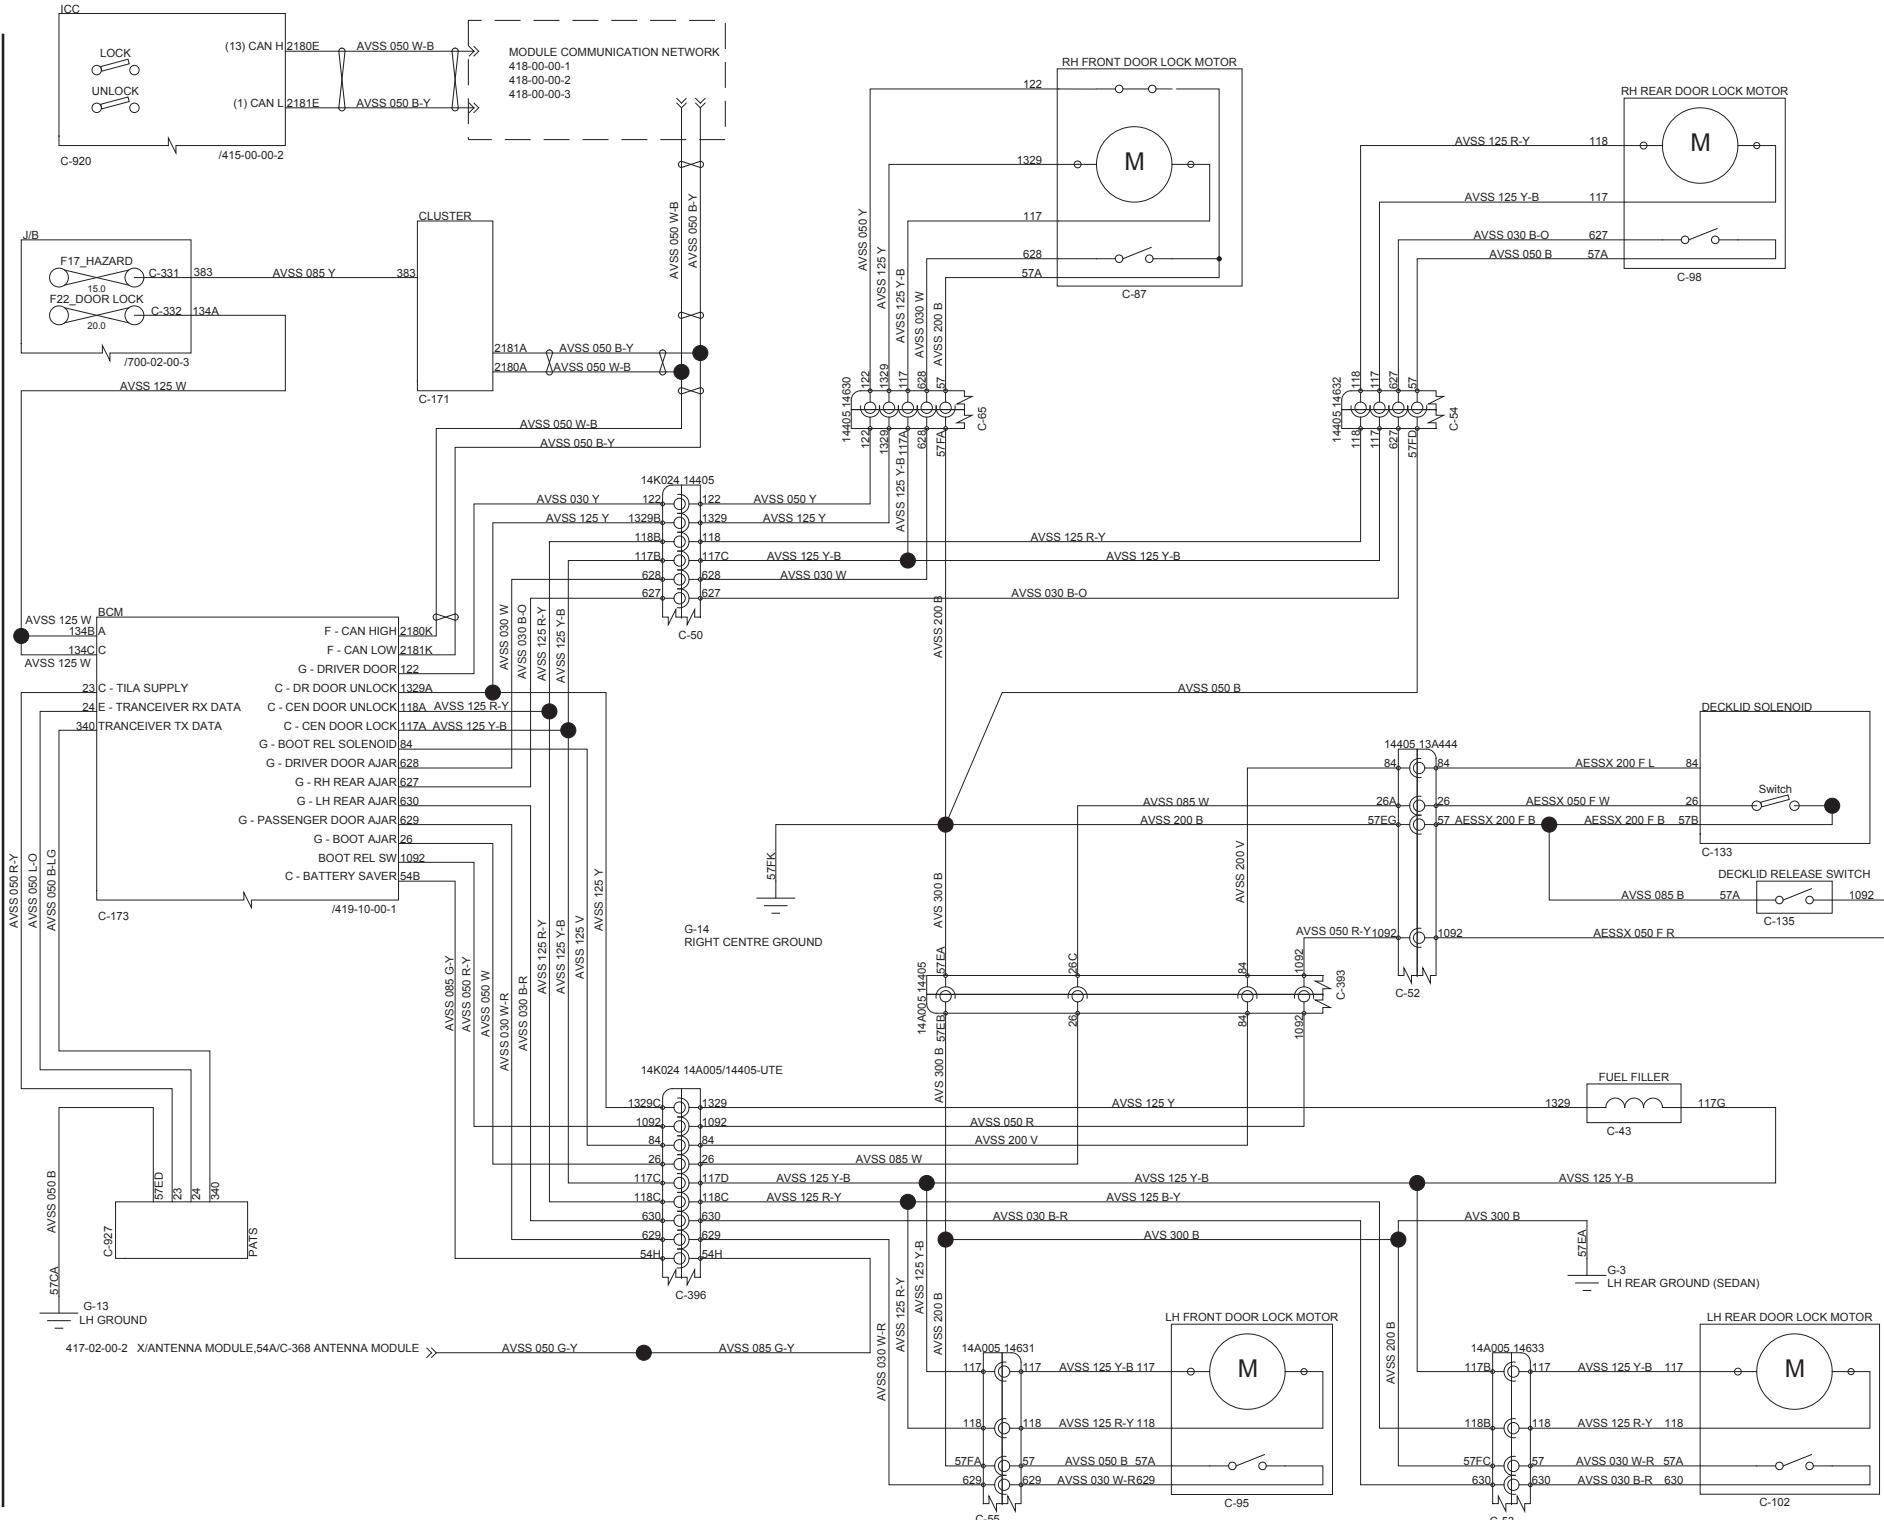

501-14-00-2 Locks, Latches and Entry Systems - UTE

501-14-00-2

Locks, Latches and Entry Systems - UTE

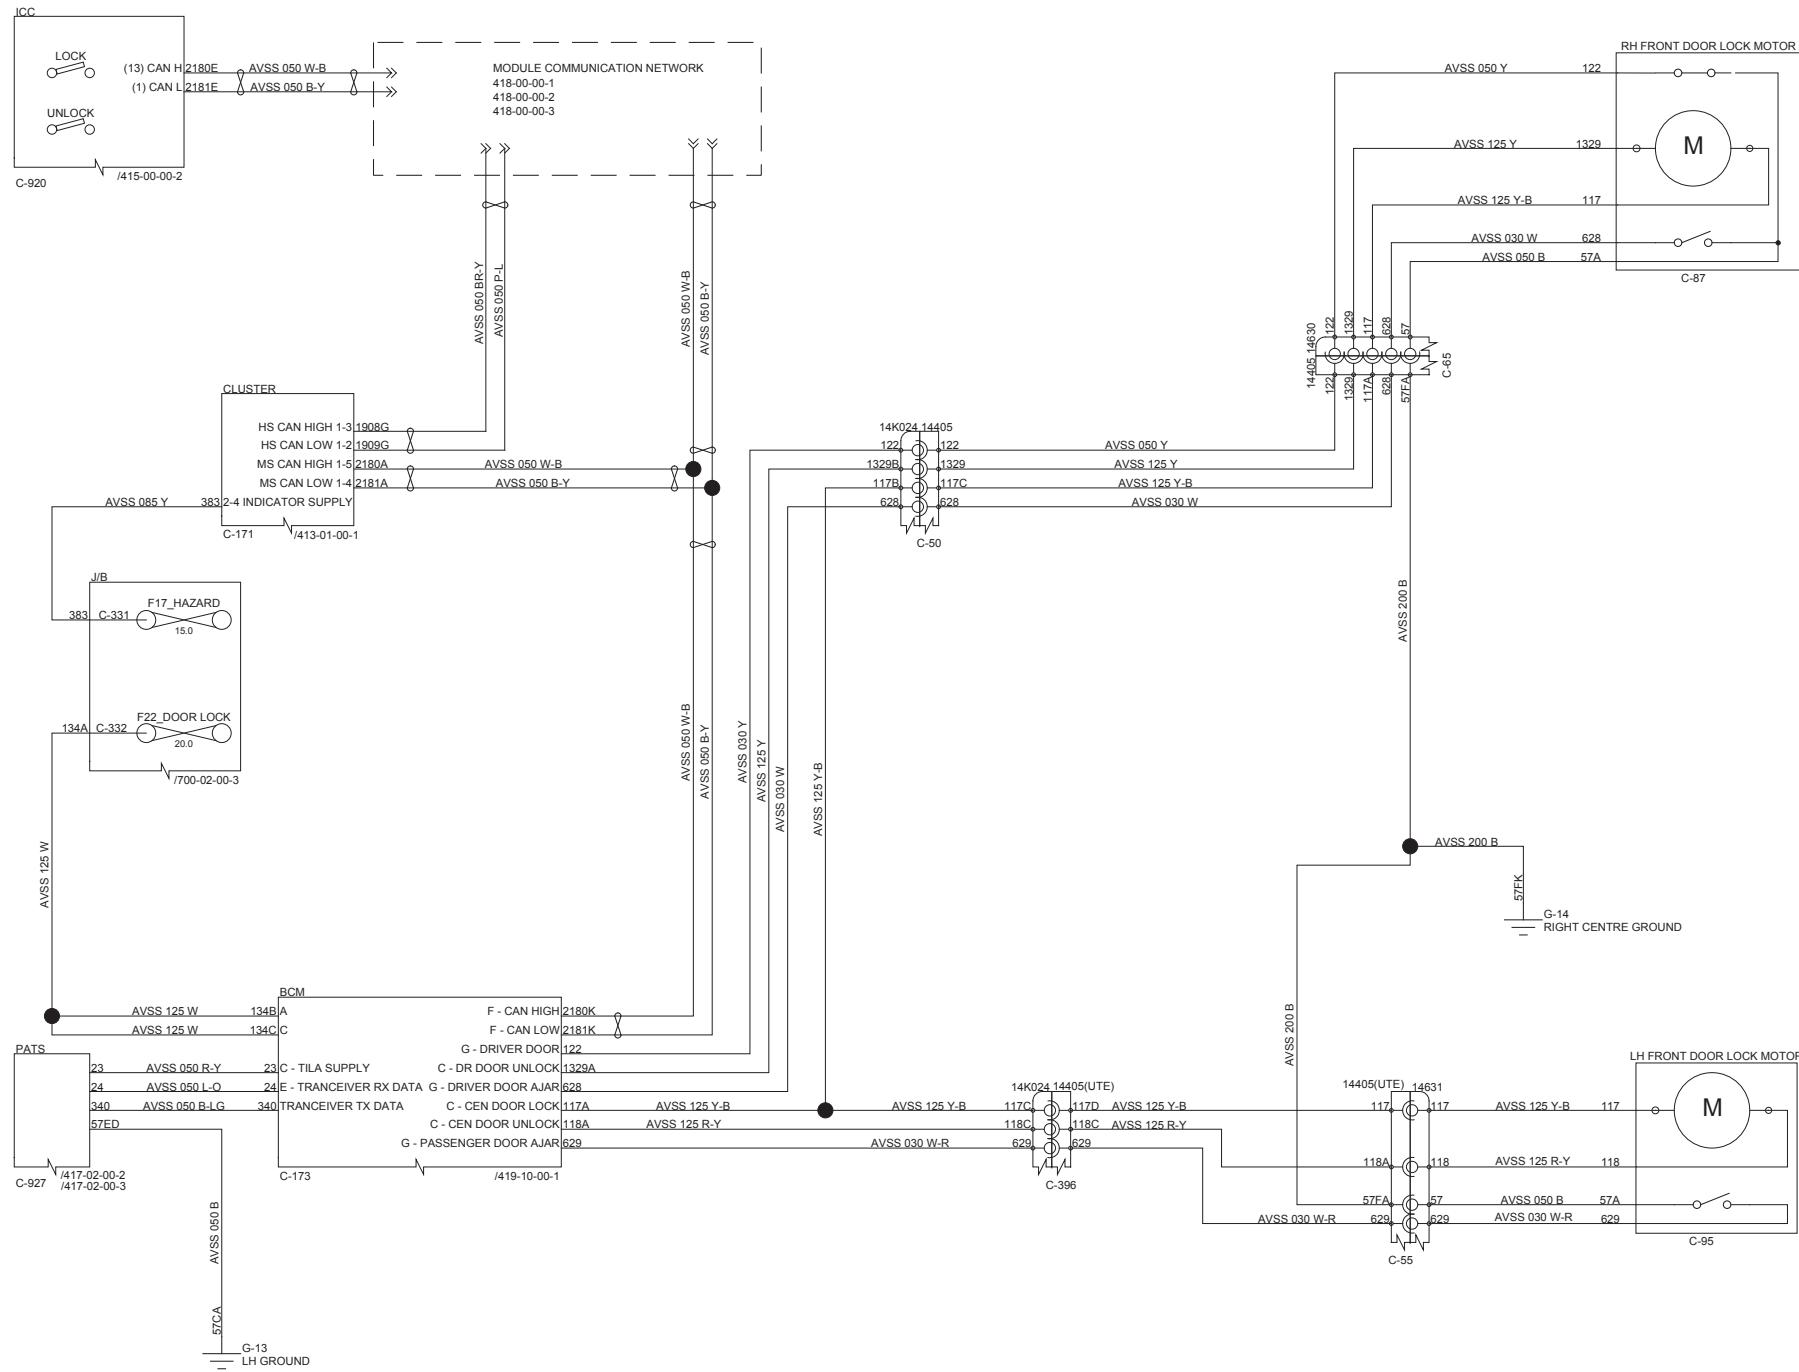


Login Tracking Code

SHT 65 OF 126

501-16-00-1


Wipers and Washers


501-16-00-1

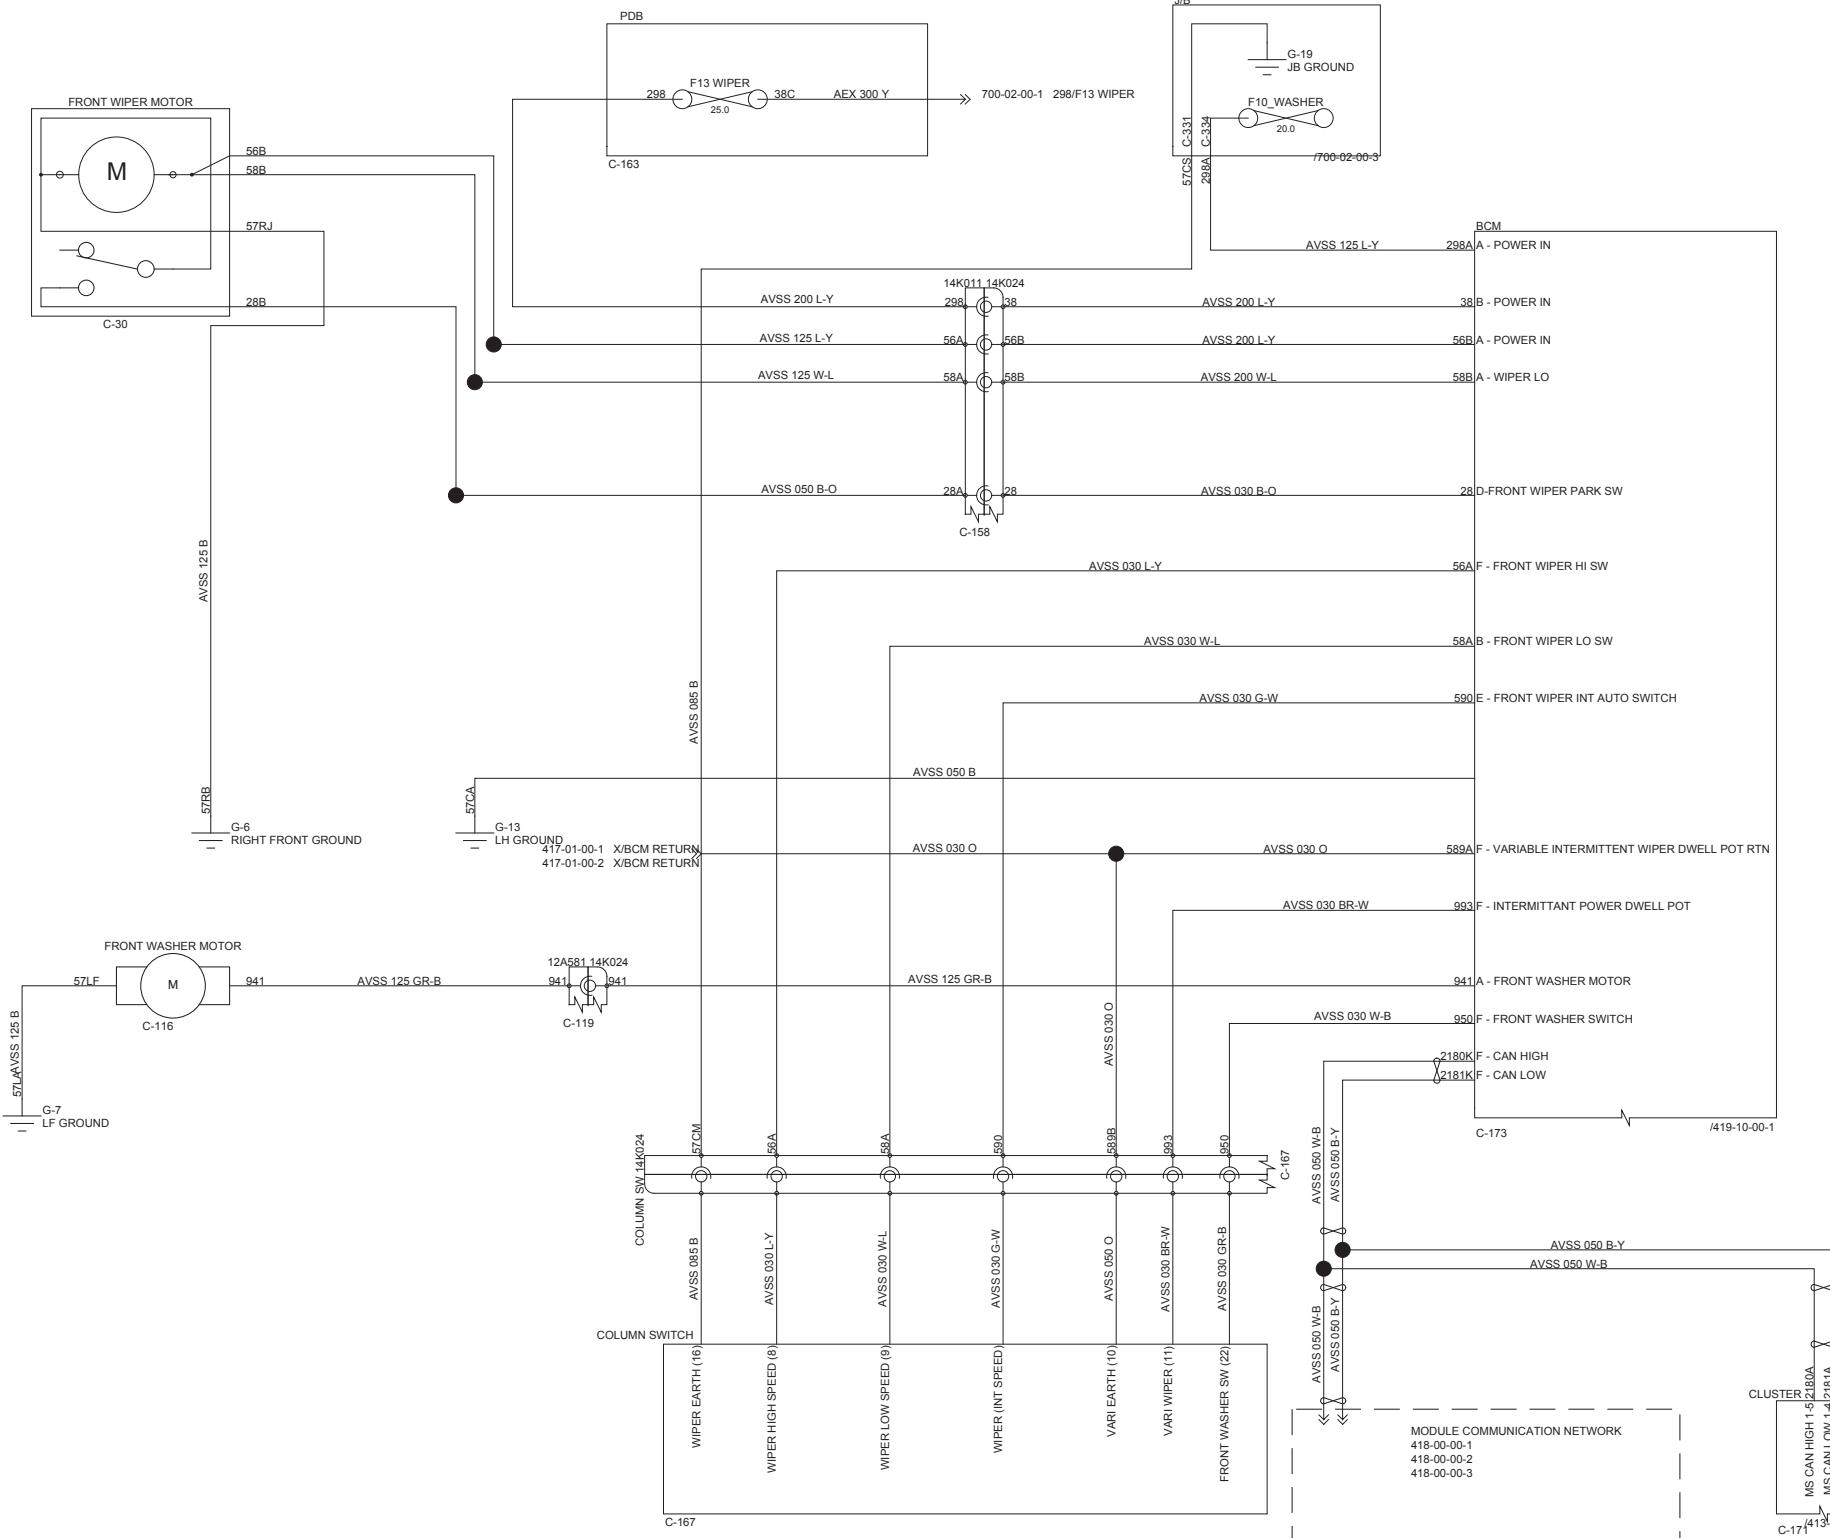

Login Tracking Code

SHT 66 OF 126

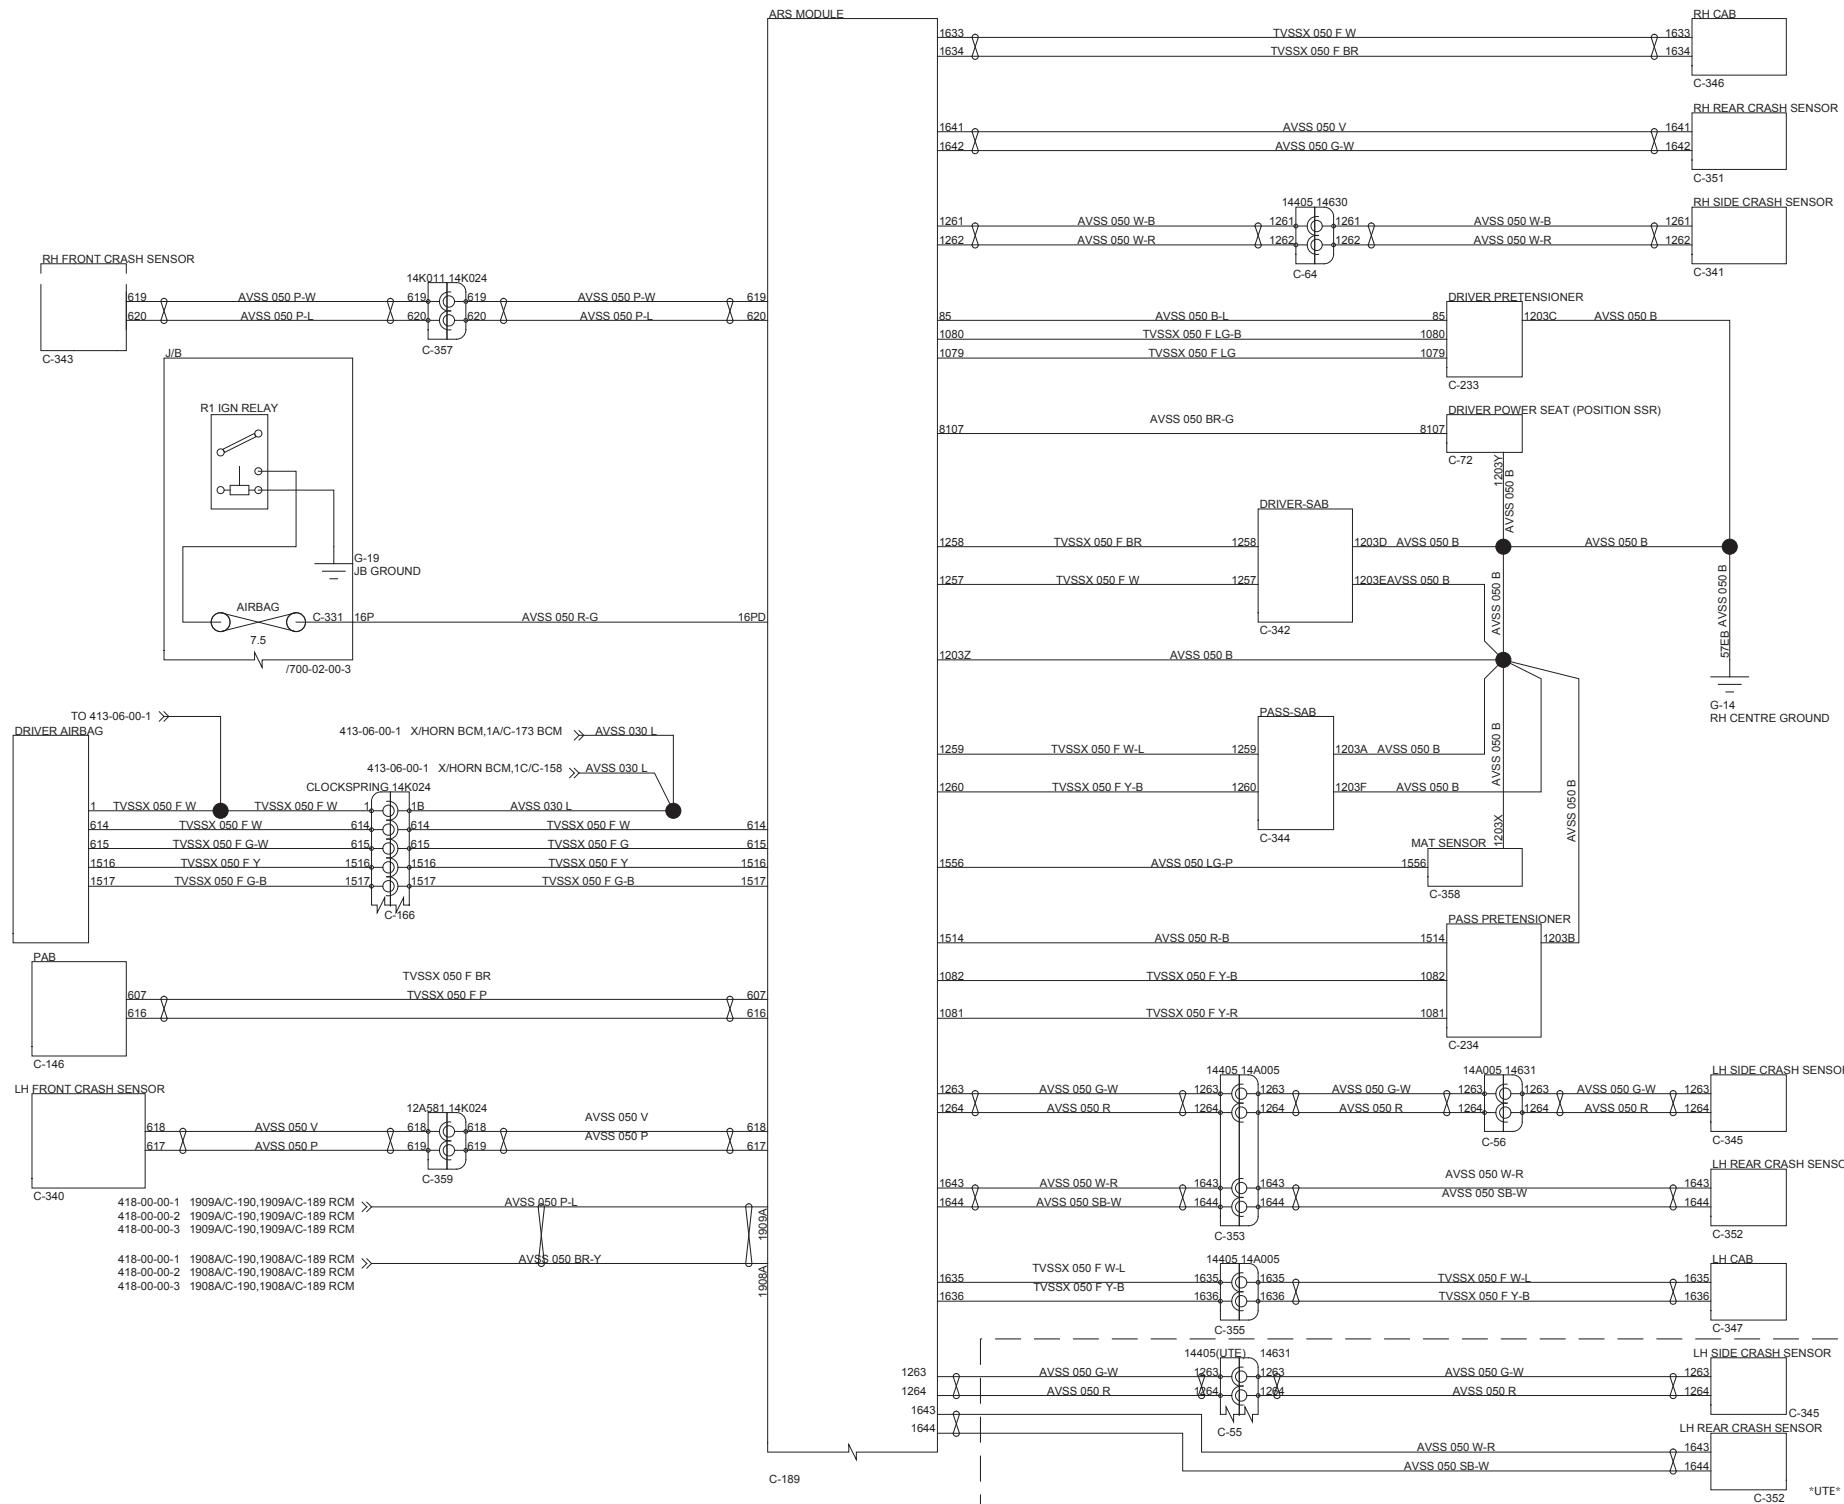


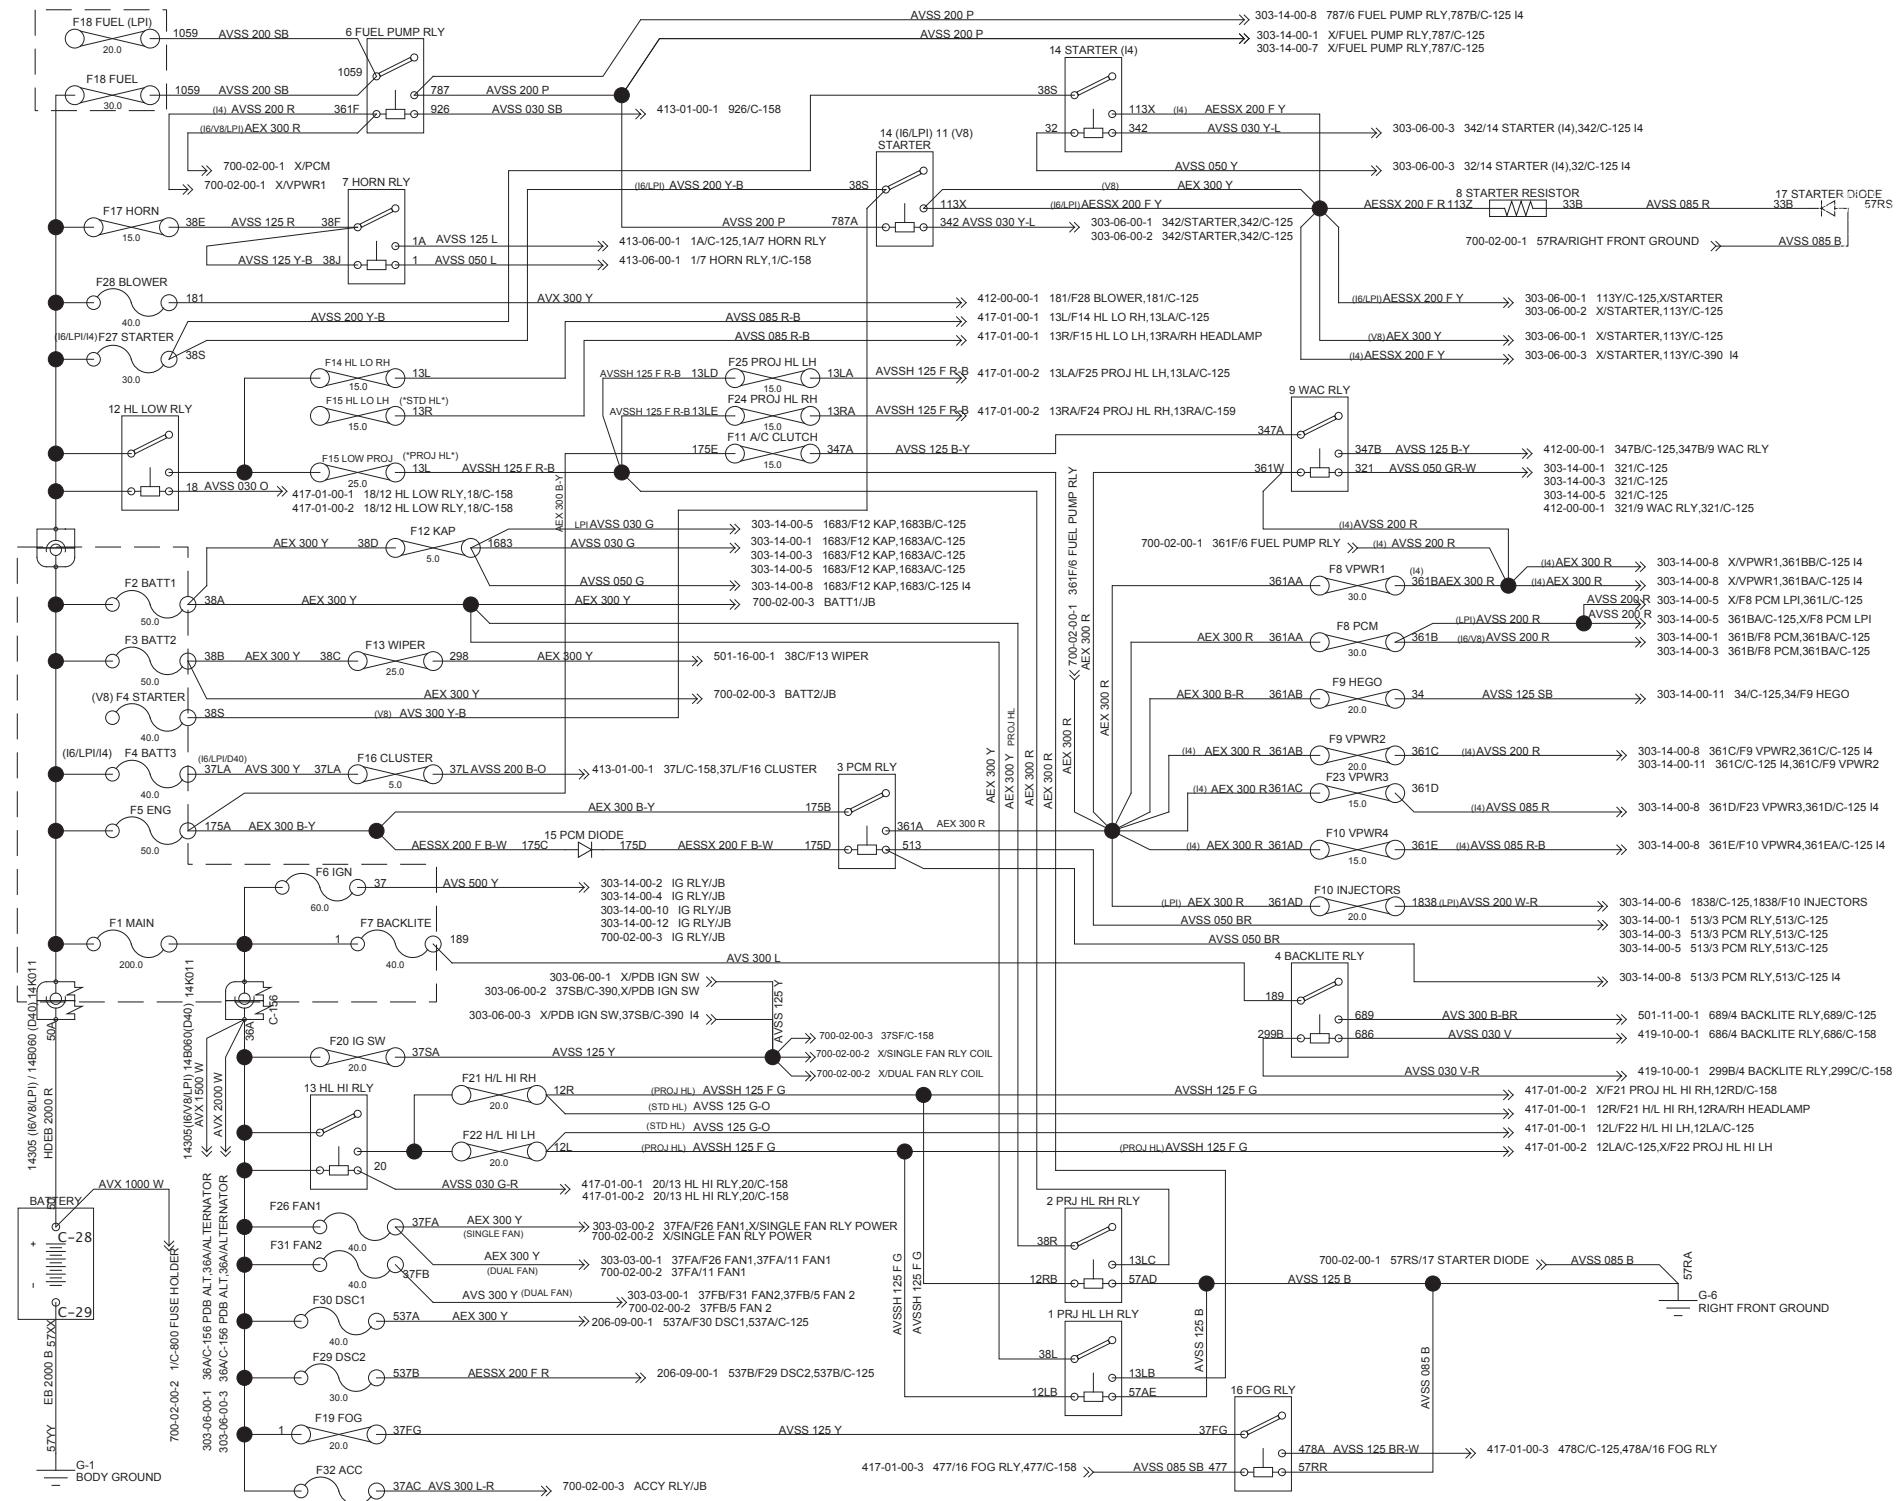

700-02-00-2

Power Distribution - PDB 2


700-02-00-2

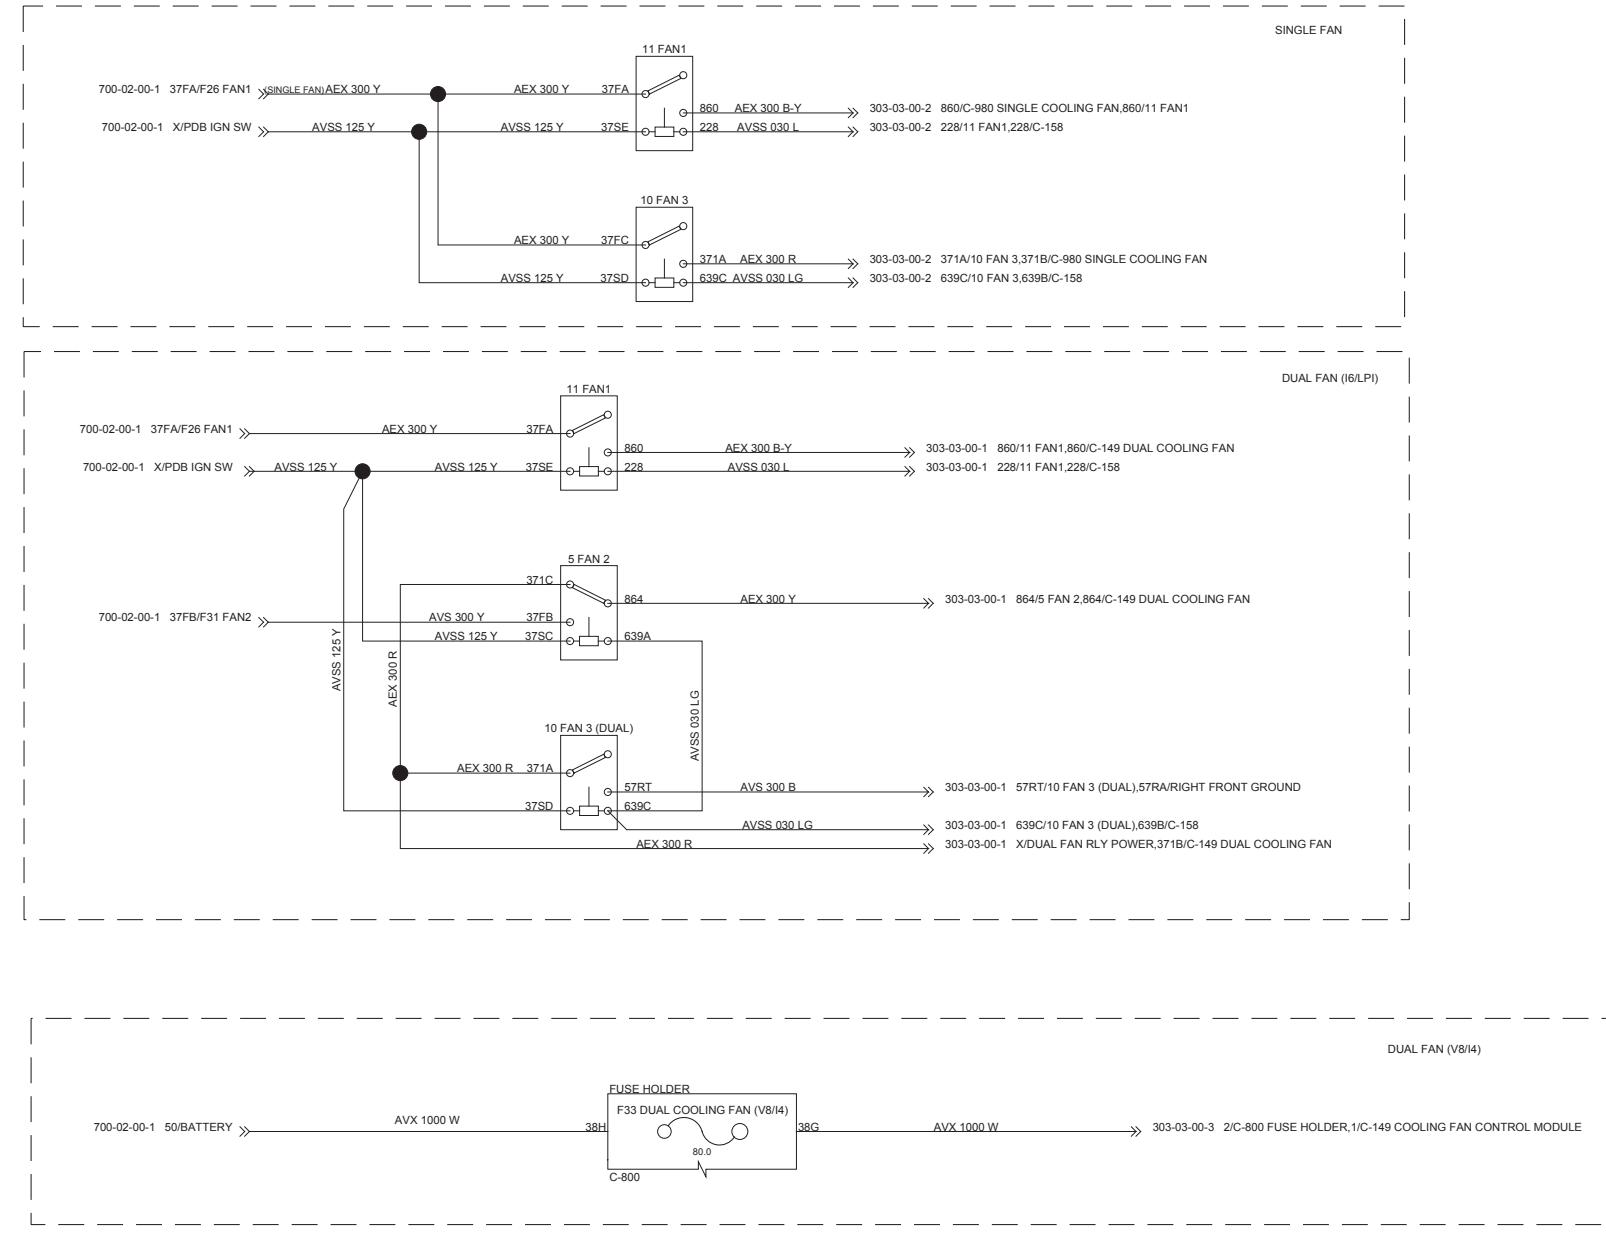


Login Tracking Code


Power Distribution - JB
700-02-00-3


700-02-00-3

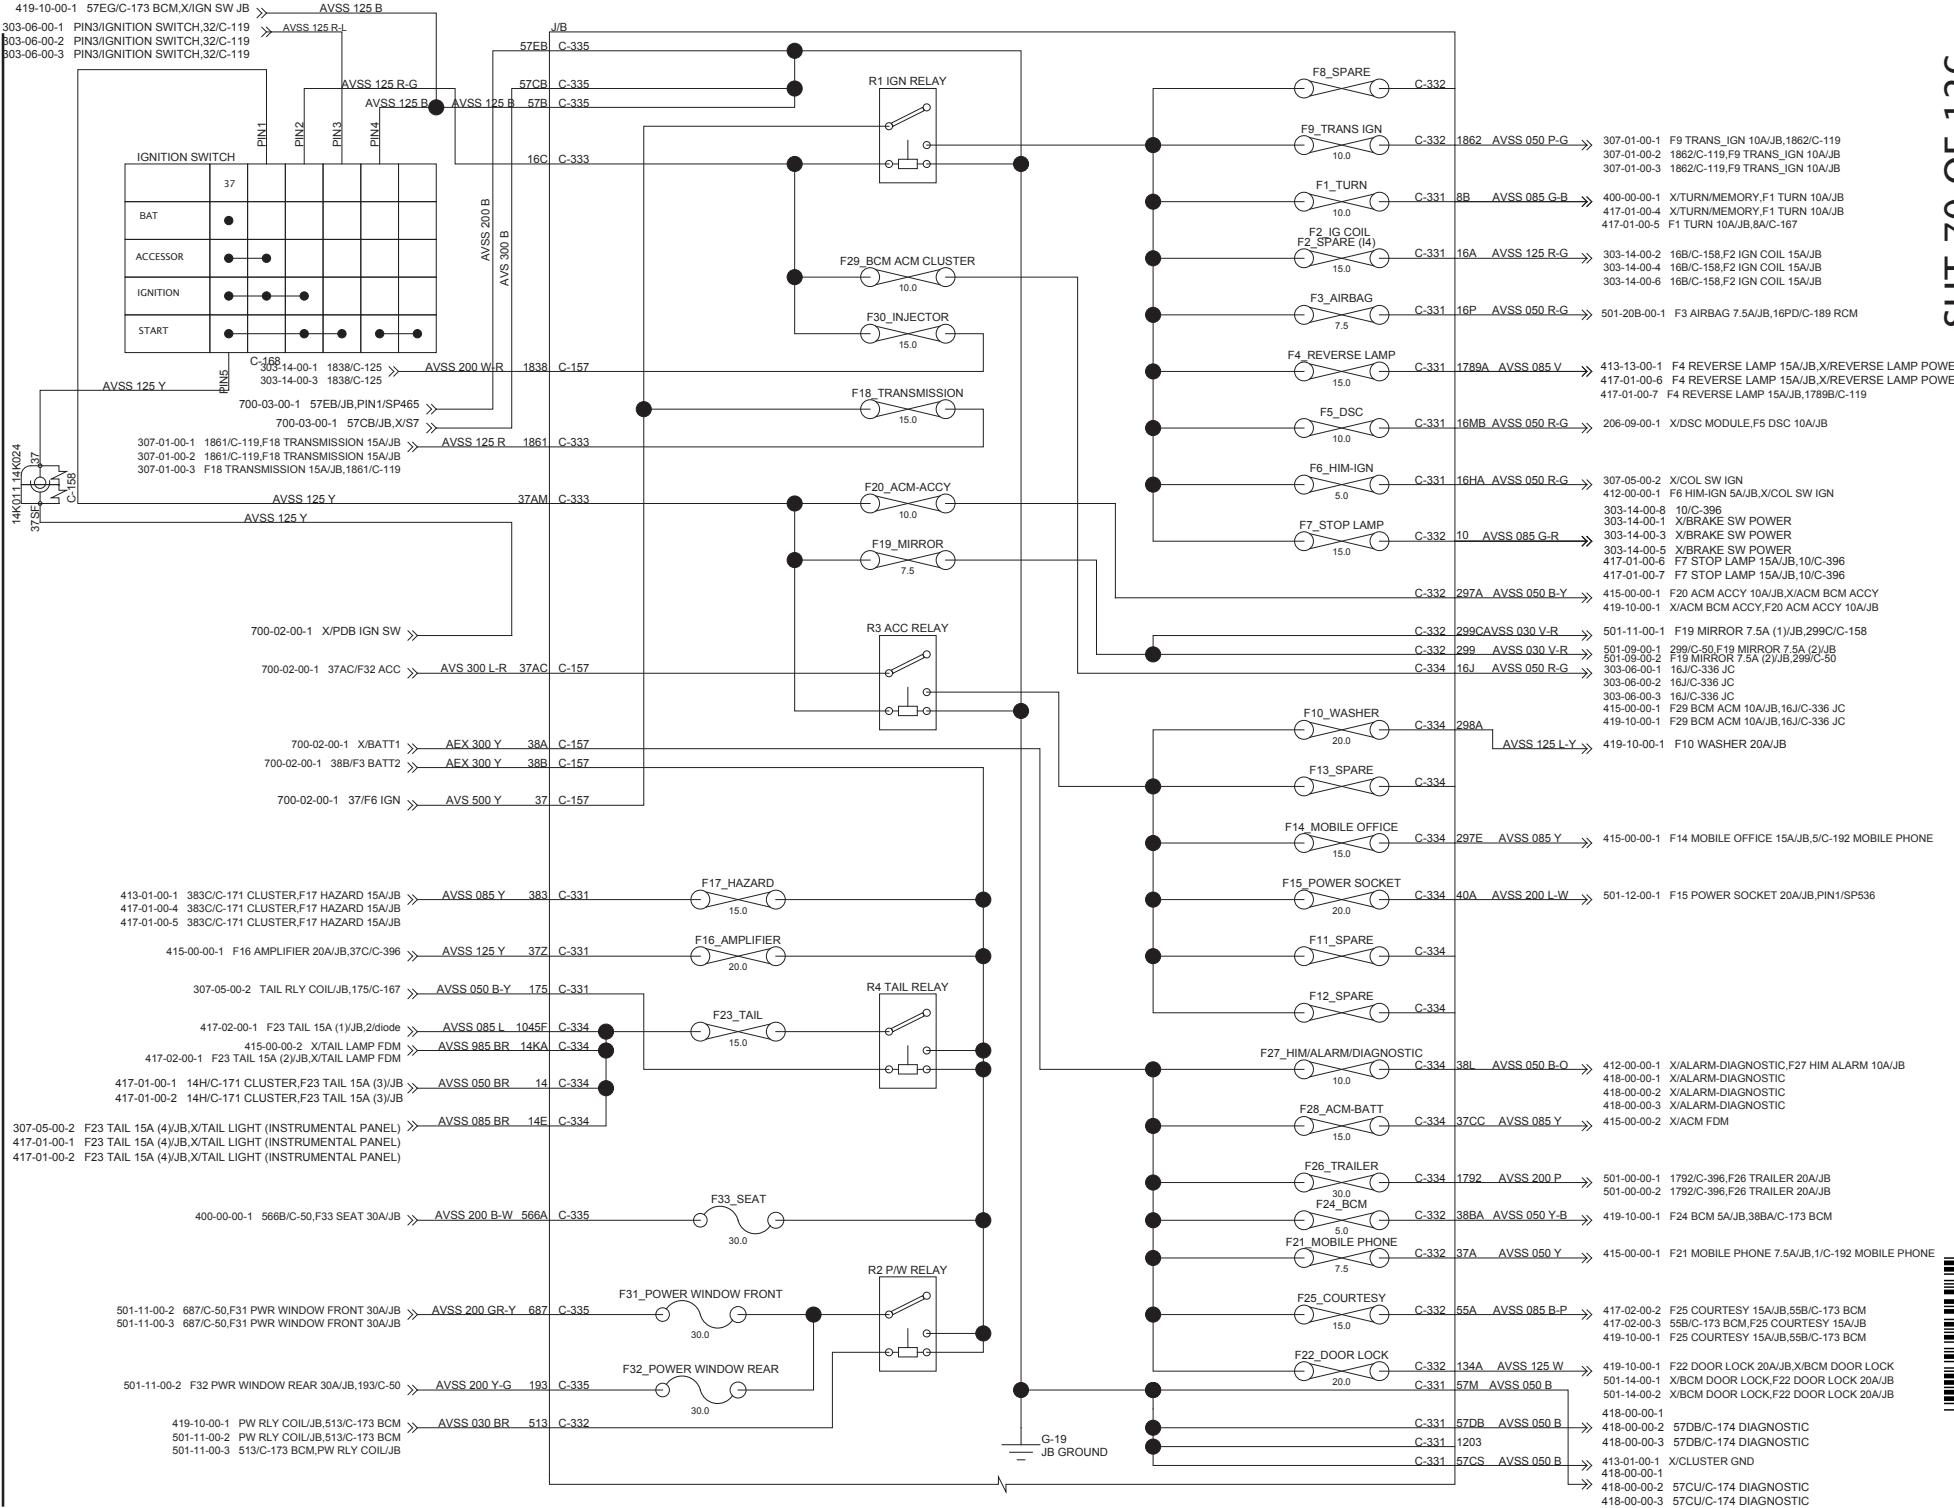


100

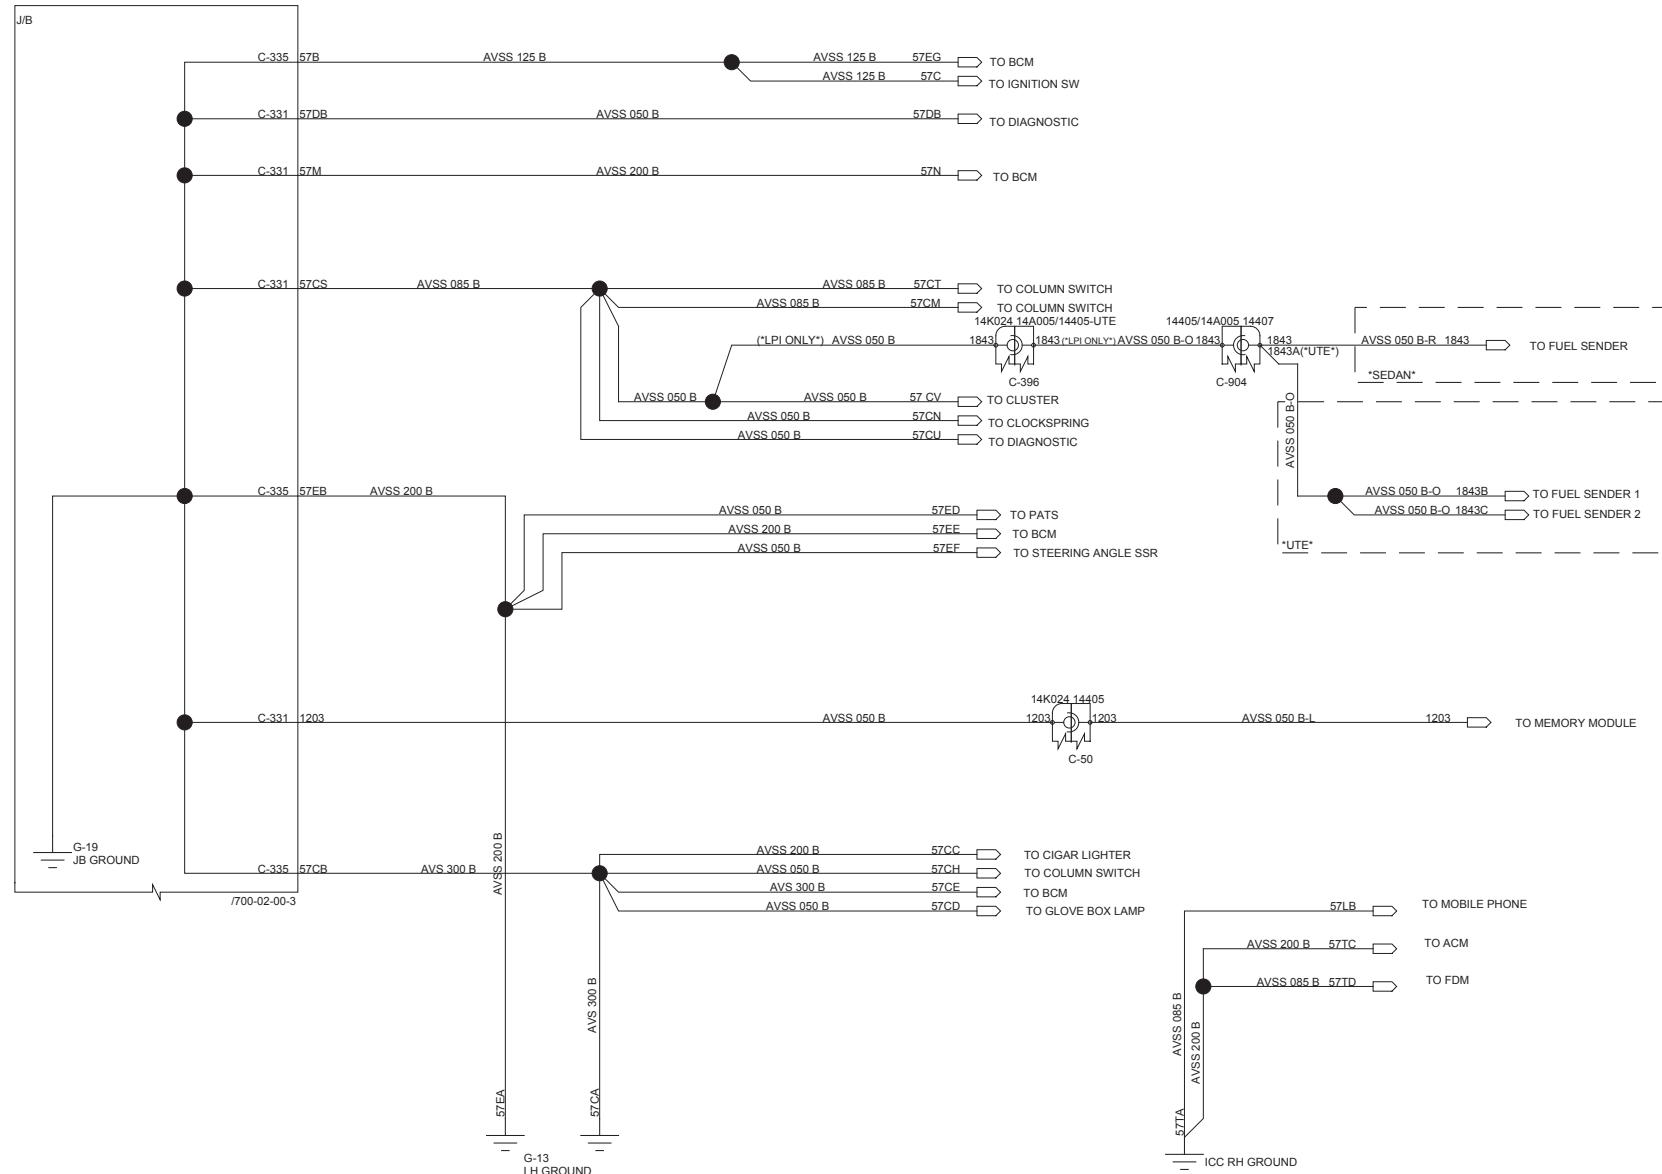

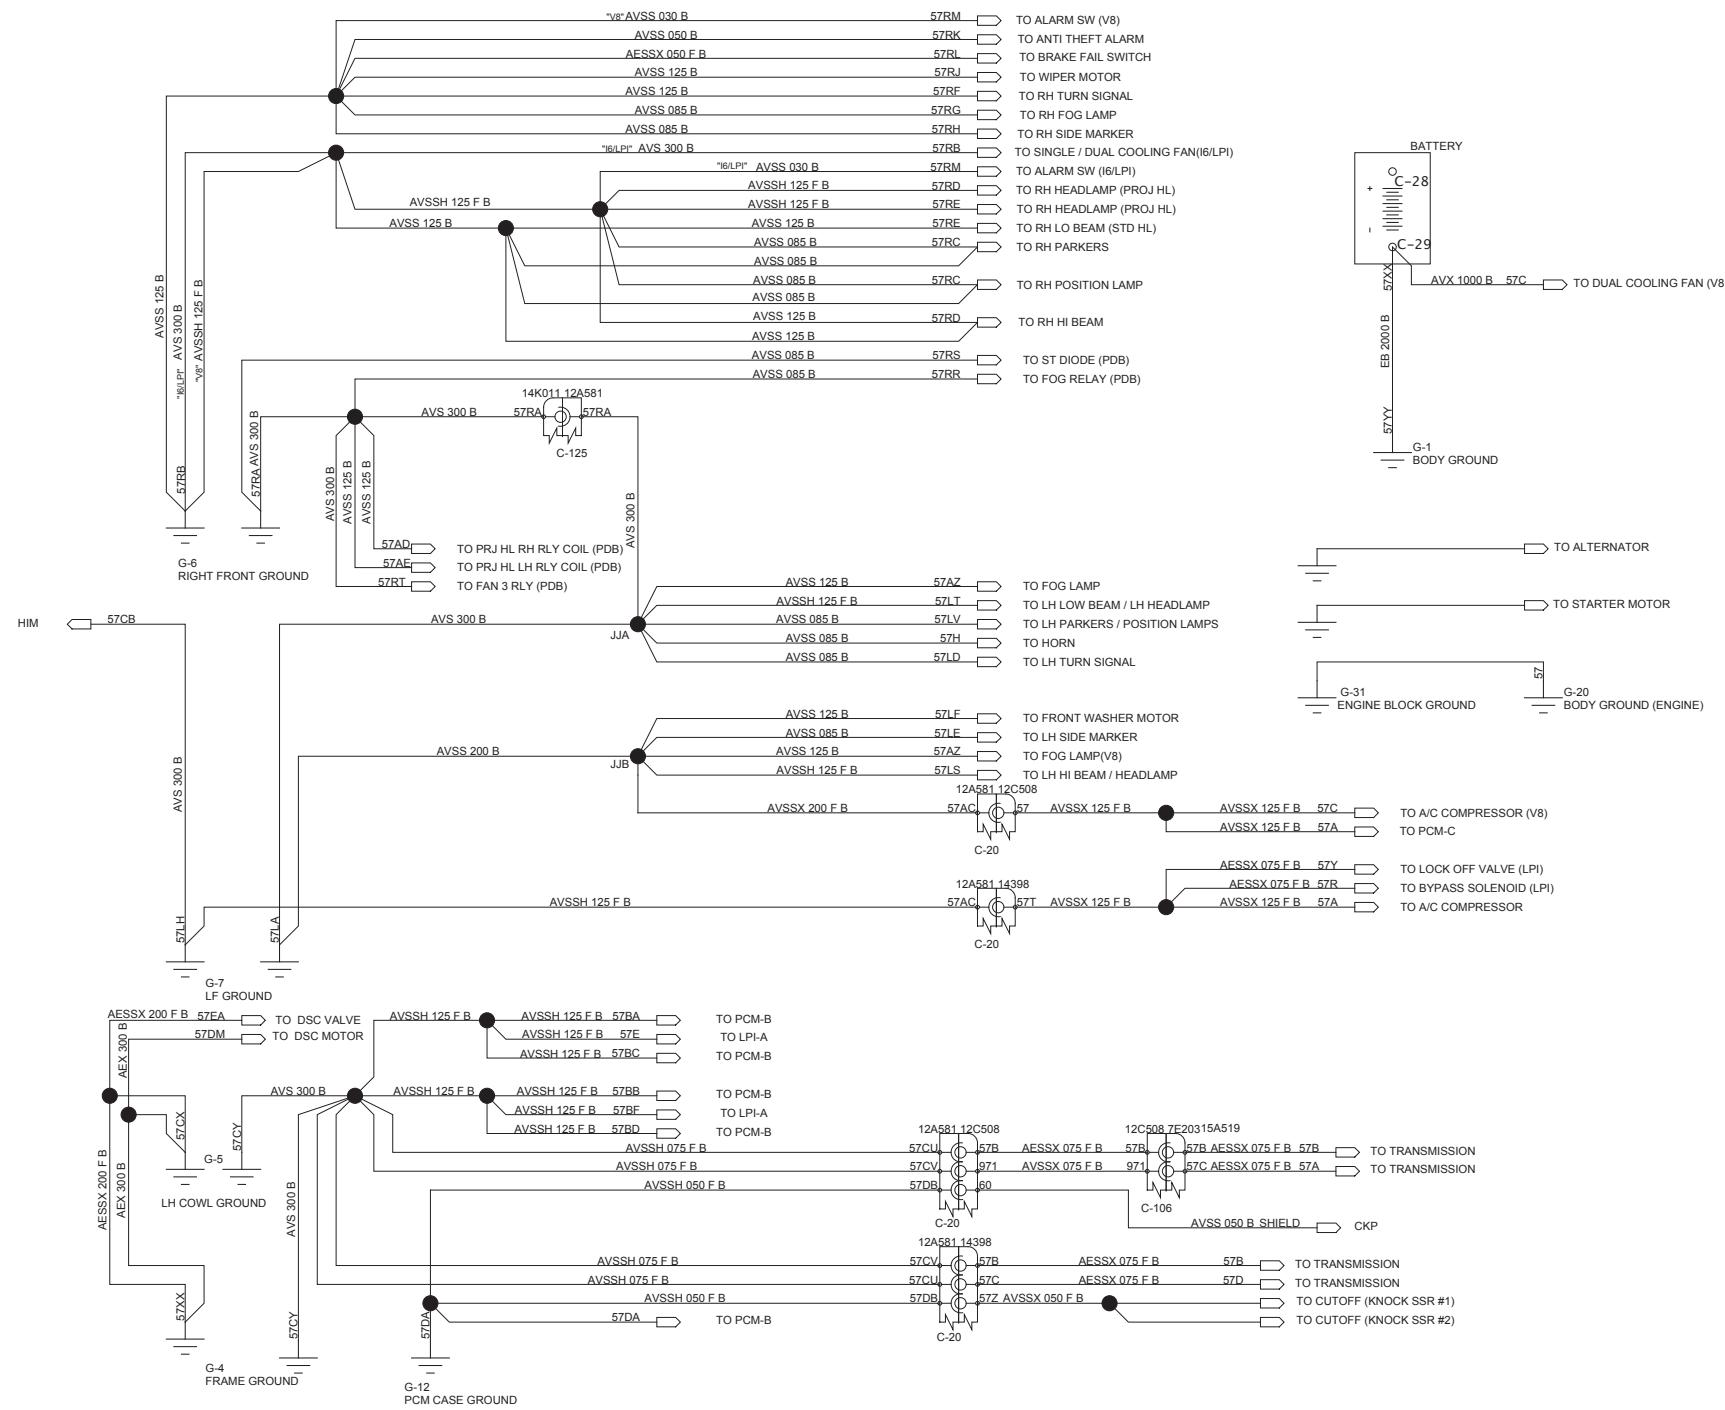

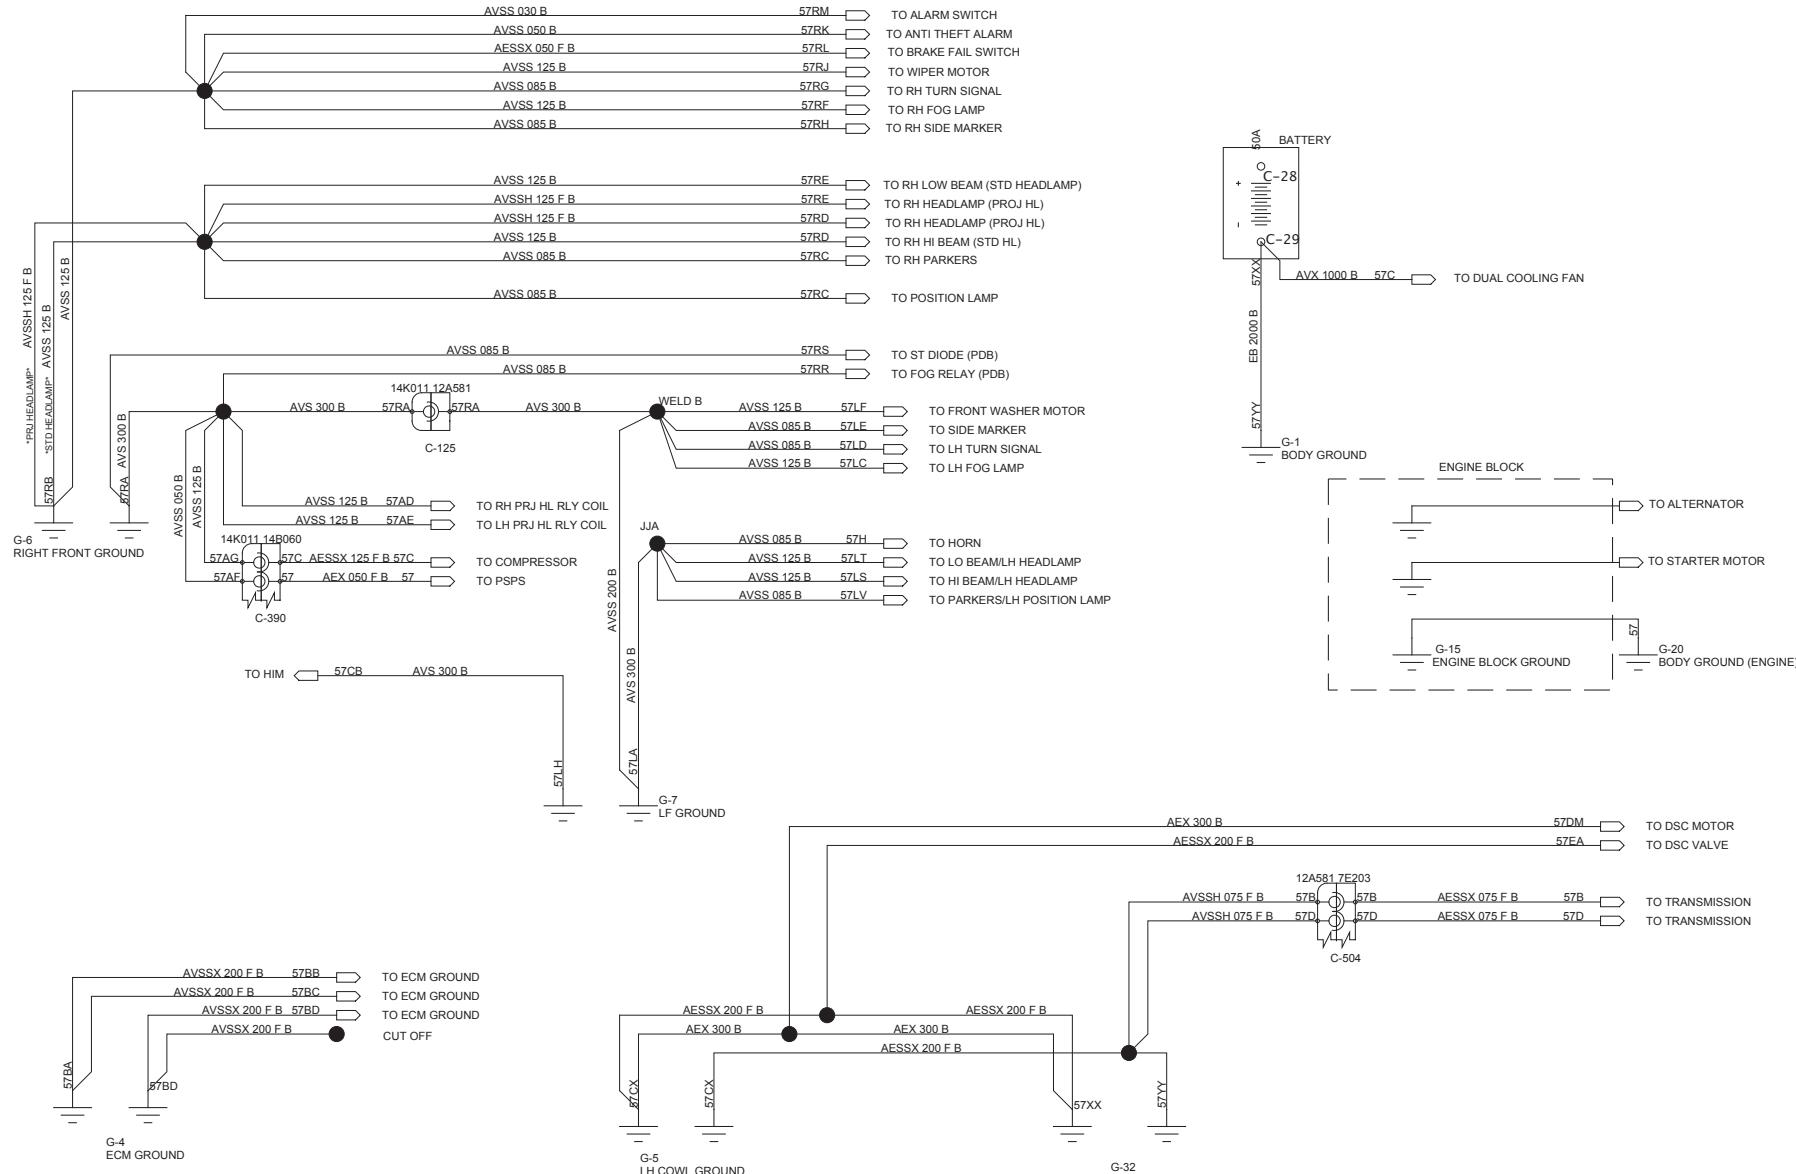


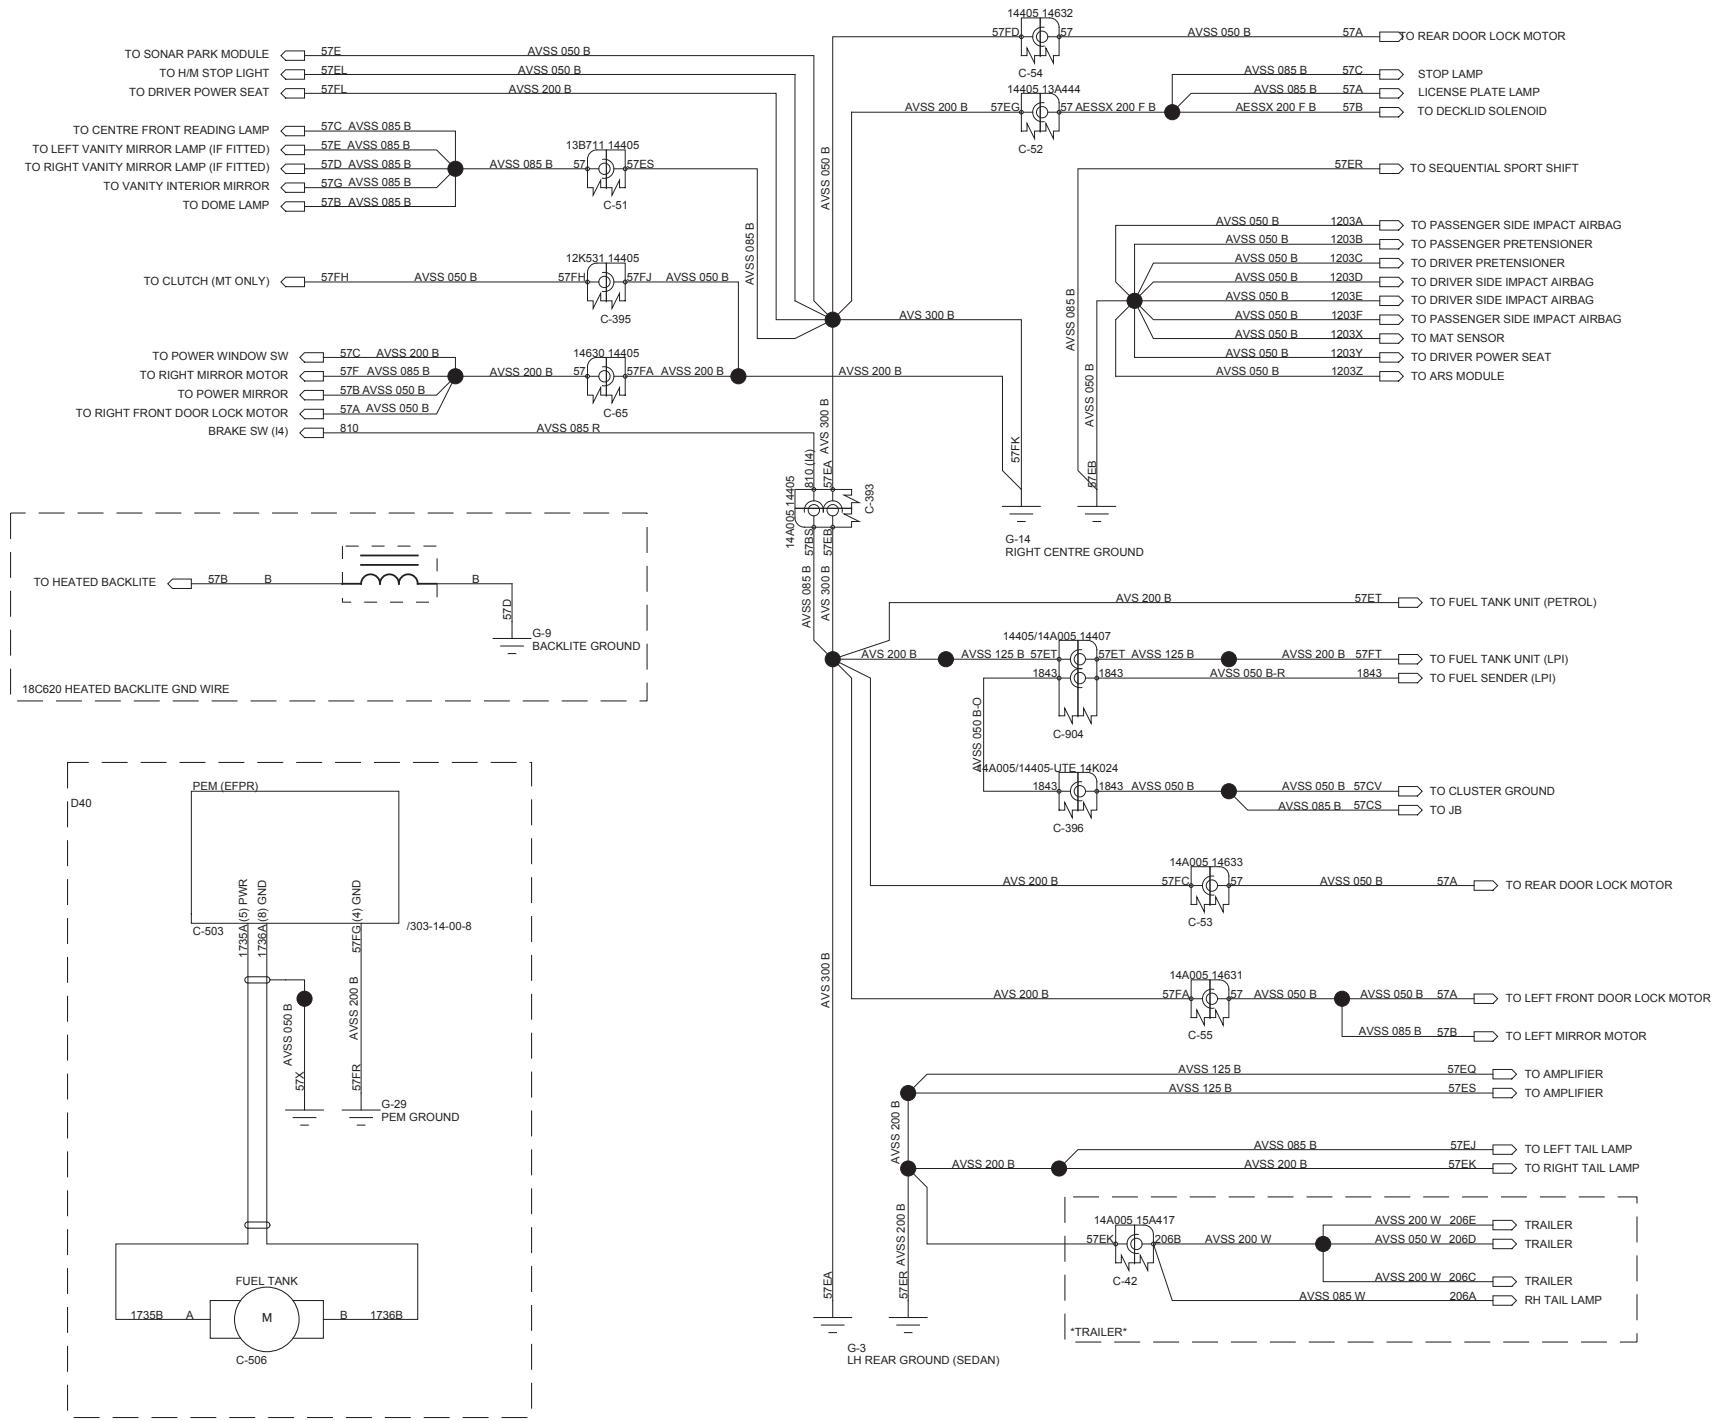

700-03-00-5




Ground Distribution -Ute

700-03-00-5

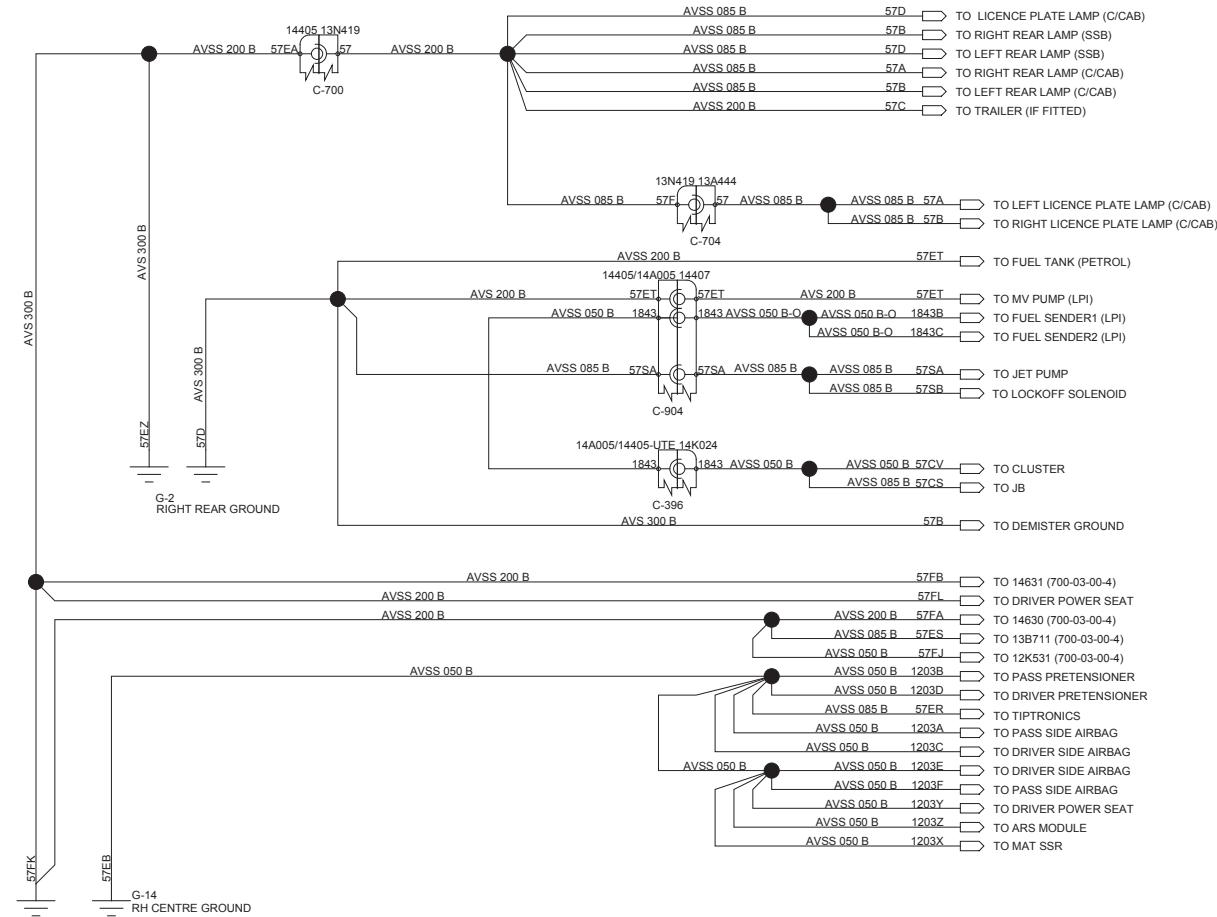


Login Tracking Code

CONNECTOR VIEWS	C-1		C-5	C-6	C-7	C-8	C-9	C-10
	CONSOLE FOOTWELL LAMP		INJECTOR-1 (I6) 1838B 555 W-R BR	INJECTOR-3 (I6) 1838D 557 W-R BR-Y	INJECTOR-4 (I6) 1838G 558 W-R BR	INJECTOR-5 (I6) 1838C 559 W-R BR-B	INJECTOR-6 (I6) 1838E 560 W-R LG	INJECTOR-2 (I6) 1838F 556 W-R W
			INJECTOR-1 (LPI) 1838B 555A W-R BR	INJECTOR-3 (LPI) 1838D 557A W-R Y-B	INJECTOR-4 (LPI) 1838G 558A W-R BR	INJECTOR-5 (LPI) 1838C 559A W-R Y-B	INJECTOR-6 (LPI) 1838E 560A W-R G	INJECTOR-2 (LPI) 1838F 556A W-R W-B
	C-11		C-14		V8	V8	LPI	
	I6	V8	I6/V8	I6/I4		V8		
	113 R	113 Y-SB	50B R					
	STARTER SOLENOID	STARTER B+						
	I4	I4						
	6							
	113 R	50 R						
	STARTER SOLENOID	STARTER B+						
					TRANSMISSION			

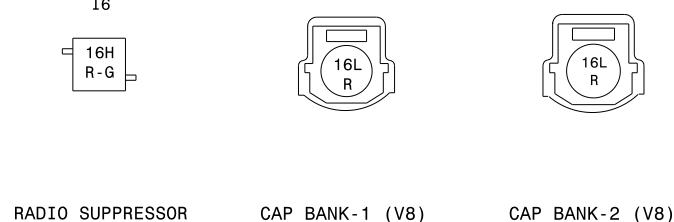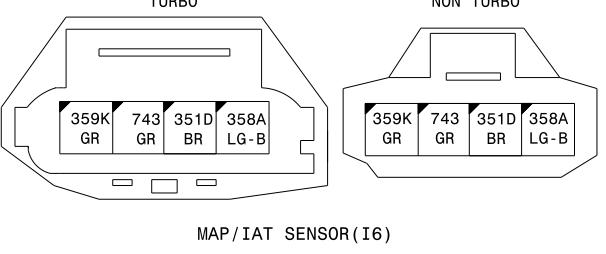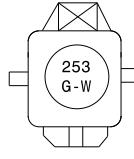
CONNECTOR VIEWS	C-16	C-17	C-18
700-07-00-02	 <p>RADIO SUPPRESSOR CAP BANK-1 (V8) CAP BANK-2 (V8)</p>	 <p>TURBO NON TURBO</p> <p>MAP/IAT SENSOR(I6)</p>	 <p>OIL PRESSURE SENSOR</p>




Login Tracking Code

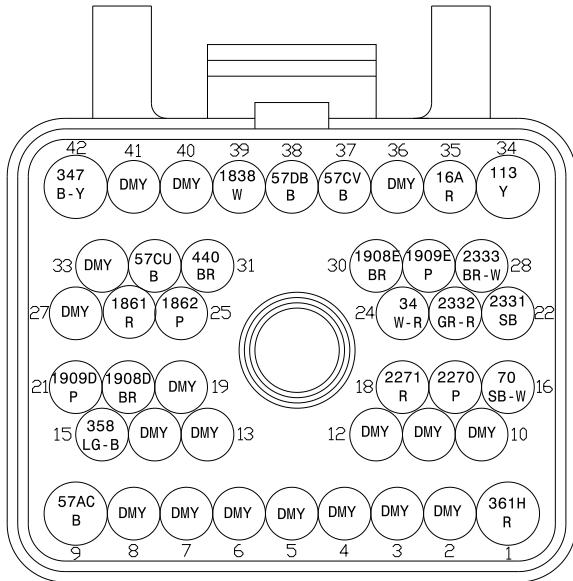


T0 14398 (I6) AT

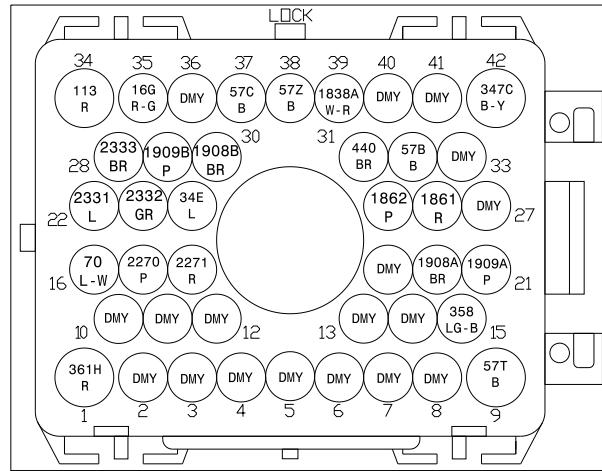

T0 12A581 (I6) AT

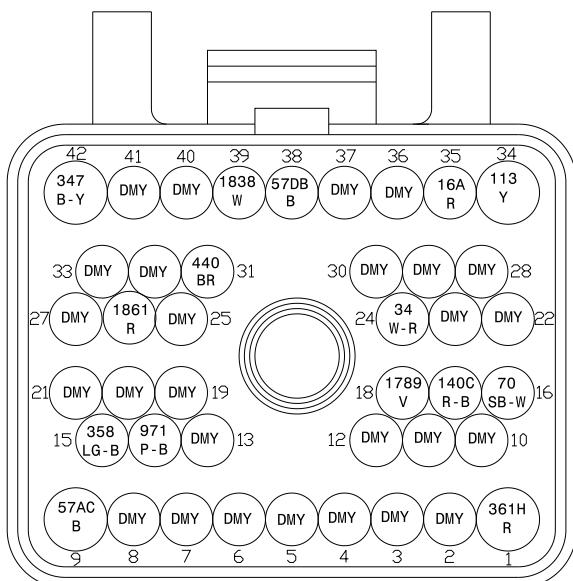


T0 14398 (I6) MT

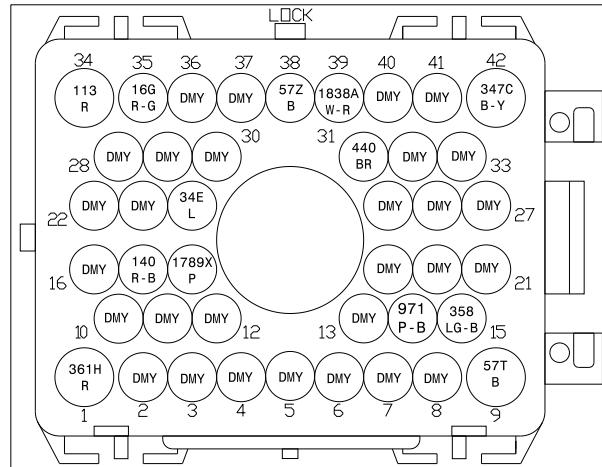


T0 12A581 (I6) MT




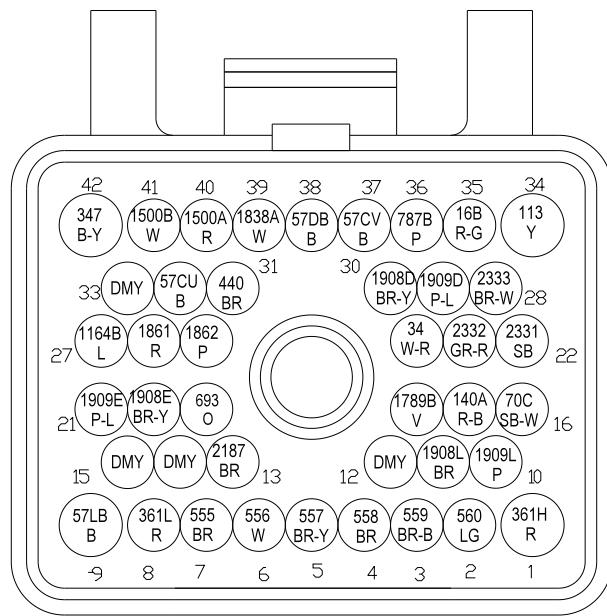


T0 14398 (LPI)

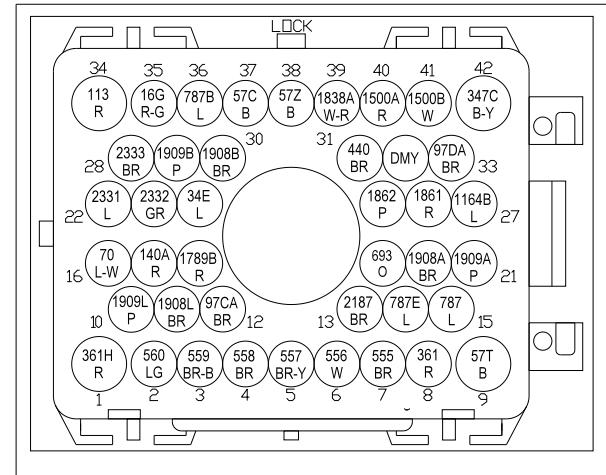


TO 12A581 (LPI)

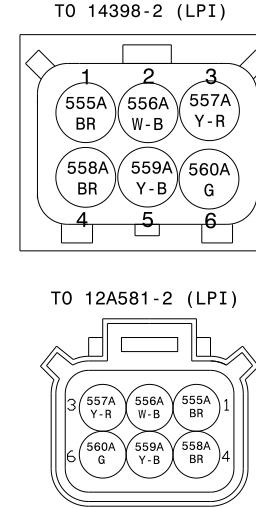

T0 12A581-2 (LPI)

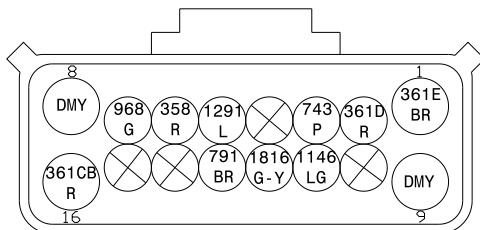

TO I4 ENGINE HARNESS

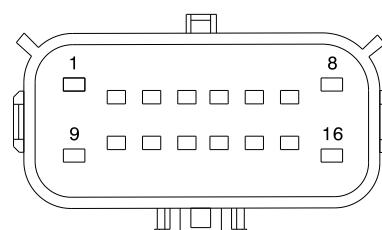


T0 I4 12A581

PIN	CCT#	COLOUR	PIN	CCT#	COLOUR
1	CBK04E	VT	9		
2	CBK03C	GY	10		
3	VE740A	VT-GY	11	CET40A	GN-OG
4	CEC02	GN-BU	12	CDC10A	BU-OG
5	VE804A	GN-BN	13	VE727A	BU-BN
6	VE803C	BU-GN	14	CEC01	WH-BU
7	RE320A	BU-GN	15		
8			16	CBK02A	GN


CONNECTOR VIEWS

700-07-00-05


C-20

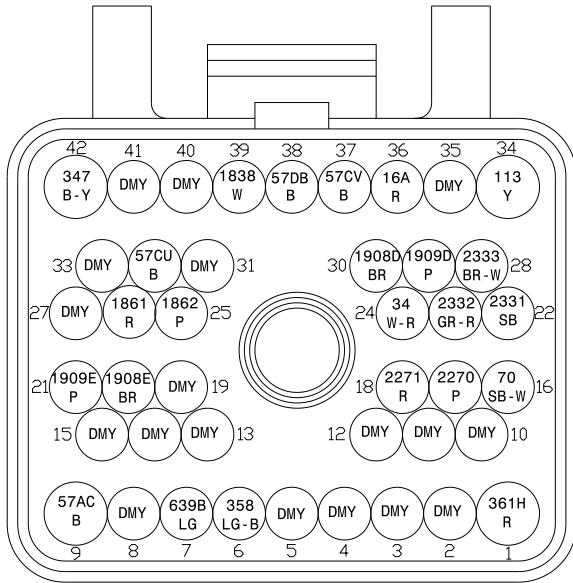

T0 12C508 (V8 AT)

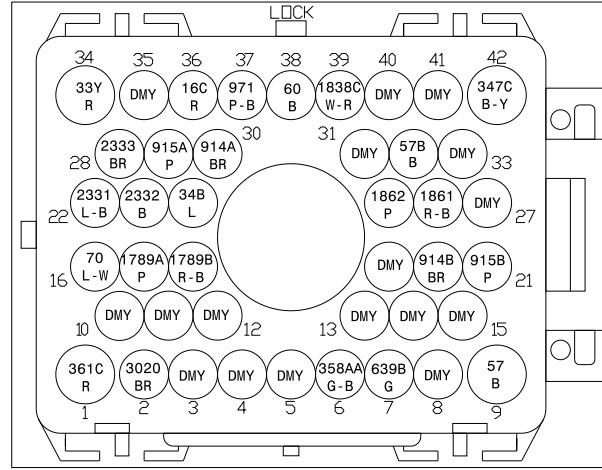

T0 12A581 (V8)





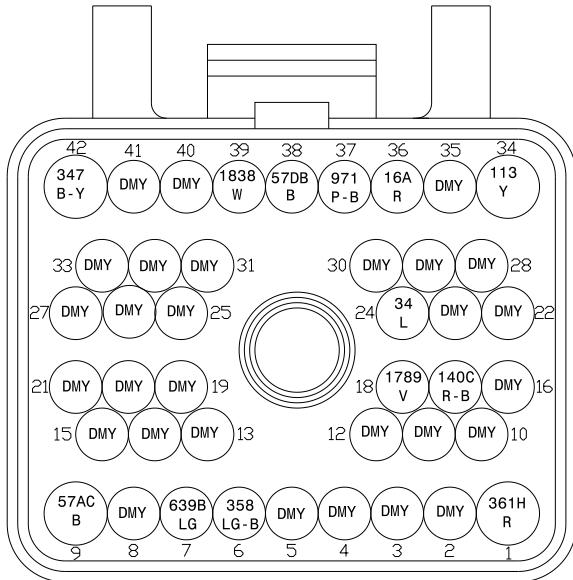



T0 12C508 (V8 MT)




Login Tracking Code

SHT 80 OF 126

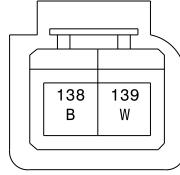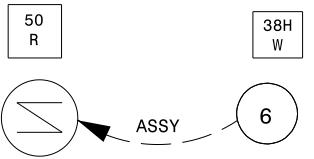
700-07-00-06	C-22		C-24	C-25
CONNECTOR VIEWS	C-26	C-28	C-29	
	 REVERSE LAMP SWITCH	 KNOCK SENSOR #1(I6)	 CRANKSHAFT SENSOR(I6)	
		 BATTERY (+)	 BATTERY (+) ASSY	 COOLING FAN POWER
		C-29		




FRONT WIPER MOTOR

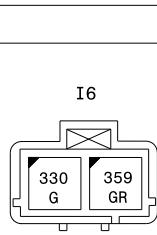


C-31

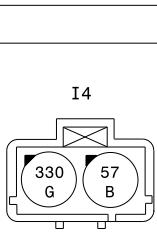


C-32




C-33

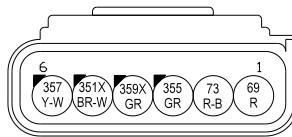


C-34

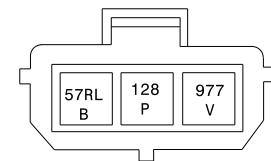


C-38



SEDAN




UTE

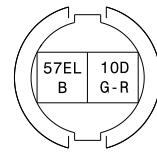


H/M STOP LAMP

C-39

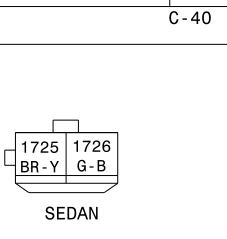

SEDAN



UTE




SEE C-368




BACKLITE


C-40

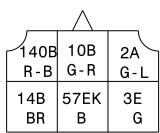


TO 15A417

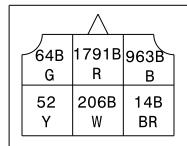

TO 14A005 / TO 14405




TO 15A417-2




TO 14A005-2


C-42




FUEL FILLER




LH TAIL LAMP



RH TAIL LAMP

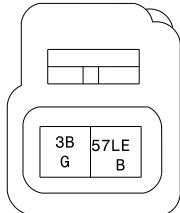

LH SIDE DIRECTION INDICATOR

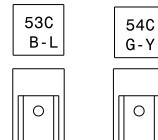

LUGGUAGE COMP LAMP

C-43

C-44



C-45

C-46

C-47

CONNECTOR VIEWS

C-48

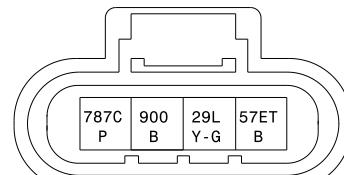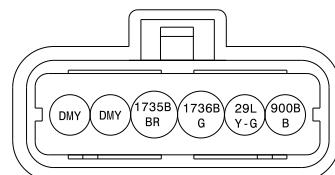
FUEL TANK UNIT (I6)
(V8)

FUEL TANK UNIT (I4)


C-49

PARK BRAKE
SWITCH

C-50

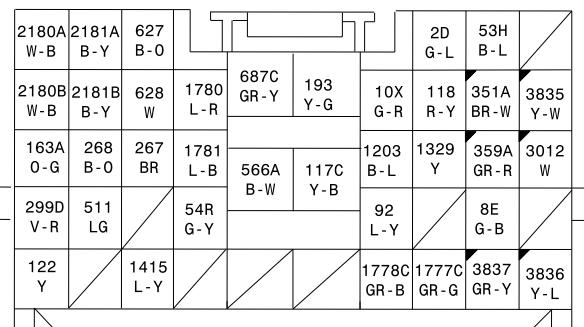


TO 14K024

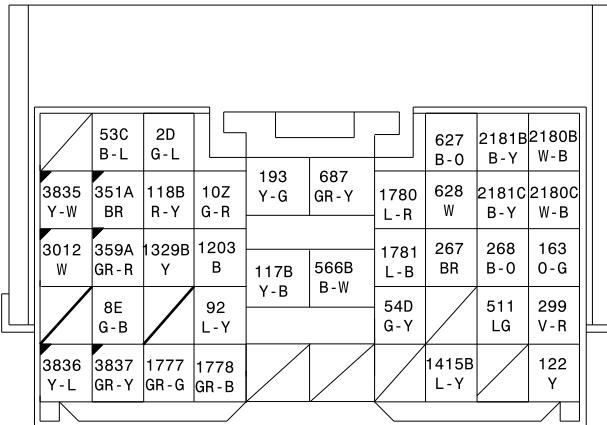


TO 14405

C-51

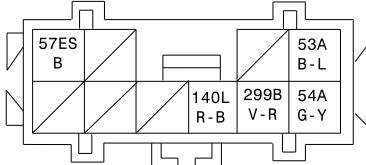


TO 13B711

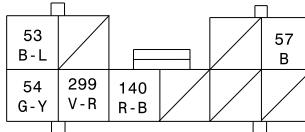


TO 14405

C-52

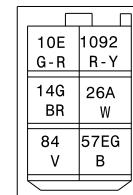

TO 13A444




TO 14405


CONNECTOR VIEWS

700-07-00-09

C-53

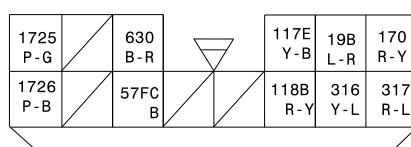


TO 14633

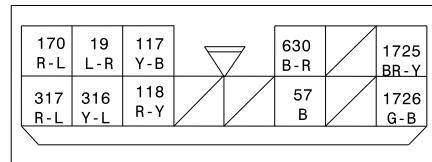


TO 14A005

C-54

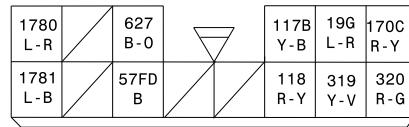


TO 14632

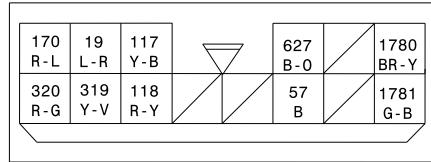


TO 14405

C-55

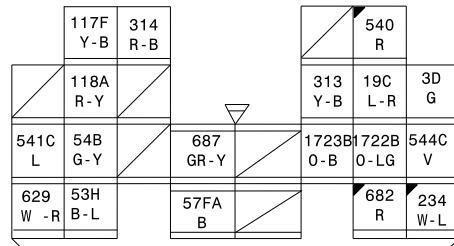


TO 14631

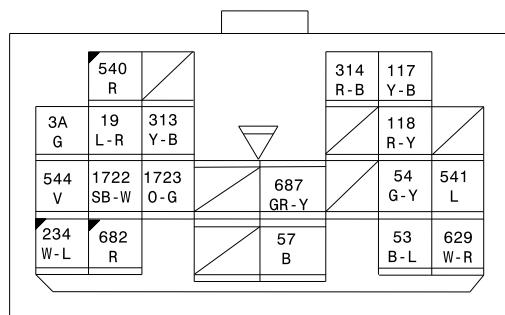

TO 14A005 / 14405


C-56

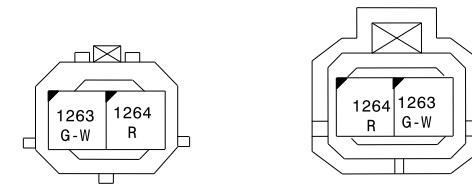


TO 14A005-2

TO 14631-2


C-57

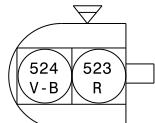ABS SPEED SENSOR
(RIGHT REAR)

C-58

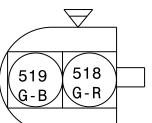ABS SPEED SENSOR
(LEFT REAR)


C-64

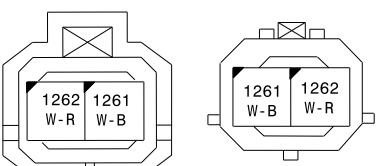


TO 14630-2

TO 14405-2

C-65

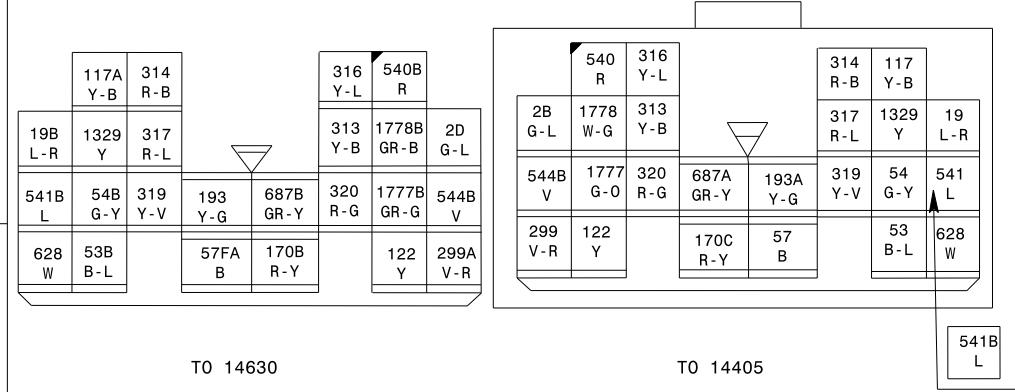


C-66





AMPLIFIER


C-67

TWEETER SPEAKER
(RIGHT)


C-68

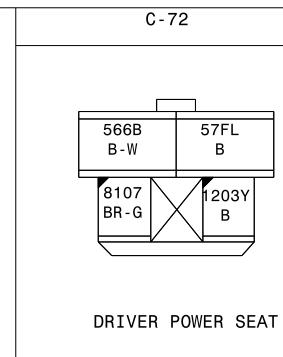TWEETER SPEAKER
(LEFT)

DRIVER POWER SEAT




(WITHOUT TRAILER)



(WITH TRAILER)

RH TAIL LAMP




LH TAIL LAMP

CONNECTOR VIEWS	C-84	C-85	C-86	C-87	C-88
	RIGHT FRONT POWER WINDOW MOTOR	RH FRONT SPEAKER	HI SERIES LOW SERIES RIGHT FRONT MIRROR MOTOR	RHF DOOR LOCK MTR	NON MEMORY MEMORY POWER MIRROR SWITCH
	C-89	C-90	C-91	C-92	C-93
	RIGHT FRONT POWER WINDOW SWITCH	RIGHT FRONT DOOR COURTESY LAMP	LEFT FRONT POWER WINDOW MOTOR	LH FRONT SPEAKER	LEFT FRONT PWR WINDOW SW
	C-94	C-95	C-96	C-97	
	LEFT FRONT MIRROR MOTOR	LHF DOOR LOCK MOTOR	LEFT FRONT DOOR COURTESY LAMP	RIGHT REAR POWER WINDOW MOTOR	
	C-98	C-99	C-101		
	RIGHT REAR DOOR LOCK MOTOR	RIGHT REAR WINDOW SWITCH	LEFT REAR POWER WINDOW MOTOR		

CONNECTOR VIEWS


700 - 07 - 00 - 12

C-102

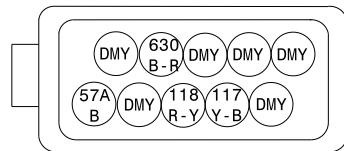


LH REAR DOOR LOCK MOTOR

C-103

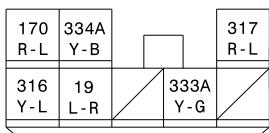

LEFT REAR WINDOW SWITCH


C-111

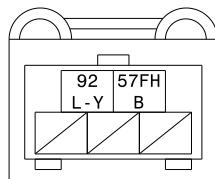

CLUTCH


C-106

AT

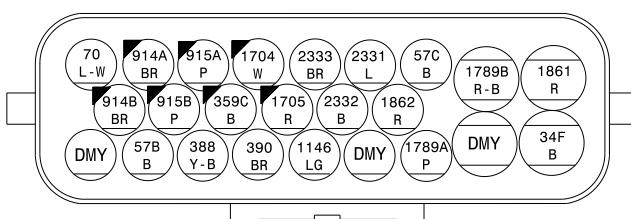


T0 12C508

MT

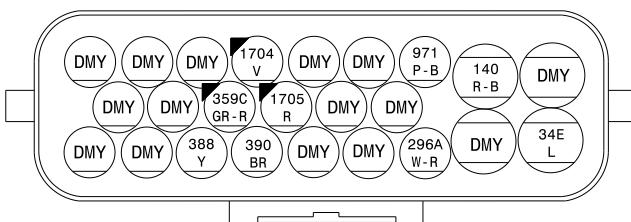


T0 12C508

C-112



IMCC

C-116

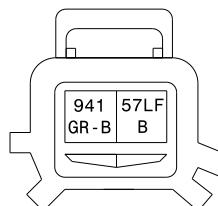


FRONT WASHER MOTOR


CONNECTOR VIEWS

700-07-00-13


C-119

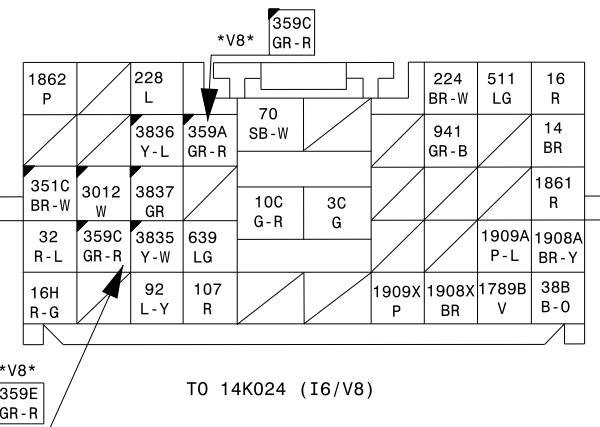

T0 14K024 (I6/V8)

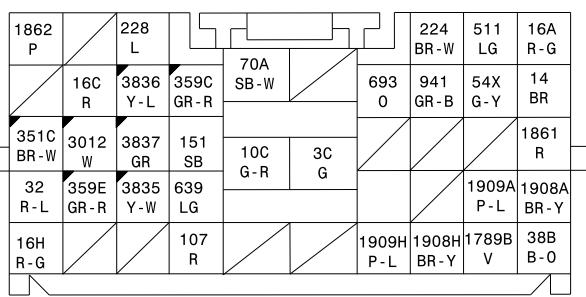


T0 14K024 (LPI)

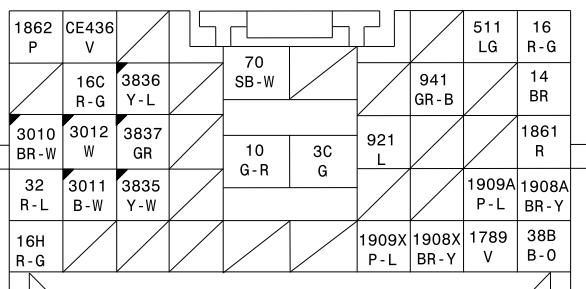

T0 14K024 (I4)


C-120




**ABS SPEED SENSOR
(LEFT FRONT)**

C-121


A/C COMPRESSOR

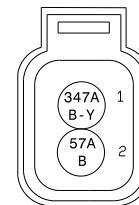

(I6/LPI)


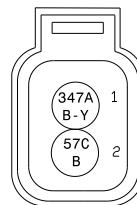


(V8)

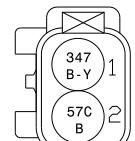


(I4)

C-122

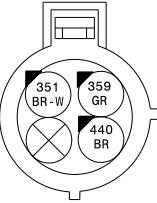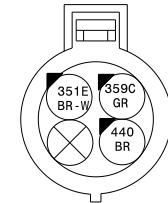

A/C PRESS TRANSDUCER (I6) A/C PRESS TRANSDUCER (I4)

C-123

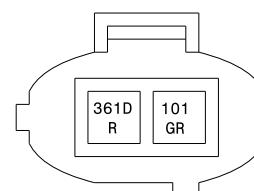


CANISTER PURGE SOL




CONNECTOR VIEWS

700-07-00-14


C-125

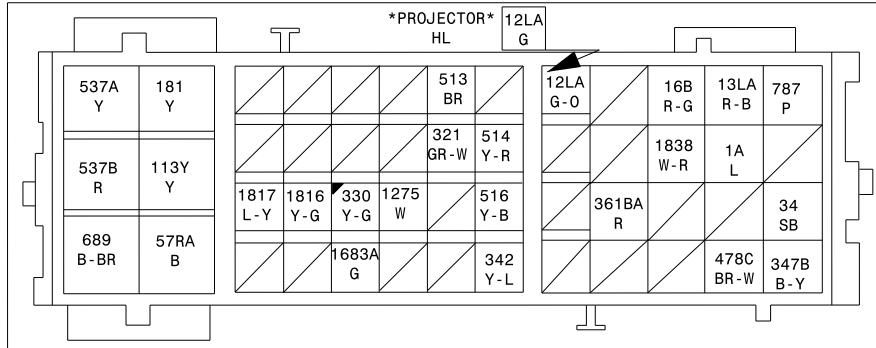


TO 12A581 (I6)

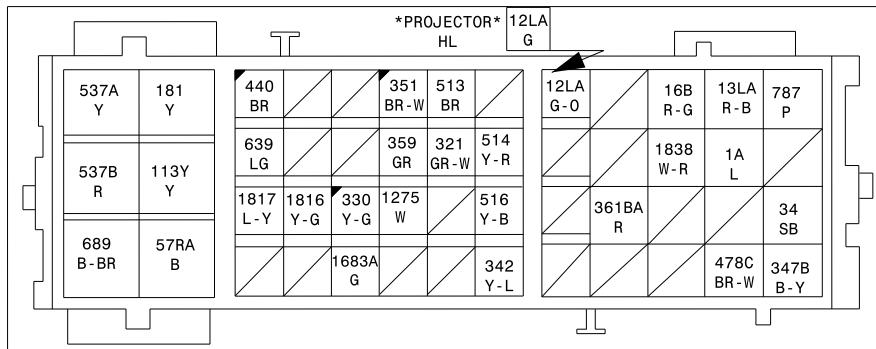


TO 12A581 (V8)

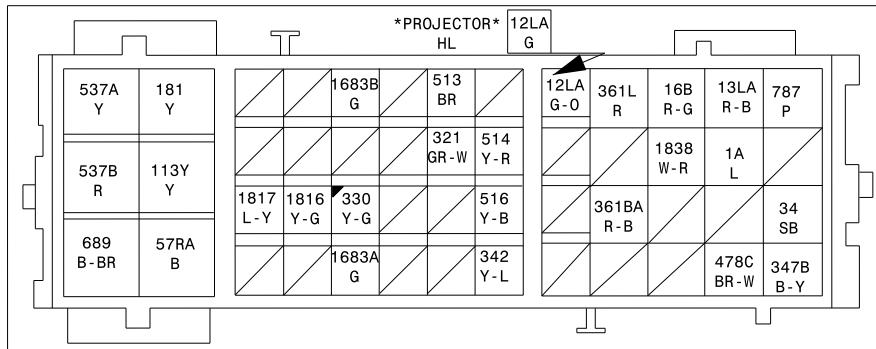


TO 12A581 (LPI)

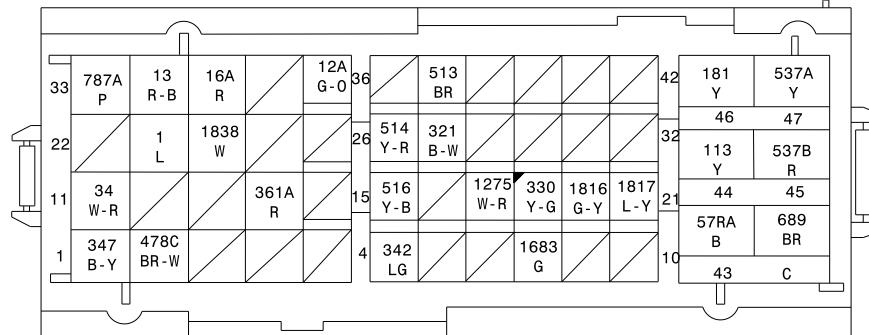

TO 14K011 (I6)

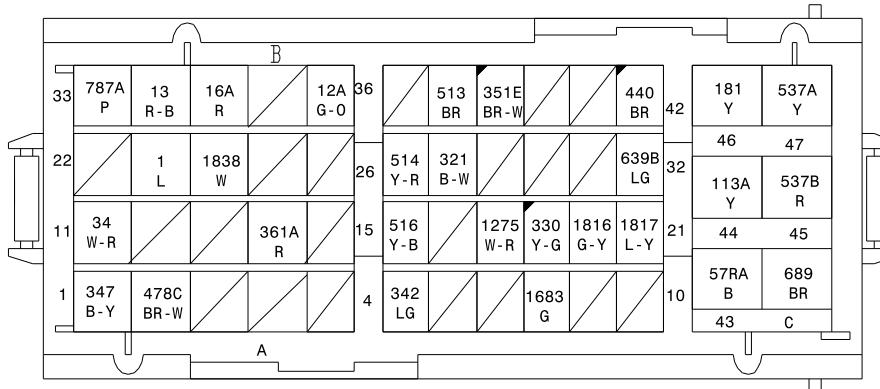

TO 14K011 (V8)

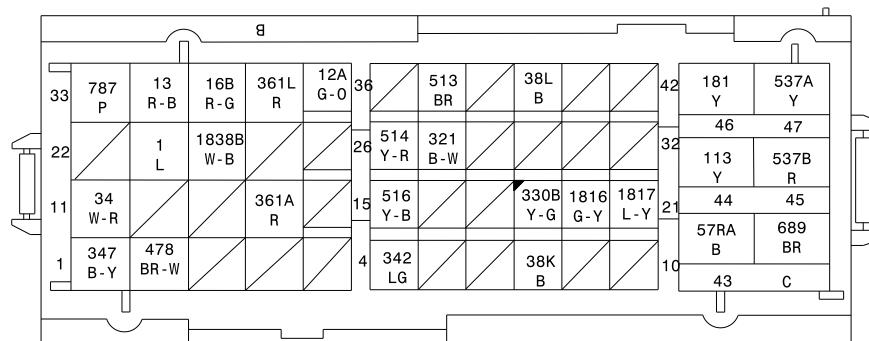

TO 14K011 (LPI)





Login Tracking Code

SHT 89 OF 126

CONNECTOR VIEWS

700-07-00-15


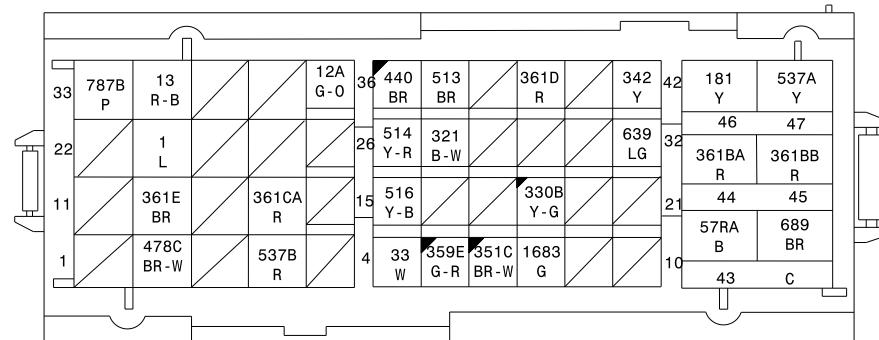
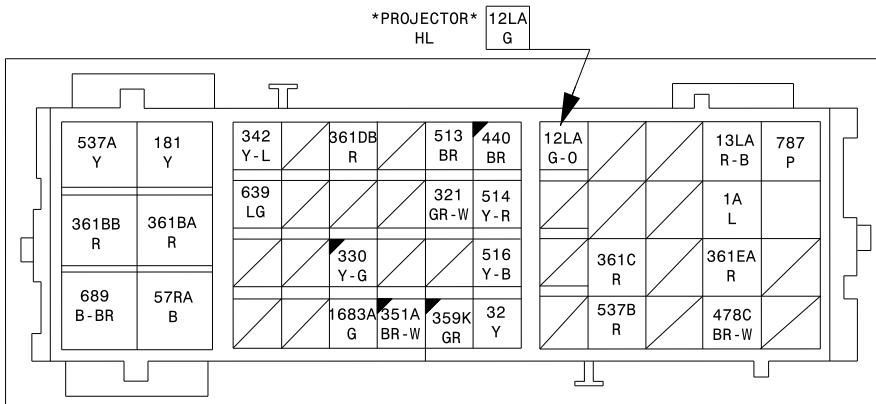







Login Tracking Code


SHT 90 OF 126

C-133	C-134	C-135	C-138	C-139
DECKLID SOLENOID	STOP LAMP	LICENCE PLATE LAMP	LOW SERIES DOME LAMP	HI SERIES
C-142	C-143	C-146		C-149
RH VANITY MIRROR LP	LH VANITY MIRROR LP	PASSENGER AIRBAG	DUAL COOLING FAN (I6)	DUAL COOLING FAN (V8/I4)


C-150

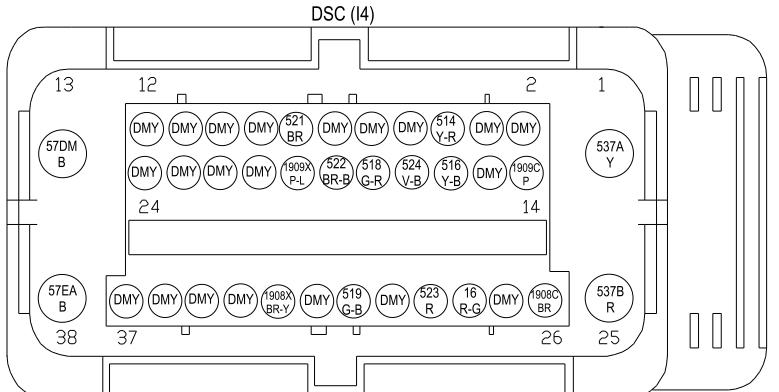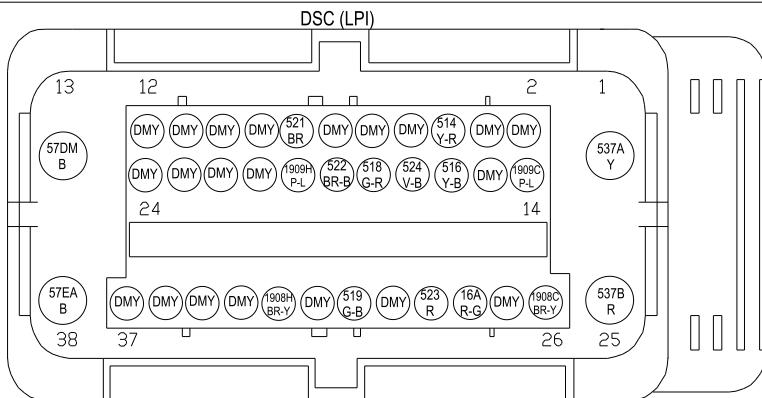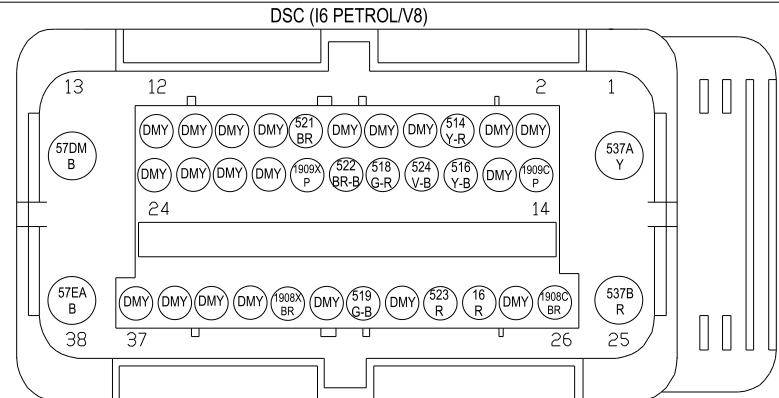

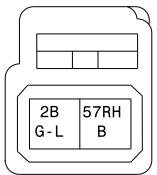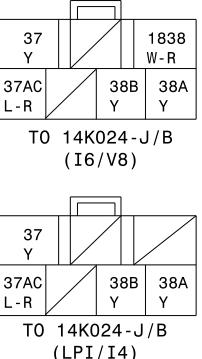
C-151	C-152	C-154	C-156	C-157
 ABS SPEED SENSOR (RIGHT FRONT)	 HORN	 RH SIDE MARKER	 PDB (ALT)	 PDB (ST) TO 14K024-J/B (I6/V8) TO 14K024-J/B (LPI/I4)

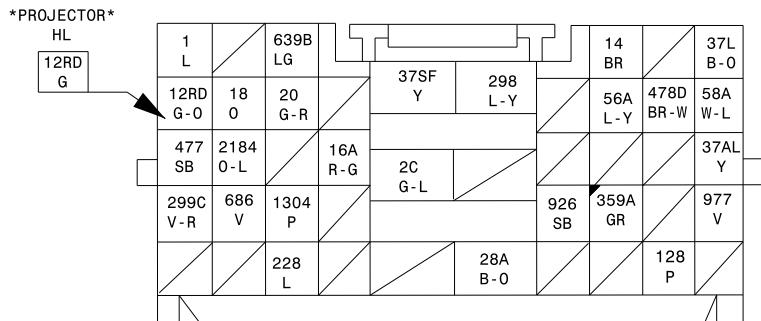


T0 14K024 (I6)

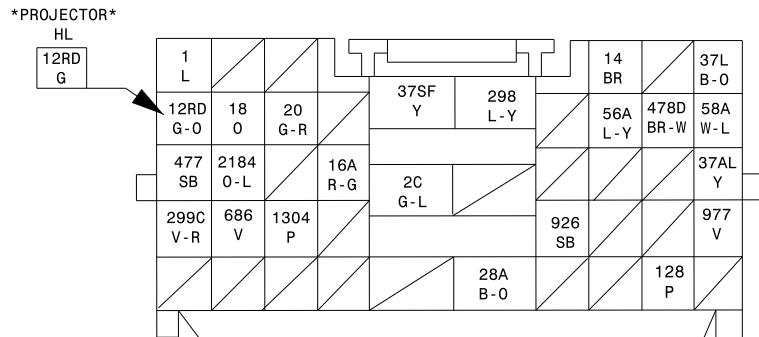

T0 14K024 (V8/I4)

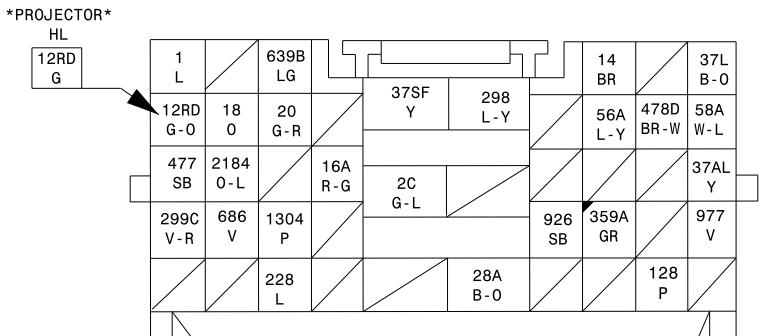

T0 14K024 (LPI)

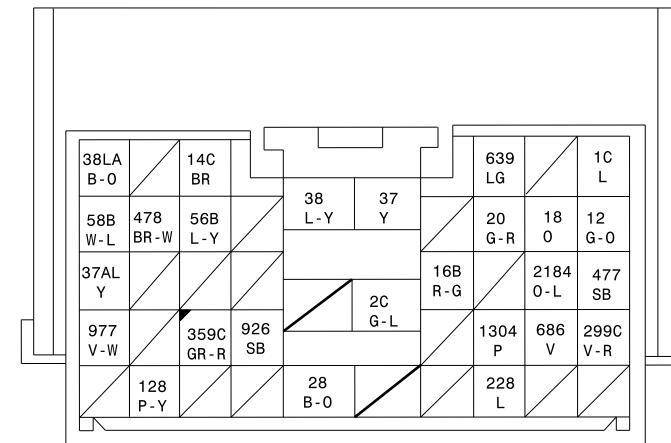







T0 14K011



CONNECTOR VIEWS

700 -07 -00 -19

C-159

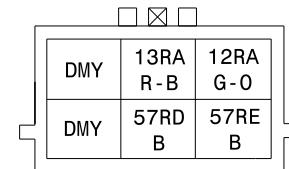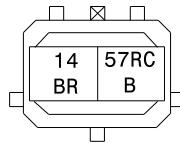

RH HI BEAM

RH LO BEAM







RH PARKERS

RH TURN SIGNAL

RH POSITION LAMP

RH HEADLAMP

C-160

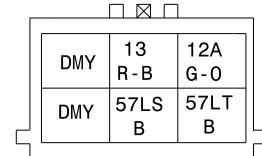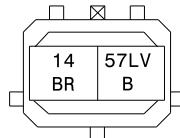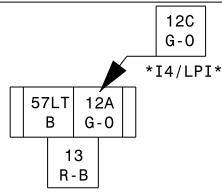

LH HI BEAM

LH LO BEAM


LH PARKERS

LH TURN SIGNAL


LH POSITION LAMP

LH HEADLAMP

C-161

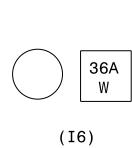

ALTERNATOR

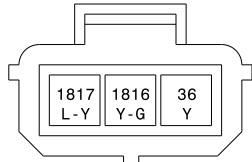

C-162



ALTERNATOR CURRENT SSR



(I4)





(V8)



Login Tracking Code

SHT 94 OF 126

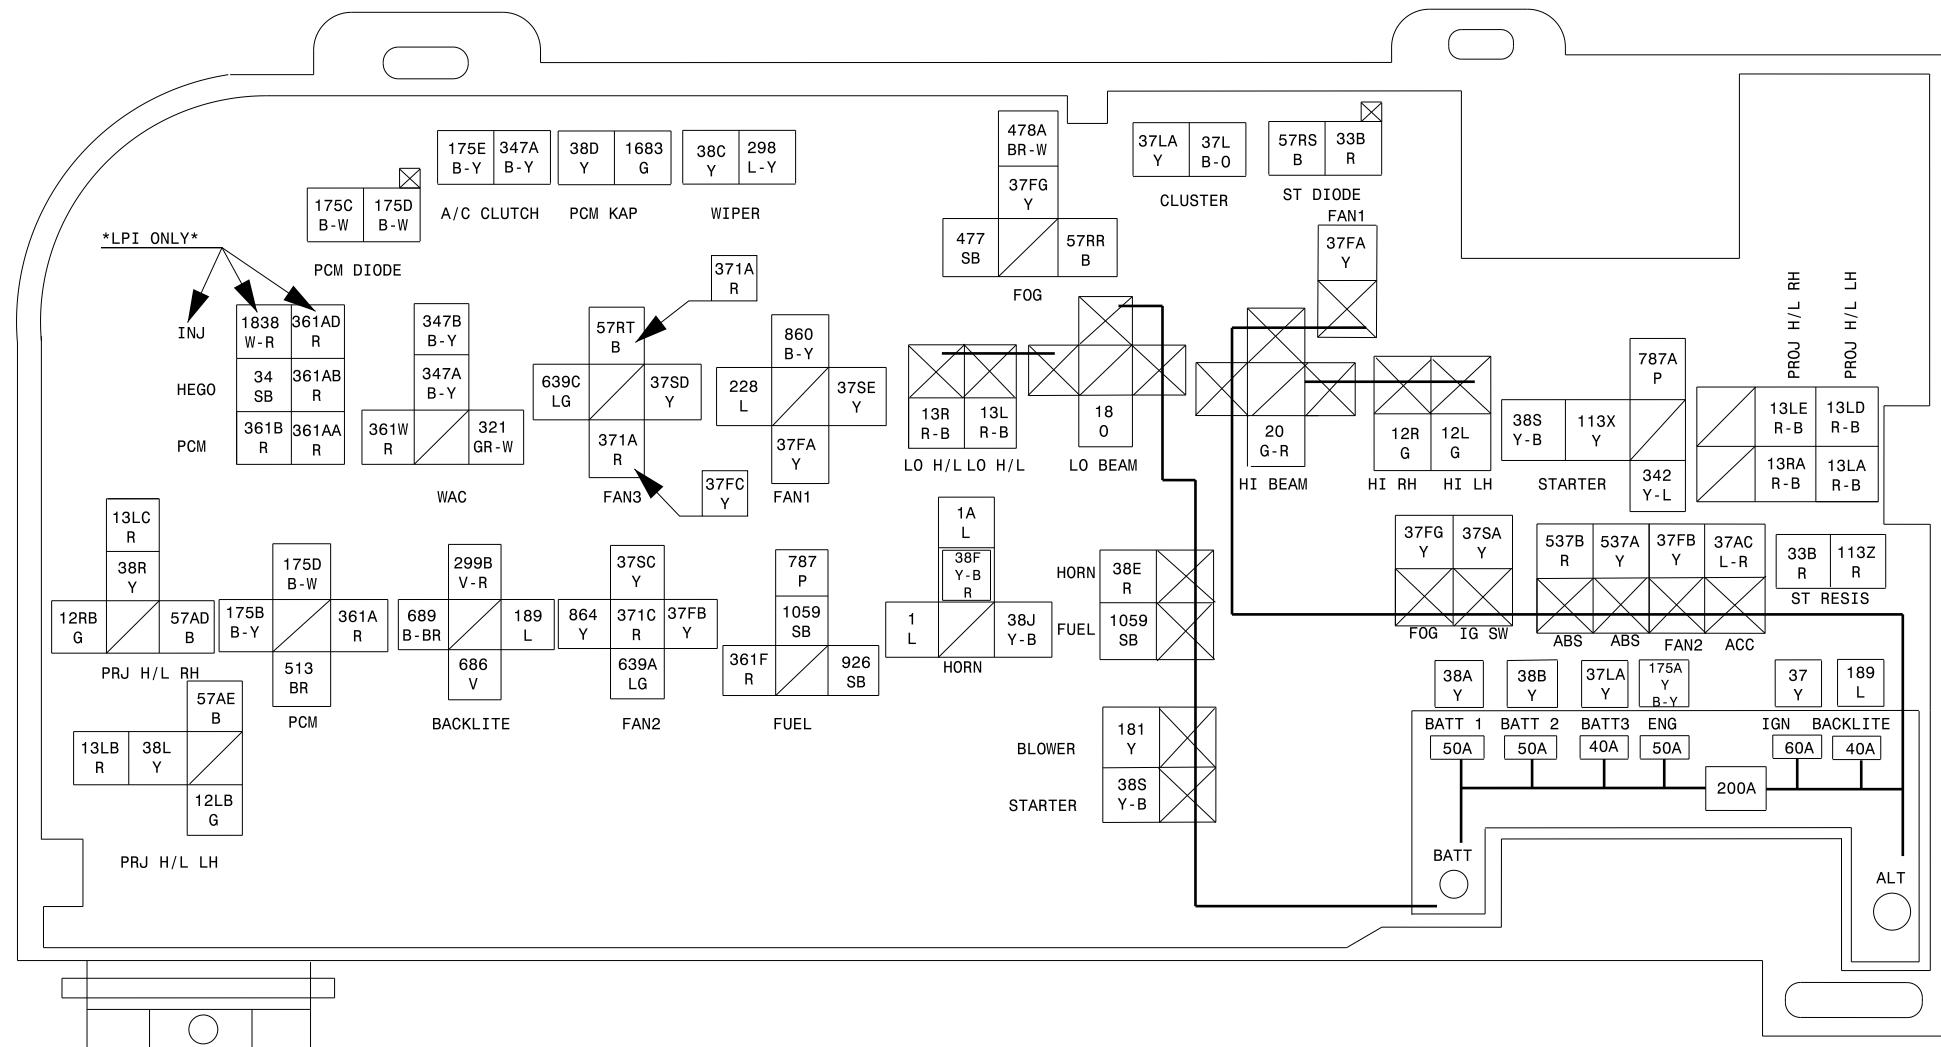


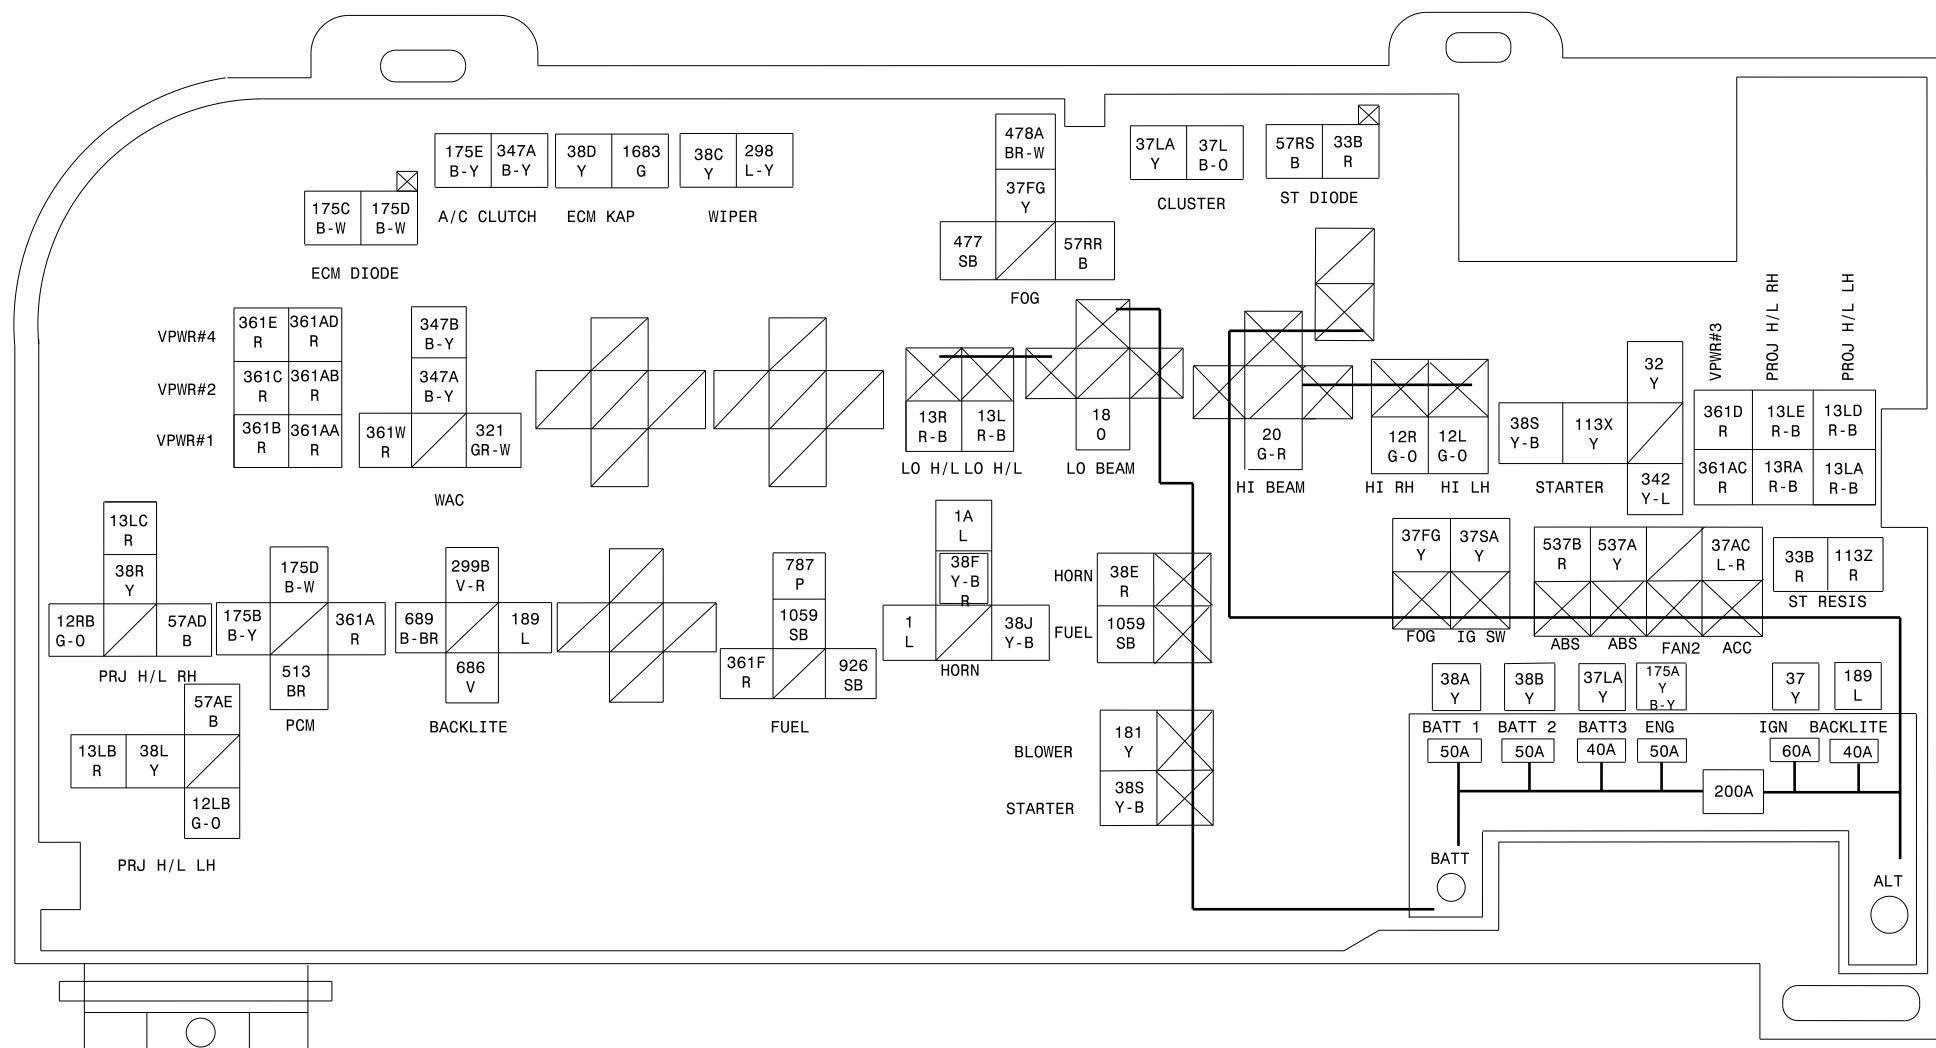

CONNECTOR VIEWS

700-07-00-22

C-163

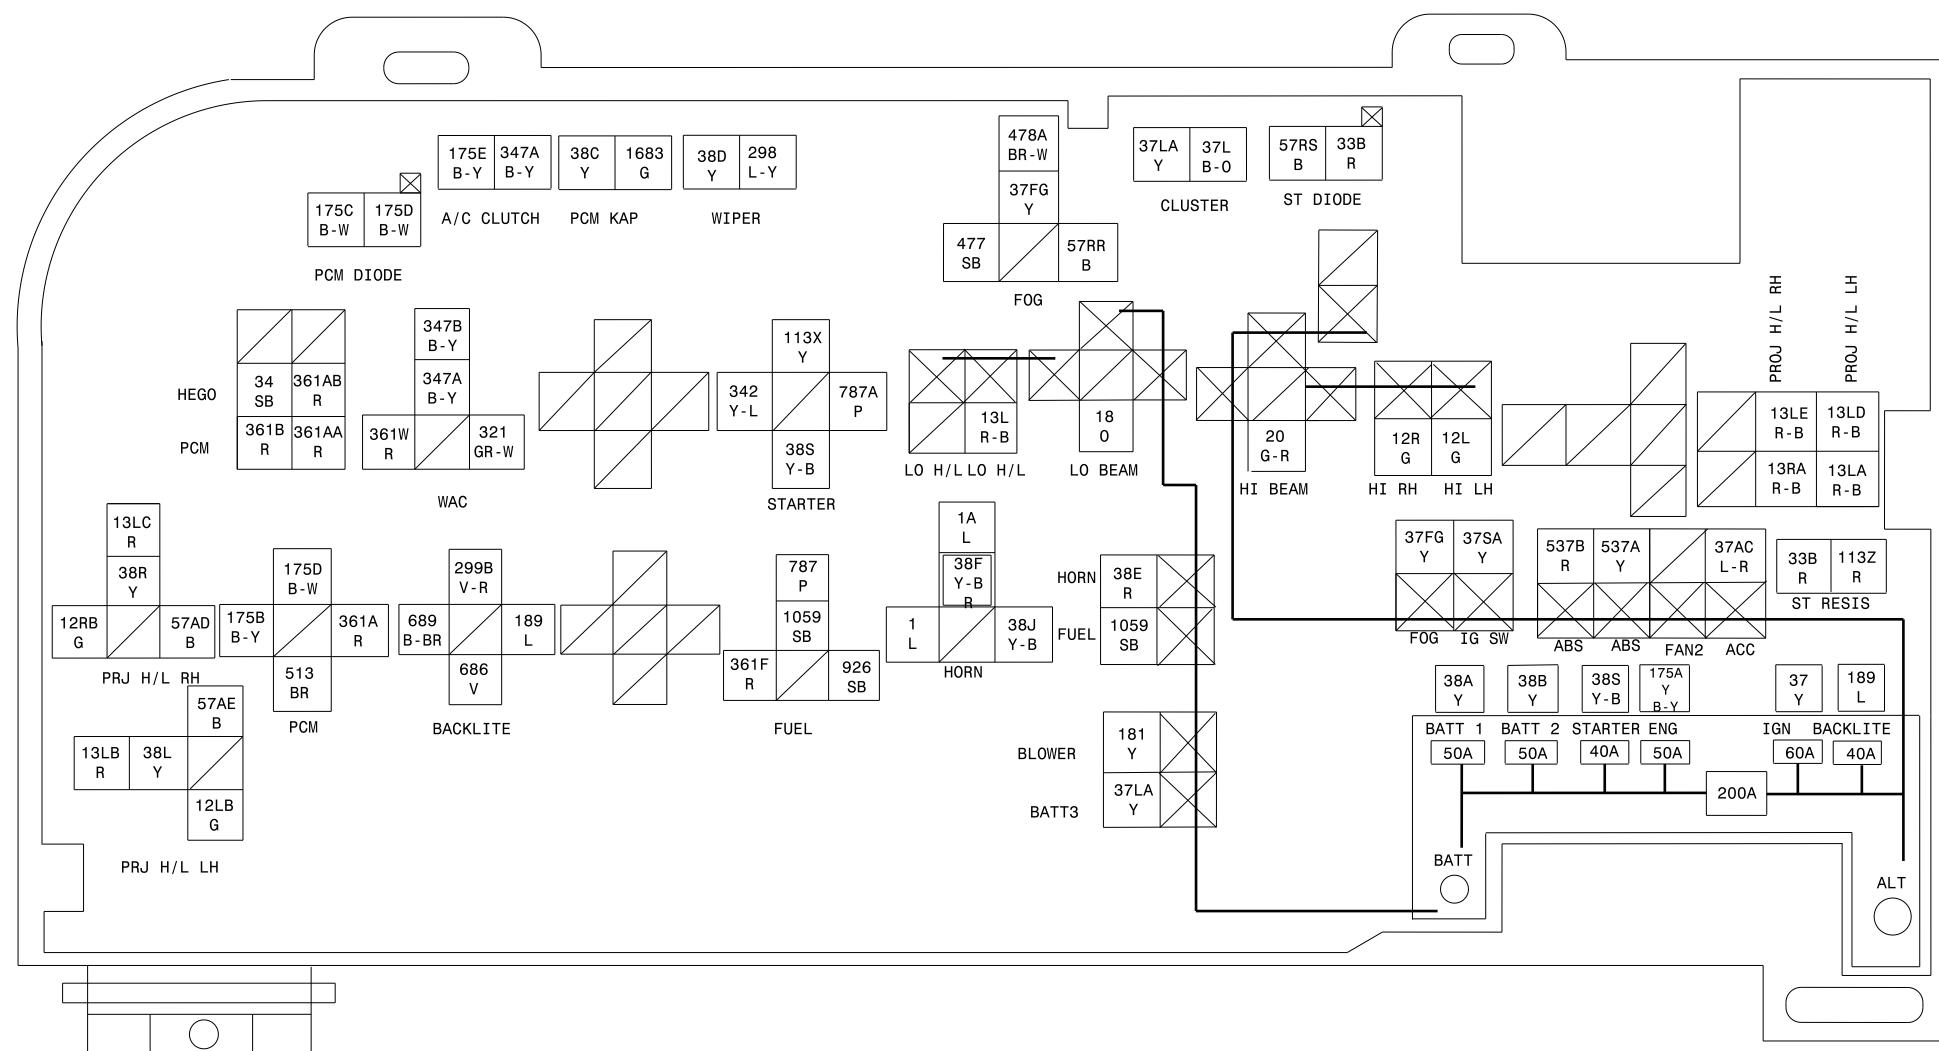


Login Tracking Code

SHT 97 OF 126




CIGAR LIGHTER ILLUMINATION




CIGAR LIGHTER POWER SOCKET

C-166

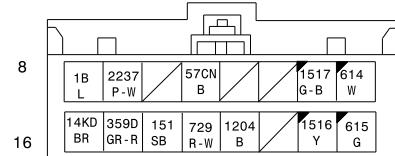


CLOCK SPRING

C-167

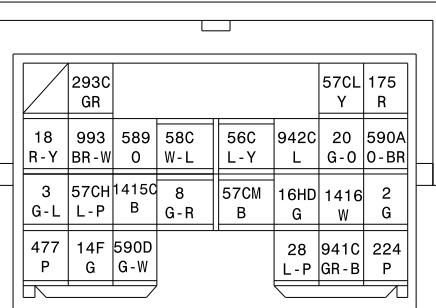


TO 14K024

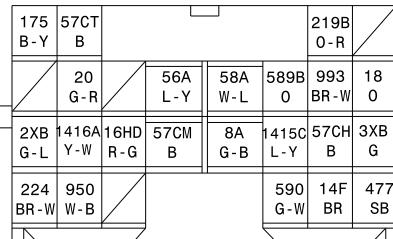


TO COLUMN SWITCH

C-168




IGNITION SWITCH

C-169

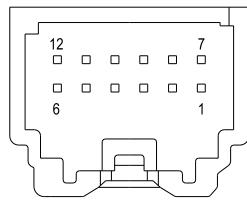


STEERING WHEEL SWITCH (INTERNAL STEERING WHEEL)

C-171

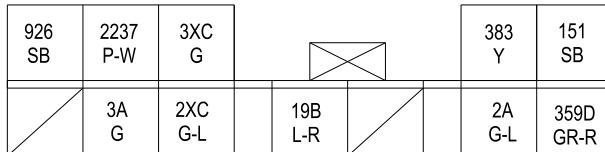

CLUSTER 1

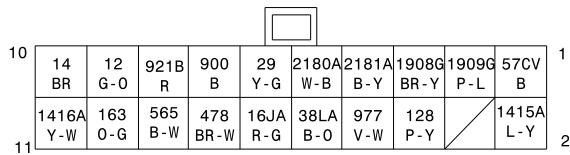


CLUSTER 2


CONNECTOR VIEWS

7000-07-00-24











C-173

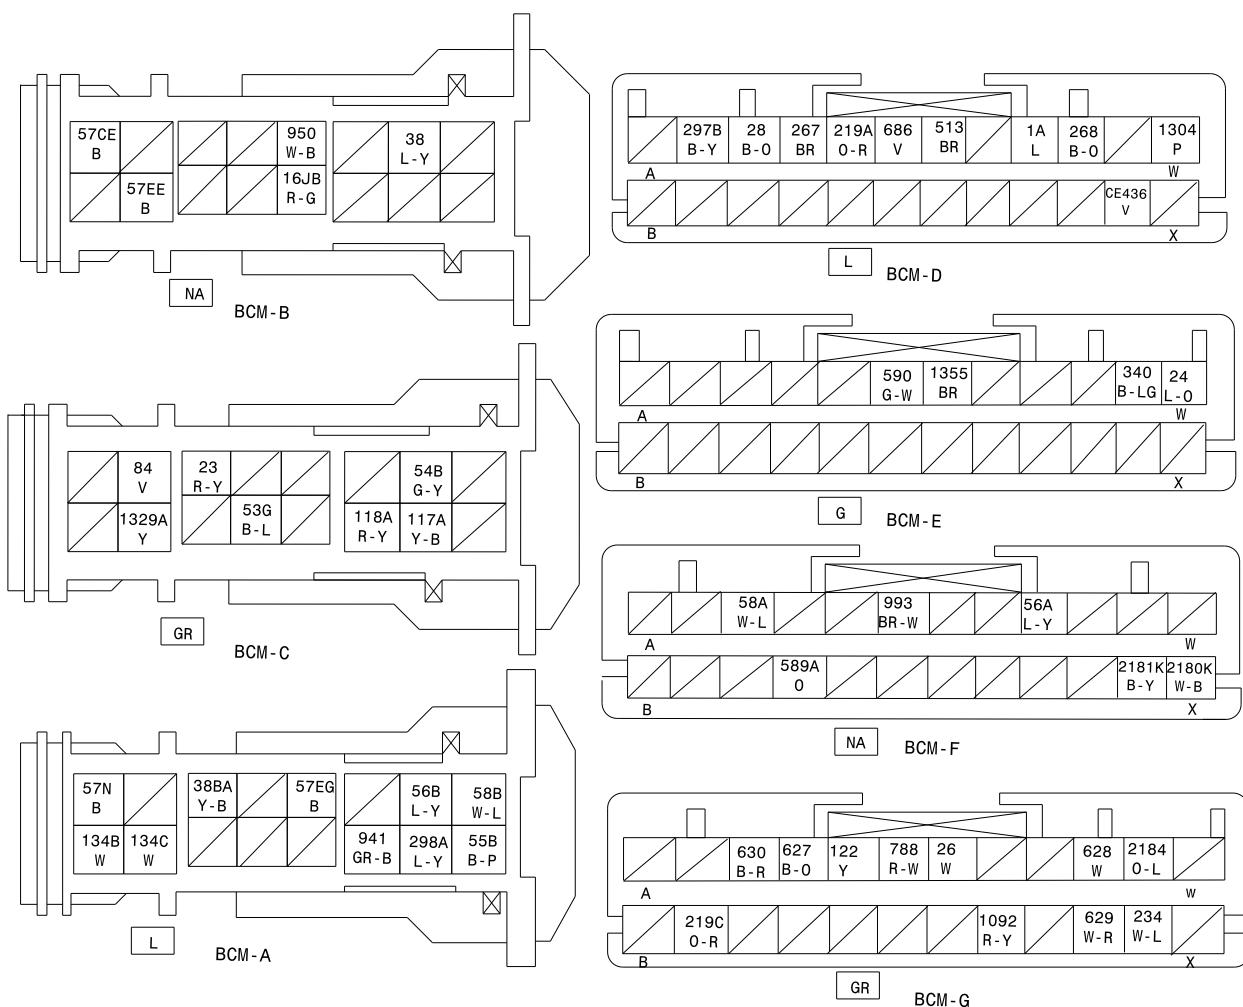

C-174

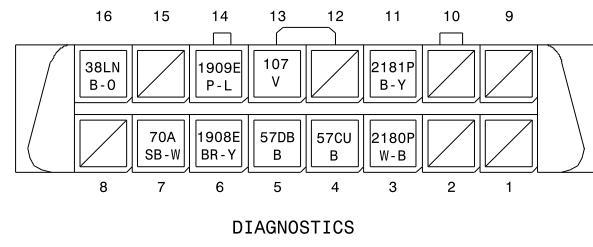

CONNECTOR VIEWS	C-184	C-188	C-189		
	<p>57B B L 26 W</p>		<p>57CD B 54C G-Y</p>		
	DECKLID SWITCH		GLOVE BOX LAMP		
			<p>ARS MODULE</p>		
	C-190		C-191		C-192
	<p>1908C BR-Y 1909C P-L</p>		<p>1909A P-L 1908A BR-Y</p>		
	TO 14405 ARS		TO I/P CAN		
	C-194				
	<p>USB SOCKET ASSY USB BEZEL</p>				
<p>823 LG 37A Y 297E B-Y 724A SB 725A P 565 B-W</p>		<p>10Y G-R 511 LG 810 R-G 10AB G-R</p>		MOBILE PHONE	
<p>53J B-L 54J G-Y 48A2 B 1597D V 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		<p>53J B-L 54J G-Y 48A2 B 1597D V 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		TO 14C575 (USB)	
<p>1594A Y 1595A BR 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		<p>1594A Y 1595A BR 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		TO 14K024 (USB)	
<p>1594A Y 1595A BR 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		<p>1594A Y 1595A BR 1596A LG 1597A V 48A B 54 G-Y 53 B-L</p>		TO 14K024	

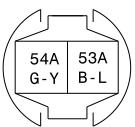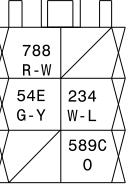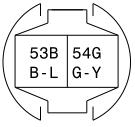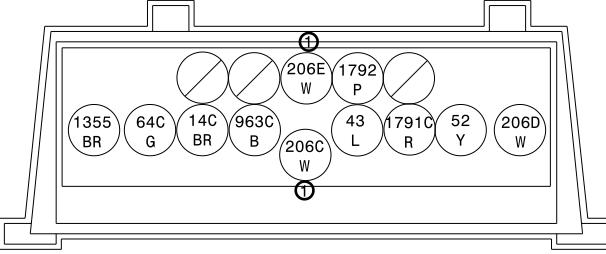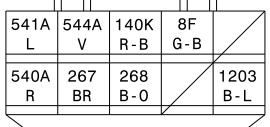

700-07-00-26	C-199	C-200	C-202	
CONNECTOR VIEWS	 PASSENGER FOOTWELL LAMP	 SOLAR SENSOR	 DRIVER FOOTWELL LAMP	
	C-215  TRAILER	C-221  BLOWER MTR	C-226  SUB-WOOFER SPEAKER	C-230  MEMORY MODULE
	C-231  MIRROR CTRL MODULE	C-233  DRIVER PRETENSIONER	C-234  PASS PRETENSIONER	

CONNECTOR VIEWS

700-07-00-27


C-300

I6

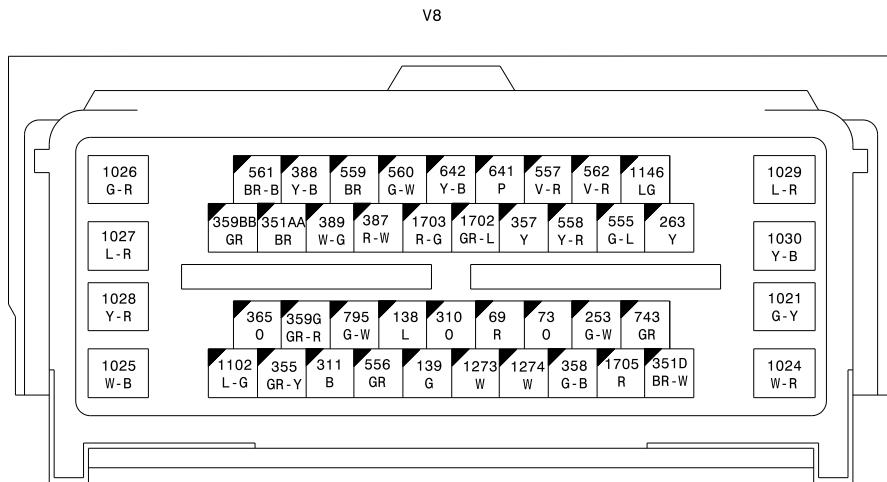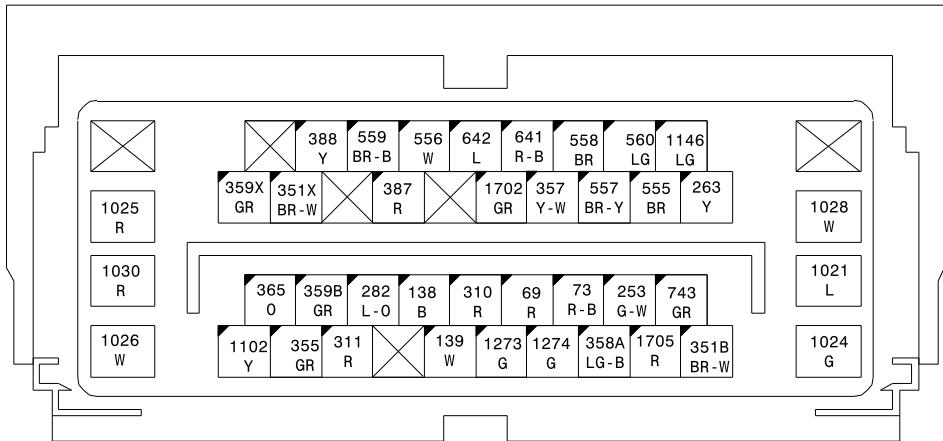

EEC-A

LPI

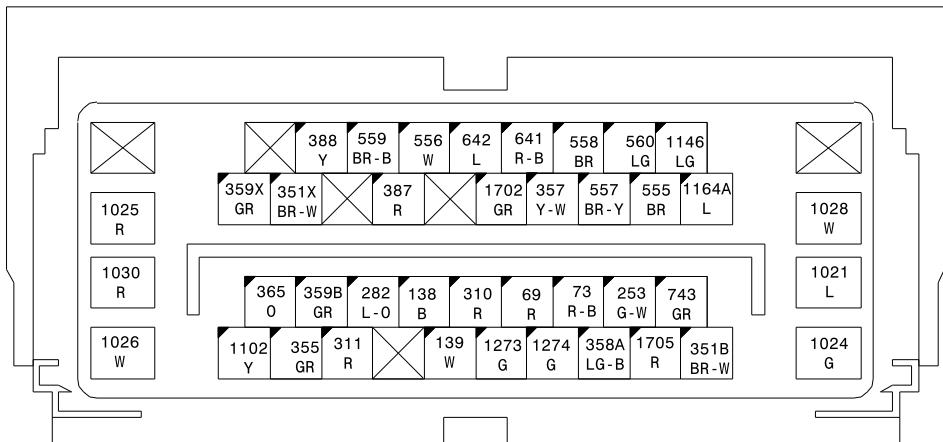

PCM-A




Login Tracking Code

SHT 102 OF 126

CONNECTOR VIEWS

700-07-00-28

C-300

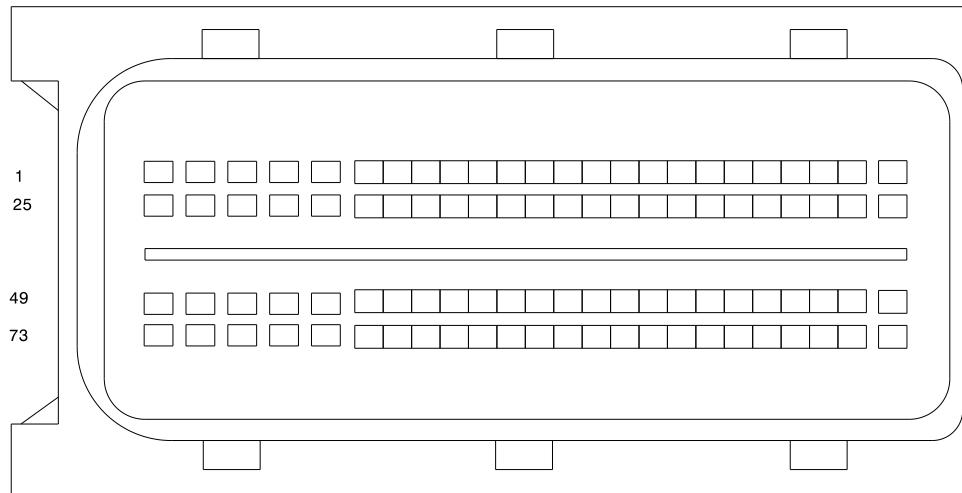





ECM I4

PIN	CCT#	COLOUR	PIN	CCT#	COLOUR	PIN	CCT#	COLOUR
1	CE226A	YE-VT	34	RE454A	YE-GN	67	CE421A	VT
2	RE226A	GN-VT	35			68		
3	RE205A	YE-BU	36	RE320A	BU-GN	69	CE305A	BU-OG
4			37			70	CE303A	WH-VT
5			38			71	CE422B	WH-OG
6	VE818B	BN	39			72	CE235A	GN-BN
7	VE727A	BU-BN	40			73		
8	VE803C	BU-GN	41			74	CE412A	YE-VT
9	LE238A	GY	42			75		
10	VE740A	VT-GY	43			76	CE207A	VT-GY
11	VE804A	GN-BN	44			77	CE205A	GN-BU
12	VE716A	YE	45	VE711B	YE-VT	78	CET40A	GN-OG
13	VE821A	WH-VT	46	RE405A	GN-WH	79	VE707A	GN-VT
14			47			80	VE706B	BN-BU
15	LE458A	BU-WH	48			81	VE819B	GN-VT
16			49			82		
17			50	CE426B	BU-GN	83	LE329A	BU
18	LE423A	GN-VT	51			84	VE801A	VT-OG
19	LE134A	YE	52	CE206A	GY-YE	85	VE802A	BN-BU
20			53	CE208A	YE-OG	86		
21			54	CMC24B	GY	87		
22			55			88	LE451A	BN-YE
23			56	VE712A	BU/GY	89	VE826A	BN-VT
24	CEC02	GN-BU	57			90	CDC10A	BU-OG
25	RE206A	BU-OG	58	RE134D	BU-OG	91	CE113A	WH-BN
26	RE207A	GN-VT	59			92		
27	RE208A	BU	60	RE323A	WH-BN	93	CE306A	GN-VT
28			61	RE324A	BN-GN	94	CE304A	YE-BU
29	VE836A	VT-GN	62			95	VE824A	YE-GN
30			63			96	CEC01	WH-BU
31			64	LE452A	GN			
32			65	LE448A	GY-BU			
33			66					



Login Tracking Code


SHT 103 OF 126

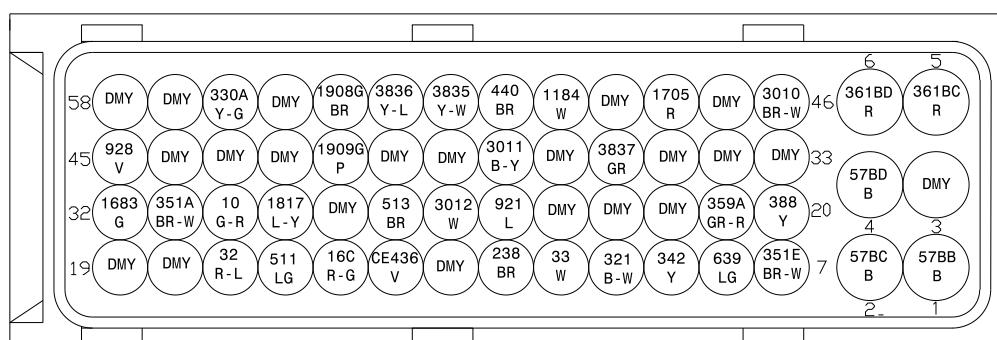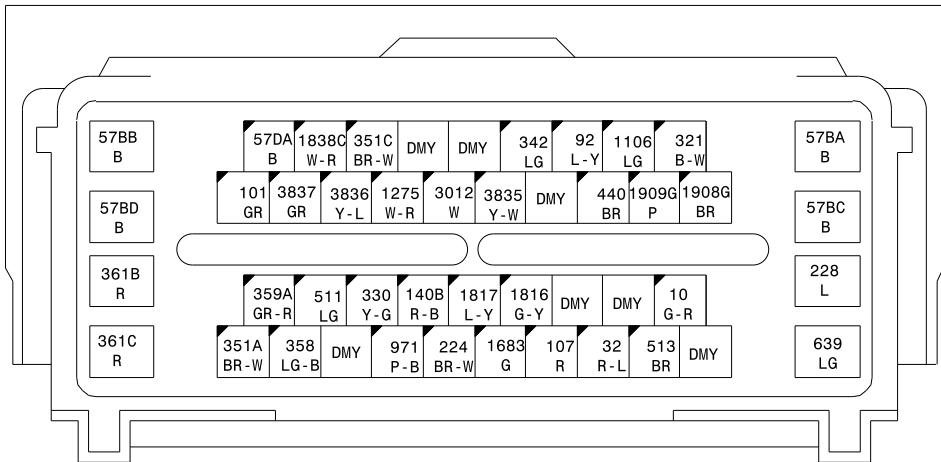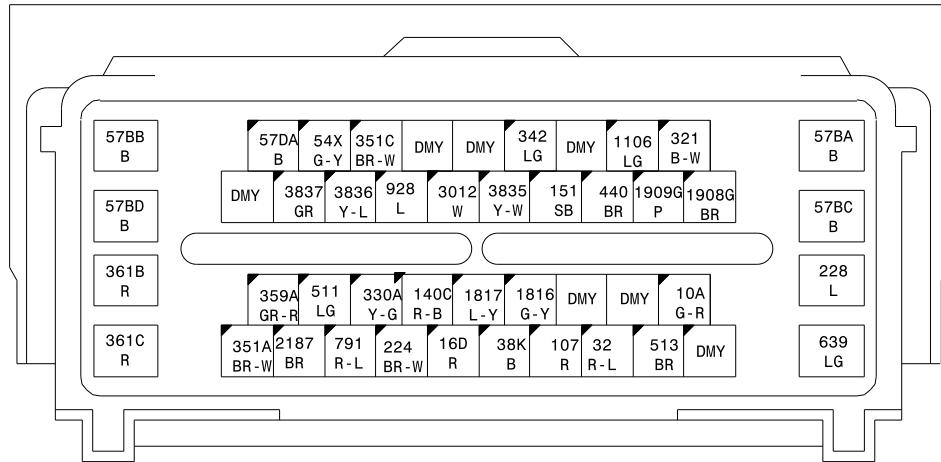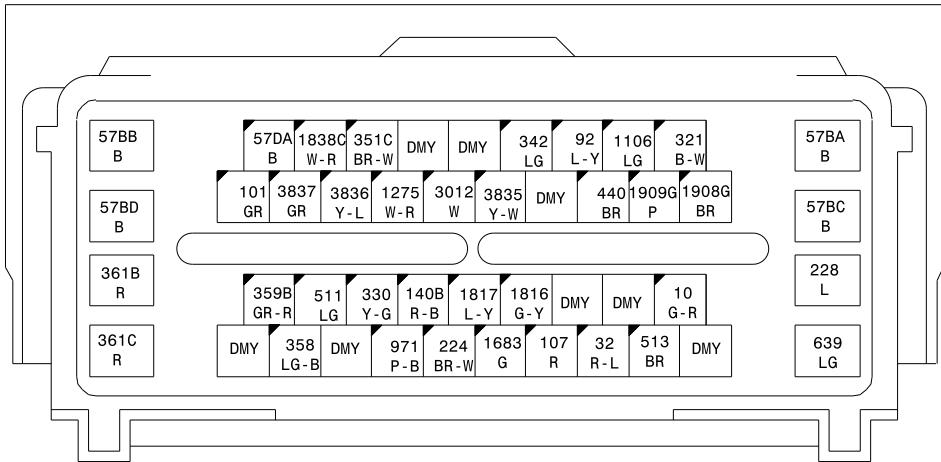


CONNECTOR VIEWS

700-07-00-30

C-302

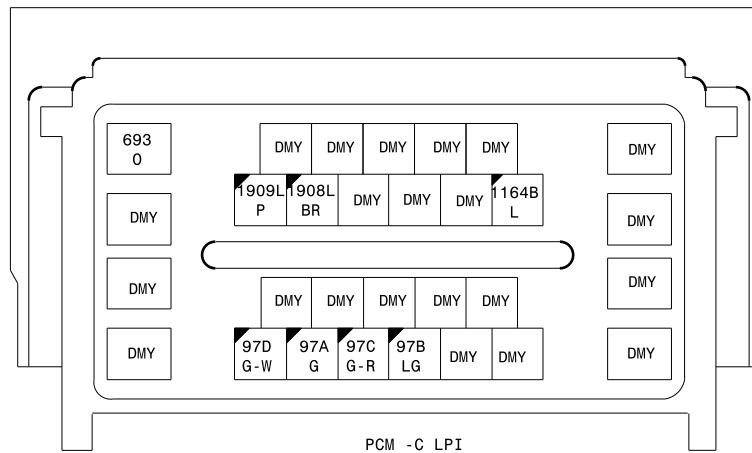


EEC-C

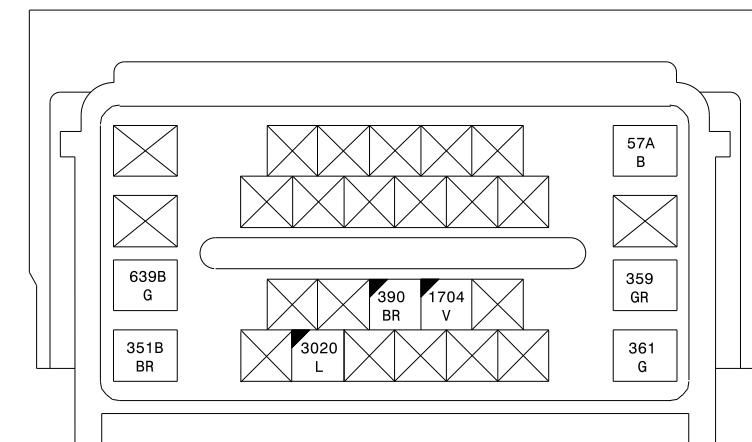


V8

C-303

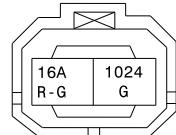


IGN COIL A (I6)

C-304

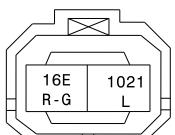


IGN COIL B (I6)

C-305

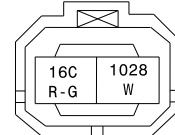


IGN COIL C (I6)

C-306

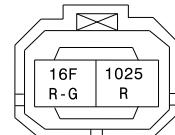


IGN COIL D (I6)

C-307

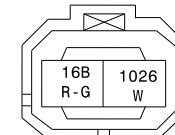

IGN COIL E (I6)

C-308

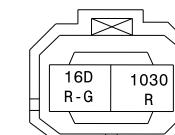

IGN COIL F (I6)






Login Tracking Code

SHT 105 OF 126


CONNECTOR VIEWS	C-309	C-310	C-311	C-312	C-313	C-315	C-316
	BOOST SENSOR (I6)	WASTE GATE SOLENOID (I6)	CYLINDER ID-1(I6)	CYLINDER ID-2 (I6)	OIL TEMP SSR (I6)	VCT-1(I6)	VCT-2(I6)
	C-317	C-318		C-331		C-332	
	ACCELERATOR	SEQUENTIAL SPORTS SHIFT (TIPTRONICS)		J/B-4		J/B-3	
	C-333	C-334	C-335	C-336			
	J/B-1	J/B5	J/B-2	J/C			

CONNECTOR VIEWS	C-340	C-341	C-342		C-343	C-344	
	LHS FRONT CRASH SSR	RH SIDE CRASH SSR	DRIVER SIDE IMPACT AIRBAG		RH FRONT CRASH SENSOR	PASS SIDE IMPACT AIRBAG	
	C-345	C-346	C-347		C-351	C-352	C-353
	PASSENGER SIDE CRASH SENSOR	RH CAB	LH CAB		RIGHT REAR CRASH SENSOR	LEFT REAR CRASH SENSOR	
						TO 14A005-2	TO 14405-2
	C-355	C-357	C-358		C-359	C-360	
	TO 14405-3	TO 14A005-3	TO 14K024-2		TO 14K011-2	MAT SENSOR	
			TO 14K024-2		TO 14K024-2	TO 12A581-2	LEFT FOG LAMP
	C-362	C-364					
	RIGHT FOG LAMP	ACM					


CONNECTOR VIEWS

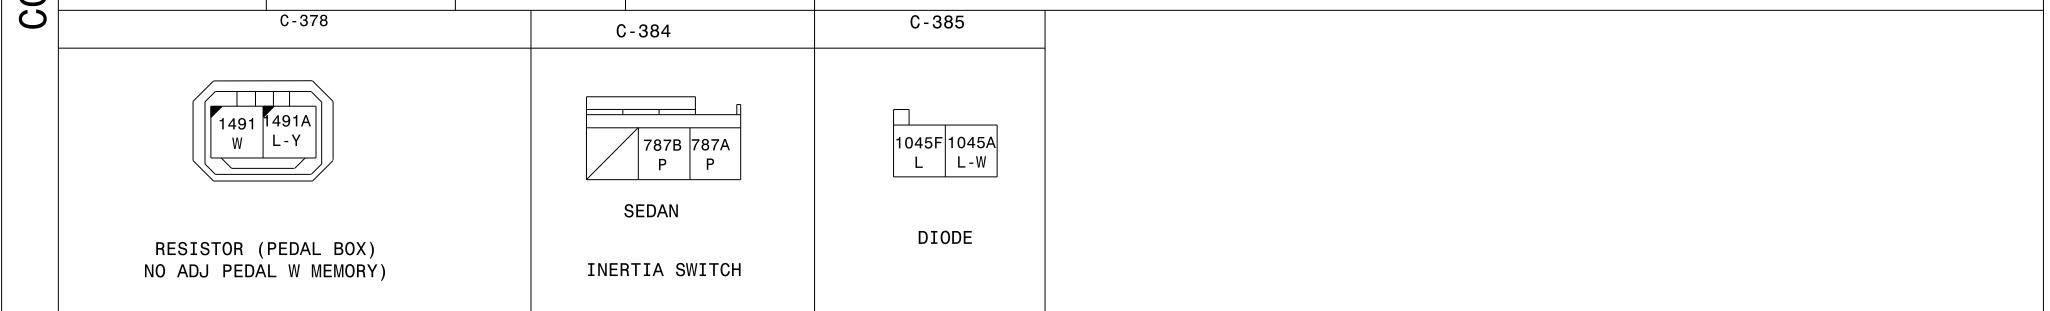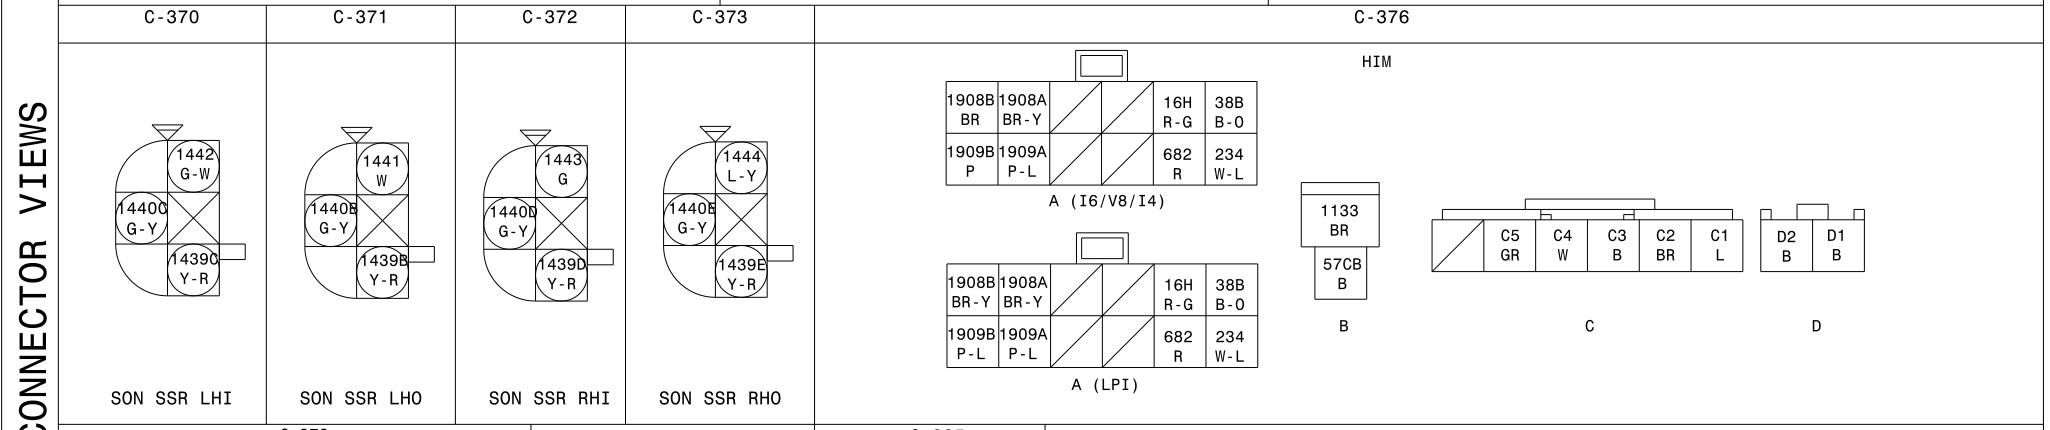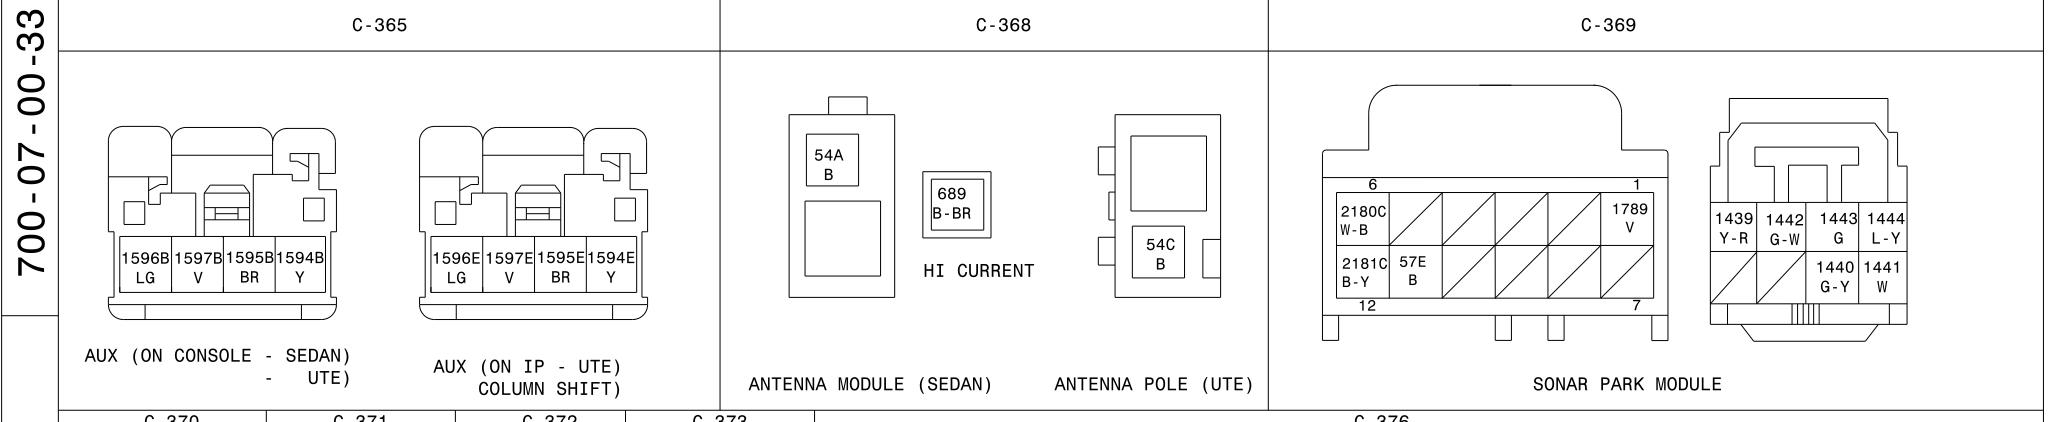


C-390

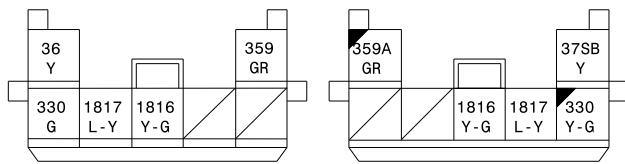


TO 14K011 (I6)

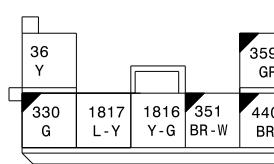

TO 14305 (I6)

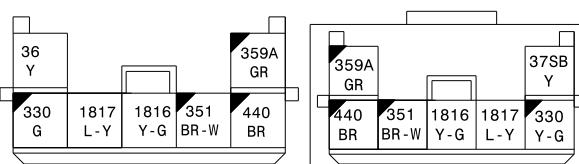


TO 14K011 (V8)

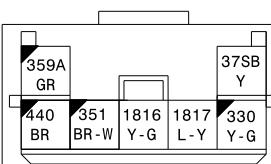


TO 14305 (V8)


C-392

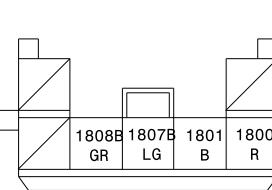


TO 14K024-CAMERA

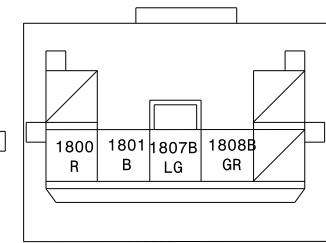

TO 14405-CAMERA

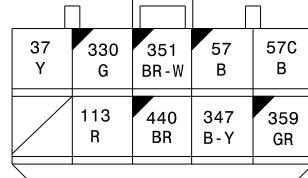


TO 14K011 (I4)

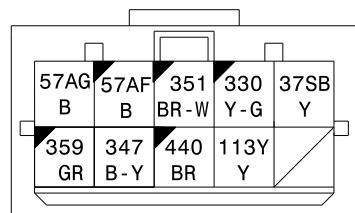


TO 14B060 (I4)

C-393


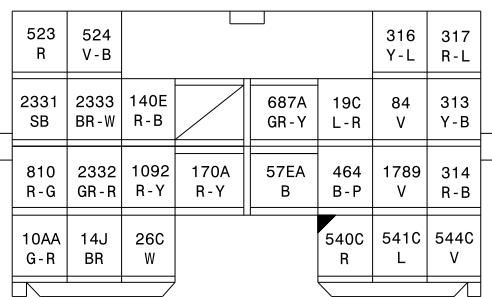


TO 14A005

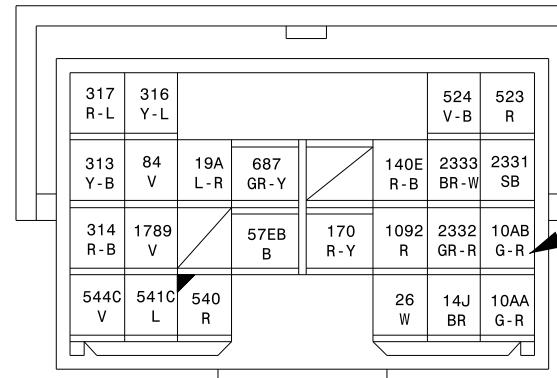

TO 14405




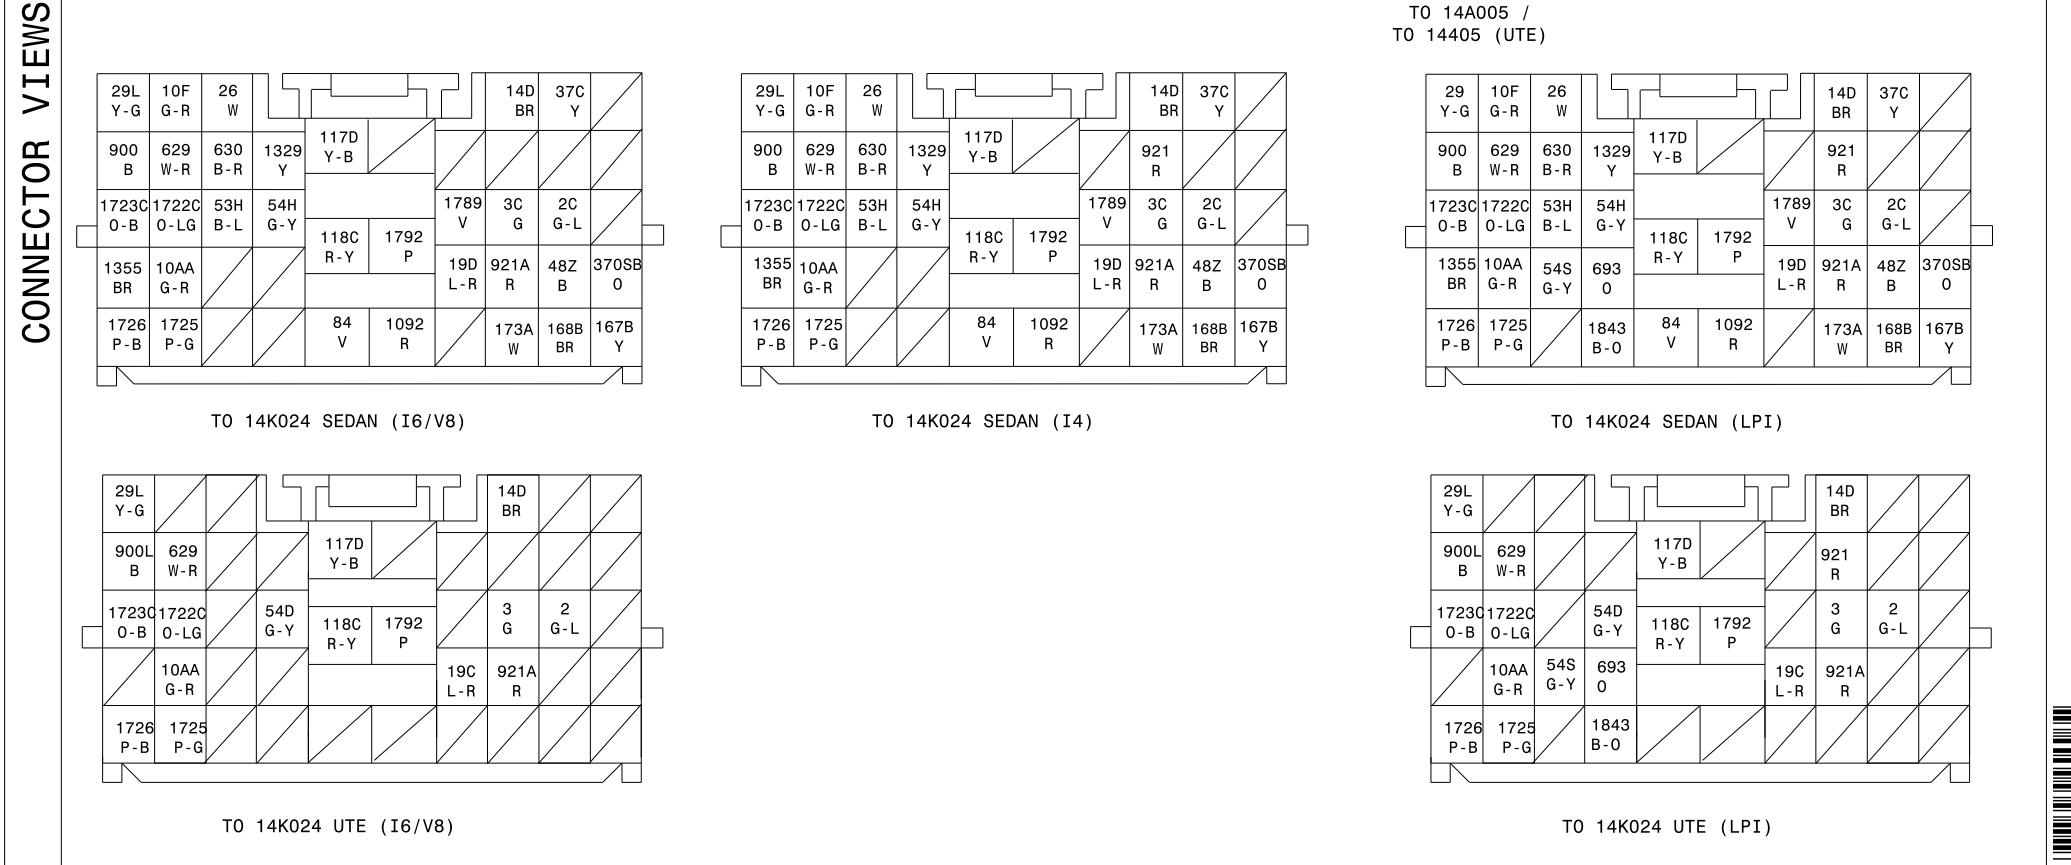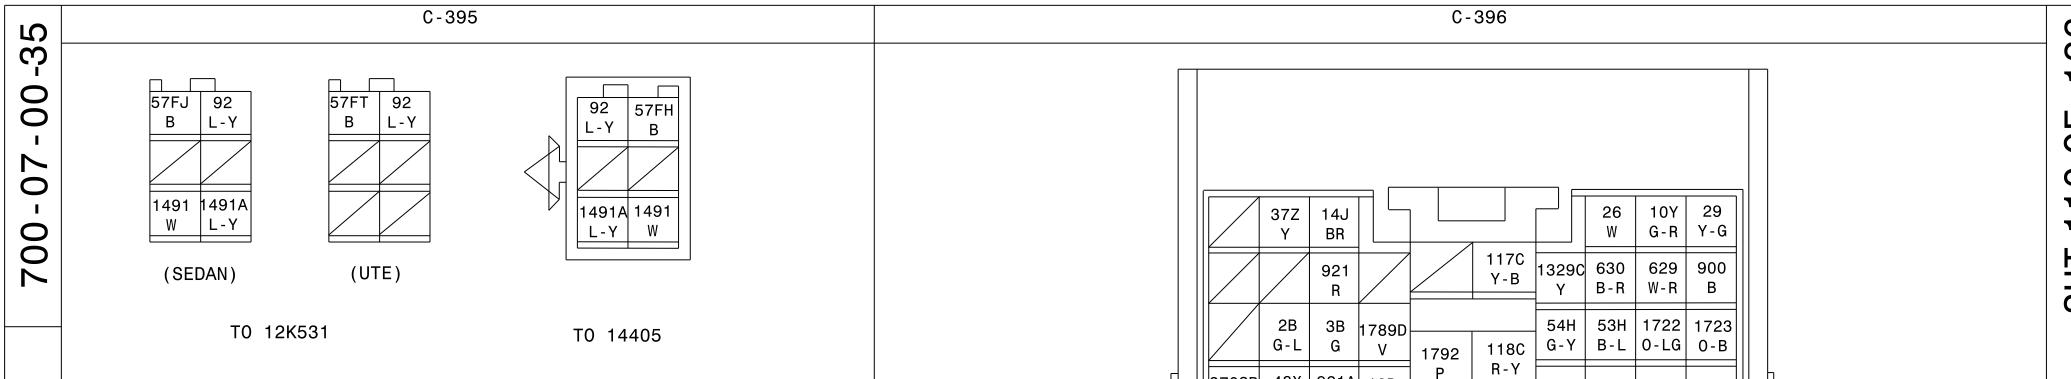


CONNECTOR VIEWS

700-07-00-36

C-397

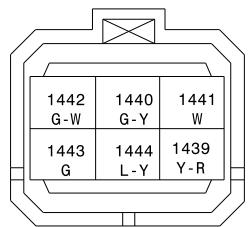


TO 15A536

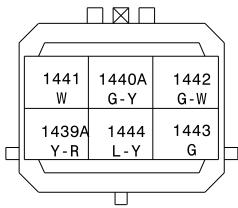


TO 15527/15A417

C-398

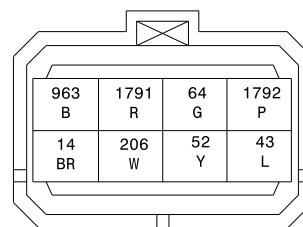


TO 13N419

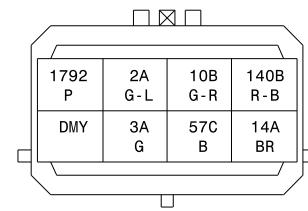

TO 15A417

C-405












ELECTROCHROMATIC MIRROR




Login Tracking Code

SHT 111 OF 126

CONNECTOR VIEWS

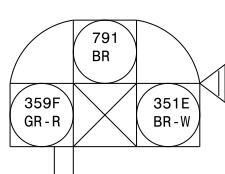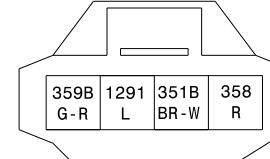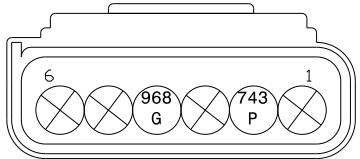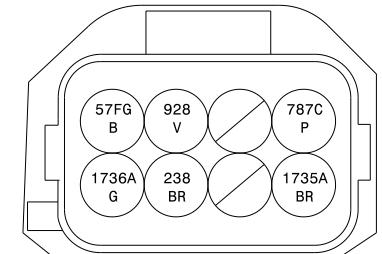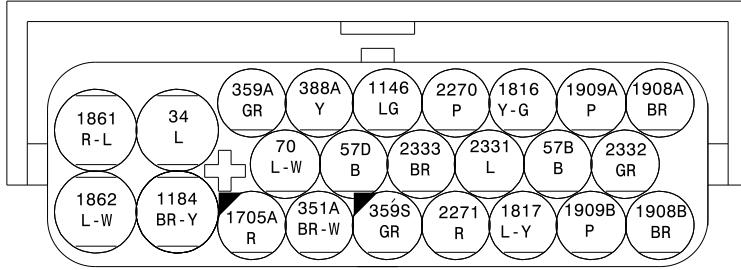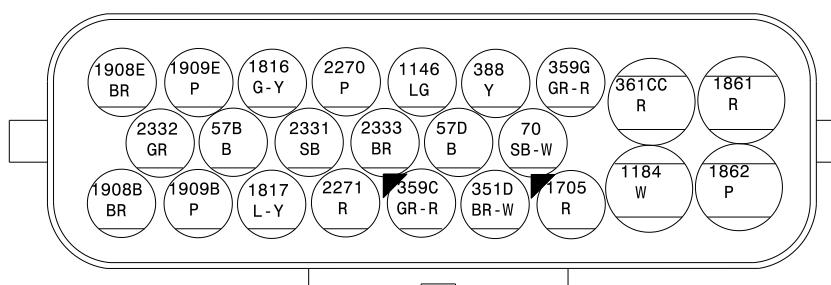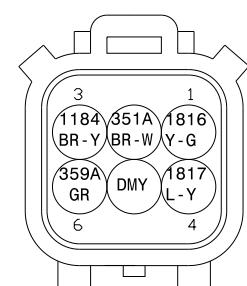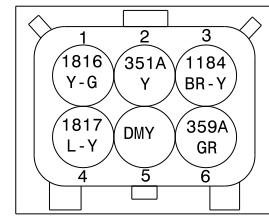
C-500	C-501	C-502	C-503
			
FLP (I4)	TMAP (I4)	MAF (I4)	PEM (PUMP ELECTRIC MODULE)- I4
C-504			
			
TO 12A581 (I4)	TO 7E203 (I4)		
C-505		C-507	
			
TO 14B060 (I4)	TO 7E203 (I4)	PEM CAPACITOR (I4)	

C-510

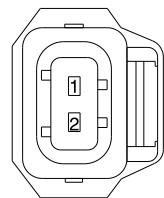


PIN	CCT#	COLOUR
1	CE205E	GN-BU
2	RE205E	YE-BU

C-511

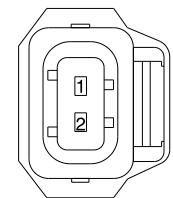


PIN	CCT#	COLOUR
1	CE206E	GY-YE
2	RE206E	BU-OG

C-512

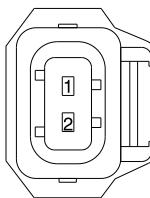

PIN	CCT#	COLOUR
1	CE207E	VT-GY
2	RE207E	GN-VT


C-513

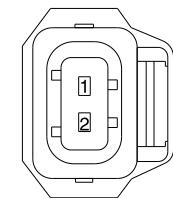

PIN	CCT#	COLOUR
1	CE208E	YE-OG
2	RE208E	BU

INJ#1 (I4)

C-514

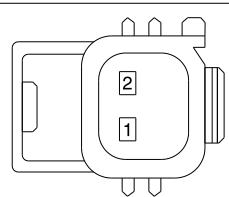


PIN	CCT#	COLOUR
1	RE323B	WH-BN
2	VE801B	VT-OG

KS#1 (I4)

INJ#2 (I4)


C-515

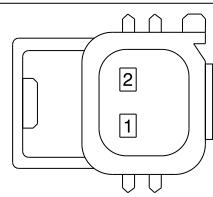

PIN	CCT#	COLOUR
1	RE324B	BN-GN
2	VE802B	BN-BU


KS#2 (I4)

INJ#3 (I4)

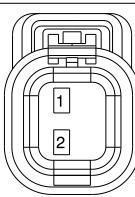

PIN	CCT#	COLOUR
1	VE721A	BU-GY
2	RE454F	YE-GN

C-517

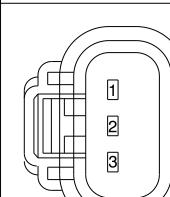

INJ#4 (I4)


C-518

PIN	CCT#	COLOUR
1	LE458C	BU-WH
2	RE405C	GN-WH
3	VE706A	GN-VT

CMP-H (EXHAUST) (I4)

PIN	CCT#	COLOUR
1	LE458D	BU-WH
2	RE405B	GN-WH
3	VE706B	BN-BU


CMP-H (INTAKE) (I4)

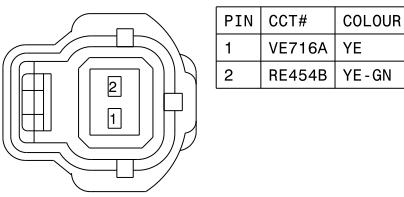

C-520

PIN	CCT#	COLOUR
1	VE716A	YE
2	RE454B	YE-GN


ECT (ENGINE COOLANT TEMPERATURE SSR) (I4)

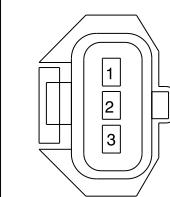

MAP (I4)


PIN	CCT#	COLOUR
1	LE329A	BU
2	RE454C	YE-GN
3	LE458B	BU-WH

C-522



PIN	CCT#	COLOUR
1	RE454E	YE-GN
2	LE238A	GY
3	LE423B	GN-VT


DIFRPS (DIRECT INJECTION FUEL RAIL PRESSURE SSR)

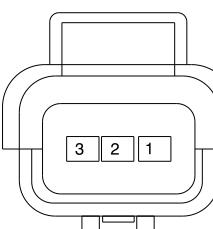

C-523

PIN	CCT#	COLOUR
1	LE458E	BU-WH
2	RE454D	YE-GN
3	VE821A	WH-VT


VRP (WASTEGATE VACUUM SSR)

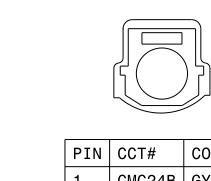

C-524

PIN	CCT#	COLOUR
1	CMC24B	GY

OIL PRESSURE SW (I4)

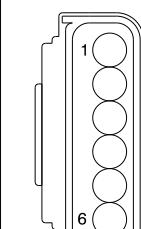

C-525

PIN	CCT#	COLOUR
1	CE412A	YE-VT
2	CE426B	BU-GN
3	VE818B	BN
4	RE134B	BU-OG
5	LE134A	YE
6	VE819B	GN-VT


ETB (I4)



CONNECTOR VIEWS


700-07-00-39

C-526

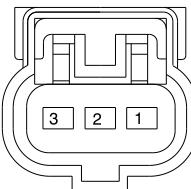COP-1
(I4)


PIN	CCT#	COLOUR
1	CE303A	WH-VT
2	GD108A	BK-VT
3	CBK04A	VT

C-527

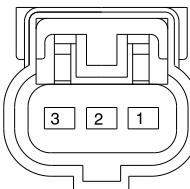COP-2
(I4)


PIN	CCT#	COLOUR
1	CE304A	YE-BU
2	GD108B	BK-VT
3	CBK04B	VT

C-528

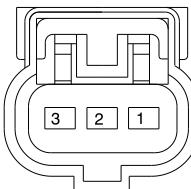COP-3
(I4)

PIN	CCT#	COLOUR
1	CE305A	BU-OG
2	GD108C	BK-VT
3	CBK04C	VT


C-529

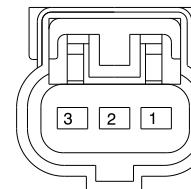COP-4
(I4)

PIN	CCT#	COLOUR
1	CE306A	GN-VT
2	GD108D	BK-VT
3	CBK04D	VT

CONNECTOR VIEWS


C-530

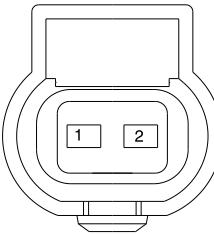

TIVCT (INTAKE)


PIN	CCT#	COLOUR
1	CBK02D	GN
2	CE421A	VT

C-531

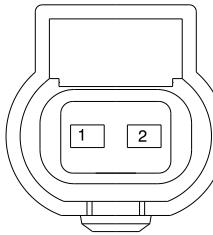


TIVCT (EXHAUST)

PIN	CCT#	COLOUR
1	CBK02C	GN
2	CE422B	WH-OG

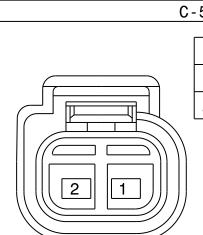

CPS (CANISTER PURGE SOLENOID)


PIN	CCT#	COLOUR
1	CE113A	WH-BN
2	CBK02B	GN

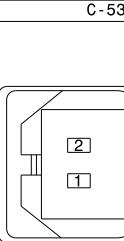

VRVS (VACUUM REGULATOR VALVE SOLENOID)

PIN	CCT#	COLOUR
1	VE824A	YE-GN
2	CBK03A	GY


C-534

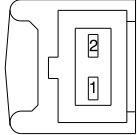

ECBV (ELECTRONIC COMPRESSOR BYPASS VALVE)

PIN	CCT#	COLOUR
1	VE836A	VT-GN
2	CBK03B	GY


C-535

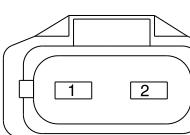

FVRC (FUEL VOLUME REGULATOR CONTROL)


PIN	CCT#	COLOUR
1	RE226A	GN-VT
2	CE226A	YE-VT

C-536

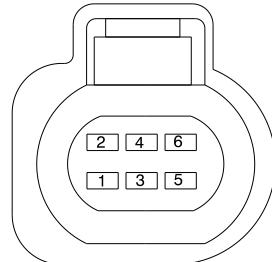


UEGO

PIN	CCT#	COLOUR
1	LE452A	GN
2	LE448A	GY-BU
3	CE235A	GN-BN
4	CBK02E	GN
5	LE451A	BN-YE
6	VE826A	BN-VT











PIN	CCT#	COLOUR	PIN	CCT#	COLOUR
1	CE205A	GN-BU	9	RE205A	YE-BU
2	RE323A	WH-BN	10		
3	VE801A	VT-OG	11		
4	CE206A	GY-YE	12	RE206A	BU-OG
5	CE207A	VT-GY	13	RE207A	GN-VT
6	CE208A	YE-OG	14	RE208A	BU-OG
7	RE324A	BN-GN	15		
8	VE802A	BN-BU	16		

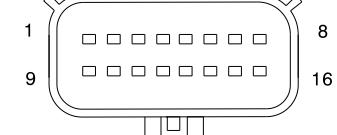

TO 9H589

TO 12C508

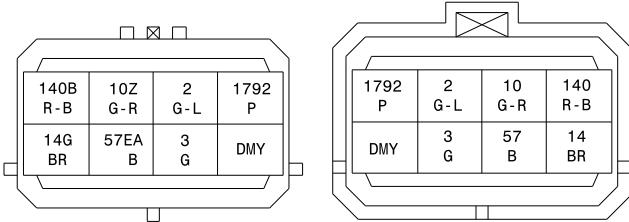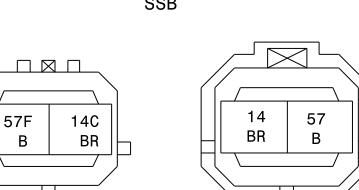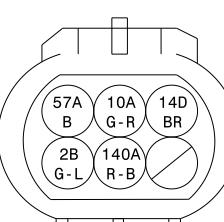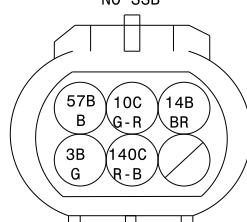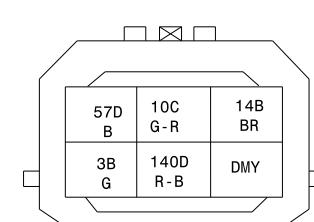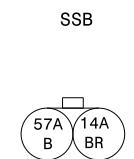
C-700		C-704		C-705		C-706	
							
T0 13N419	T0 14405	T0 13A444	T0 13N419	RIGHT REAR LAMP		RIGHT TAIL LAMP	
C-707		C-708		C-709		C-710	
							
LEFT REAR LAMP		LEFT TAIL LAMP		LEFT LICENSE LAMP	RIGHT LICENSE LAMP	LICENSE LAMP	AFTER MARKET HML

CONNECTOR VIEWS	C-800	C-809	C-815	C-816
	C-801 INJ 1 (V8)	C-802 INJ 2 (V8)	C-817 IAT	C-818 EOT
	C-803 INJ 3 (V8)	C-804 INJ 4 (V8)	C-819 SCIP	C-820 ACTIVE EXHAUST
	C-805 INJ 5 (V8)	C-806 INJ 6 (V8)	C-807 INJ 7 (V8)	C-808 INJ 8 (V8)


C-800

COOLING FAN FUSE BOX
(V8/I4)

C-809

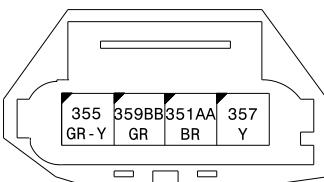
THROTTLE POSITION SENSOR
(V8)

C-815

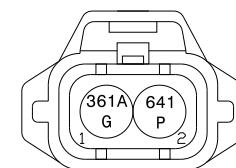


VCT 11

C-816

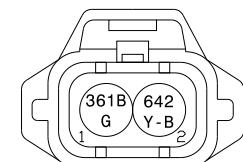


VCT 21

C-801




INJ 1 (V8)

C-802




INJ 2 (V8)

C-803




INJ 3 (V8)

C-804




INJ 4 (V8)

C-817




IAT

C-818

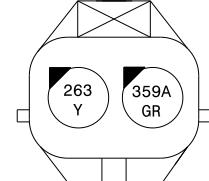


EOT

C-819

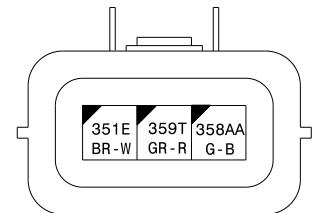


SCIP

C-805




INJ 5 (V8)

C-806




INJ 6 (V8)

C-807




INJ 7 (V8)














C-808


















INJ 8 (V8)

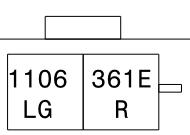


ACTIVE EXHAUST

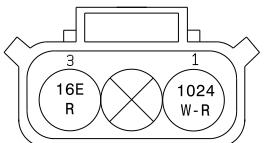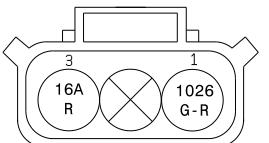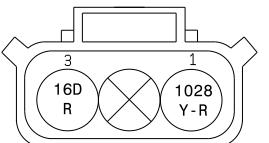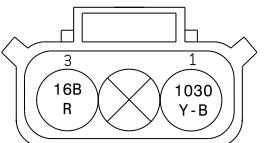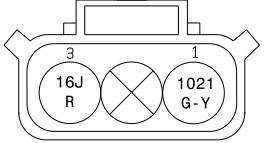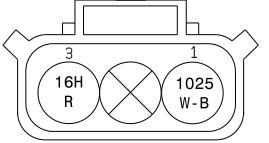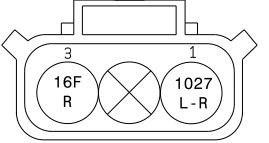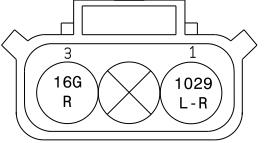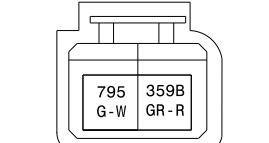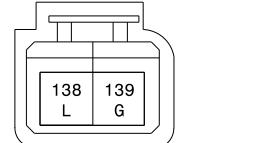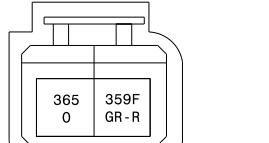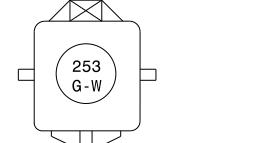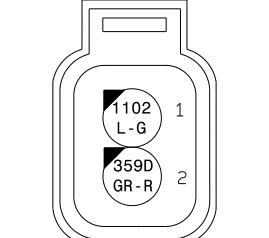CONNECTOR VIEWS	C-821	C-822	C-823	C-824	
					
	COP 1 (V8)	COP 2 (V8)	COP 3 (V8)	COP 4 (V8)	
	C-825	C-826	C-827	C-828	
					
	COP 5 (V8)	COP 6 (V8)	COP 7 (V8)	COP 8 (V8)	
	C-830	C-831	C-832	C-835	
					
	CMP VRS BANK 1 (V8)	CKP	CMP VRS BANK 2 (V8)	OPS (V8)	
	C-836				
					
	CHT				

CONNECTOR VIEWS

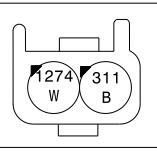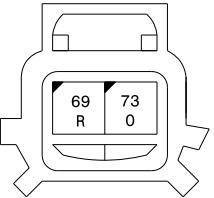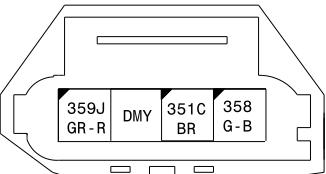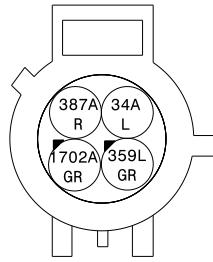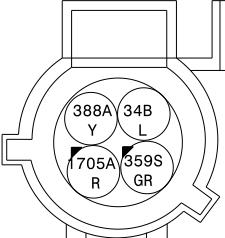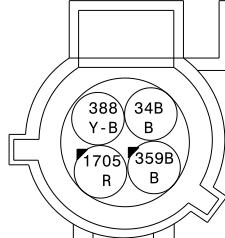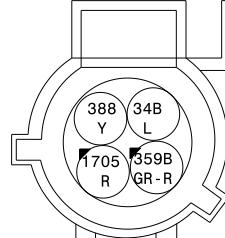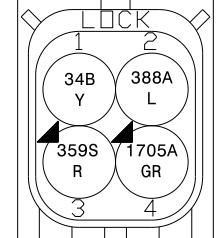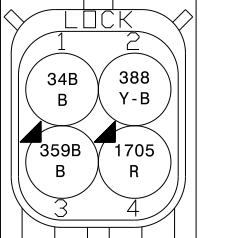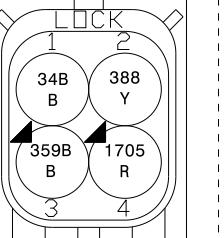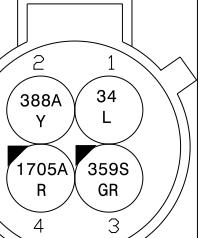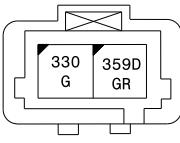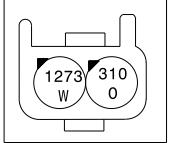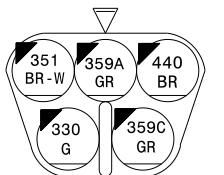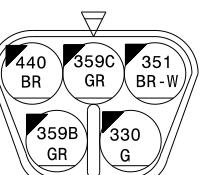
C-837	C-838	C-839	C-840
			
KNOCK SENSOR #2 (V8)		MAP (V8)	
THROTTLE POSITION MOTOR (V8)		I6 HEGO SSR 11	
C-841		C-841	
			
(I6 ONLY)	(V8 6AT)	(V8 MT)	(I6 ONLY)
			(V8 6AT)
(V8 MT)	HEGO SSR 12	HEGO SSR 12	HEGO SSR (CMS) (I4)
JOB 1	*RUNNING CHANGE*		
C-842	C-843	C-845	
			
POWER STEERING PRESSURE SWITCH (V8)	KNOCK SENSOR #1 (V8)	TO 14305 (V8)	TO 19D632 (V8)

C-900

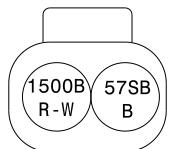


LPI TANK LOCK OFF SOL

C-901

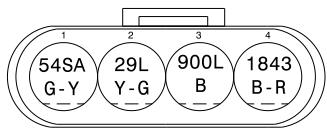

LPI FUEL SENDER (SEDAN)


C-903

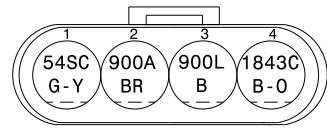


LPI FUEL SENDER 2 (UTE)

C-904


LPI SEDAN

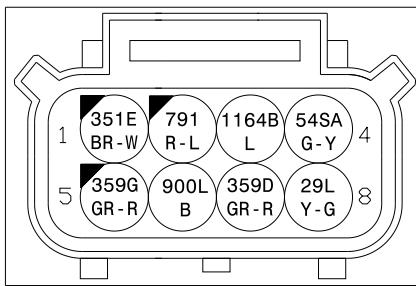

TO 14A005-1

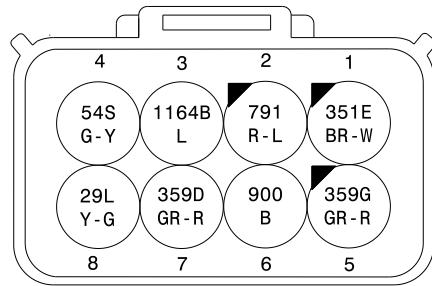


TO 14407-1

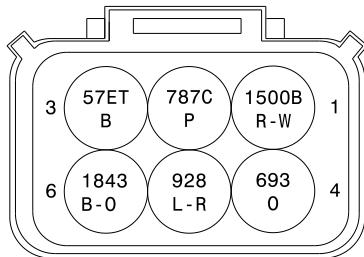


TO 14407-2

LPI UTE

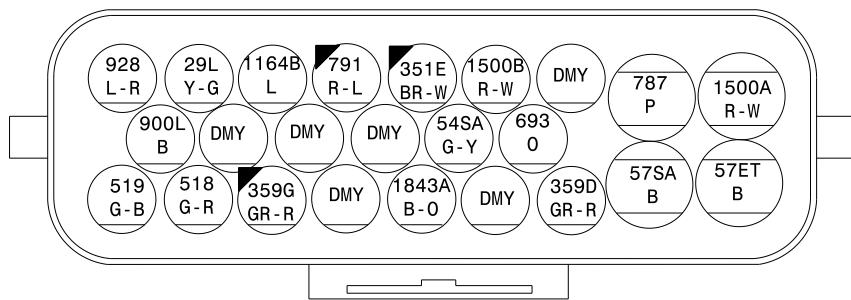

TO 14405

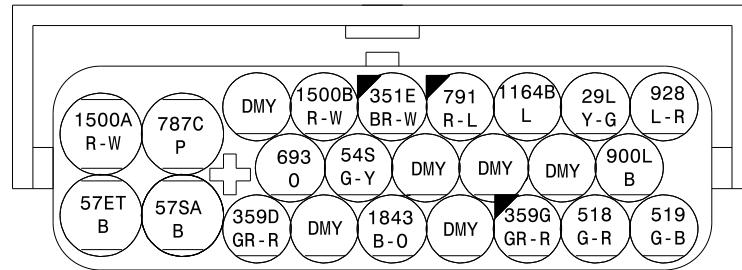

TO FUEL TANK HARNESS




CONNECTOR VIEWS


700-07-00-45

C-904

UTE - PETROL

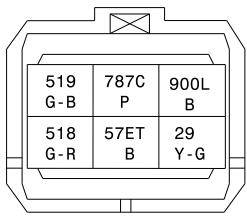


TO FUEL TANK HARNESS

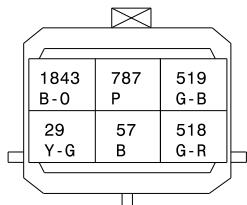


TO 14405

C-911



TO 14K024



TO 13B711




Login Tracking Code

SHT 120 OF 126



CONNECTOR VIEWS

700-07-00-46


C-912

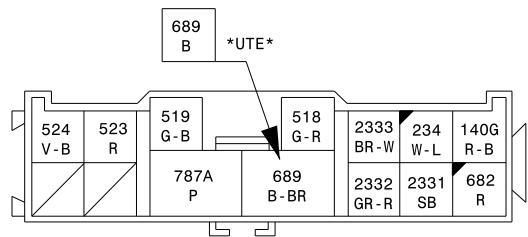


T0 12A581 I6/V8 (MANUAL AND AUTOMATIC)

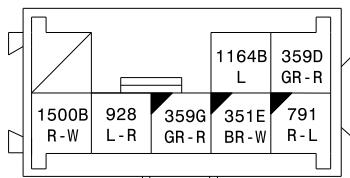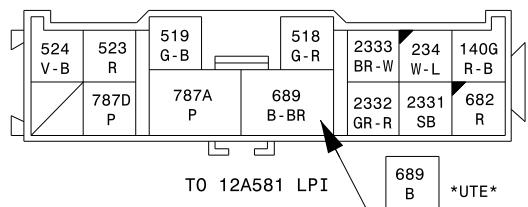


T0 12A581-2 SEDAN LPI

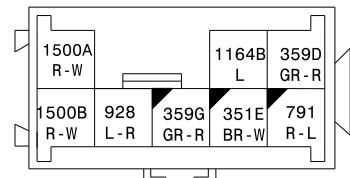


T0 12A581-2 UTE LPI

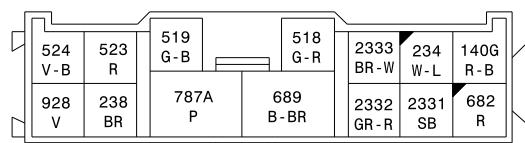


T0 12A581 (I4)

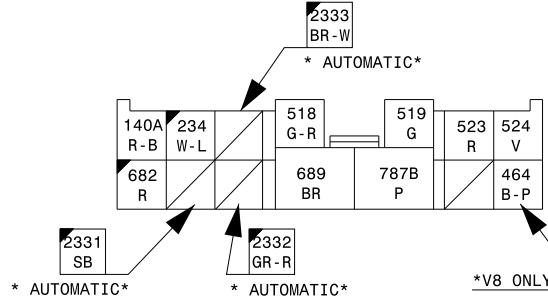

T0 14A005 / TO 14405 UTE (I6/V8) MANUAL AND AUTOMATIC

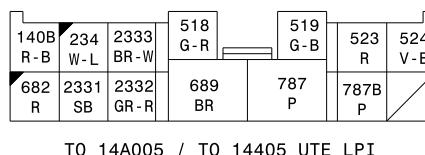


T0 14A005-2 LPI

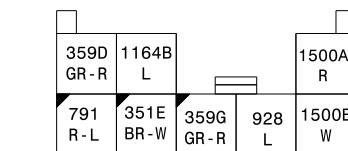


C-914

RELAY HOLDER 1

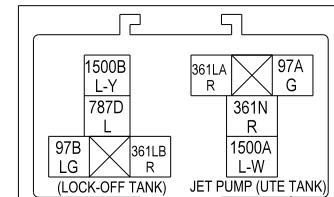


ASSY

RELAY HOLDER 2

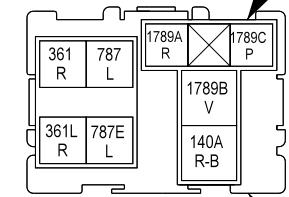

RELAY HOLDER 3

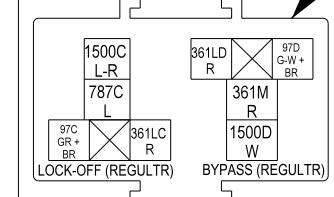


LPI RELAY BOX
(ON ENGINE HARNESS)



CONNECTOR VIEWS


700-07-00-48

C-933

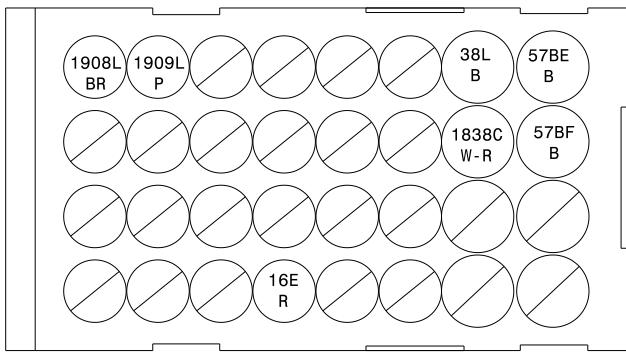


LPI MODULE A

C-934

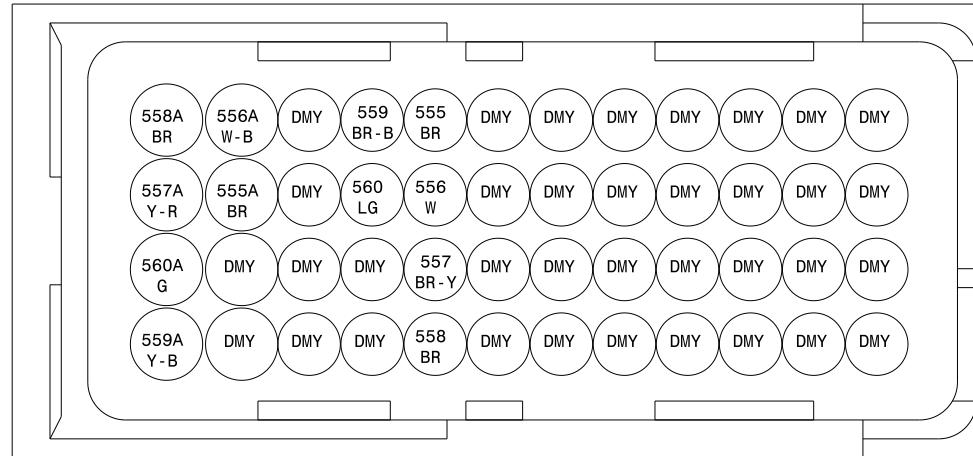

LPI MODULE B

C-935

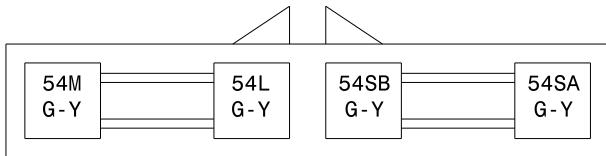

LPI FUSE HOLDER
















Login Tracking Code

SHT 123 OF 126

CONNECTOR VIEWS 700-07-00-49

700-07-00-49

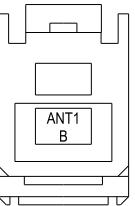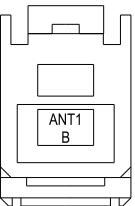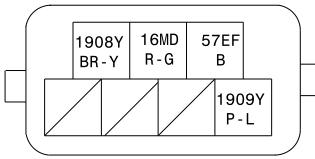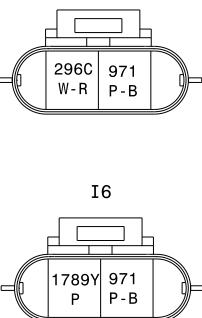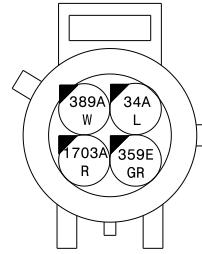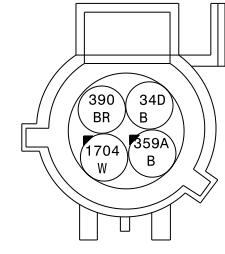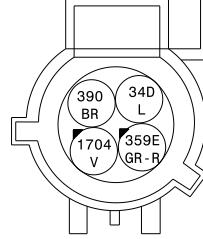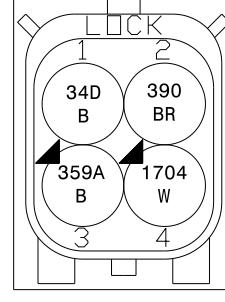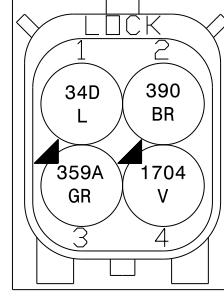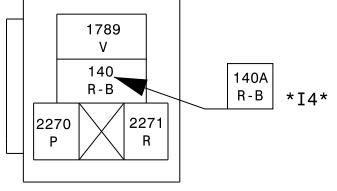

CONNECTOR VIEWS	C-951	C-952	C-953	
	 ANTENNA (ACM)	 TO 14K024	 TO 14A005/14405	 TO IR SSR JUMPER
	C-961	C-971	C-972	C-973
	 STEERING ANGLE SENSOR	 I6 REVERSE SOLENOID CONTROL	 HEGO SSR 21 (V8)	*JOB 1* HEGO SSR 22  AUTOMATIC TRANSMISSION
				 MANUAL TRANSMISSION
	C-973	C-978	C-980	C-982
RUNNING CHANGE	HEGO SSR 22			
	 AUTOMATIC TRANSMISSION	 MANUAL TRANSMISSION	 REVERSE LIGHT RLY	 SINGLE COOLING FAN
				 OPTION CONNECTOR (SUN ROOF)
700-07-00-50				

CONNECTOR VIEWS

700-07-00-51

SHT 126 OF 126

G-1	G-2	G-3	G-4	G-5
BODY GROUND (BATTERY)	RIGHT REAR EARTH (UTE)	LH REAR EARTH (SEDAN)	FRAME GROUND (I6,V8,LPI) ECM GROUND (I4)	LH COWLSIDE GROUND
G-6	G-7	G-8	G-9	G-12
RIGHT FRONT GROUND	LEFT FRONT GROUND	FUEL TANK SUPPORT GROUND	FUEL FILLER NECK	PCM GROUND (I6, V8, LPI)
G-13	G-14	G-15	G-18	G-19
LH GROUND (IP)	RH CENTRE GROUND	ENGINE GROUND (I6,LPI) (V8)	ICC RH GND	JUNCTION BOX GROUND
G-20	G-28	G-29	G-31	G-32
BODY GROUND (ENGINE)	WHEEL FRAME GROUND (CLOCK SPRING INTERNAL)	PEM GROUND	ENGINE BLOCK GROUND (I4)	LH COWLSIDE GROUND 2 (I4)



Login Tracking Code