


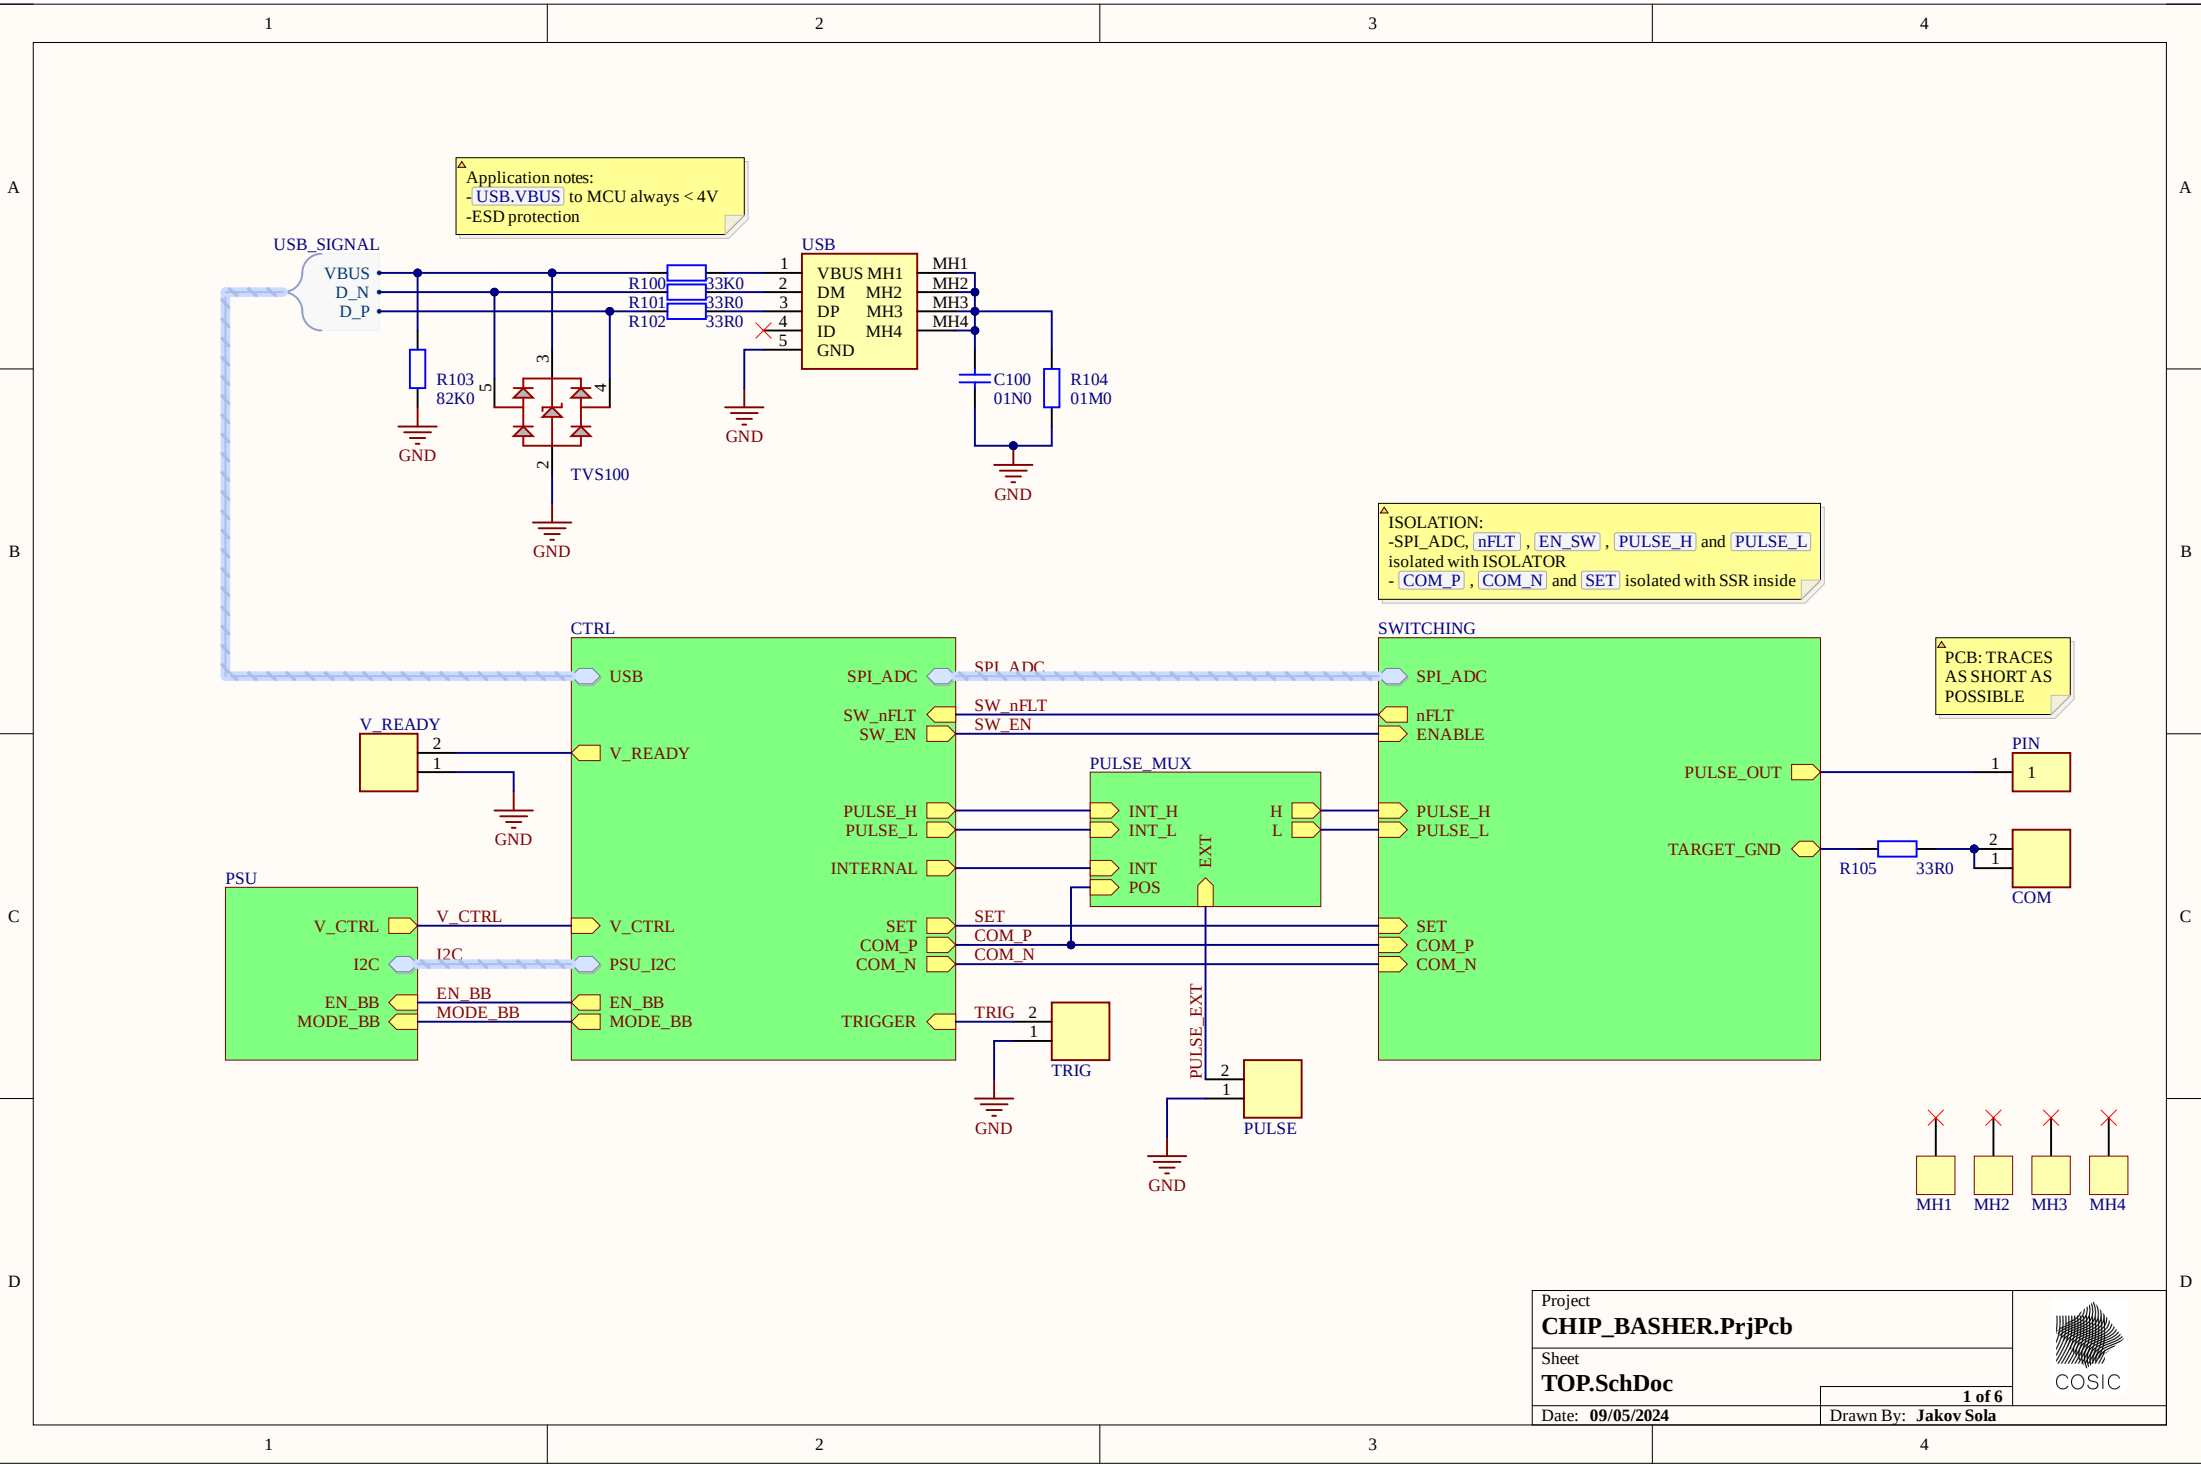


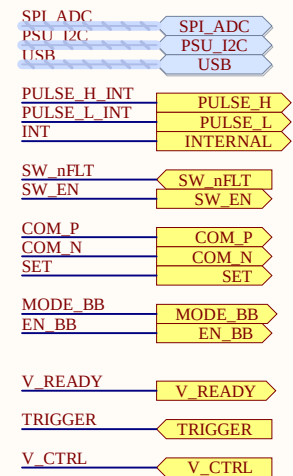


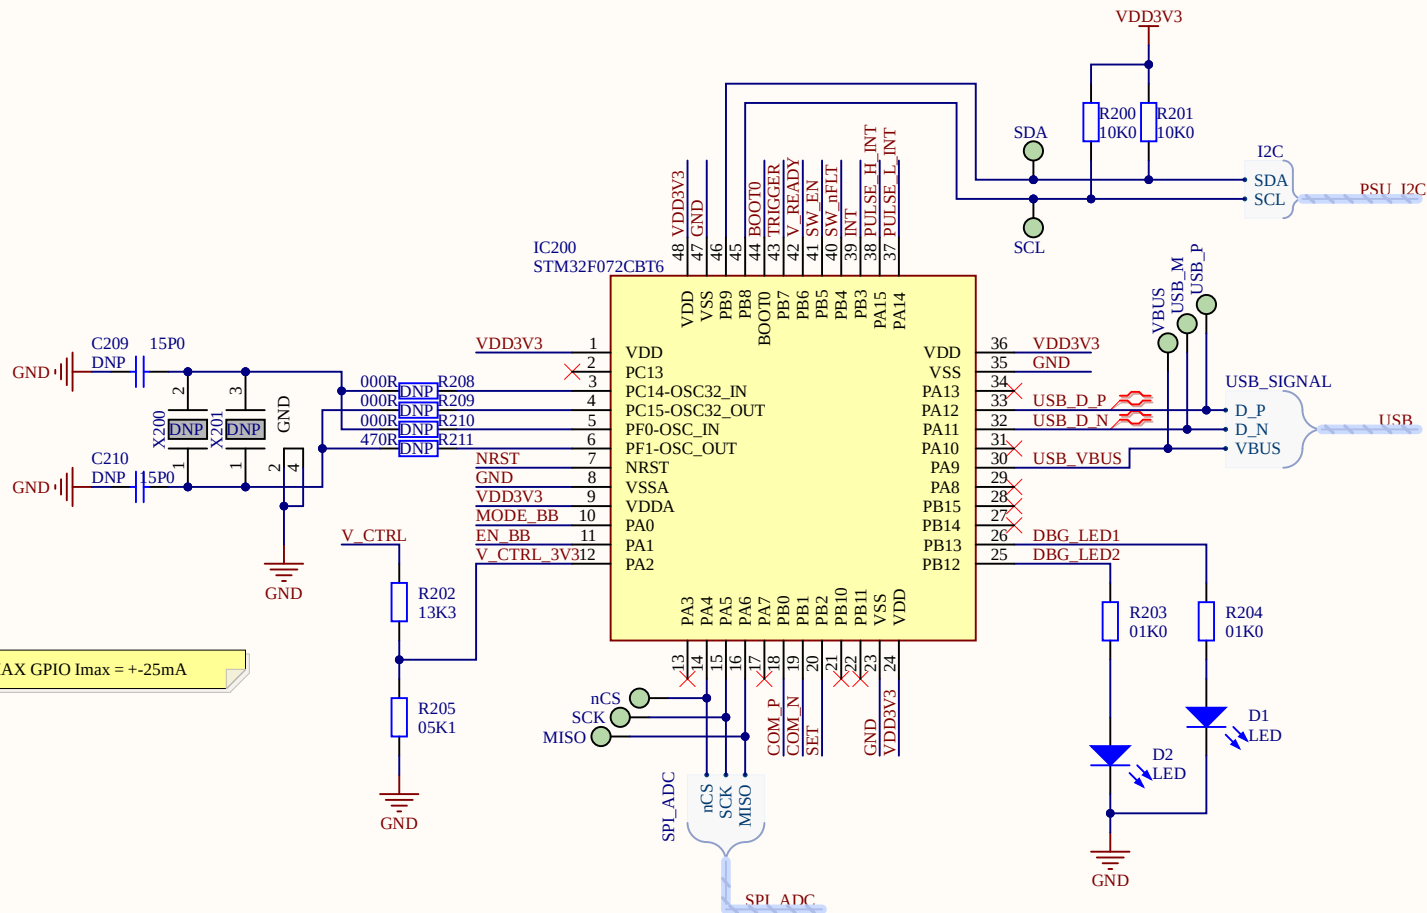


Decoupling

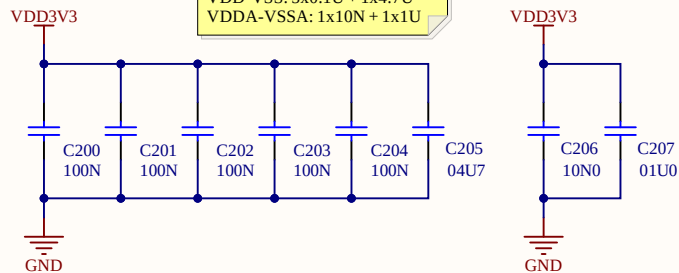

Boot Mode

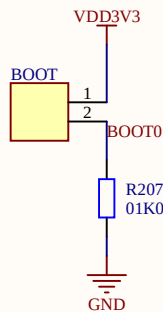

Reset

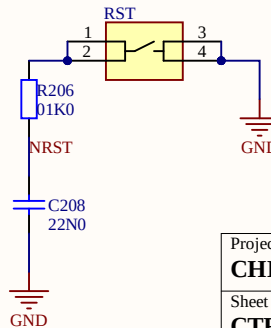

Project
CHIP_BASHER.PrjPcb


Sheet
CTRL.SchDoc

Date: 09/05/2024

2 of 6
Drawn By: Jakov Sola




Isolation

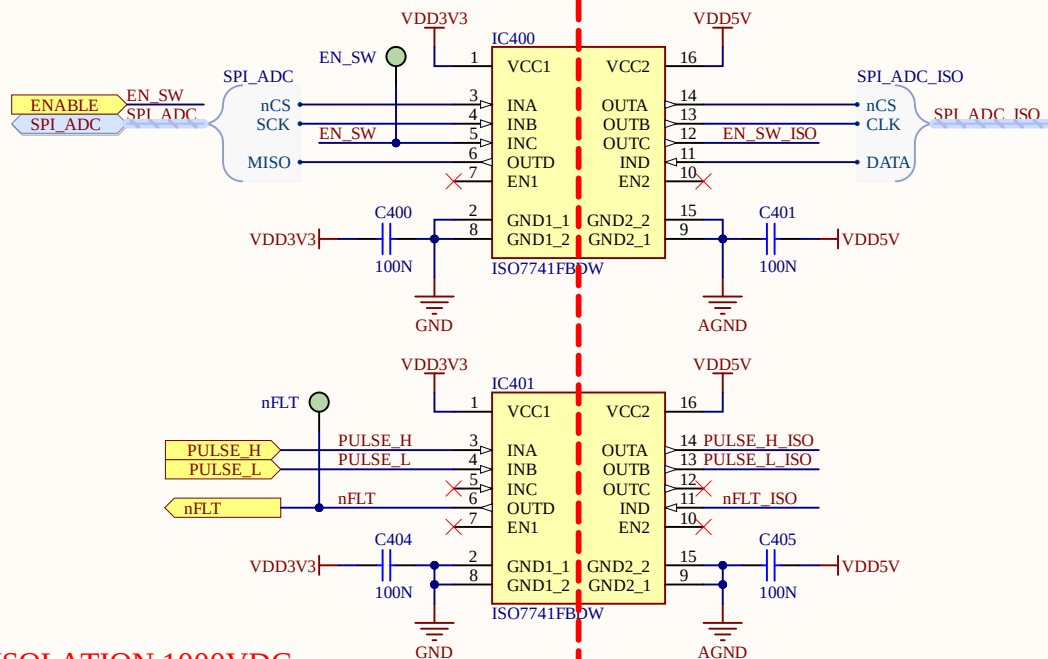


ISOLATION 1000VDC

Polarity switching

△ HV_P and HV_N (AGND) never connected to COM at the same time. Take into account t_{on} and t_{off}.

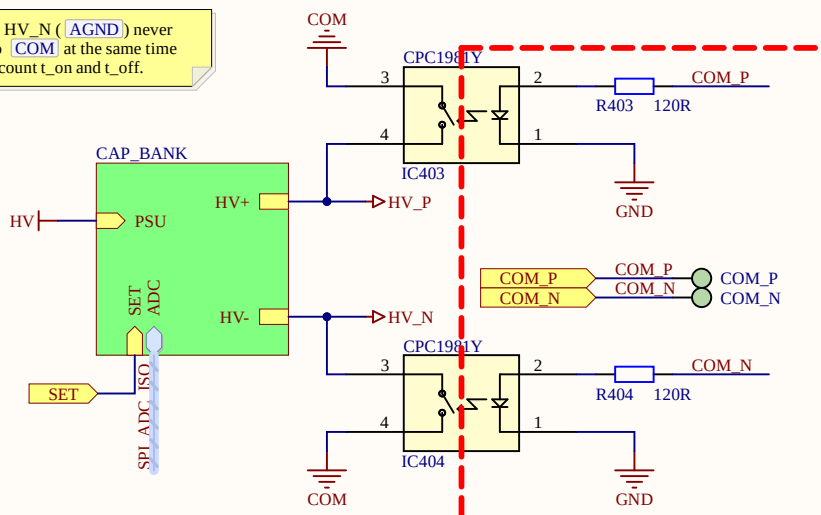

Pulse injection

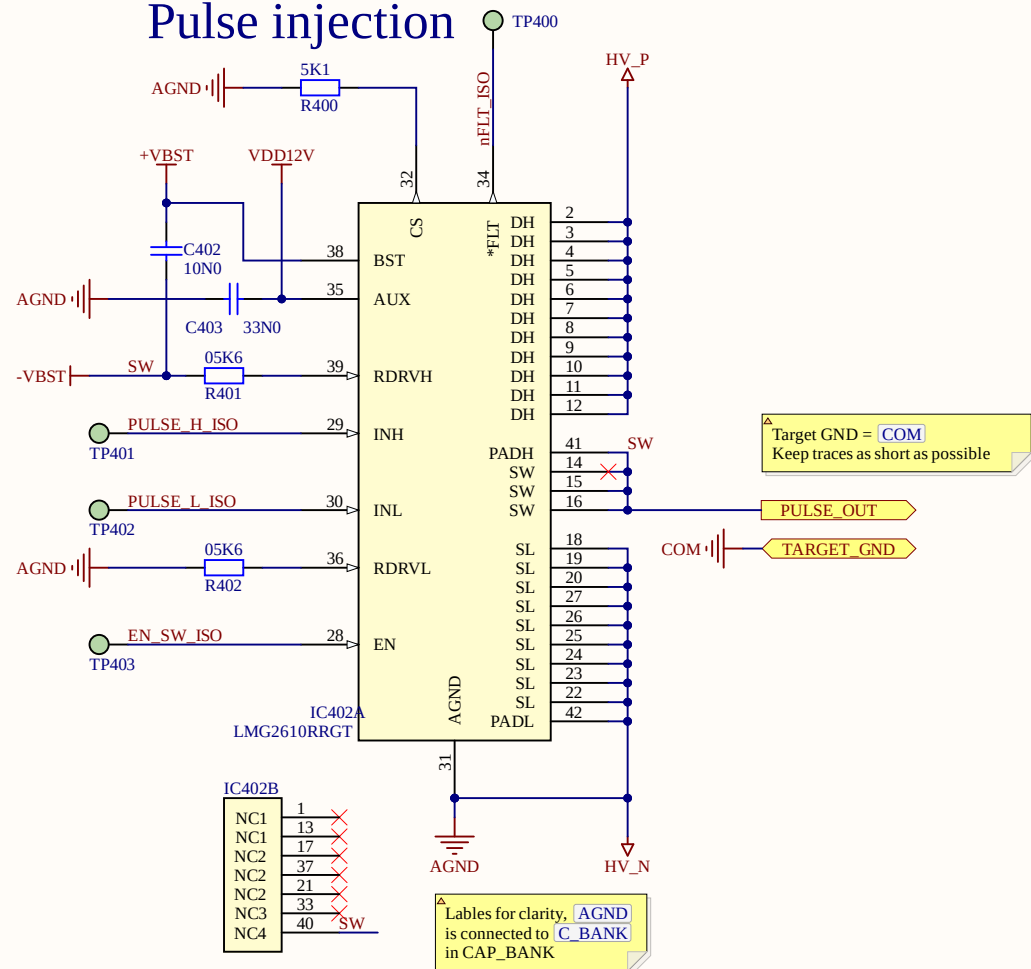

△ Target GND = COM. Keep traces as short as possible.

△ Labels for clarity, AGND is connected to C_BANK in CAP_BANK

Project
CHIP_BASHER.PrjPcb

Sheet
SWITCHING.SchDoc


Date: 09/05/2024

Drawn By: *


4 of 6



Charge-discharge control

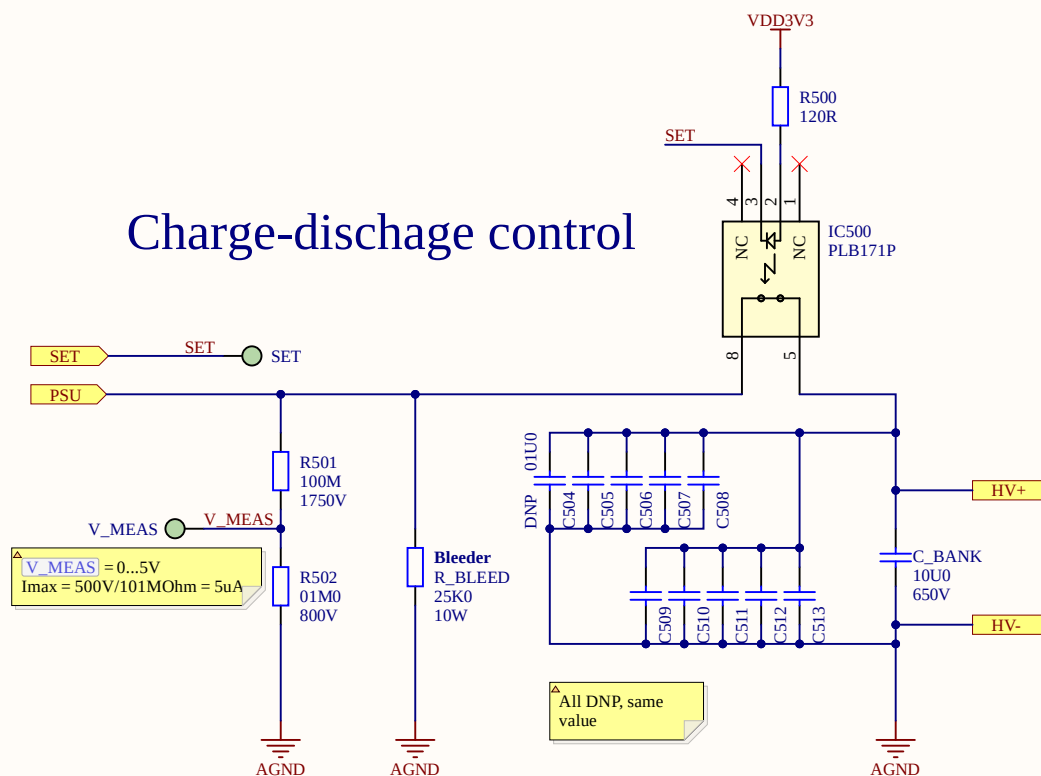

Voltage measurement

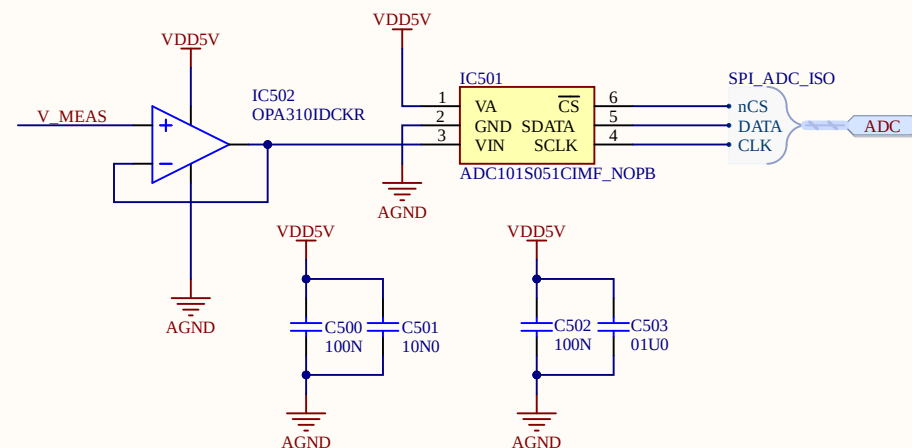

Project
CHIP_BASHER.PrjPcb

Sheet
CAP_BANK.SchDoc

Date: 09/05/2024

5 of 6
Drawn By: Jakov Sola



