



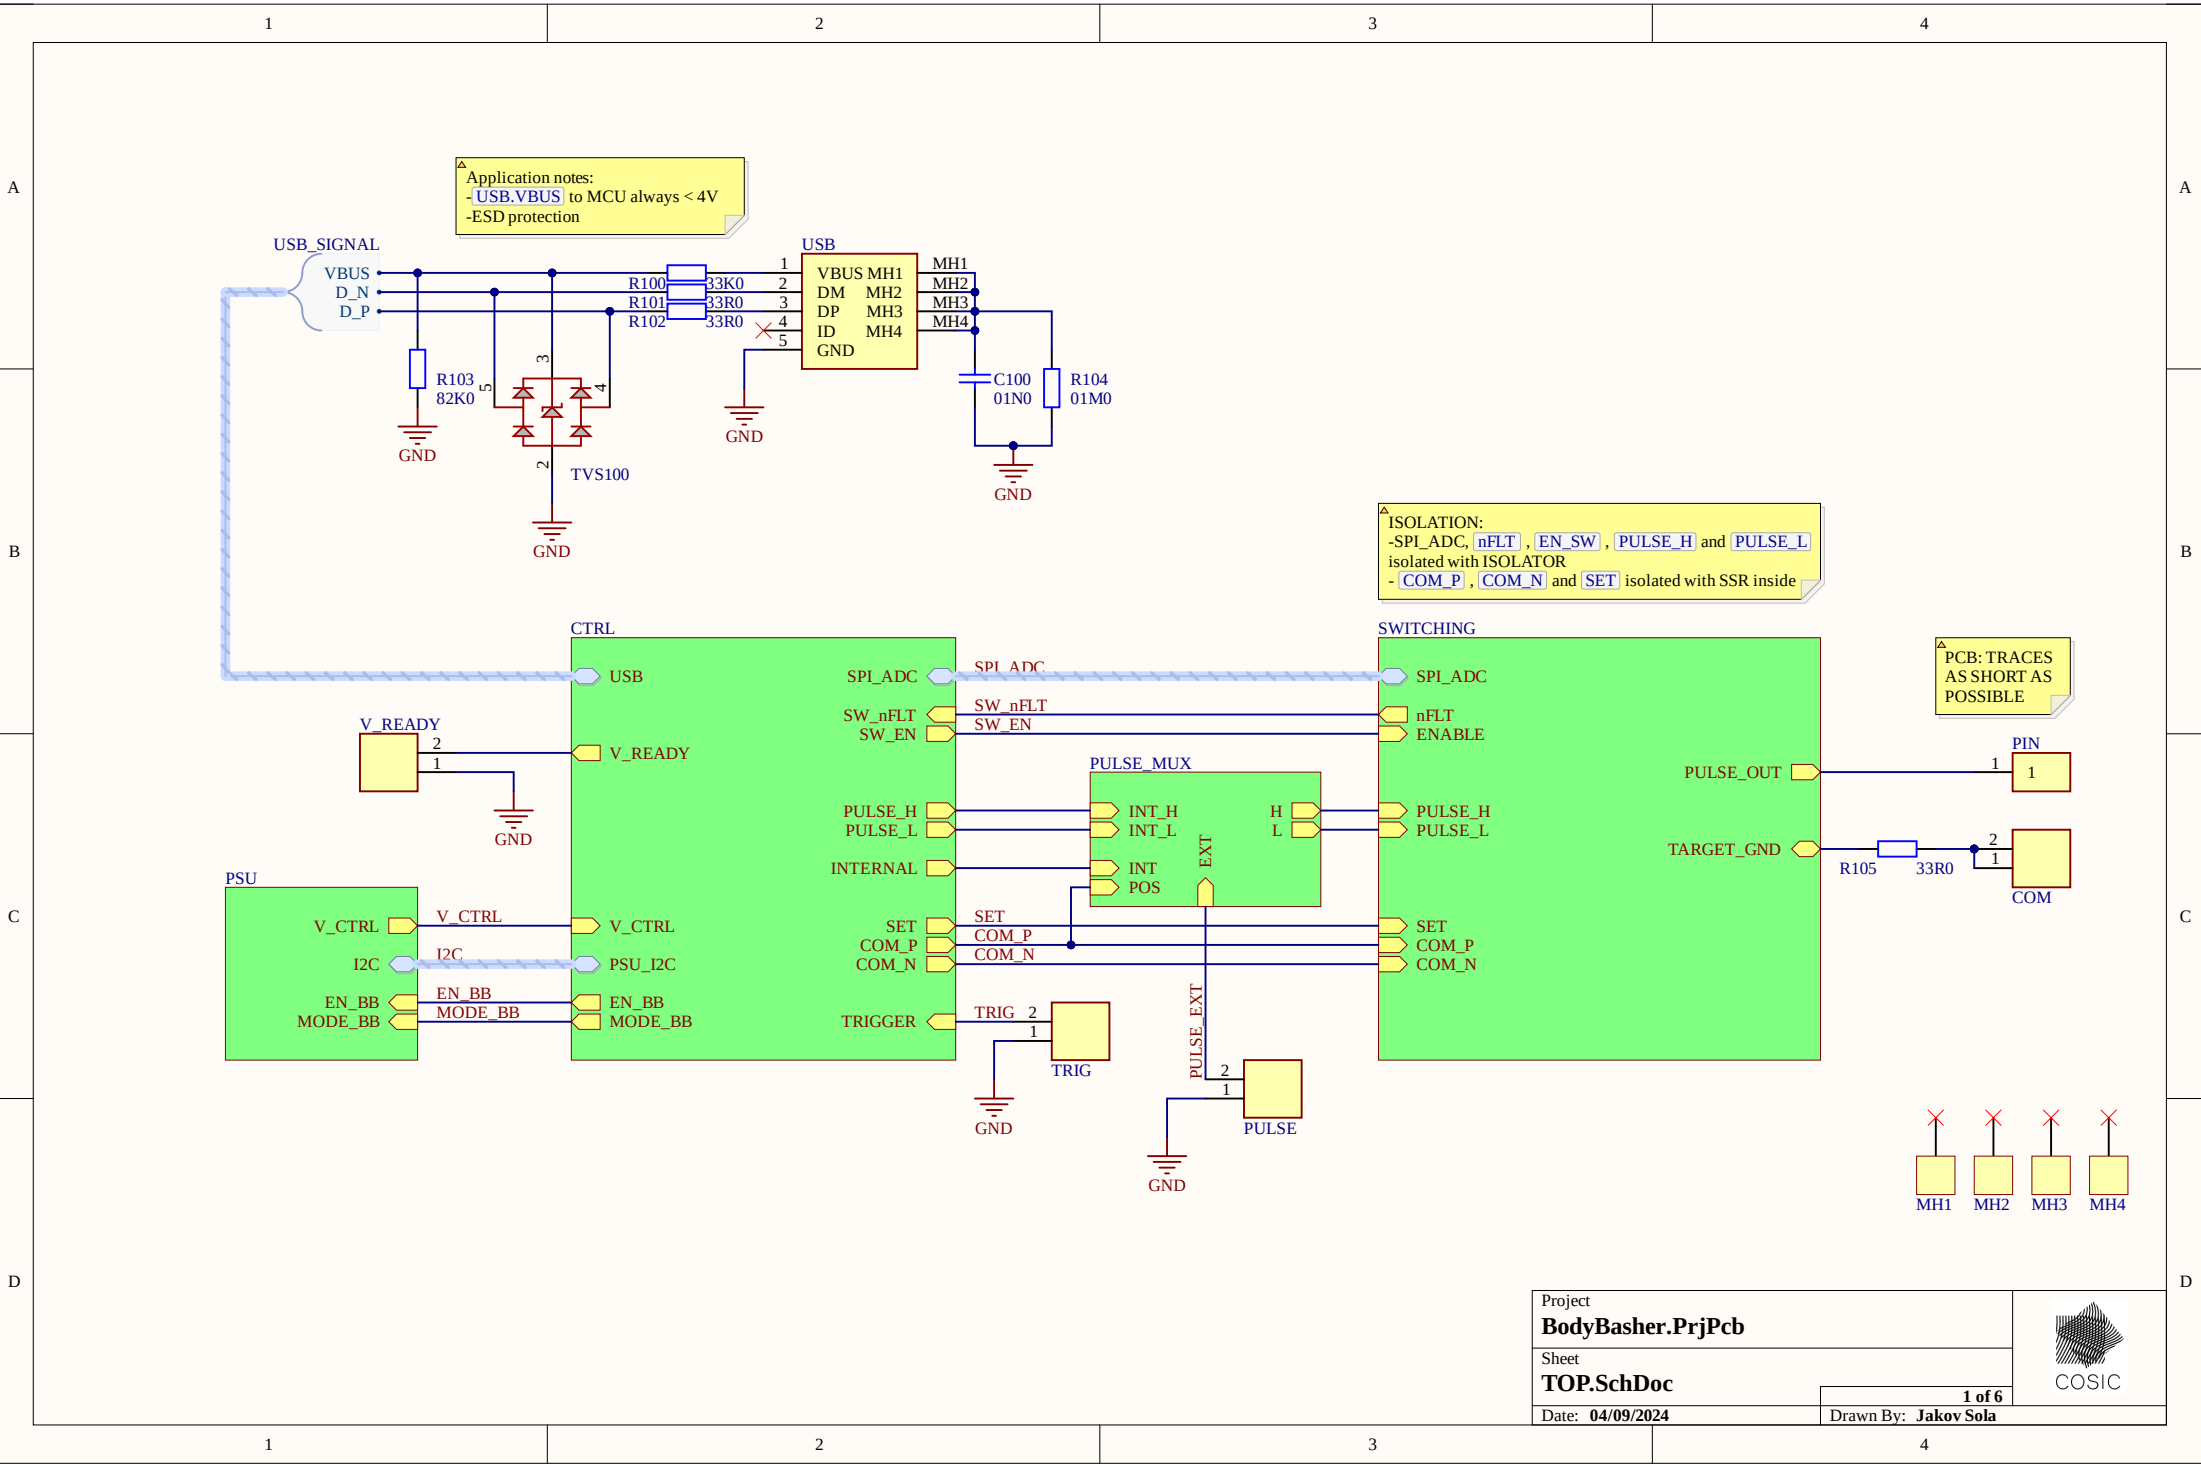




Isolation

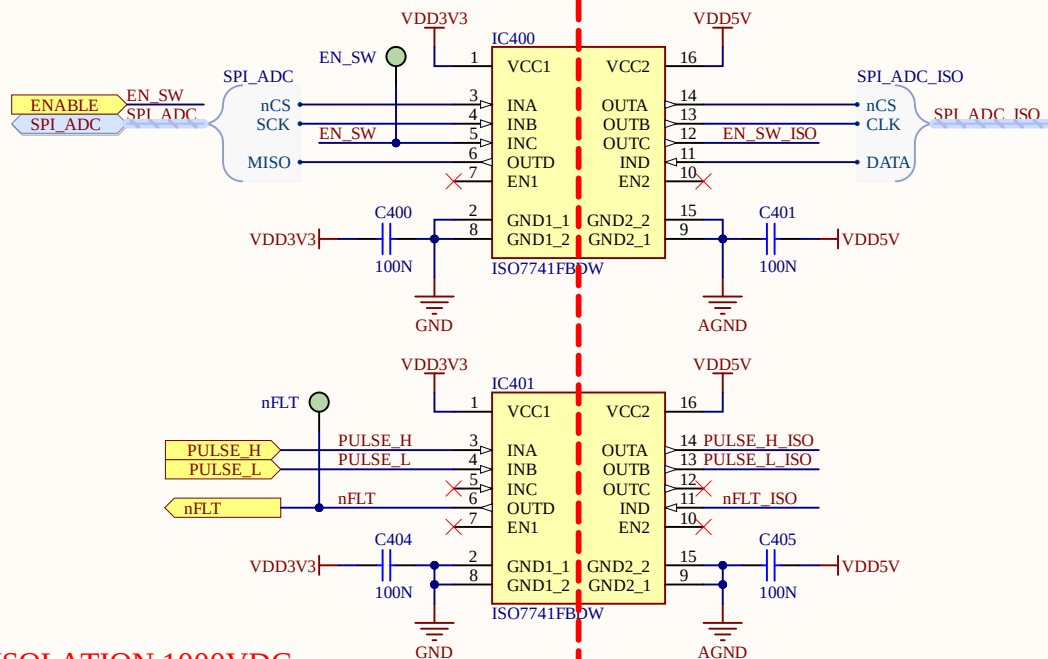


ISOLATION 1000VDC

Polarity switching

△ HV_P and HV_N (AGND) never connected to COM at the same time. Take into account t_{on} and t_{off}.

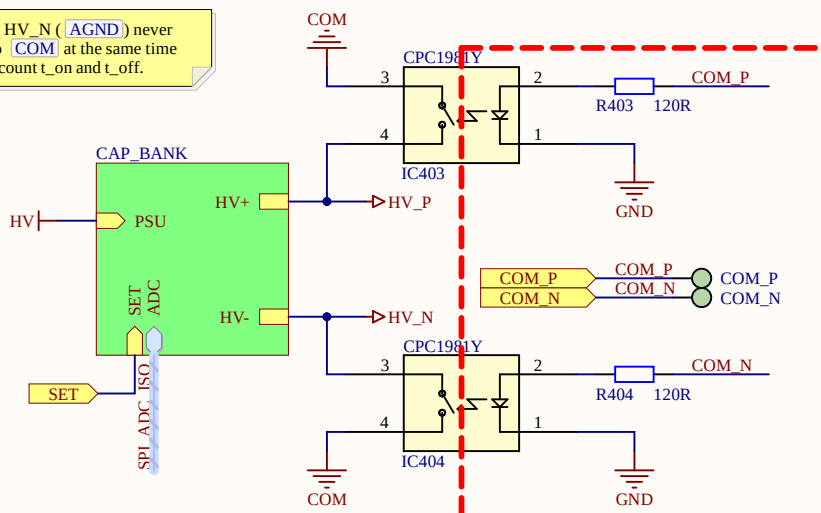

Pulse injection

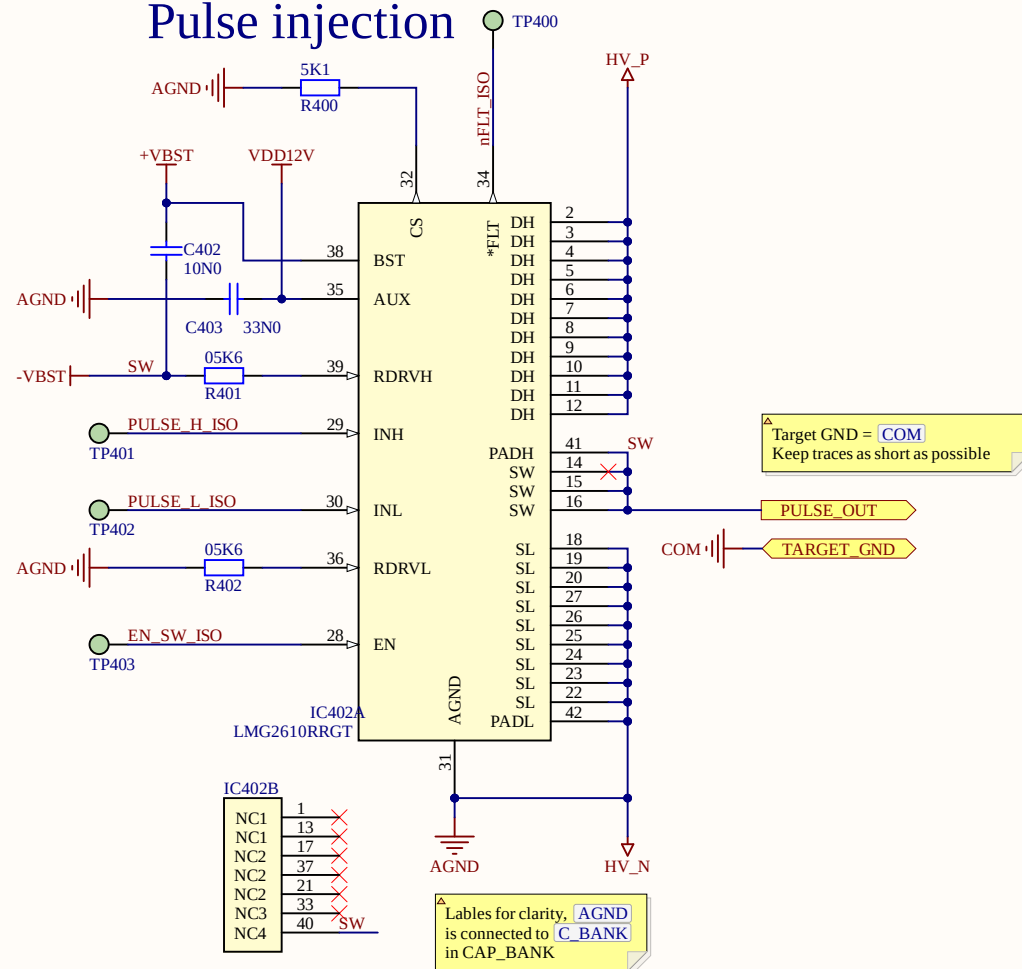

Project
BodyBasher.PrjPcb


Sheet
SWITCHING.SchDoc

Date: 04/09/2024


4 of 6
Drawn By: Jakov Sola



Charge-discharge control

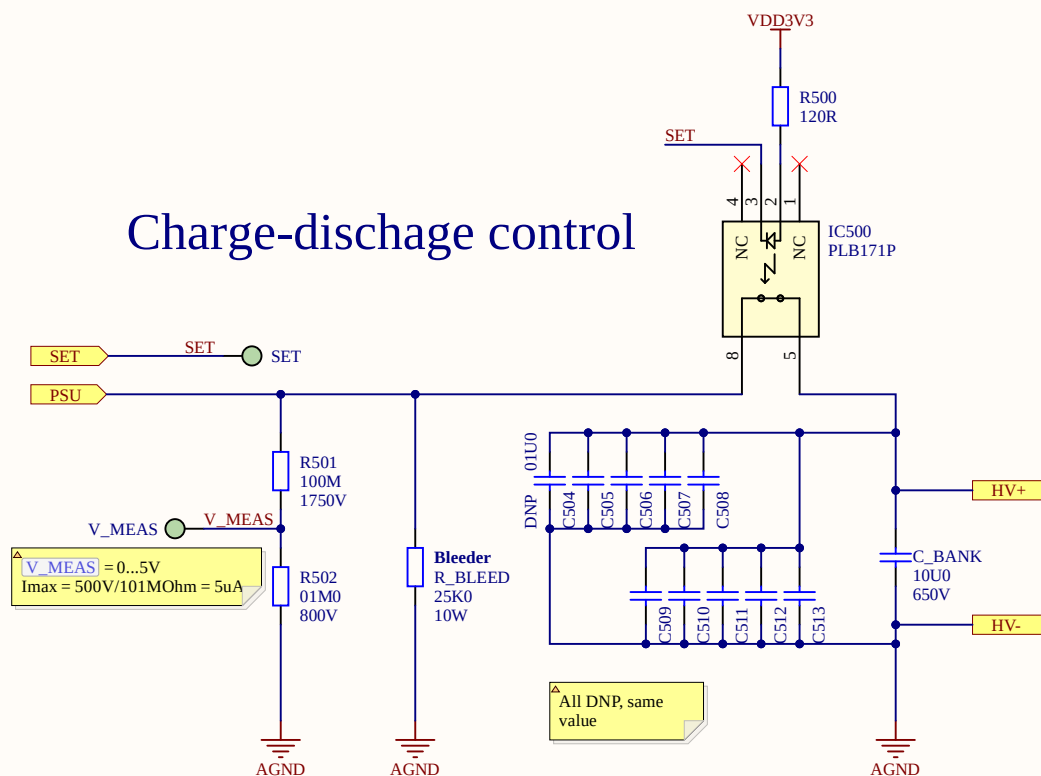

Voltage measurement

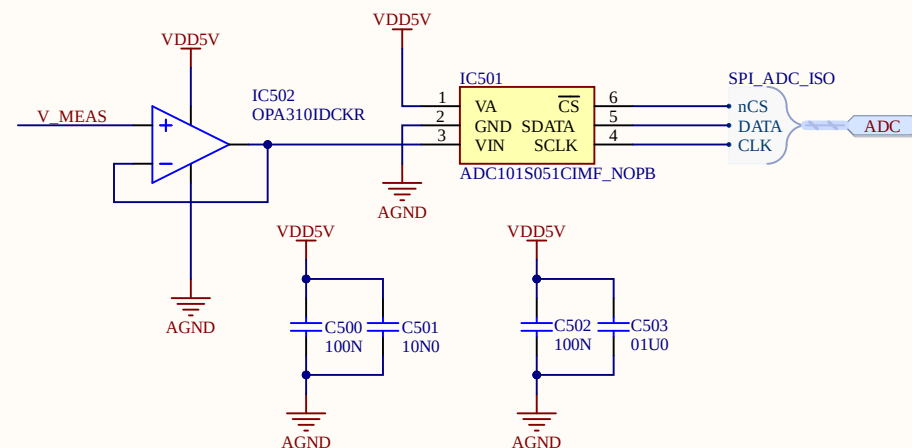

Project
BodyBasher.PrjPcb

Sheet
CAP_BANK.SchDoc


Date: 04/09/2024

Drawn By: Jakov Sola


5 of 6




External 12V

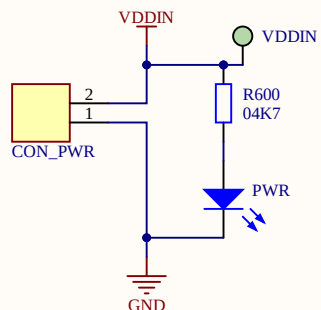


Digital 3V3

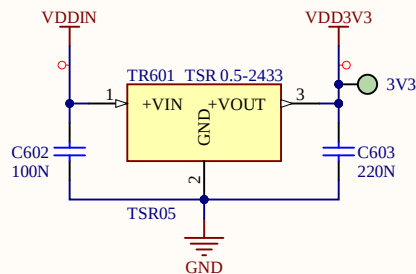


12V ISO

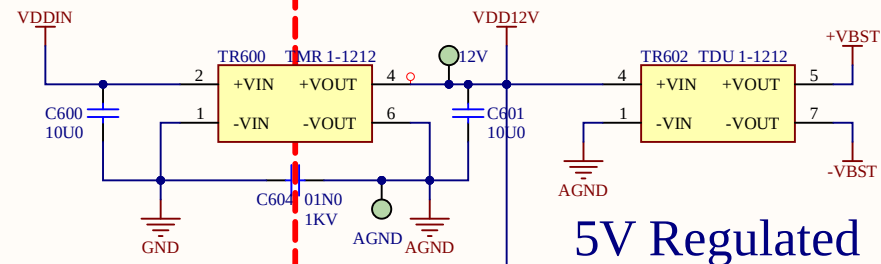

5V Regulated

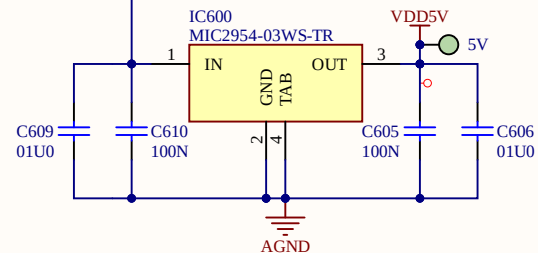

9-12VIN; 0.8-12VOUT Buck-Boost

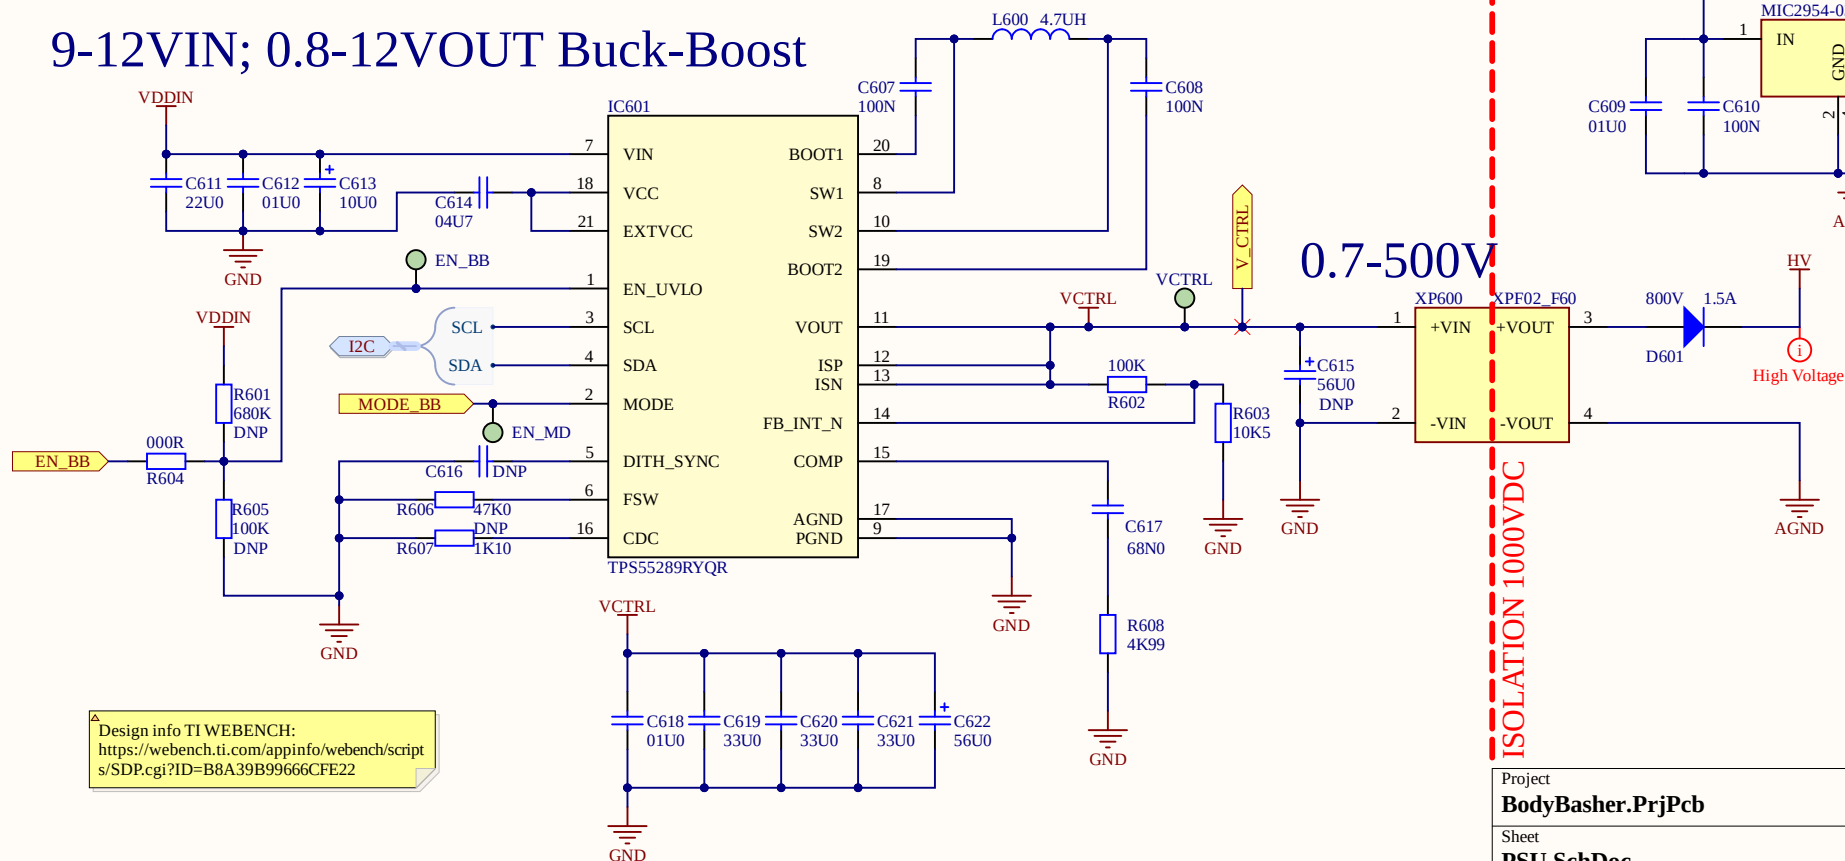

ISOLATION 1000VDC

Design info TI WEBENCH:
<https://webench.ti.com/appinfo/webench/scripts/SDP.cgi?ID=B8A39B99666CFE22>

Project BodyBasher.PrjPcb		 COSIC
Sheet PSU.SchDoc		
Date: 04/09/2024	Drawn By: Jakov Sola	6 of 6