

Review: Direct-mapped caches

- □ If the cache contains 2^k bytes, then the k least significant bits (LSBs) are used as the index.
 - data from address i would be stored in block i mod 2^k.
- □ For example, data from memory address 11 maps to cache block 3 on the right, since 11 mod 4 = 3 and since the lowest two bits of 1011 are 11.

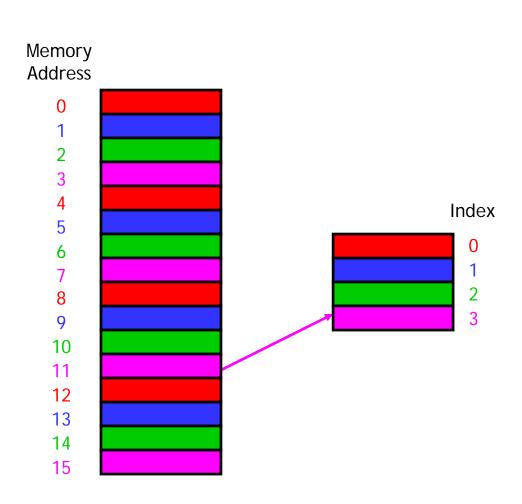

Review: Tags & Valid bits

- □ To find data stored in the cache, we need to add tags to distinguish between different memory locations that map to the same cache block.
- We include a single valid bit per block to distinguish full and empty blocks.

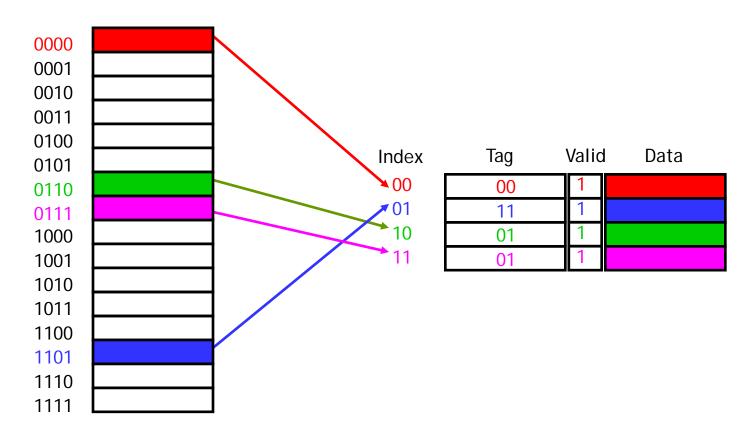

Review: How big is the cache?

For a byte-addressable machine with 16-bit addresses with a cache with the following characteristics:

- □ It is direct-mapped (as discussed last time)
- Each block holds one byte
- The cache index is the four least significant bits

Two questions:

How many blocks does the cache hold?

```
4-bit index -> 2^4 = 16 blocks
```

□ How many bits of storage are required to build the cache (e.g., for the data array, tags, etc.)?

```
tag size = 12 bits (16 bit address - 4 bit index)
(12 tag bits + 1 valid bit + 8 data bits) x 16 blocks = 21 bits x 16 = 336 bits
```

Performance example

□ Assume the cache hit ratio is 97% and the hit time is one cycle, but the miss penalty is 20 cycles.


```
AMAT= Hit time + (Miss rate x Miss penalty)
= 1 cycle + (3% x 20 cycles)
= 1.6 cycles
```

- ☐ If the cache was perfect and never missed, the AMAT would be one cycle. But even with just a 3% miss rate, the AMAT here increases 1.6 times!
- How can we reduce miss rate?

Spatial locality

■ What we can do is make the cache block size larger than one byte.

- □ Here we use twobyte blocks, so we can load the cache with two bytes at a time.
- ☐ If we read from address 12, the data in addresses 12 and 13 would both be copied to cache block 2.

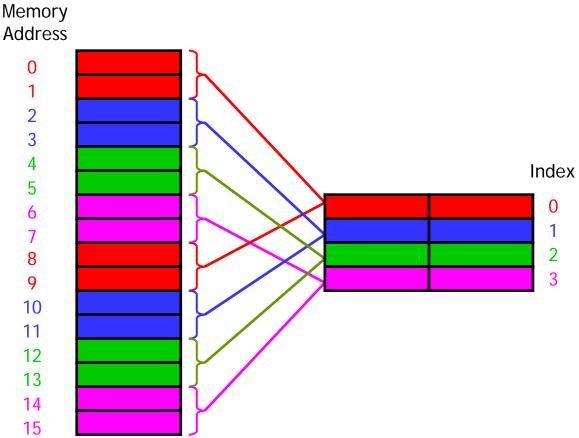


Block addresses

- Now how can we figure out where data should be placed in the cache?
- ☐ It's time for block addresses! If the cache block size is 2^n bytes, we can conceptually split the main memory into 2^n -byte chunks too.
- □ To determine the block address of a byte address i, you can do the integer division


 $i/2^n$

- ☐ Our example has two-byte cache blocks, so we can think of a 16-byte main memory as an "8-block" main memory instead.
- □ For instance, memory addresses 12 and 13 both correspond to block address 6, since 12 / 2 = 6 and 13 / 2 = 6.

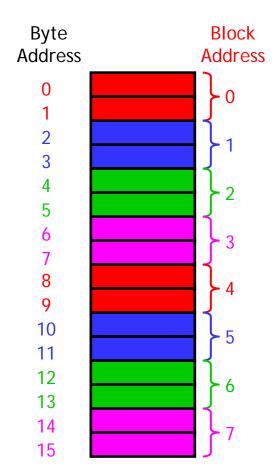


Cache mapping

- Once you know the block address, you can map it to the cache as before: find the remainder when the block address is divided by the number of cache blocks.
- In our example, memory block 6
 belongs in cache block 2, since 6 mod 4 = 2.
- ☐ This corresponds to placing data from memory byte addresses 12 and 13 into cache block 2.

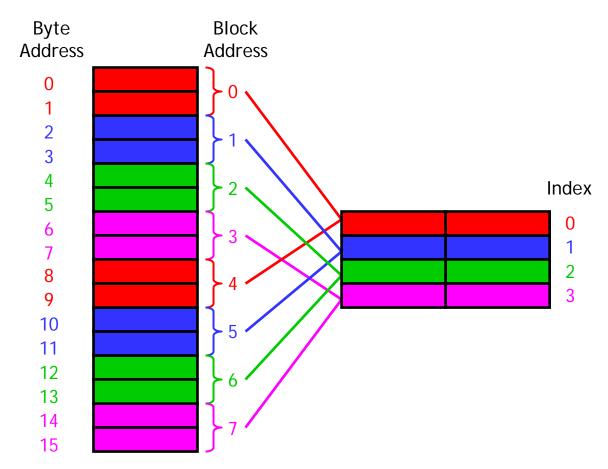


Data placement within a block

- When we access one byte of data in memory, we'll copy its entire block into the cache, to hopefully take advantage of spatial locality.
- □ In our example, if a program reads from byte address 12 we'll load all of memory block 6 (both addresses 12 and 13) into cache block 2.
- Note byte address 13 corresponds to the *same* memory block address!
 So a read from address 13 will also cause memory block 6 (addresses 12 and 13) to be loaded into cache block 2.
- □ To make things simpler, byte *i* of a memory block is always stored in byte *i* of the corresponding cache block.

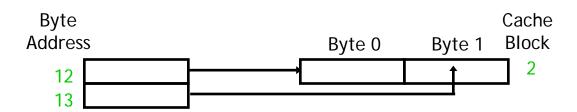


Locating data in the cache


- \square Let's say we have a cache with 2^k blocks, each containing 2^n bytes.
- We can determine where a byte of data belongs in this cache by looking at its address in main memory.
 - k bits of the address will select one of the 2^k cache blocks.
 - The lowest n bits are now a block offset that decides which of the 2ⁿ bytes in the cache block will store the data.

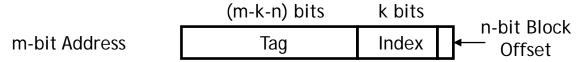


Our example used a 2²-block cache with 2¹ bytes per block. Thus, memory address 13 (1101) would be stored in byte 1 of cache block 2.

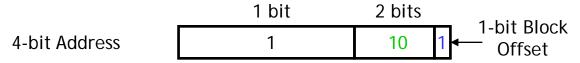

A picture

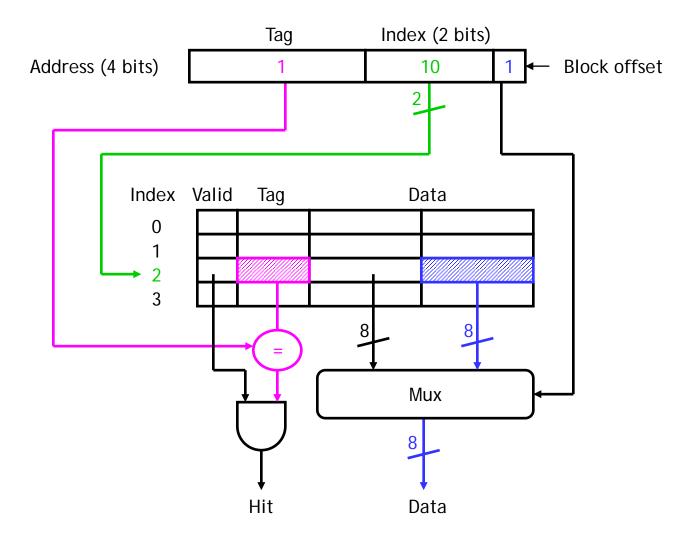


An exercise

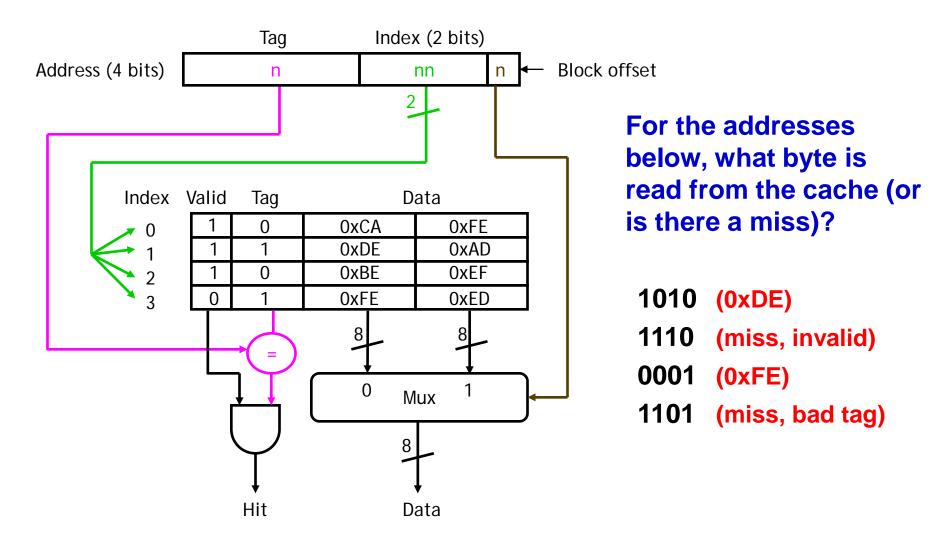

Using arithmetic

☐ An equivalent way to find the right location within the cache is to use arithmetic again.

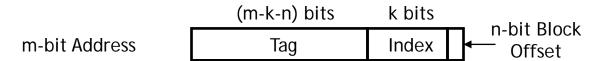

- We can find the index in two steps, as outlined earlier.
 - Do integer division of the address by 2^n to find the block address.
 - Then \underline{mod} the block address with 2^k to find the index.
- \Box The block offset is just the memory address mod 2^n .
- ☐ For example, we can find address 13 in a 4-block, 2-byte per block cache.
 - The block address is 13 / 2 = 6, so the index is then $6 \mod 4 = 2$.
 - The block offset would be 13 mod 2 = 1.


A diagram of a larger example cache

☐ Here is a cache with 1,024 2 bits Address (32 bits) blocks of 4 bytes each, and 32-bit memory addresses. Index Valid Tag Data 1022 1023 Tag Mux Data Hit

A larger example cache mapping


- Where would the byte from memory address 6146 be stored in this direct-mapped 2¹⁰-block cache with 2²-byte blocks?
- ☐ We can determine this with the binary force.
 - 6146 in binary is 00...01 1000 0000 00 10.
 - The lowest 2 bits, 10, mean this is the second byte in its block.
 - The next 10 bits, 1000000000, are the block number itself (512).
- Equivalently, you could use your arithmetic instead.
 - The block offset is 6146 mod 4, which equals 2.
 - The block address is 6146/4 = 1536, so the index is 1536 mod
 1024, or 512.

A larger diagram of a larger example cache mapping

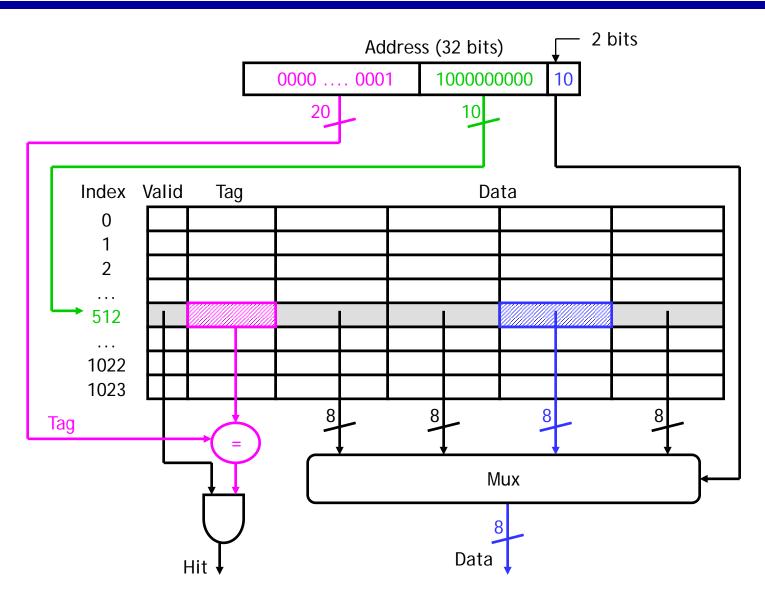

What goes in the rest of that cache block?

□ The other three bytes of that cache block come from the same memory block, whose addresses must all have the same index (100000000) and the same tag (00....01).

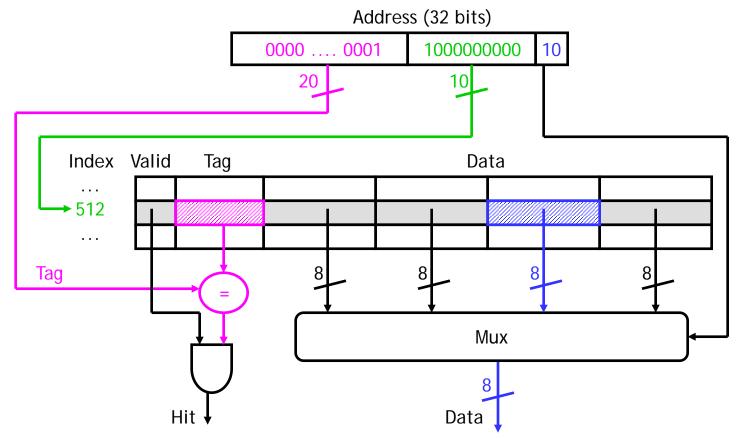

The rest of that cache block

- ☐ Again, byte *i* of a memory block is stored into byte *i* of the corresponding cache block.
 - In our example, memory block 1536 consists of byte addresses 6144 to 6147. So bytes 0-3 of the cache block would contain data from address 6144, 6145, 6146 and 6147 respectively.
 - You can also look at the lowest 2 bits of the memory address to find the block offsets.


Block offset	Memory address	Decimal
00	0001 1000000000 00	6144
01	0001 1000000000 <mark>01</mark>	6145
10	0001 1000000000 10	6146
11	0001 1000000000 11	6147

Index	Valid	Tag	Data				
512							

Disadvantage of direct mapping

☐ The direct-mapped cache is easy: indices and offsets can be computed with bit operators or simple arithmetic, because each memory address belongs in exactly one block.

□ But, what happens if a program uses addresses2, 6, 2, 6, 2, ...?

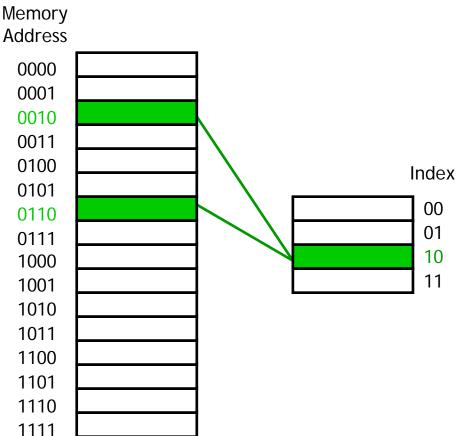

Disadvantage of direct mapping

☐ The direct-mapped cache is easy: indices and offsets can be computed with bit operators or simple arithmetic, because each memory address belongs in exactly one block.
Memory


□ However, this isn't really flexible. If a program uses addresses 2, 6, 2, 6, 2, ..., then each access will result

in a cache miss and a load

☐ This cache has four blocks, but direct mapping might not let us use all of them.

into cache block 2.

☐ This can result in more misses than we might like.

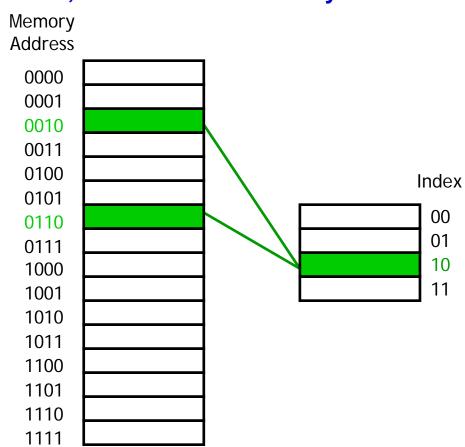


Set associativity


- An intermediate possibility is a set-associative cache.
 - The cache is divided into groups of blocks, called sets.
 - Each memory address maps to exactly one set in the cache, but data may be placed in any block within that set.
- ☐ If each set has x blocks, the cache is an x-way associative cache.
- ☐ Here are several possible organizations of an eight-block cache.

1-way associativity 8 sets, 1 block each


2-way associativity 4 sets, 2 blocks each

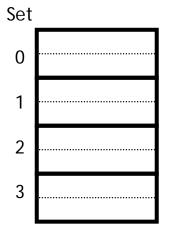

4-way associativity 2 sets, 4 blocks each

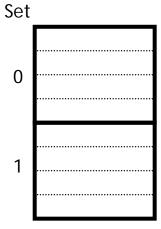


2-way set associative cache implementation

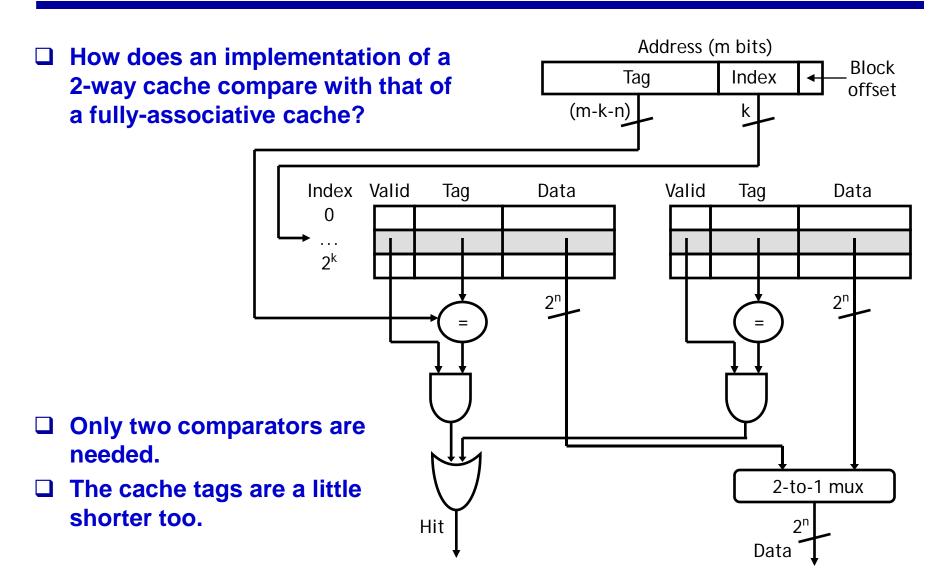

Locating a set associative block

- We can determine where a memory address belongs in an associative cache in a similar way as before.
- □ If a cache has 2^s sets and each block has 2^n bytes, the memory address can be partitioned as follows.

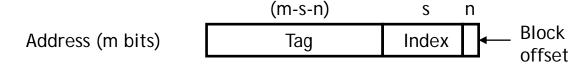

Our arithmetic computations now compute a set index, to select a set within the cache instead of an individual block.


Block Offset = Memory Address mod 2^n

Block Address = Memory Address / 2^n

Set Index = Block Address mod 2^s

Set associative caches are a general idea

- By now you may have noticed the 1-way set associative cache is the same as a direct-mapped cache.
- □ Similarly, if a cache has 2^k blocks, a 2^k -way set associative cache would be the same as a fully-associative cache.

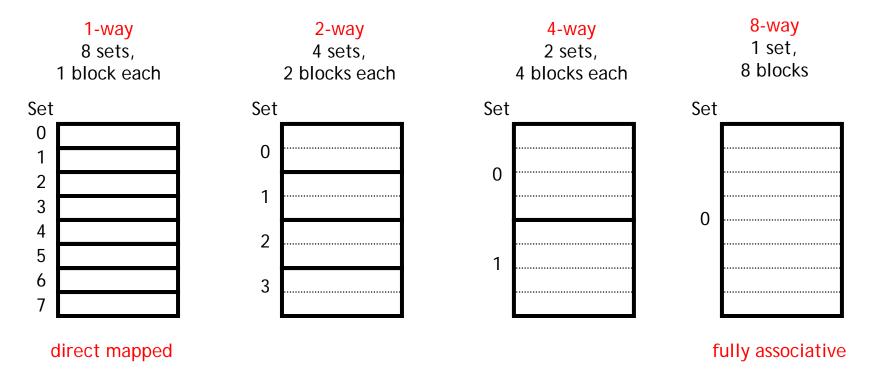


Example placement in set-associative caches


- Where would data from memory byte address 6195 be placed, assuming the eight-block cache designs below, with 16 bytes per block?
- □ 6195 in binary is 00...0110000 011 0011.
- Each block has 16 bytes, so the lowest 4 bits are the block offset.
- ☐ For the 1-way cache, the next three bits (011) are the set index. For the 2-way cache, the next two bits (11) are the set index. For the 4-way cache, the next one bit (1) is the set index.
- ☐ The data may go in *any* block, shown in green, within the correct set.

1-way associativity 8 sets, 1 block each

2-way associativity 4 sets, 2 blocks each

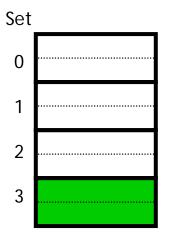

4-way associativity 2 sets, 4 blocks each

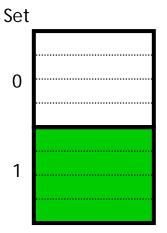


Block replacement

- Any empty block in the correct set may be used for storing data.
- ☐ If there are no empty blocks, the cache controller will attempt to replace the least recently used block, just like before.
- □ For highly associative caches, it's expensive to keep track of what's really the least recently used block, so some approximations are used. We won't get into the details.

1-way associativity 8 sets, 1 block each

2-way associativity 4 sets, 2 blocks each

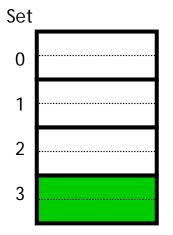

4-way associativity 2 sets, 4 blocks each

