

INSTALL GUIDE 2 · INSULSPAN® ROOF PANELS

Ceiling fans in Insulspan® panels

Fixing a ceiling fan with the fan fixing plate kit, from marking the position to the final fit-off.

QUICKBUILT SYSTEMS®

Issue 1 · 21 October 2026

Ceiling fans in Insulspan roof panels

How to fix a ceiling fan to a Quick Built insulated roof panel with the fan fixing plate kit.

The fan fixing plate kit




Plate	100 mm diameter, powdercoated steel, pre-tapped centre hole
With	Hex-head fixing screw, neoprene washer and locking nut
Takes	Most standard ceiling fan brackets
Current supplier	Allform fan bracket kit

The plate gives a secure platform on the underside of the roof panel. The screw goes through the panel from the roof side, then the plate and locking nut are fastened tight against the ceiling.


Before you start

- The screw can go through a corrugation peak or through the pan between peaks: make sure the fan position allows for this. Mark the final position.
- Run the wiring to the fan position first, so the cable comes out of the ceiling beside the plate, where the fan canopy will cover it.
- Electrical work by a licensed electrician.

1 How the plate fixes through the panel

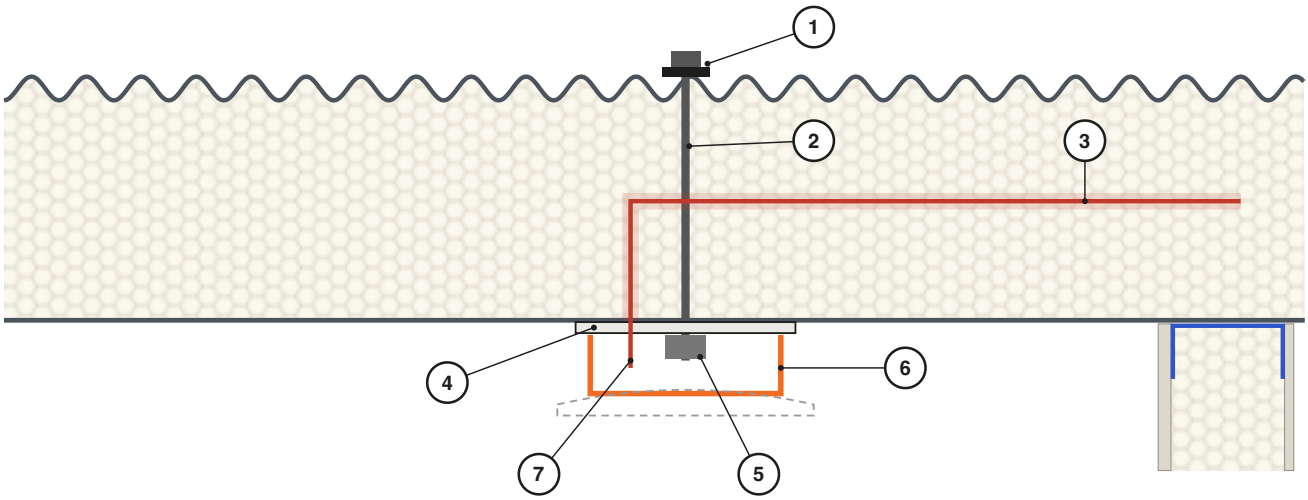

1. Fixing screw from the roof side; neoprene washer sealed on the roof skin, on a corrugation peak or in the pan
2. Screw long enough to come through the ceiling
3. Fan cable, run to the fan position first along a service channel
4. 100 mm fixing plate, spun up the screw until firm against the ceiling
5. Locking nut, tight against the plate; spare thread cut off
6. The fan's own mounting bracket, fixed to the plate
7. Cable comes out beside the plate, under the fan canopy

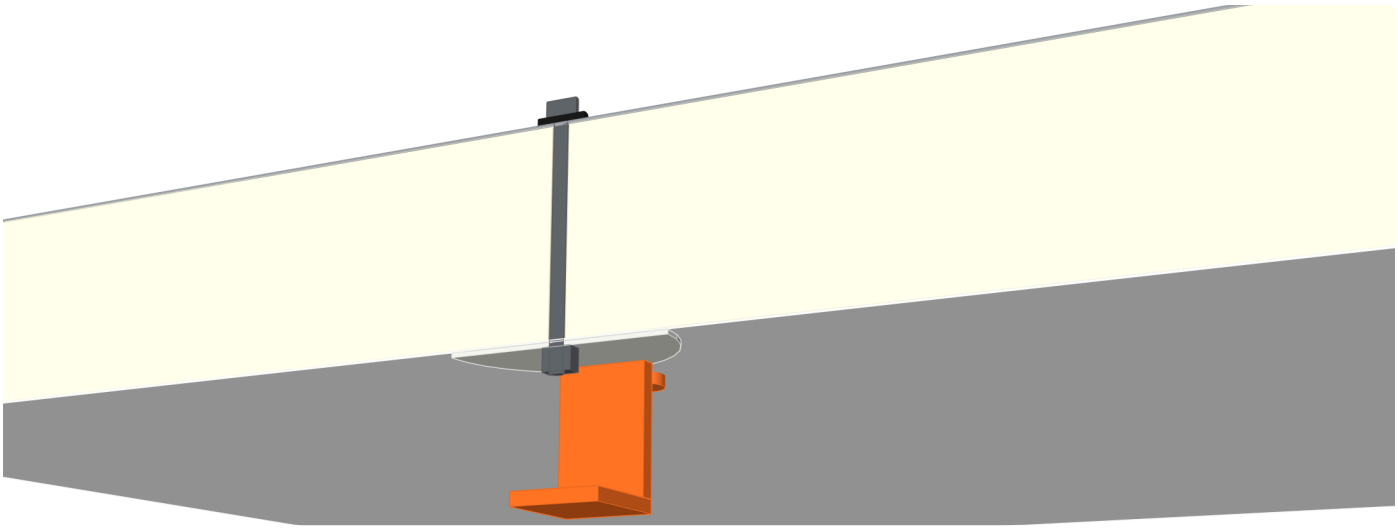

3D cutaway: the fixing screw through a corrugation crest, the plate and locking nut on the ceiling, and the fan's bracket.

2 Install steps

1. **Run the wiring** to the fan position along a service channel in the panel (at the edge joint where the panel has one, or made with a long auger bit or a hot reo bar), in conduit where required.
2. **Fix the screw** through the panel from the roof side until the neoprene washer engages with the roof skin. The screw must be long enough to come through the ceiling.
3. **Spin the fixing plate** up the screw thread from inside until it is firm against the ceiling.
4. **Run the locking nut** all the way up the thread until it is tight against the plate.
5. **Check** the neoprene washer and screw are still engaged with the roof skin, then cut off the spare thread below the locking nut.
6. **Fix the fan's bracket** to the plate following the fan maker's instructions, positioned so the canopy covers the plate and the wiring.