
SITECONTROL

Dispatch Guide

Sending vehicles between posts, following them on the road, recording arrivals,
handling overdue alerts, and the trip records.

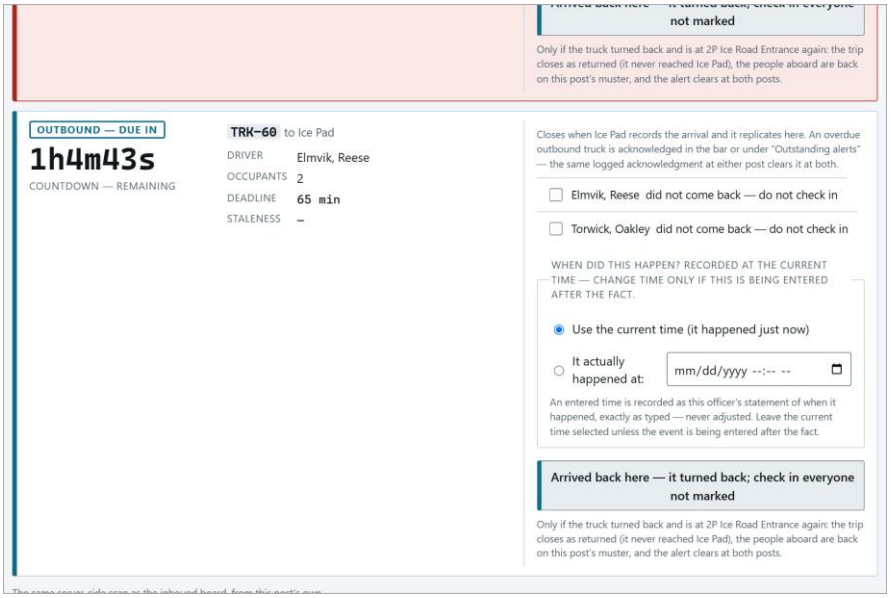

All names in this guide are sample data. Screens are from the 2P Ice Road Entrance and Ice Pad posts; every post uses the same screens. "Winter Camp (no gate)" is an example uncontrolled destination added for the screenshots.

Contents

Section	Covers	Page
How Dispatch Works	Trips, deadlines, the three kinds of destination	3
The Operator Console	The trip board and its sections	4
Sending a Vehicle	From the gate, or from the console	5
Uncontrolled Destinations	Pads with no gate and no timer	9
Working on the Road	Equipment out on the road itself	11
Following a Trip	Countdowns, both ends of the trip, staleness	13
Recording Arrivals	Expected, unlisted, turned back, back from the road	14
Overdue Vehicles	The red bar, acknowledging, overdue history	18
When the Signal Is Lost	What changes on the board	21
The Muster and Dispatch	On the road, working, away - who is responsible	23
Trip Records and Corrections	All trips & drivers, record chain, fixing a trip	25
Reports and Analytics	Dispatch analytics, history reports	28
Troubleshooting	Things that catch people out	30
Quick Reference	One-page summary	31

Checking people in and out at the gate is covered in the **Site Operator Guide**; installing and setting up posts in the **Administrator Guide**.

How Dispatch Works

Every vehicle that leaves a post with people aboard is a **trip**. The trip records the vehicle, the driver, everyone aboard, where it is going, and how long it should take (the **deadline**, in minutes).

1	A post **dispatches** the vehicle - its people leave that post's muster and are shown as **On the road**.
2	Both posts see the trip with a **countdown**: the sending post as **Outbound**, the receiving post as **Inbound**.
3	When the vehicle arrives, the receiving post **records the arrival** - the people go onto its muster and the trip closes at both posts.
4	If the deadline passes first, **both posts get a red OVERDUE alert** until someone acts on it.

Three kinds of destination


Controlled (a gated post)	e.g. Ice Pad. Deadline required, countdown runs, overdue alert if late. Closed by the arrival at the other end.
Uncontrolled (a pad with no gate)	e.g. Winter Camp (no gate). No deadline is allowed, no timer, no alarm. Closed when the people return.
Working on the road	Equipment out on the road itself (graders, plows). No destination; overdue after the post's working limit (e.g. 12 h).

Records are never deleted. Trips are not cancelled - a vehicle that turns back is recorded as turned back, and a return journey is a new trip. Corrections are added to the record; the original stays.

The Operator Console

Open **operator console** from the links at the bottom of any page. From top to bottom:

Needs a human	Anything waiting for review, and how many alerts are outstanding.
Inbound	Vehicles on their way TO this post, most urgent first, with countdowns.
Outbound	Vehicles that left THIS post and have not yet been recorded as arrived.
Working on the road	This post's equipment out working on the road.
Back from a pad	People out at uncontrolled destinations, waiting to return.
Outstanding alerts	Every overdue trip, with the Acknowledge button.
A vehicle is leaving	The dispatch form.
A vehicle has arrived	For a vehicle nobody told this post about.

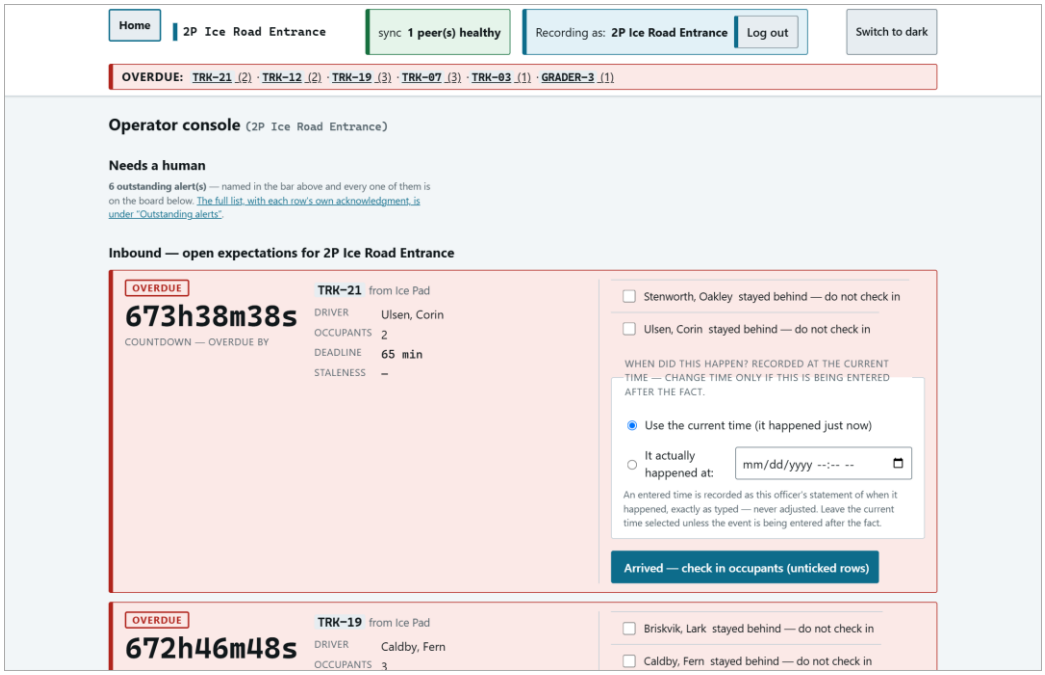


The top of the operator console.

Sending a Vehicle

From the gate (Check out selected)

When the gate checks people out, that **is** a dispatch: tick the people, **Check out selected**, then vehicle, driver, **Where is it going?** and the **Deadline** in minutes. The gate never fills in the deadline - leaving it blank gives "Nothing was recorded. a trip with a destination requires a deadline...". (Full steps in the Site Operator Guide.)

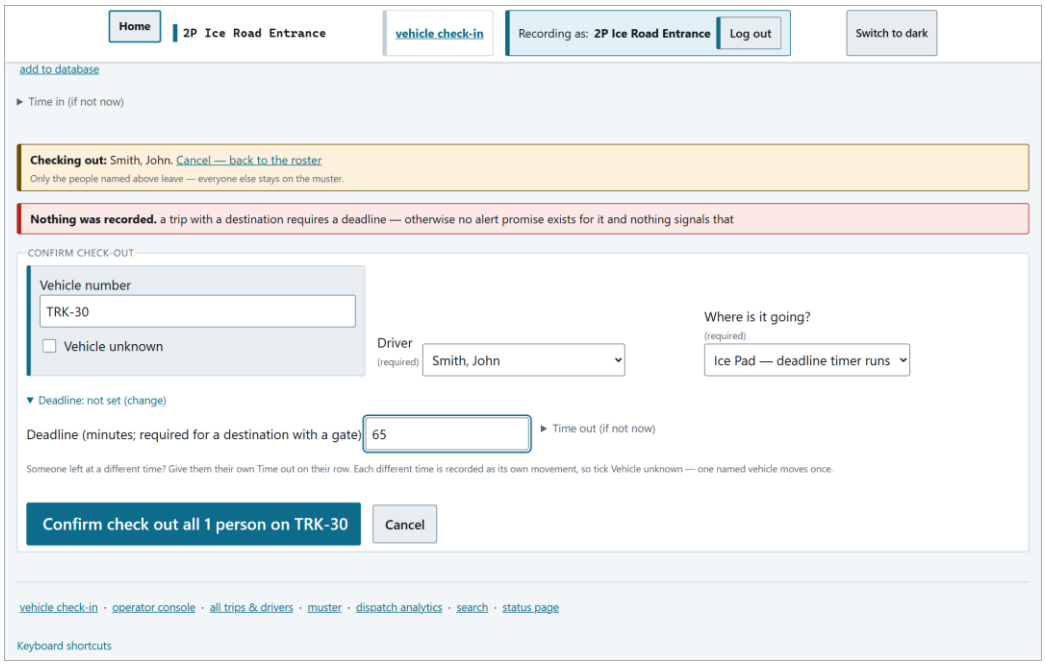


Check-out from the gate with a 65-minute deadline.

From the console (A vehicle is leaving)


The console form does the same job and adds the uncontrolled and working-on-the-road options. Steps on the next page.

1	**Vehicle id** - as painted on the vehicle. If you genuinely don't know it, tick **Vehicle unknown** instead.
2	**Driver** - pick exactly one. Nobody is pre-selected, on purpose. Only people recorded on site here are listed - check someone in at the gate first if they are missing.
3	**Other occupants** - tick everyone aboard, **including the driver again**. Anyone left unticked stays on this post's muster.
4	**Deadline (minutes)** - for a gated destination. If left empty, the destination's normal time is used (e.g. 65 min to Ice Pad). Leave it EMPTY for an uncontrolled destination.

5	Press the **destination button**: "Dispatch to Ice Pad - deadline timer runs (65 min)", "Record run to <pad> - no gate there, no timer", or "Working on the ice road - ... overdue after 12 h".
6	Check the pop-up - "About to check out of this site - N person(s): <names> - Is that everyone, and only them?" - and press **OK**.

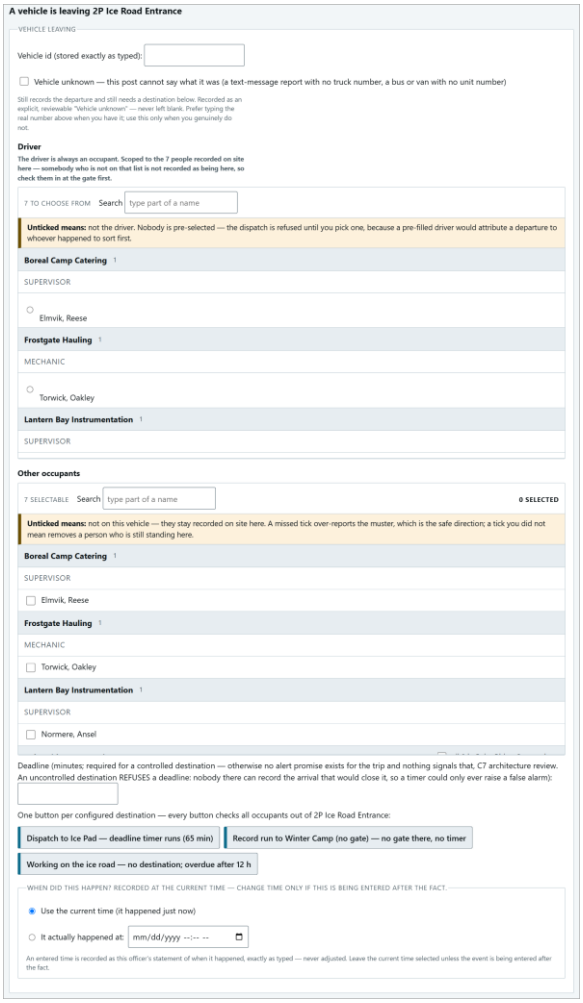


The empty form.

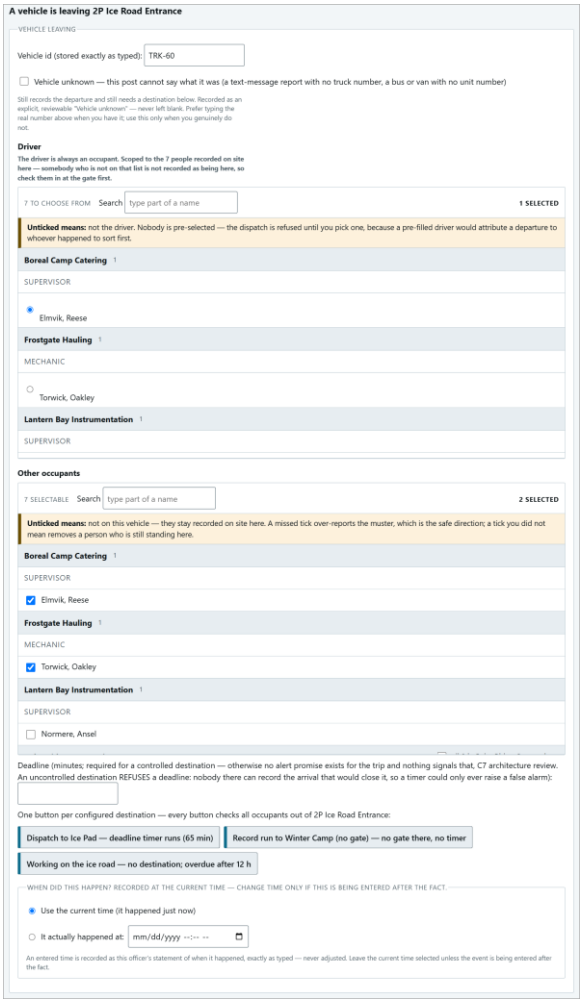

Filled in: TRK-60, driver and occupants ticked.

The result


There is **no message**. The page reloads and the new trip appears at the bottom of **Outbound** with its countdown. The people are gone from the on-site list.

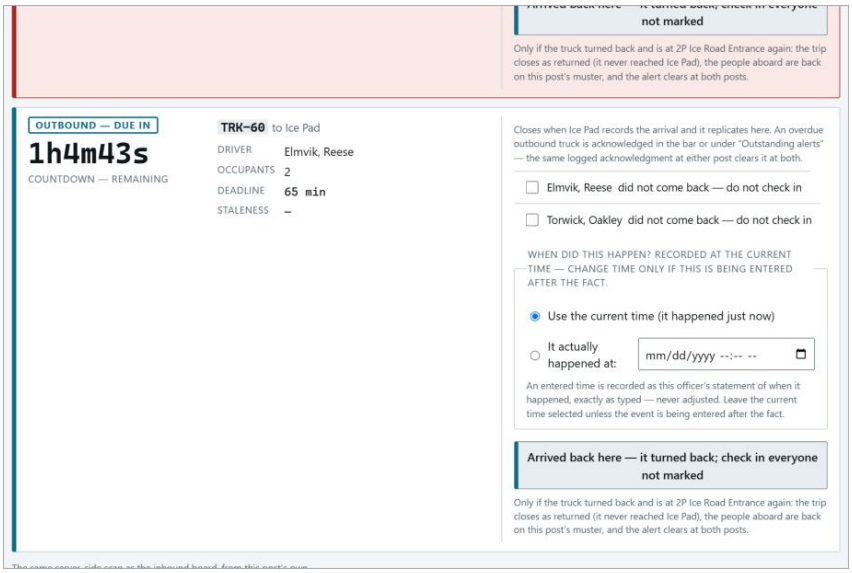


OUTBOUND - DUE IN 1h4m43s: TRK-60 to Ice Pad, 2 occupants, 65 min deadline.

Vehicle unknown

Use it only when the vehicle really cannot be identified (e.g. a text-message report with no truck number). The trip shows as "Vehicle unknown" everywhere, and cannot be matched automatically on arrival.

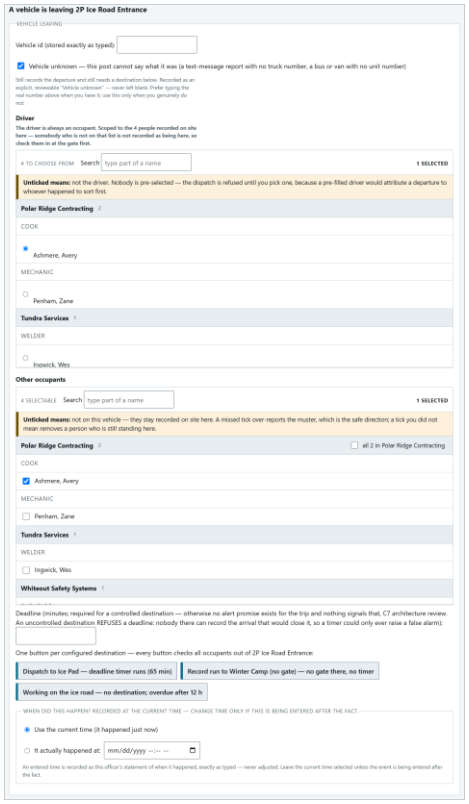


Vehicle unknown ticked.

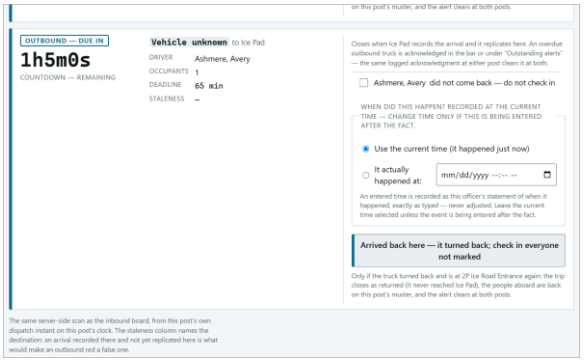


The resulting card.

Uncontrolled Destinations

A pad with **no gate**: nobody there can record an arrival, so there is **no deadline, no countdown and no alarm**. Use the button "Record run to <pad> - no gate there, no timer" with the Deadline box **empty**.

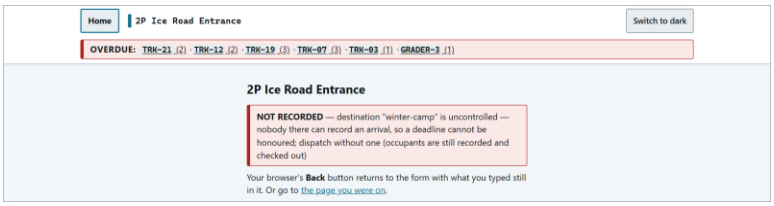


Typing a deadline is refused: "NOT RECORDED - destination ... is uncontrolled ... dispatch without one". Use Back and clear the deadline.

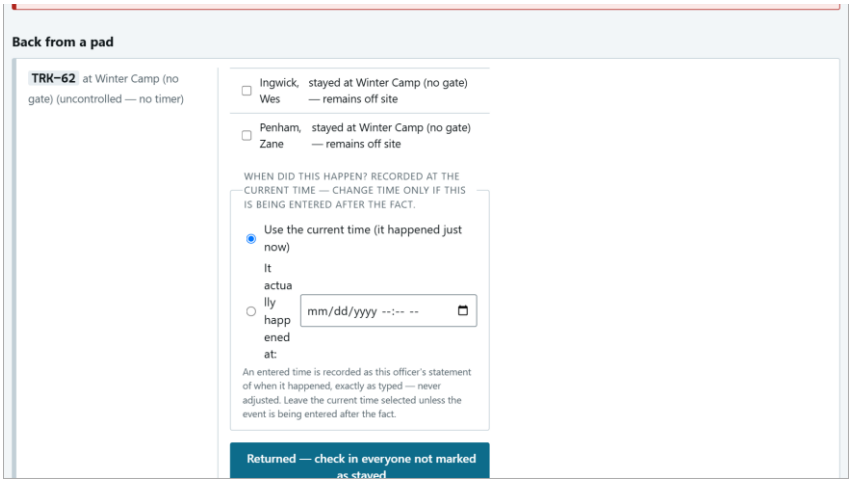


The run waits under "Back from a pad" until the people return.

When they come back

On the card, press **Returned - check in everyone not marked as stayed**. Tick anyone who **stayed at the pad** - they remain off site. (People back from a pad can also simply be checked in at the gate on any vehicle.)

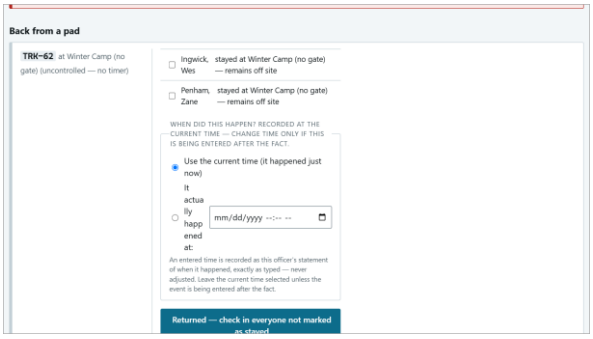

Before: the Back from a pad card.

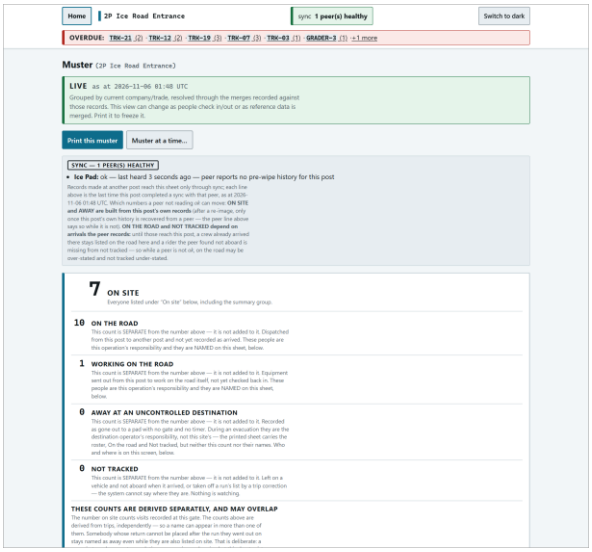


After: back on the muster.


Not on the printed muster. People away at an uncontrolled destination are counted on screen as "AWAY AT AN UNCONTROLLED DESTINATION" but are **not named on the printed sheet** - during an evacuation they are the destination operator's responsibility. Check them on screen or by radio.

Working on the Road

For equipment working **on the road itself** (graders, plows, maintenance crews) with no destination post. Use the button "Working on the ice road - no destination; overdue after 12 h". No deadline is entered - the post's **working limit** (here 12 h) applies.

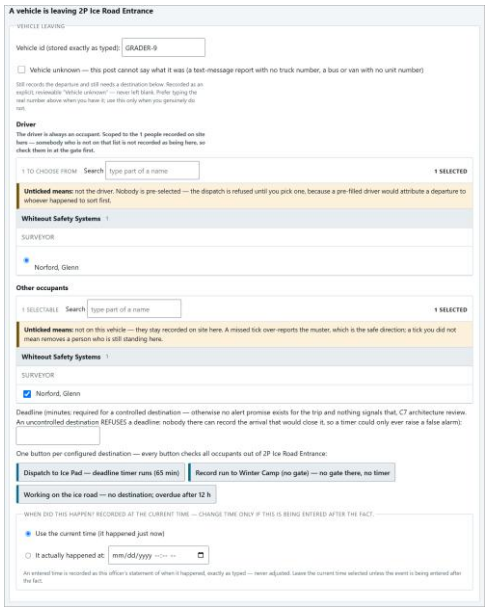

GRADER-9 sent out to work on the road.

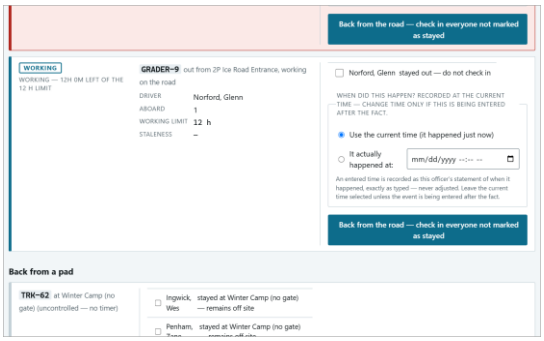


WORKING - 12H 0M LEFT OF THE 12 H LIMIT.


Past the limit the card turns red ("OVERDUE - OUT ... PAST THE 12 H LIMIT"), it appears in the red bar and under Outstanding alerts like any overdue trip.

When it comes back

Press **Back from the road - check in everyone not marked as stayed**. Tick anyone who **stayed out**.

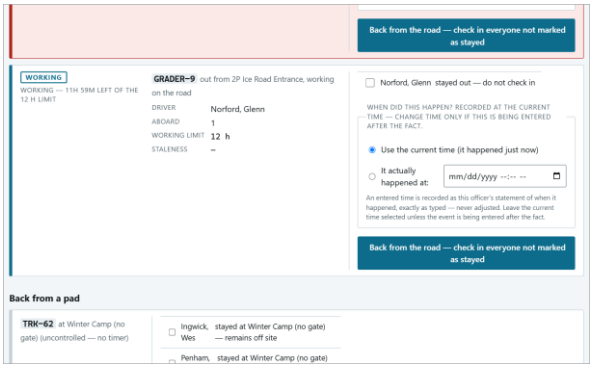


Before: the working card.

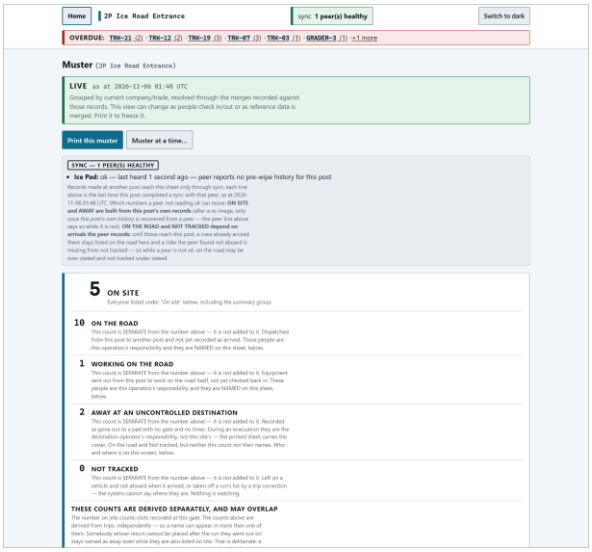


After: the Working count falls on the muster.

Following a Trip

A trip is shown at **both** posts, each counting down on its own clock:

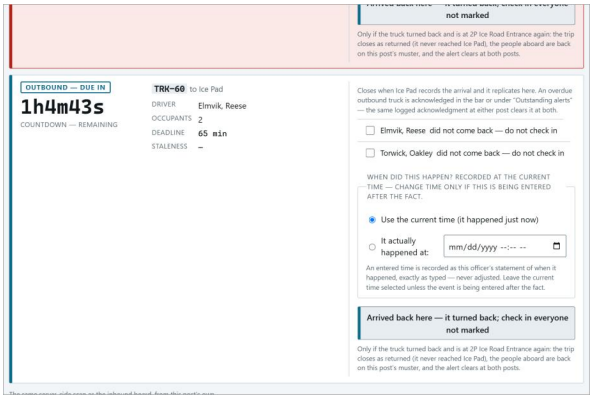

At the sending post: OUTBOUND.

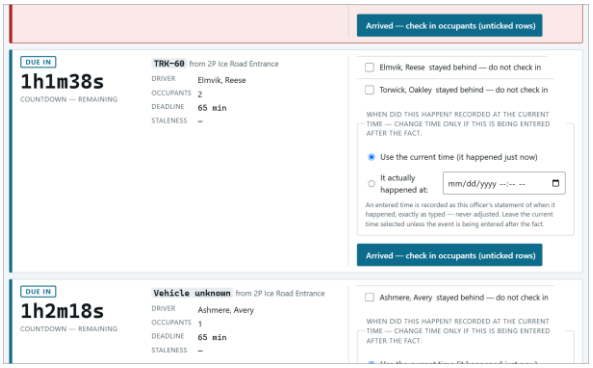

At the receiving post: INBOUND (the same trip).


Countdown	Time left before the deadline (REMAINING), or how late it is (OVERDUE BY) once past it.
DRIVER / OCCUPANTS	Who is aboard.
DEADLINE	The minutes promised at dispatch.
STALENESS	"-" when the two posts are in contact. Otherwise "Last heard from <post>: N minutes ago" - see When the Signal Is Lost.

An outbound card only closes when the **receiving post records the arrival** and that reaches the sending post. The sending post itself can only close it with **Arrived back here - it turned back**.

Recording Arrivals

1. An expected vehicle (the usual way)

On the **vehicle check-in** page, the vehicle is listed under **On the road to <post>**. Open its row and press **Check in (N)** - a green banner confirms ("TRK-30 arrived: 1 checked in."). Or, on the console, use the Inbound card's **Arrived - check in occupants (unticked rows)**.

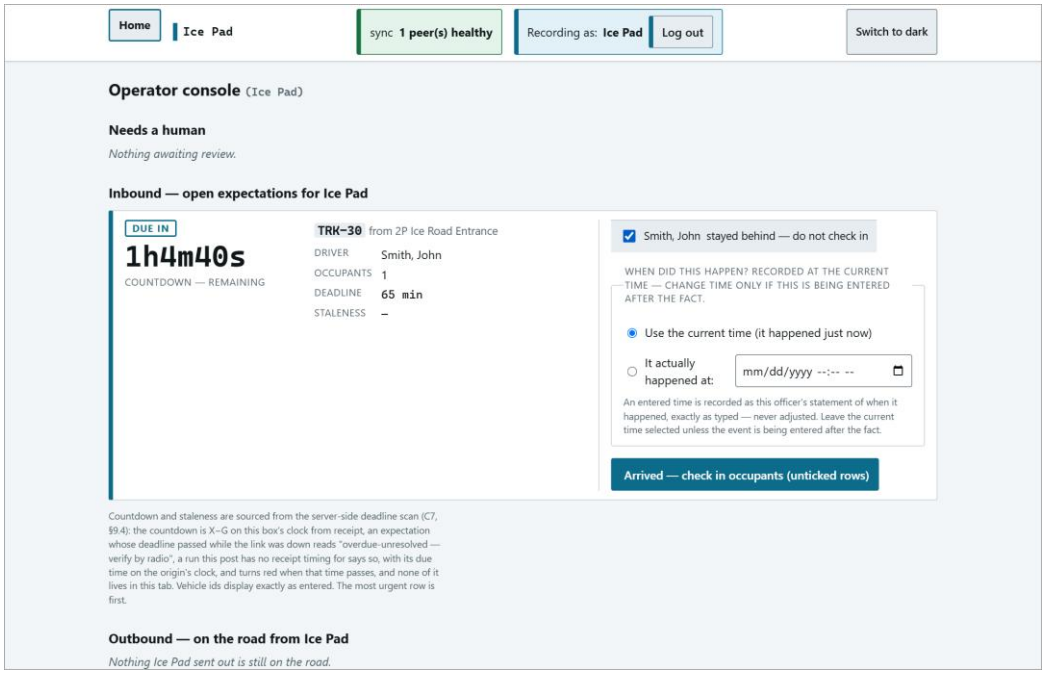


On the Inbound card a TICKED box means "stayed behind - do not check in". Leave everyone who arrived unticked.


Tick boxes mean LEAVE OUT on every trip card: "stayed behind", "did not come back", "stayed out", "stayed at <pad>".

2. An overdue vehicle that arrives without everyone (adjust)

Overdue rows on the vehicle page get an **adjust** link. It opens the manifest - **untick only someone who is NOT here**. They are not checked in, stay off the muster, and show as **NOT TRACKED** until somebody records where they are.

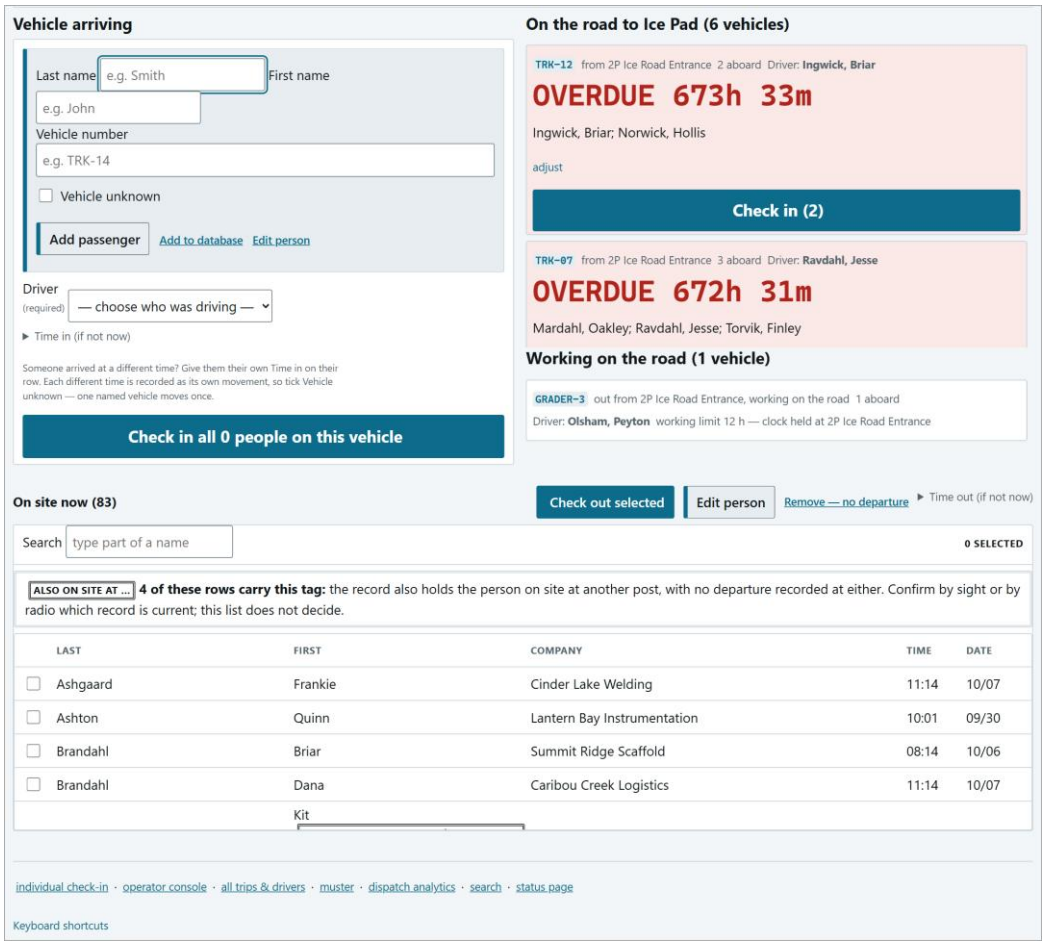

Overdue rows on the vehicle page with the adjust link.

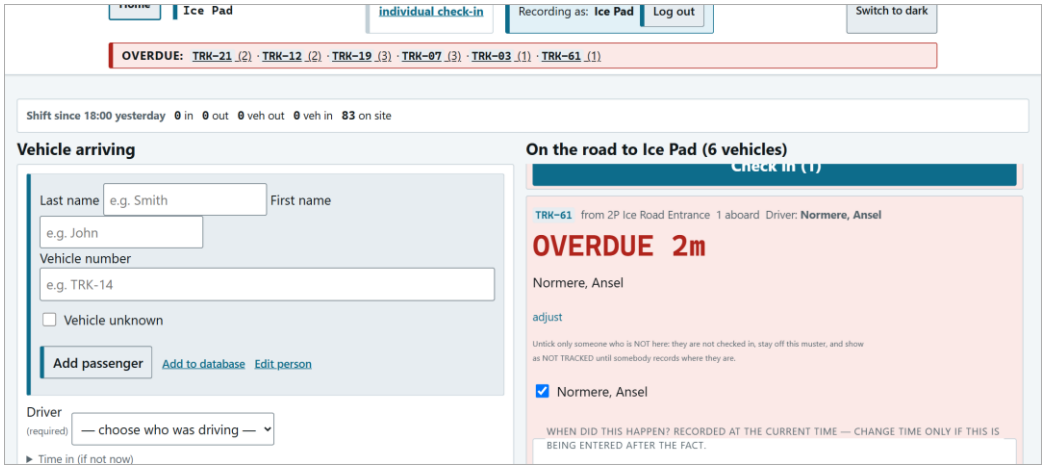


adjust opened for TRK-61.

3. A vehicle nobody told you about (A vehicle has arrived)


For a vehicle that outran the sync, or arrived while the link was down. At the bottom of the console:

1	**Vehicle id** (or Vehicle unknown) and **Came from**.
2	Tick **People aboard**. The whole roster is listed; the likeliest crew (people recorded on site at the post it came from) is at the top. Search hides rows but never unticks anyone.
3	Press **Record arrival - creates one visit per person** and check the count in the pop-up against the people in front of you.

If it matches exactly one open trip it is linked to it automatically; otherwise it goes to review - the system never guesses.

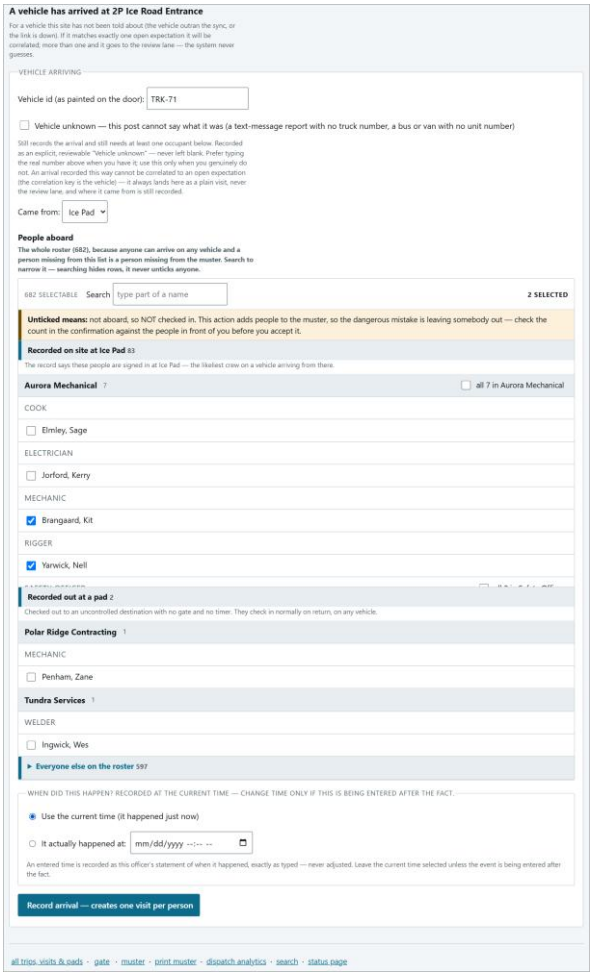

The arrival form filled in.

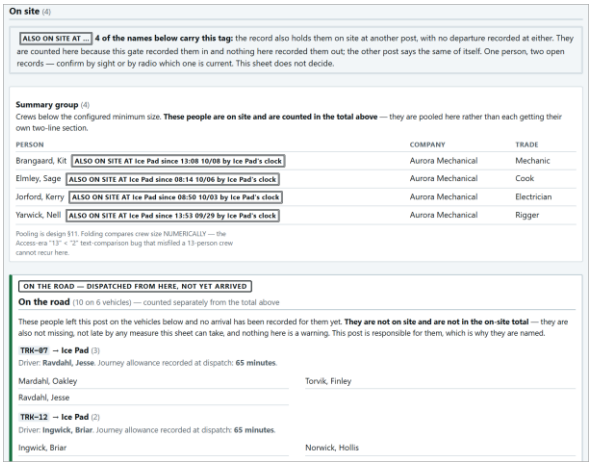


The people now on site.

People who were never signed out at the post they came from will show **"ALSO ON SITE AT <post>"** at both posts - confirm by sight or radio which is current, then sign them out at the other post.

4. It turned back


If a vehicle returns to the post it left from without reaching its destination, press **Arrived back here - it turned back; check in everyone not marked** on its Outbound card. The trip closes as RETURNED, the people are back on this post's muster, and any alert clears at both posts.

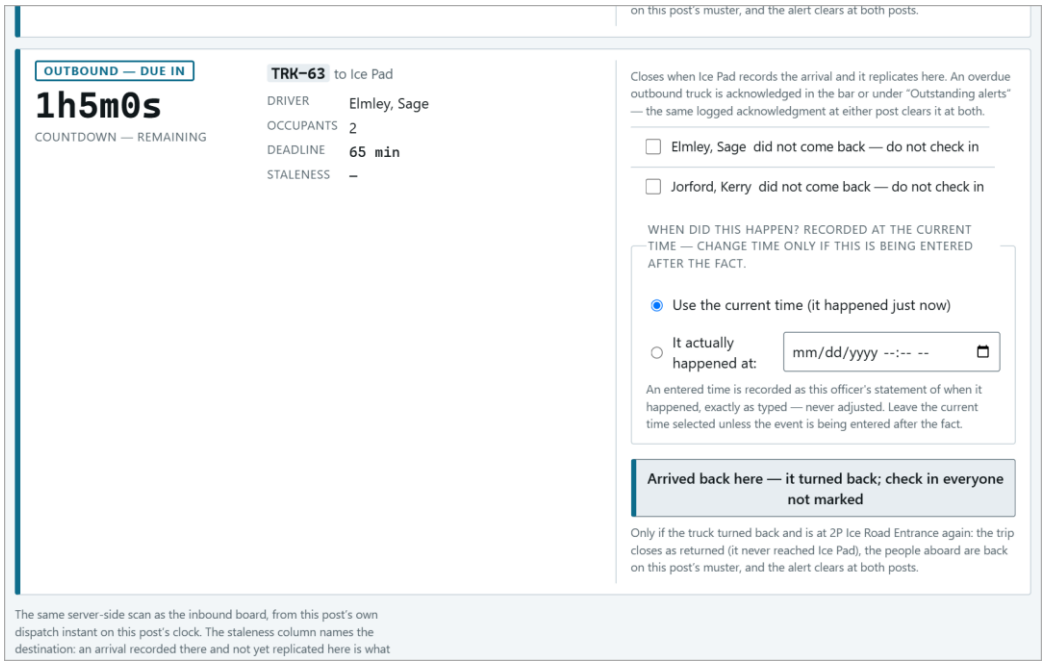

TRK-63 on its way to Ice Pad - before.




Muster before: TRK-63 On the road.

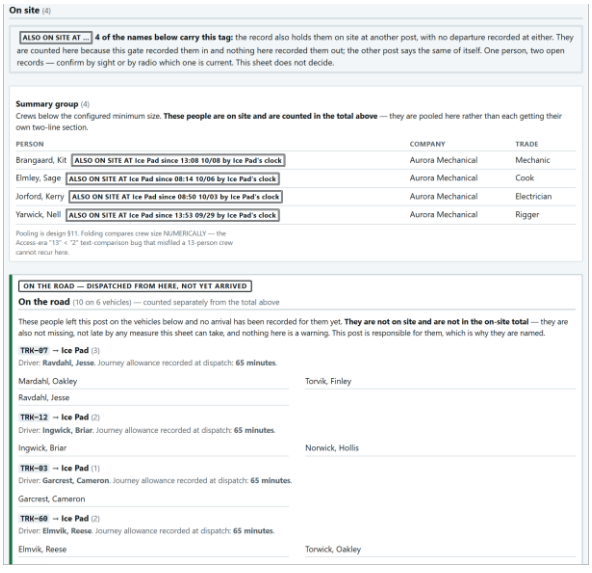

Muster after: both people back on site.

Overdue Vehicles

When a deadline passes with no arrival recorded, a **red OVERDUE bar** appears on every page at **both posts**, naming each vehicle and how many are aboard.

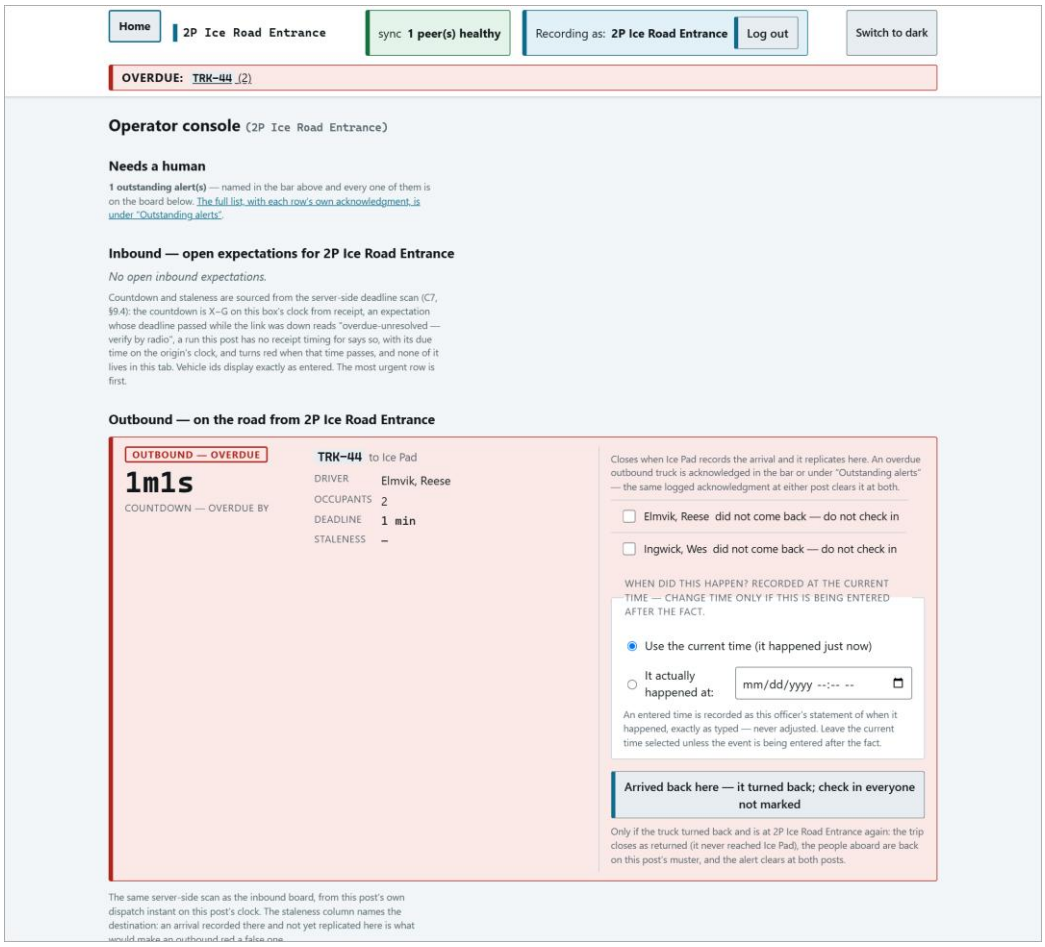


An overdue Outbound card - counting up.


1	**Find the vehicle** - radio the driver and the other post.
2	If it has arrived but was not recorded: the receiving post records the arrival (that closes it everywhere).
3	If it turned back: the sending post presses **Arrived back here - it turned back**.
4	Once you are dealing with it: under **Outstanding alerts** press **Acknowledge (logged)**.

Acknowledging

Acknowledging takes the vehicle off the red bar **at both posts** and logs who did it and when. It does **not** close the trip - the card stays, marked "ACKNOWLEDGED BY <post>", until the arrival is recorded. Pressed by mistake? **Un-acknowledge (logged) - put this alert back**.

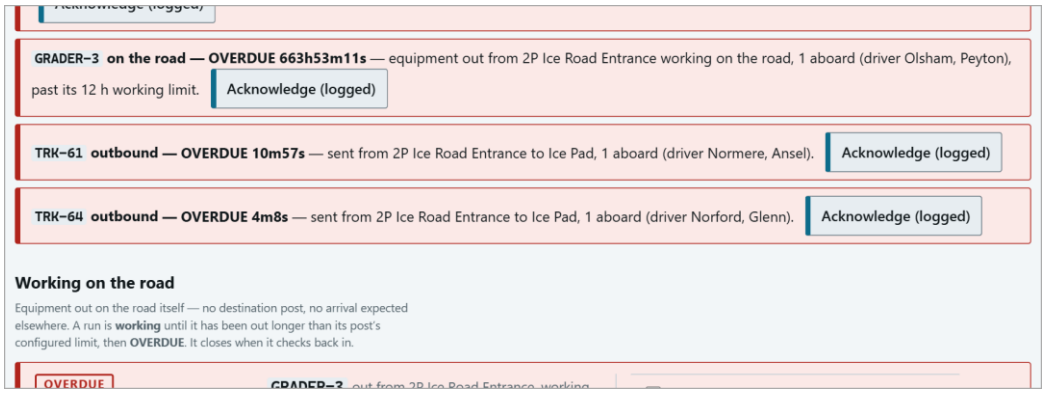


Outstanding alerts: TRK-61 - OVERDUE, with Acknowledge (logged).

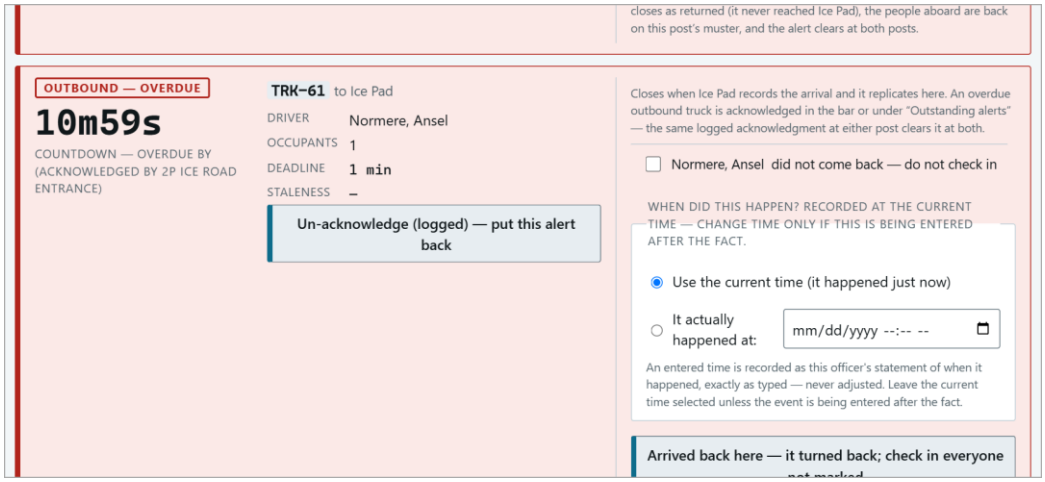

After: COUNTDOWN - OVERDUE BY (ACKNOWLEDGED BY 2P ICE ROAD ENTRANCE).

Overdue history

Reports > **Overdue history** lists every run that went past its deadline: how late, who acknowledged it and when, and how it ended. Acknowledged runs stay "Still open" until the arrival is recorded. Times are UTC.

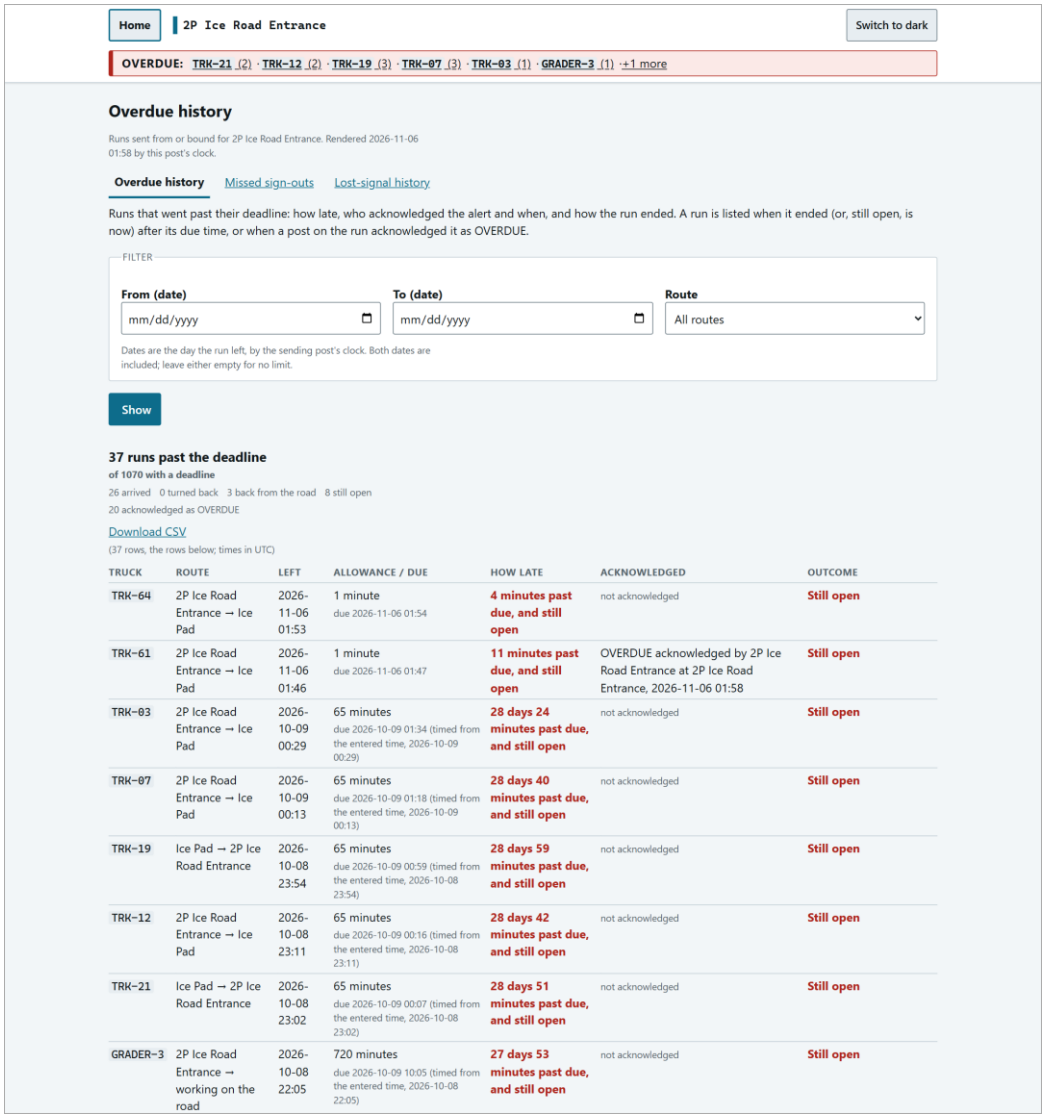


Overdue history, with TRK-61 acknowledged and still open.


When the Signal Is Lost

If a post cannot reach the others, a red **LOST SIGNAL** banner appears and the sync pill turns red. Each post keeps recording; everything catches up when the link returns. For dispatch this means:


Countdowns	Keep running on each post's own clock. A trip can go OVERDUE while the link is down.
STALENESS	Cards and vehicle-page rows show "Last heard from <post>: N minutes ago".
Arrivals	An arrival recorded at the other post will not reach you until the link returns - the card stays open and may turn red. **Verify by radio.**
Vehicles not listed	A vehicle may arrive before its trip reaches you - record it with A vehicle has arrived.
Muster	On the road may be over-stated and Not tracked under-stated until the link returns.

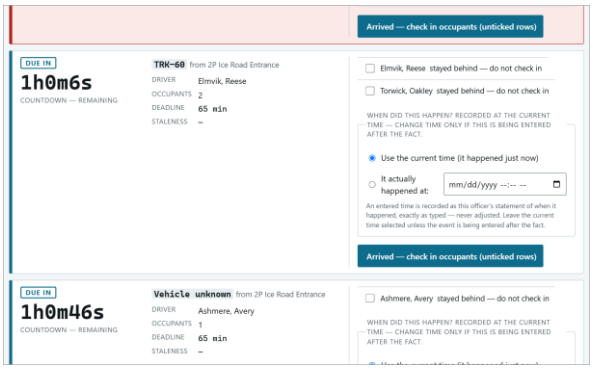


Inbound card: "Last heard from 2P Ice Road Entrance: 1 minute ago".

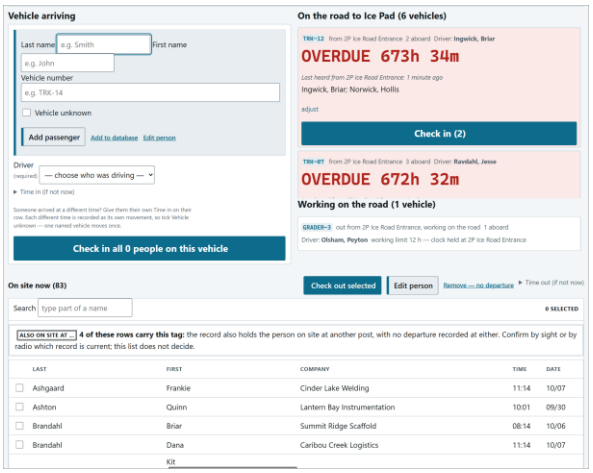

The vehicle page during lost signal.

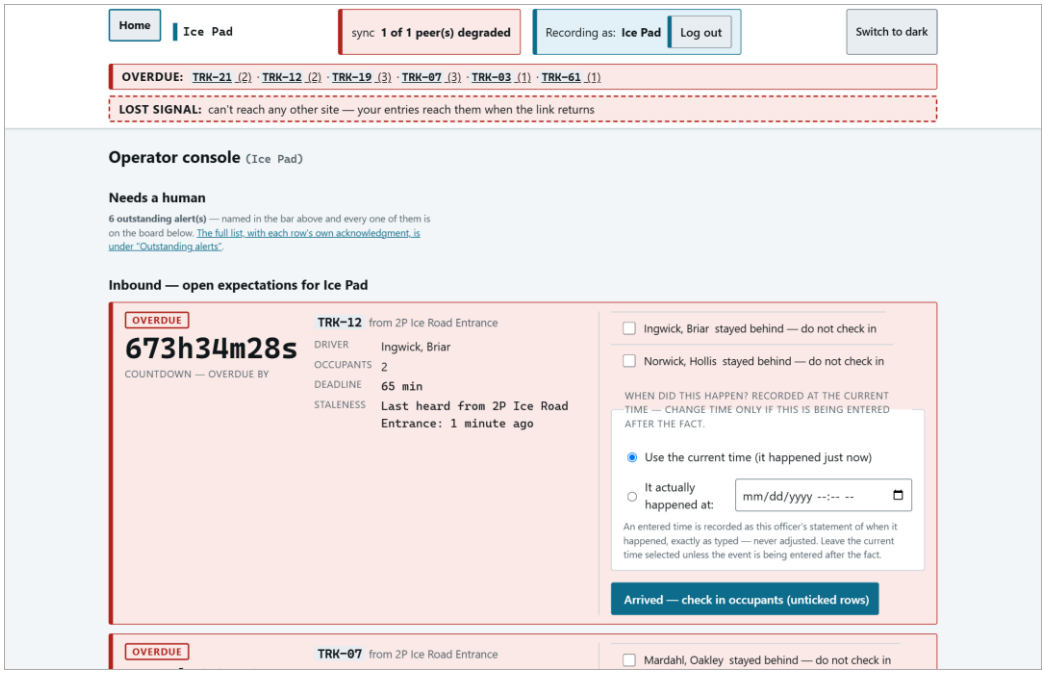

The console with the LOST SIGNAL banner.

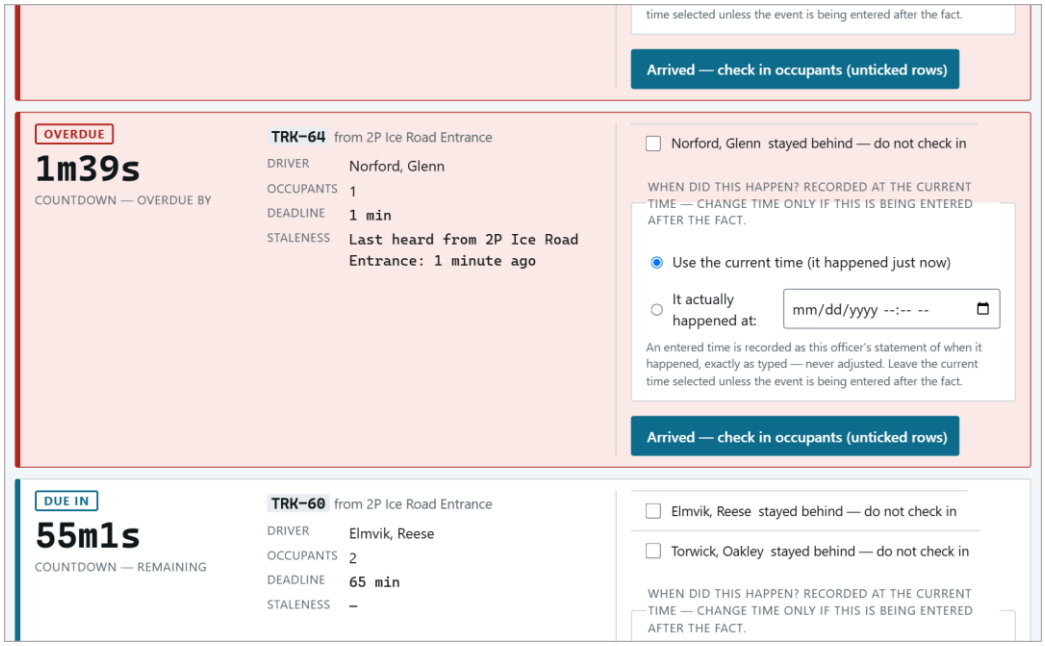


A trip whose deadline passed while the link was down - still shown as OVERDUE. Radio to confirm.


The Muster and Dispatch

The muster keeps the people dispatch is responsible for **separate** from the on-site total:


ON THE ROAD	Dispatched from here, not yet arrived - **named**, and this post's responsibility.
WORKING ON THE ROAD	This post's equipment out working - named.
AWAY AT AN UNCONTROLLED DESTINATION	Out at a pad - counted on screen only, **not on the printed sheet**.
NOT TRACKED	Left off a vehicle on arrival (adjust) or removed by a trip correction - the system cannot say where they are. Find them.

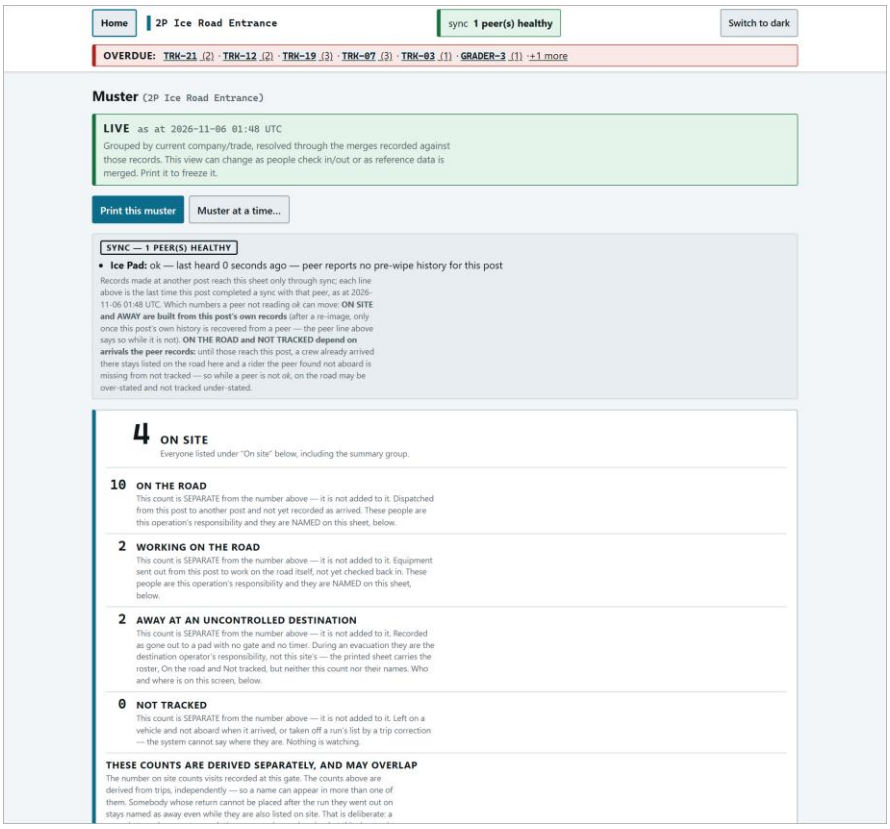

The muster counts at the sending post.

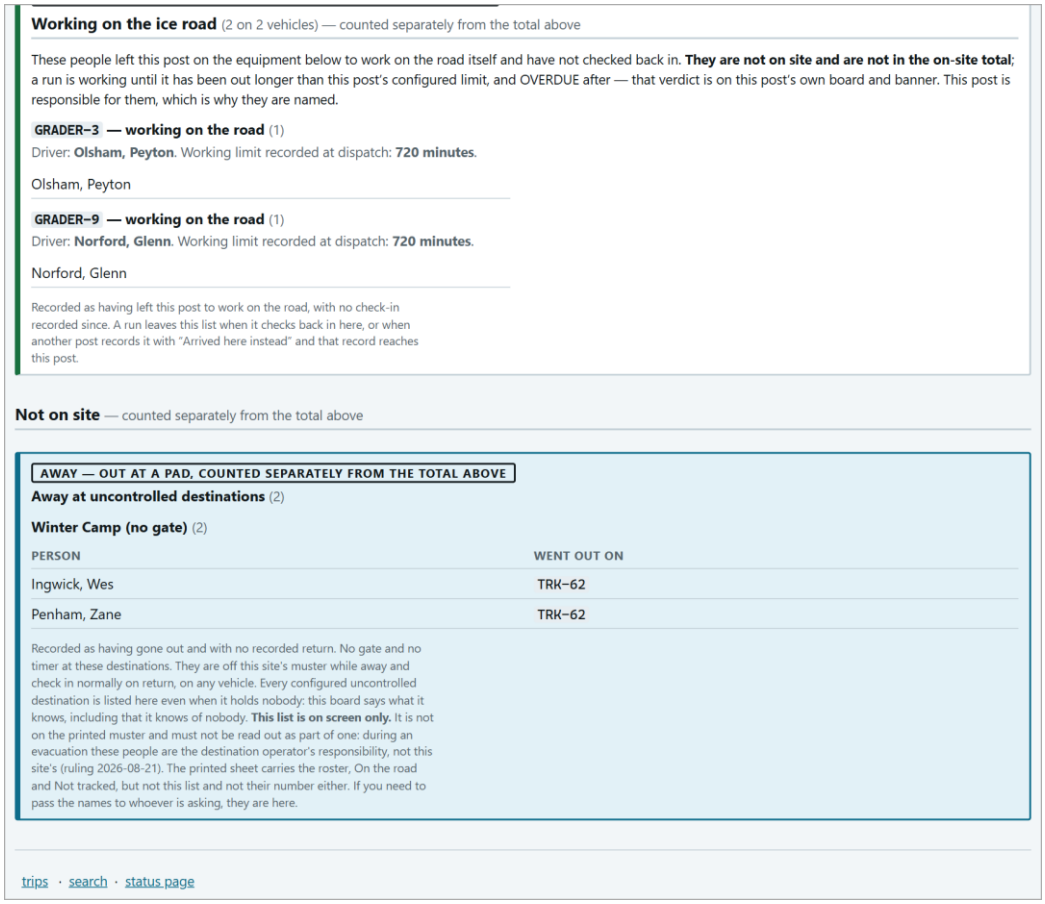


Working on the road and Away at uncontrolled destinations, further down the muster.

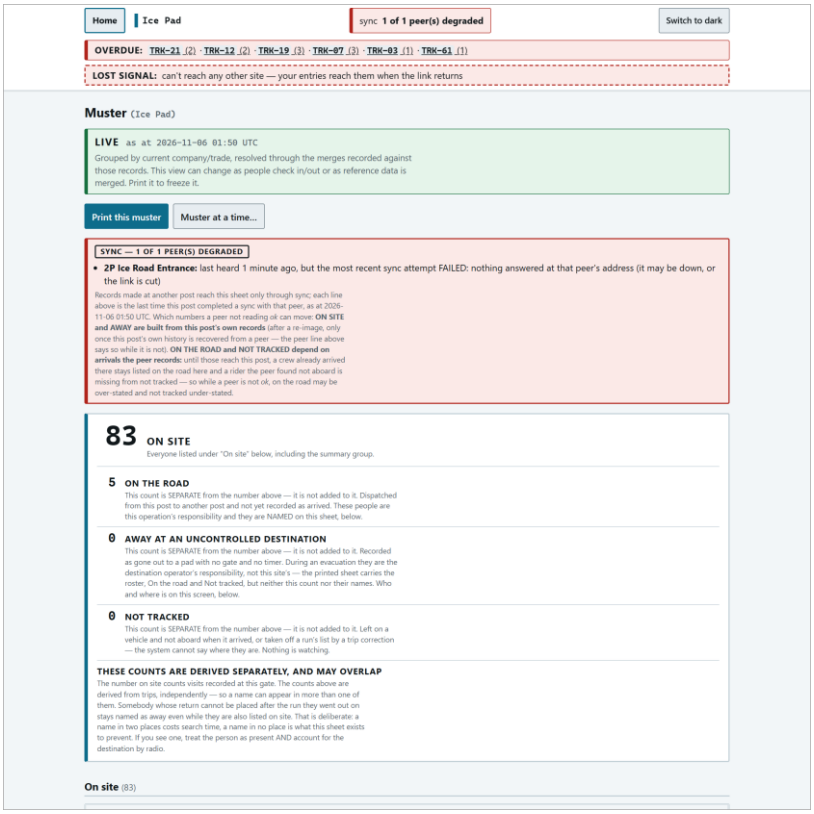

The muster during lost signal: "SYNC - 1 OF 1 PEER(S) DEGRADED".

Trip Records and Corrections


all trips & drivers is the reference and audit view (the console is the working surface). Pick a date range (7 days by default; **<- Previous 7 days** to page back) and download CSVs of the trips or visits.

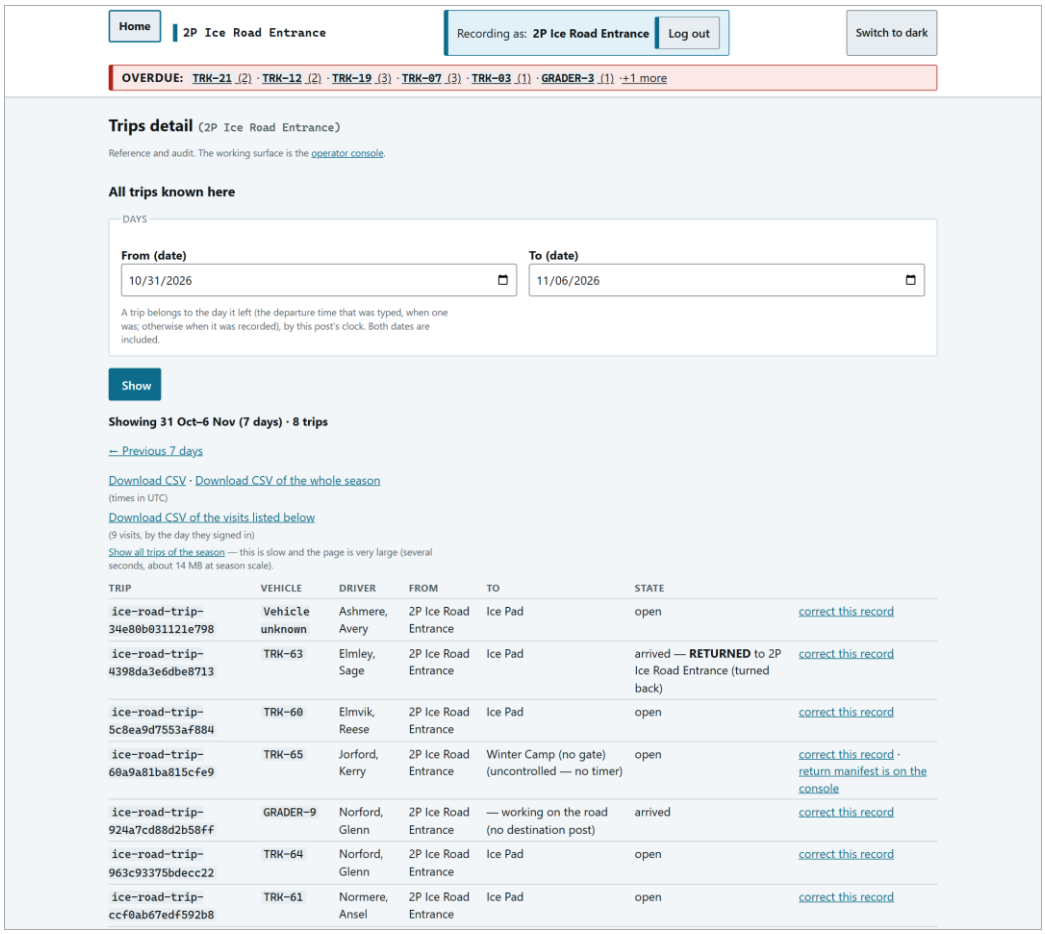

Trips detail: filter, paging and CSV links, and the trip table.

Record chain

For each trip, every fact each post recorded - driver, vehicle, destination, who was aboard. Nothing is ever deleted; corrections appear as extra rows.

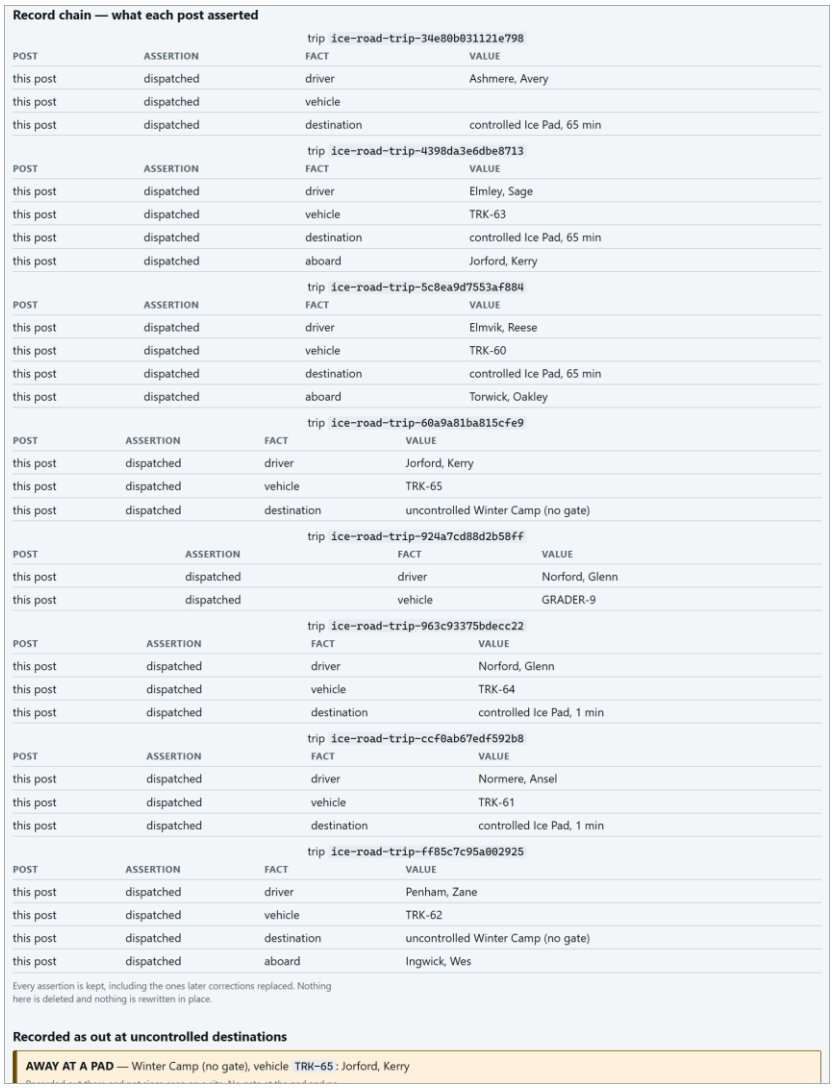

Record chain — what each post asserted

trip `ice-road-trip-34e80b031121e798`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Ashmere, Avery
this post	dispatched	vehicle	
this post	dispatched	destination	controlled Ice Pad, 65 min

trip `ice-road-trip-4398da3e6dbe8713`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Elmley, Sage
this post	dispatched	vehicle	TRK-63
this post	dispatched	destination	controlled Ice Pad, 65 min
this post	dispatched	aboard	Jorford, Kerry

trip `ice-road-trip-5c8ea9d7553af884`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Elmvik, Reese
this post	dispatched	vehicle	TRK-60
this post	dispatched	destination	controlled Ice Pad, 65 min
this post	dispatched	aboard	Torwick, Oakley

trip `ice-road-trip-60a9a81ba815cfe9`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Jorford, Kerry
this post	dispatched	vehicle	TRK-65
this post	dispatched	destination	uncontrolled Winter Camp (no gate)

trip `ice-road-trip-924a7cd88d2b58ff`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Norford, Glenn
this post	dispatched	vehicle	GRADER-9

trip `ice-road-trip-963c93375bdecc22`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Norford, Glenn
this post	dispatched	vehicle	TRK-64
this post	dispatched	destination	controlled Ice Pad, 1 min

trip `ice-road-trip-ccf0ab67edf592b8`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Normere, Ansel
this post	dispatched	vehicle	TRK-61
this post	dispatched	destination	controlled Ice Pad, 1 min

trip `ice-road-trip-ff85c7c95a002925`

POST	ASSERTION	FACT	VALUE
this post	dispatched	driver	Penham, Zane
this post	dispatched	vehicle	TRK-62
this post	dispatched	destination	uncontrolled Winter Camp (no gate)
this post	dispatched	aboard	Ingwick, Wes

Every assertion is kept, including the ones later corrections replaced. Nothing here is deleted and nothing is rewritten in place.

Recorded as out at uncontrolled destinations

AWAY AT A PAD — Winter Camp (no gate), vehicle `TRK-65` : Jorford, Kerry

Record chain - what each post asserted.



Recorded as out at uncontrolled destinations

AWAY AT A PAD — Winter Camp (no gate), vehicle `TRK-65` : Jorford, Kerry

Recorded out there and not since seen on a site. No gate at the pad and no timer — verify by radio if it matters right now. They check in normally on return, any vehicle.


Visits

PERSON	SITE	COMPANY (AT CHECK-IN)	TRADE (AT CHECK-IN)	STATUS
Brangaard, Kit	2P Ice Road Entrance	Aurora Mechanical	Mechanic	on site
Elmley, Sage	2P Ice Road Entrance	Aurora Mechanical	Cook	on site
Norford, Glenn	2P Ice Road Entrance	Whiteout Safety Systems	Surveyor	checked out
Jorford, Kerry	2P Ice Road Entrance	Aurora Mechanical	Electrician	checked out
Yarwick, Nell	2P Ice Road Entrance	Aurora Mechanical	Rigger	on site


Recorded as out at uncontrolled destinations.

Correcting a trip

Click **correct this record** on the trip. Fill in only what changes (driver, who was aboard after all, who to remove, vehicle, destination, allowance, cargo note) and press **Correct this record**. People are entered by **person id** (listed on the page). Vehicle, destination and allowance can only be corrected **after the trip has arrived**.

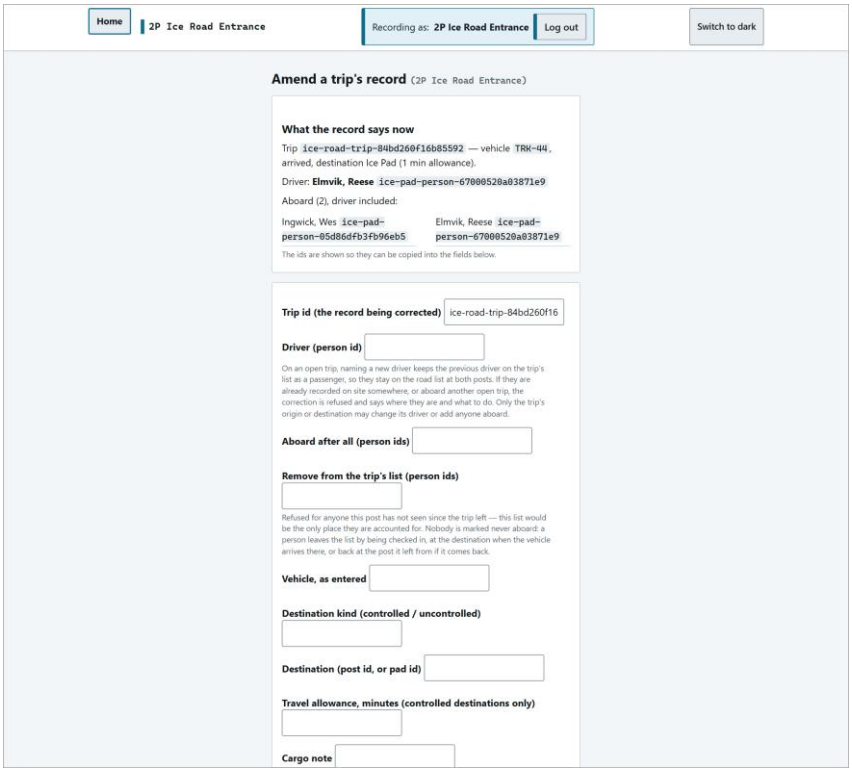


The trip correction form.

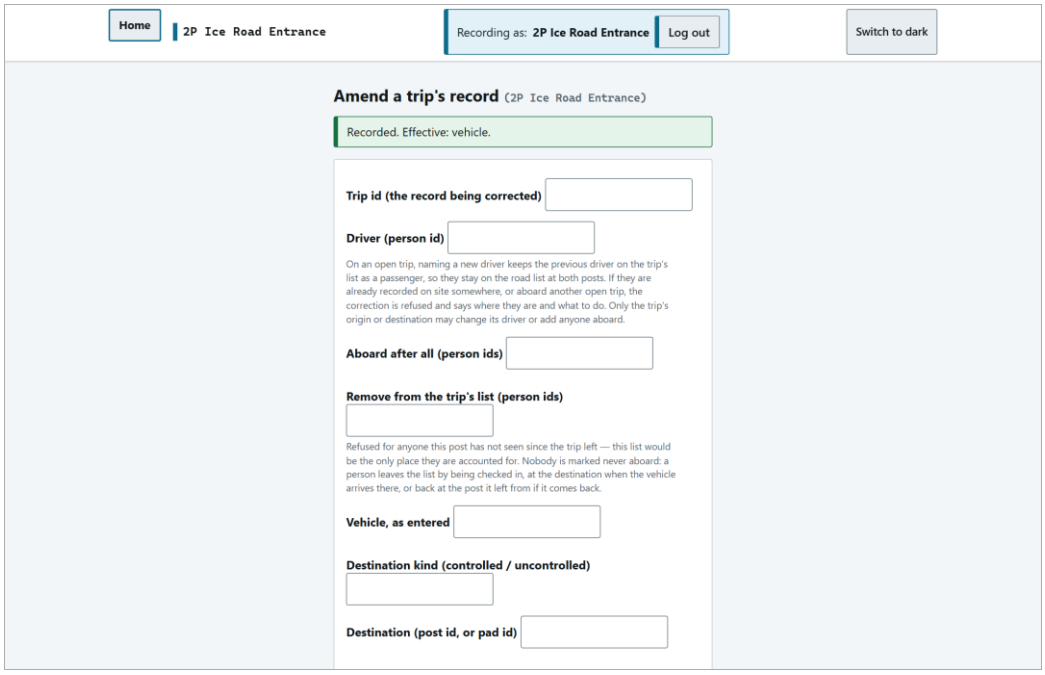


"Recorded. Effective: vehicle."

Reports and Analytics

dispatch analytics shows every post at a glance and refreshes every 60 seconds: persons on site, trips dispatched today / this season, in transit now, overdue now, working on the road, and signal to each post. A red **STALE DATA** notice names posts this one cannot currently vouch for.

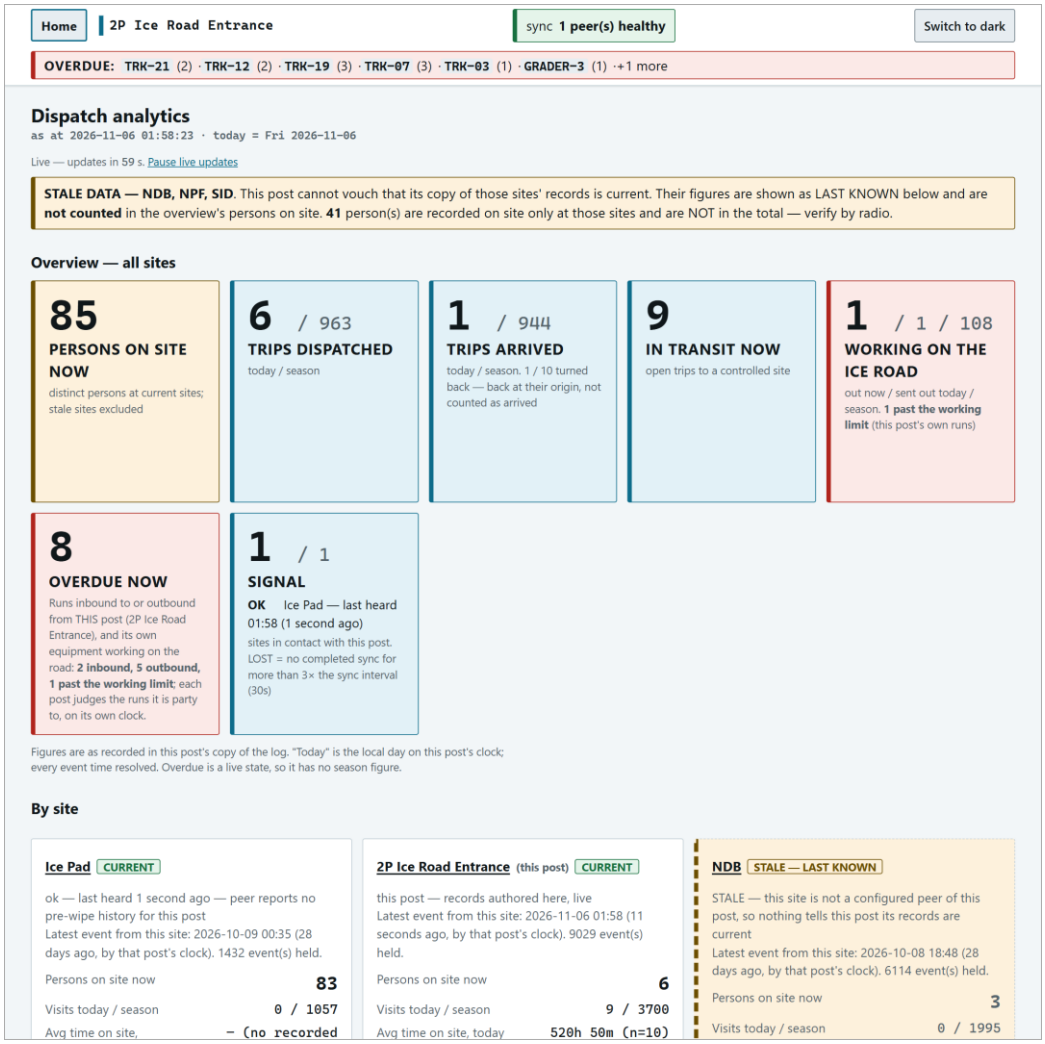

Dispatch analytics with trips in transit and overdue.

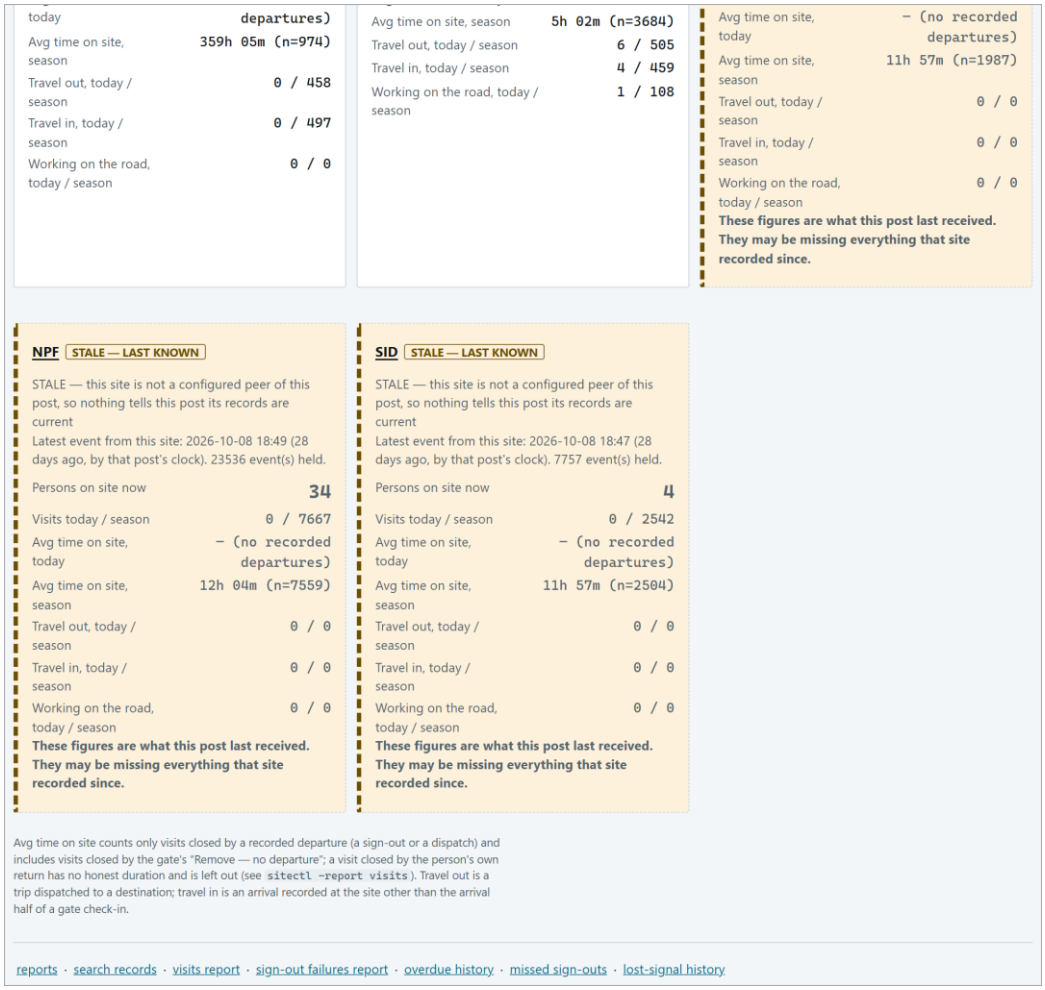

Analytics - per-site cards (CURRENT / STALE - LAST KNOWN).

Overdue history	Every late run, who acknowledged, the outcome. CSV.
Missed sign-outs	People whose visit was only closed by their next return, with repeat flags.
Lost-signal history	Every outage by date and post.

Troubleshooting

Situation	What to do
"a trip with a destination requires a deadline" (gate)	Open Deadline: not set (change) and enter the minutes. The gate never fills it in.
"NOT RECORDED - destination ... is uncontrolled"	Clear the Deadline box - uncontrolled runs take no deadline.
Dispatch refused / nobody as driver	Pick a driver - nobody is pre-selected - and tick them in Other occupants too.
Driver not in the list	They are not recorded on site here. Check them in at the gate first.
Nothing happened after a button	Success is silent. Look for the card to move or appear, or check the muster.
Someone was not checked in on arrival	Their box was ticked (ticked = left out), or they lack the post's orientation (NOT ENTERED - NO ORIENTATION).
Red OVERDUE bar	Radio; record the arrival or turn-back if it happened; Acknowledge (logged).
Acknowledged but the card is still there	Correct - it stays until the arrival is recorded.
Outbound card won't close	The receiving post must record the arrival, and it must sync back. Check the signal.
"ALSO ON SITE AT <post>"	Someone arrived unlisted while still signed in elsewhere. Confirm, then sign them out at the other post.
Names under NOT TRACKED	Someone was left off on arrival. Find them and record where they are.
Times differ between screens	Muster and history are UTC; the gate and console use the post's local clock.

Quick Reference

Send a vehicle	Console > A vehicle is leaving > vehicle, driver, occupants (incl. driver) > destination button > OK
Gated trip	Deadline minutes (blank = normal time on the console; required at the gate)
Pad (no gate)	Deadline EMPTY > Record run to <pad> > returns via Back from a pad
Road work	Working on the ice road > Back from the road when it returns
Expected arrival	Vehicle page > open row > Check in (N)
Some missing	Overdue row > adjust > untick only who is not here
Unlisted arrival	Console > A vehicle has arrived > tick people > Record arrival
Turned back	Outbound card > Arrived back here - it turned back
OVERDUE	Radio > record arrival / turn-back > Acknowledge (logged)
Lost signal	Keep working; verify by radio; it catches up
Fix a trip	all trips & drivers > correct this record (person ids)
Tick boxes	Always mean LEAVE OUT

Supervisor contact: _____