
## MODEL 211.004 /006 /016 /026 /028 /042 /043 /061 /065 /070 /076 /080 /082 /083 /206 /216 /226 /242 /243 /261 /265 /270 /276 /280 /282 /283

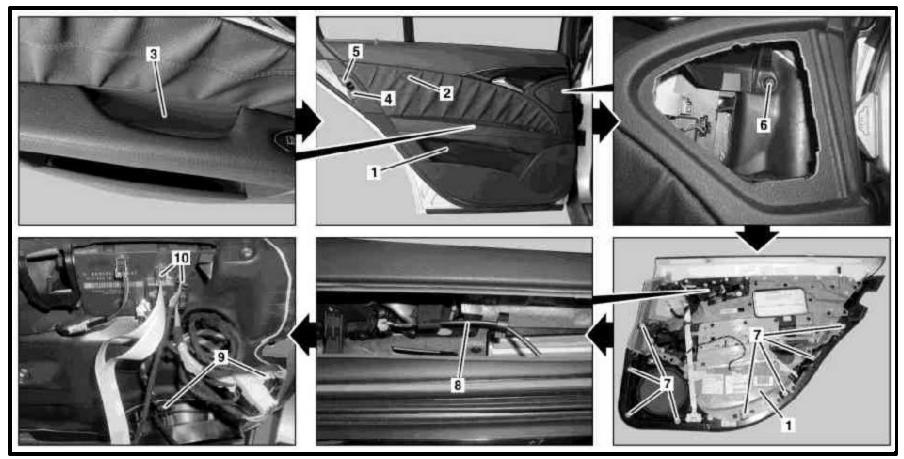

P72.12-2193-09

- Door lining
- Cover
- Bolt

- Door lock cover 5
- Bolt
- Clips


8 Control cable

10

Electrical connectors


Electrical connectors

X XRemove/Install AR54.10-P-0003T Disconnect ground line of battery Model 211.0 AR54.10-P-0003TA Model 211.2 AR72.12-P-1041T Remove ashtray in rear doorŸ^ "Ÿ^ Unclip cover (2) from door lining (1) and unscrew bolt underneath  $oxed{i}$  Two bolts are located below the cover (3). Unclip cover (3) with assembly wedge and and unscrew bolts underneath \*110589035900 8 Unscrew bolt (4) and remove door lock cover (5) Unscrew bolt (6) With assembly wedge unclip door lining (1) at clips (7) from 3 \*110589035900 reardoor i Installation: Replace damaged clips (7). Unhook Bowden cable (8) 9 Separate electrical connectors (9, 10) and remove door lining (1) 10 Install in the reverse order

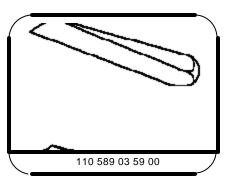

Assembly wedge

## MODEL 211.004 /006 /016 /026 /028 /042 /043 /061 /065 /070 /076 /080 /082 /083 /206 /216 /226 /242 /243 /261 /265 /270 /276 /280 /282 /283

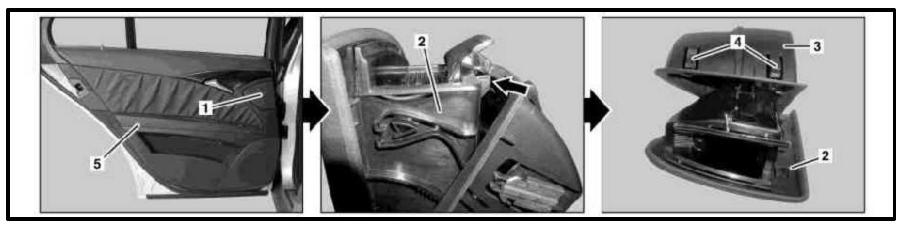

P68.20-2563-07

1 Ashtray 2 Flap 3 Ashtray housing4 Catch hook

Install in the reverse order

5 Door lining

i Installation: Ashtray housing (3) must latch noticeably

X	Remove/Install		
1	Open ashtray (1) and take out ashtray insert		
2	Unlock flap (2) on catch hook (arrow)		
3	lining (5) and remove	i When unclipping the ashtray housing (3) simultaneously pry off ashtray housing (3) carefully from the door lining (5) with an assembly wedge.	

in the door lining (5).