

Technical topics

Evaluation software

Community

Events

Data alignment: Straighten up and fly right

Align your data for speed and correctness

Jonathan Rentzsch (jon.dw@redshed.net), President, Red Shed Software

Summary: Data alignment is an important issue for all programmers who directly use memory. Data alignment affects how well your software performs, and even if your software runs at all. As this article illustrates, understanding the nature of alignment can also explain some of the "weird" behaviors of some processors.

Date: 08 Feb 2005 **Level:** Introductory

Activity: 45619 views

Comments: 0 (View | Add comment - Sign in)

♠ ♠ ♠ ♠ ♠ Average rating (239 votes)

Rate this article

Memory access granularity

Programmers are conditioned to think of memory as a simple array of bytes. Among C and its descendants, char* is ubiquitous as meaning "a block of memory", and even Java™ has its byte[] type to represent raw memory.

Figure 1. How programmers see memory



However, your computer's processor does not read from and write to memory in byte-sized chunks. Instead, it accesses memory in two-, four-, eight- 16- or even 32-byte chunks. We'll call the size in which a processor accesses memory its *memory access granularity*.

Figure 2. How processors see memory



The difference between how high-level programmers think of memory and how modern processors actually work with memory raises interesting issues that this article explores.

If you don't understand and address alignment issues in your software, the following scenarios, in increasing order of severity, are all possible:

- Your software will run slower.
- Your application will lock up.
- Your operating system will crash.
- Your software will silently fail, yielding incorrect results.

Alignment fundamentals

To illustrate the principles behind alignment, examine a constant task, and how it's affected by a processor's memory access granularity. The task is simple: first read four bytes from address 0 into the processor's register. Then read four bytes from address 1 into the same register.

First examine what would happen on a processor with a one-byte memory access granularity:

Figure 3. Single-byte memory access granularity



This fits in with the naive programmer's model of how memory works: it takes the same four memory accesses to read from address 0 as it does from address 1. Now see what would happen on a processor with two-byte granularity, like the original 68000:

Figure 4. Double-byte memory access granularity



When reading from address 0, a processor with two-byte granularity takes half the number of memory accesses as a processor with one-byte granularity. Because each memory access entails a fixed amount overhead, minimizing the number of accesses can really help performance.

However, notice what happens when reading from address 1. Because the address doesn't fall evenly on the processor's memory access boundary, the processor has extra work to do. Such an address is known as an *unaligned address*. Because address 1 is unaligned, a processor with two-byte granularity must perform an extra memory access, slowing down the operation.

Finally, examine what would happen on a processor with four-byte memory access granularity, like the 68030 or PowerPC® 601:

Figure 5. Quad-byte memory access granularity




A processor with four-byte granularity can slurp up four bytes from an aligned address with one read. Also note that reading from an unaligned address doubles the access count.

Now that you understand the fundamentals behind aligned data access, you can explore some of the issues related to alignment.

Lazy processors

A processor has to perform some tricks when instructed to access an unaligned address. Going back to the example of reading four bytes from address 1 on a processor with four-byte granularity, you can work out exactly what needs to be done:

Figure 6. How processors handle unaligned memory access

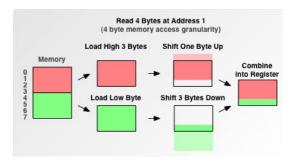

The processor needs to read the first chunk of the unaligned address and shift out the "unwanted" bytes from the first chunk. Then it needs to read the second chunk of the unaligned address and shift out some of its information. Finally, the two are merged together for placement in the register. It's a lot of work.

Some processors just aren't willing to do all of that work for you.

The original 68000 was a processor with two-byte granularity and lacked the circuitry to cope with unaligned addresses. When presented with such an address, the processor would throw an exception. The original Mac OS didn't take very kindly to this exception, and would usually demand the user restart the machine. Ouch.

Later processors in the 680x0 series, such as the 68020, lifted this restriction and performed the necessary work for you. This explains why some old software that works on the 68020 crashes on the 68000. It also explains why, way back when, some old Mac coders initialized pointers with odd addresses. On the original Mac, if the pointer was accessed without being reassigned to a valid address, the Mac would immediately drop into the debugger. Often they could then examine the calling chain stack and figure out where the mistake was.

All processors have a finite number of transistors to get work done. Adding unaligned address access support cuts into this "transistor budget." These transistors could otherwise be used to make other portions of the processor work faster, or add new functionality altogether.

An example of a processor that sacrifices unaligned address access support in the name of speed is MIPS. MIPS is a great example of a processor that does away with almost all frivolity in the name of getting real work done faster.

The PowerPC takes a hybrid approach. Every PowerPC processor to date has hardware support for unaligned 32-bit integer access. While you still pay a performance penalty for unaligned access, it tends to be small.

On the other hand, modern PowerPC processors lack hardware support for unaligned 64-bit floating-point access. When asked to load an unaligned floating-point number from memory, modern PowerPC processors will throw an exception and have the operating system perform the alignment chores *in software*. Performing alignment in software is *much* slower than performing it in hardware.

Speed

Writing some tests illustrates the performance penalties of unaligned memory access. The test is simple: you read, negate, and write back the numbers in a ten-megabyte buffer. These tests have two variables:

- 1. **The size, in bytes, in which you process the buffer.** First you'll process the buffer one byte at a time. Then you'll move onto two-, four- and eight-bytes at a time.
- 2. **The alignment of the buffer.** You'll stagger the alignment of the buffer by incrementing the pointer to the buffer and running each test again.

These tests were performed on a 800 MHz PowerBook G4. To help normalize performance fluctuations from interrupt processing, each test was run ten times, keeping the average of the runs. First up is the test that operates on a single byte at a time:

Listing 1. Munging data one byte at a time

```
void Munge8( void *data, uint32_t size ) {
   uint8_t *data8 = (uint8_t*) data;
   uint8_t *data8End = data8 + size;
```

```
while( data8 != data8End ) {
    *data8++ = -*data8;
}
```


It took an average of 67,364 microseconds to execute this function. Now modify it to work on two bytes at a time instead of one byte at a time -- which will halve the number of memory accesses:

Listing 2. Munging data two bytes at a time

```
void Munge16( void *data, uint32_t size ) {
    uint16_t *data16 = (uint16_t*) data;
    uint16_t *data16End = data16 + (size >> 1); /* Divide size by 2. */
    uint8_t *data8 = (uint8_t*) data16End;
    uint8_t *data8End = data8 + (size & 0x00000001); /* Strip upper 31 bits. */
    while( data16 != data16End ) {
        *data16++ = -*data16;
    }
    while( data8 != data8End ) {
        *data8++ = -*data8;
    }
}
```

This function took 48,765 microseconds to process the same ten-megabyte buffer -- 38% faster than Munge8. However, that buffer was aligned. If the buffer is unaligned, the time required increases to 66,385 microseconds -- about a 27% speed penalty. The following chart illustrates the performance pattern of aligned memory accesses versus unaligned accesses:

Figure 7. Single-byte access versus double-byte access

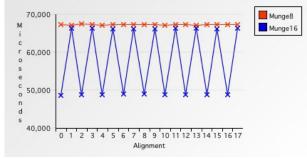

The first thing you notice is that accessing memory one byte at a time is uniformly slow. The second item of interest is that when accessing memory two bytes at a time, whenever the address is not evenly divisible by two, that 27% speed penalty rears its ugly head.


Now up the ante, and process the buffer four bytes at a time:

Listing 3. Munging data four bytes at a time

```
void Munge32( void *data, uint32_t size ) {
    uint32_t *data32 = (uint32_t*) data;
    uint32_t *data32End = data32 + (size >> 2); /* Divide size by 4. */
    uint8_t *data8 = (uint8_t*) data32End;
    uint8_t *data8End = data8 + (size & 0x000000003); /* Strip upper 30 bits. */
    while( data32 != data32End ) {
        *data32++ = -*data32;
    }
    while( data8 != data8End ) {
        *data8++ = -*data8;
    }
}
```

This function processes an aligned buffer in 43,043 microseconds and an unaligned buffer in 55,775 microseconds, respectively. Thus, on this test machine, accessing unaligned memory four bytes at a time is *slower* than accessing aligned memory two bytes at a time:

Figure 8. Single- versus double- versus quad-byte access

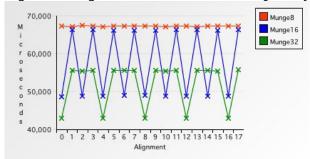

Now for the horror story: processing the buffer eight bytes at a time.


Listing 4. Munging data eight bytes at a time

```
void Munge64( void *data, uint32_t size ) {
   double *data64 = (double*) data;
   double *data64End = data64 + (size >> 3); /* Divide size by 8. */
   uint8_t *data8 = (uint8_t*) data64End;
   uint8_t *data8End = data8 + (size & 0x00000007); /* Strip upper 29 bits. */
   while( data64 != data64End ) {
        *data64++ = -*data64;
   }
   while( data8 != data8End ) {
        *data8++ = -*data8;
   }
}
```

Munge64 processes an aligned buffer in 39,085 microseconds -- about 10% faster than processing the buffer four bytes at a time. However, processing an unaligned buffer takes an amazing 1,841,155 microseconds -- two orders of magnitude slower than aligned access, an outstanding 4,610% performance penalty!

What happened? Because modern PowerPC processors lack hardware support for unaligned floating-point access, the processor throws an exception *for each unaligned access*. The operating system catches this exception and performs the alignment in software. Here's a chart illustrating the penalty, and when it occurs:

Figure 9. Multiple-byte access comparison

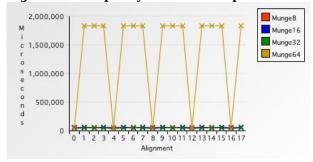

The penalties for one-, two- and four-byte unaligned access are dwarfed by the horrendous unaligned eight-byte penalty. Maybe this chart, removing the top (and thus the tremendous gulf between the two numbers), will be clearer:


Munge 16 Munge32 Munge64 50.000 40.000

8 9 10 11 12 13 14 15 16 17

Figure 10. Multiple-byte access comparison #2

There's another subtle insight hidden in this data. Compare eight-byte access speeds on four-byte boundaries:



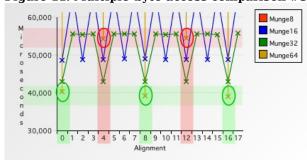

Notice accessing memory eight bytes at a time on four- and twelve- byte boundaries is slower than reading the same memory four or even two bytes at a time. While PowerPCs have hardware support for four-byte aligned eight-byte doubles, you still pay a performance penalty if you use that support. Granted, it's no where near the 4,610% penalty, but it's certainly noticeable. Moral of the story: accessing memory in large chunks can be slower than accessing memory in small chunks, if that access is not aligned.

Atomicity

All modern processors offer atomic instructions. These special instructions are crucial for synchronizing two or more concurrent tasks. As the name implies, atomic instructions must be indivisible -- that's why they're so handy for synchronization: they can't be preempted.

It turns out that in order for atomic instructions to perform correctly, the addresses you pass them must be at least four-byte aligned. This is because of a subtle interaction between atomic instructions and virtual memory.

If an address is unaligned, it requires at least two memory accesses. But what happens if the desired data spans two pages of virtual memory? This could lead to a situation where the first page is resident while the last page is not. Upon access, in the middle of the instruction, a page fault would be generated, executing the virtual memory management swap-in code, destroying the atomicity of the instruction. To keep things simple and correct, both the 68K and PowerPC require that atomically manipulated addresses always be at least four-byte aligned.

Unfortunately, the PowerPC does not throw an exception when atomically storing to an unaligned address. Instead, the store simply always fails. This is bad because most atomic functions are written to retry upon a failed store, under the assumption they were preempted. These two circumstances combine to where your program will go into an infinite loop if you attempt to atomically store to an unaligned address. Oops.

Altivec

Altivec is all about speed. Unaligned memory access slows down the processor and costs precious transistors. Thus, the Altivec engineers took a page from the MIPS playbook and simply don't support unaligned memory

access. Because Altivec works with sixteen-byte chunks at a time, all addresses passed to Altivec must be sixteen-byte aligned. What's scary is what happens if your address is not aligned.

Altivec won't throw an exception to warn you about the unaligned address. Instead, Altivec simply ignores the lower four bits of the address and charges ahead, *operating on the wrong address*. This means your program may silently corrupt memory or return incorrect results if you don't explicitly make sure all your data is aligned.

There is an advantage to Altivec's bit-stripping ways. Because you don't need to explicitly truncate (align-down) an address, this behavior can save you an instruction or two when handing addresses to the processor.

This is not to say Altivec can't process unaligned memory. You can find detailed instructions how to do so on the *Altivec Programming Environments Manual* (see Resources). It requires more work, but because memory is so slow compared to the processor, the overhead for such shenanigans is surprisingly low.

Structure alignment

Examine the following structure:

Listing 5. An innocent structure

```
void Munge64( void *data, uint32_t size ) {
typedef struct {
   char    a;
   long   b;
   char   c;
} Struct;
```

What is the size of this structure in bytes? Many programmers will answer "6 bytes." It makes sense: one byte for a, four bytes for b and another byte for c. 1 + 4 + 1 equals 6. Here's how it would lay out in memory:

Field Type	Field Name	Field Offset	Field Size	Field End
char	а	0	1	1
long	b	1	4	5
char	С	5	1	6
	6			

However, if you were to ask your compiler to <code>sizeof(Struct)</code>, chances are the answer you'd get back would be greater than six, perhaps eight or even twenty-four. There's two reasons for this: backwards compatibility and efficiency.

First, backwards compatibility. Remember the 68000 was a processor with two-byte memory access granularity, and would throw an exception upon encountering an odd address. If you were to read from or write to field b, you'd attempt to access an odd address. If a debugger weren't installed, the old Mac OS would throw up a System Error dialog box with one button: Restart. Yikes!

So, instead of laying out your fields just the way you wrote them, the compiler padded the structure so that b and c would reside at even addresses:

Field Type	Field Name	Field Offset	Field S	ize	Field End
char	а		0	1	1
padding			1	1	2
long	b		2	4	6
char	С		6	1	7
padding			7	1	8
			Total	Size in Bytes:	8

Padding is the act of adding otherwise unused space to a structure to make fields line up in a desired way. Now, when the 68020 came out with built-in hardware support for unaligned memory access, this padding was

unnecessary. However, it didn't hurt anything, and it even helped a little in performance.

The second reason is efficiency. Nowadays, on PowerPC machines, two-byte alignment is nice, but four-byte or eight-byte is better. You probably don't care anymore that the original 68000 choked on unaligned structures, but you probably care about potential 4,610% performance penalties, which can happen if a double field doesn't sit aligned in a structure of your devising.

Conclusion

If you don't understand and explicitly code for data alignment:

- Your software may hit performance-killing unaligned memory access exceptions, which invoke very
 expensive alignment exception handlers.
- Your application may attempt to atomically store to an unaligned address, causing your application to lock up.
- Your application may attempt to pass an unaligned address to Altivec, resulting in Altivec reading from and/or writing to the wrong part of memory, silently corrupting data or yielding incorrect results.

Credits

Thanks to Alex Rosenberg and Ian Ollmann for feedback, Matt Slot for his FastTimes timing library, and Duane Hayes for providing a bevy of testing machines.

Resources

- If you're interested in learning more about atomicity, be sure to check out Save your code from meltdown using PowerPC atomic instructions (developerWorks, November 2004).
- The PowerPC Microprocessor Family: AltiVec(TM) Technology Programming Environments Manual is available as a PDF from the IBM Microelectronics Technical Library.
- GCC has a number of extensions relating to alignment; more information can be found in the GCC documentation (this copy courtesy Apple's developer documentation).
- Dan Bernstein comments on PPC alignment and tricks for making GCC do the right thing.
- Alignment is one of many things a developer might want to know about Power Architecture; developerWorks ran a developer's guide to the POWER architecture, which gives pointers to other related issues (developerWorks, March 2004).
- In some cases, even larger alignments might be useful; John R. Mashey wrote Usenet articles addressing questions such as cache line or page size alignment.
- Alignment is one of many issues you can face in multithreaded code, or device drivers, using shared storage on POWER systems. Learn more about the PowerPC storage model (developerWorks, August 2002).
- To learn more about GNU GCC on all sorts of different platforms, see Links and Selected Readings.
- For more on PPC programming, see PowerPC Compiler Writer's Guide.
- IBM has published two tips on Porting IA32 applications to 32-bit Linux on POWER and Porting Intel applications to 64 bit Linux on POWER (developerWorks, June 2003).
- Much more detail on 64-bit PowerPC can be found in the 64-bit PowerPC ELF Application Binary Interface Supplement.
- For something more in the middle of those two extremes, see <u>Understanding 64-bit PowerPC architecture</u> (developerWorks, October 2004); the HTML-formatted <u>Making the transition to 64 bit</u> (developerWorks, October 2004) is an excerpt from the longer, but PDF-formatted Microelectronics Technical Library

Application Note, Developing Embedded Software For The IBM PowerPC 970FX Processor.

- A C coder, are you? You might also be interested in Use reentrant functions for safer signal handling (developerWorks, January 2005) describes how and when to employ reentrancy; and in David Wheeler's Secure programmer columns on the developerWorks Linux zone.
- Inside the IBM PowerPC 970 Part I: Design Philosophy and Front End is very useful if you would like to learn more about the processor itself; Part II: The Execution Core goes into Altivec in some detail. SIMD architectures are discussed in 3 1/2 SIMD Architectures and in and The Pentium 4 and the G4e: an architectural comparison (all Ars Technica).
- Have experience you'd be willing to share with Power Architecture zone readers? Article submissions on all aspects of Power Architecture technology from authors inside and outside IBM are welcomed. Check out the Power Architecture author FAQ to learn more.
- Have a question or comment on this story, or on Power Architecture technology in general? Post it in the Power Architecture technical forum or send in a letter to the editors.
- The Power Architecture Community Newsletter includes full-length articles as well as recent news about members of the Power Architecture community and upcoming events of interest. Subscribe to the newsletter today!
- All things Power are chronicled in the developerWorks Power Architecture editors' blog, which is just one
 of many developerWorks blogs.
- Find more articles and resources on Power Architecture technology and all things related in the developerWorks Power Architecture technology content area.
- Download a IBM PowerPC 405 Evaluation Kit to demo a SoC in a simulated environment, or just to explore
 the fully licensed version of Power Architecture technology. This and other fine Power Architecture-related
 downloads are listed in the developerWorks Power Architecture technology content area's downloads
 section.

About the author



Jonathan 'Wolf' Rentzsch runs Red Shed Software, a small Illinois software boutique. He also leads PSIG, a suburban Mac programmer group, and co-hosts CAWUG, a downtown Mac & WebObjects programmer group.

Close [x]

developerWorks: Sign in

If you don't have an IBM ID and password, register here.

IBM ID:

Forgot your IBM ID?

Password:

Forgot your password? Change your password

After sign in: Stay on the current page

Keep me signed in.

By clicking **Submit**, you agree to the developerWorks terms of use.

Submit Cancel

The first time you sign into developerWorks, a **profile** is created for you. **Select information in your developerWorks profile is displayed to the public, but you may edit the information at any time**. Your first name, last name (unless you choose to hide them), and display name will accompany the content that you post.

All information submitted is secure.

Close [x]

Choose your display name

The first time you sign in to developerWorks, a profile is created for you, so you need to choose a display name. Your display name accompanies the content you post on developerWorks.

Please choose a display name between 3-31 characters. Your display name must be unique in the developerWorks community and should not be your email address for privacy reasons.

Display name:

(Must be between 3 - 31 characters.)

By clicking **Submit**, you agree to the developerWorks terms of use.

Submit Cancel

All information submitted is secure.

Average rating (239 votes)

1 star
2 stars
3 stars
4 stars
4 stars
4 stars

5 stars ★ ★ ★ ★ 5 stars

Submit

Add comment:

Sign in or register to leave a comment.

Note: HTML elements are not supported within comments.

Notify me when a comment is added1000 characters left

Post

Be the first to add a comment

Print this page	Share this page	Follow developerWorks			
Technical topics		Evaluation software	Community	About developerWorks	IBM
AIX and UNIX	Java technology	By IBM product	Forums	Site help and feedback	Solutions
IBM i	Linux	By evaluation method	Groups	Contacts	Software
Information	Open source	By industry	Blogs	Article submissions	Software services
Management	SOA and web service	es	Wikis		Support
Lotus	Web development	Events	Terms of use	Related resources	Product information
Rational	XML	Briefings	Report abuse	Students and faculty	Redbooks
Tivoli	More	Webcasts		Business Partners	Privacy
WebSphere		Find events	IBM Champion program		Accessibility
Cloud computing			More		
Industries					
Integrated Service Management					