

SYSTEM SCHEMATICS

A2630

NOVEMBER, 1989

PN-314033-01

 **commodore**
COMPUTERS

SYSTEM SCHEMATICS

A2630

NOVEMBER, 1989

PN-314033-01

Commodore Business Machines, Inc.

1200 Wilson Drive, West Chester, Pennsylvania 19380 U.S.A.

Commodore makes no express or implied warranties with regard to the information contained herein. The information is made available solely on an as is basis, and the entire risk as to completeness, reliability, and accuracy is with the user. Commodore shall not be liable for any damages in connection with the use of the information contained herein. The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty as to quality or suitability of such replacement part. Reproduction or use without express permission, of editorial or pictorial content, in any matter is prohibited.

This manual contains copyrighted and proprietary information. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Commodore Electronics Limited.

Copyright © 1989 by Commodore Electronics Limited.
All

DESCRIPTION

The A2630 68030 based Accelerator Card is an 86 pin Coprocessor Slot expansion card for the Amiga 2000. In addition to a Motorola 68030, the A2630 has an onboard 68882 Floating Point Unit (FPU) which is nominally clocked at the same rate. Provisions are provided on the board for the upgrade to a faster 68881 or 68882 clocked by its own separate crystal oscillator. The 68030 is clocked at nearly four times the 7.16 Mhz of the Amiga 68000 CPU. Additionally, the processor addresses a full 32 bit address range with a true 32 bit data path, doubling the data path of 68000. The A2630 is equipped with 2 or 4 megabytes of 32 bit wide DRAM which is autoconfigured and recognized by the system as standard expansion bus FAST memory. The card is also equipped with 64K of 16 bit ROM which is used for system initialization, diagnostics and system bootup time options.

TECHNICAL SPECIFICATIONS

Processor	Motorola MC68030 clocked at 25Mhz with onboard instruction and data caches and built in memory management unit (MMU).
Coprocessor	Motorola MC68882 floating point math coprocessor clocked at 25Mhz. A 33 MHz MC68881 or MC68882 can be used if the appropriate crystal is placed in U203 and jumpered as the clock for the FPU.
Memory	2 or 4 Megabytes of 32 bit data path, autoconfiguring memory. Memory type is 414256 Zip-style package with speed of 100ns.
ROM	64K by 16 bits for power on initialization.
Card Type	Full-size Amiga 2000 86-pin CPU slot.
Power	Supplied by system.
Compatibility	Compatible with the AmigaDOS operating system and platform engine for AMIX. Compatible with most Amiga application software when the following are avoided: 1) use of upper 8 bits of 68000 addresses for tables 2) use of signed math on addresses 3) use of self-modifying code 4) running code on CPU stack 5) basing time dependent code on CPU speed

JUMPER CONFIGURATION

CLOCK CONFIGURATION JUMPERS

- J200 Generally 2-3 are jumpered to gate -AS instead of delayed -AS
- J202 Crystal Bridge. When in place, CPU crystal also clocks the FPU.
When removed, FPU is clocked by U203. If jumper is removed and FPU is present, crystal must be in U203 to clock FPU or the system will not boot.

SYSTEM CONFIGURATION JUMPERS

- J301 MEG4. With the jumper in place, the system expects 2 megabytes, and removed, the system expects 4 megabytes of DRAM.
- J302 B2000. With this jumper present, the system expects to be installed in an A2000 with 68000 removed. Nominaly, with the jumper absent, the system expects a B2000, and through the mouse engaged bootup menu, can boot the 68000 if desired.
- J303 AUTO. With the jumper absent, the onboard memory is autoconfigured at bootup. If the jumper is present, all onboard DRAM is disabled.
- J304 OSMODE. With the jumper absent, the system autoboots AmigaDOS. If the jumper is present, the system will attempt to autoboot AMIX.

A2630 ACCELERATOR CARD INTERNATIONAL PACKING ASSEMBLIES

312287-01 A2630 2M 25MHZ (U.S.)	312287-06 A2630 4M 25MHZ (U.S.)
363035-03 BULK PACKING BOX	363035-03 BULK PACKING BOX
363097-02 PACKING BOX	363097-02 PACKING BOX
363183-01 MANUAL USER A2630 ENGLISH (SUB:)	363183-01 MANUAL USER A2630 ENGLISH (SUB:)
363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN	363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN
318904-01 WARRANTY CARD (U.S.)	318904-01 WARRANTY CARD (U.S.)
314877-02 SERVICE CENTER LIST	314877-02 SERVICE CENTER LIST
318928-01 PLASTIC BAG	318928-01 PLASTIC BAG
312288-05 PCB ASSY A2630 (2M 25MHZ)	312288-04 PCB ASSY A2630 (4M 25MHZ)
312287-02 A2630 2M 25MHZ (CANADA)	312287-07 A2630 4M 25MHZ (CANADA)
363035-03 BULK PACKING BOX	363035-03 BULK PACKING BOX
363097-02 PACKING BOX	363097-02 PACKING BOX
363183-01 MANUAL USER A2630 ENGLISH (SUB:)	363183-01 MANUAL USER A2630 ENGLISH (SUB:)
363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN	363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN
318882-01 WARRANTY CARD (CANADA)	318882-01 WARRANTY CARD (CANADA)
318928-01 PLASTIC BAG	314877-02 SERVICE CENTER LIST
312288-03 PCB ASSY A2630 (2M 25MHZ)	318928-01 PLASTIC BAG
312287-03 A2630 2M 25MHZ ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN	312287-08 A2630 4M 25MHZ ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN
363035-03 BULK PACKING BOX	363035-03 BULK PACKING BOX
363097-02 PACKING BOX	363097-02 PACKING BOX
363183-01 MANUAL USER A2630 ENGLISH (SUB:)	363183-01 MANUAL USER A2630 ENGLISH (SUB:)
363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN	363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN
318928-01 PLASTIC BAG	318928-01 PLASTIC BAG
312288-03 PCB ASSY A2630 (2M 25MHZ)	312288-04 PCB ASSY A2630 (4M 25MHZ)
312287-04 A2630 2M 25MHZ ENGLISH, DUTCH, DANISH, SWEDISH, NORWEGIAN	312287-09 A2630 4M 25MHZ ENGLISH, DUTCH, DANISH, SWEDISH, NORWEGIAN
363035-03 BULK PACKING BOX	363035-03 BULK PACKING BOX
363097-02 PACKING BOX	363097-02 PACKING BOX
363183-01 MANUAL USER A2630 ENGLISH (SUB:)	363183-01 MANUAL USER A2630 ENGLISH (SUB:)
363231-01 MANUAL USER A2630 ENGLISH, DANISH, DUTCH, SWEDISH, NORWEGIAN	363231-01 MANUAL USER A2630 ENGLISH, DANISH, DUTCH, SWEDISH, NORWEGIAN
318928-01 PLASTIC BAG	318928-01 PLASTIC BAG
312288-03 PCB ASSY A2630 (2M 25MHZ)	312288-04 PCB ASSY A2630 (4M 25MHZ)
312287-05 A2630 2M 25MHZ (AUSTRALIA)	312287-10 A2630 4M 25MHZ (AUSTRALIA)
363035-03 BULK PACKING BOX	363035-03 BULK PACKING BOX
363097-02 PACKING BOX	363097-02 PACKING BOX
363183-01 MANUAL USER A2630 ENGLISH (SUB:)	363183-01 MANUAL USER A2630 ENGLISH (SUB:)
363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN	363230-01 MANUAL USER A2630 ENGLISH, FRENCH, SPANISH, GERMAN, ITALIAN
318884-01 WARRANTY CARD (AUSTRALIA)	318884-01 WARRANTY CARD (AUSTRALIA)
318928-01 PLASTIC BAG	318928-01 PLASTIC BAG
312288-03 PCB ASSY A2630 (2M 25MHZ)	312288-04 PCB ASSY A2630 (4M 25MHZ)

COMPONENT PARTS LIST


PCB ASSEMBLY #312288

312288-05 — A2630 PCB ASSY 2MEG 25 MHZ R9.0

Commodore part numbers are provided for reference only and do not indicate the availability of parts from Commodore. Industry standard parts (Resistors, Capacitors, Connectors) should be secured locally. Approved cross-references for TTL chips, Transistors, etc. are available in manual form through the Service Department, order #314000-01.

IC COMPONENTS			RESISTORS 1/4 WATT
318099-01	414256 DRAM ZIP, 100 NS	U400-431	901550-63 22 OHM 901550-94 68 OHM 901550-58 470 OHM 901550-01 1K 901550-94 68 OHM 901550-56 47 OHM 901550-18 2.2K
390110-01	74F04	U307,204	R400,401 R201,202 R301
318050-01	74F244	U606	R300,500-502,700
390091-01	74F257	U100,101,104	R203,204,207-211
390081-01	74F74	U502,503,507	R205,206,400,401,503, 600
901521-63	74LS174	U302,303,700	R504-506,600
901521-46	74LS245	U703-707	
390281-01	74F646	U701-702	
901525-16	74S05	U300	
390399-01	MC68030 CPU 16MHZ	U200	
390399-02	MC68030 CPU 25MHZ	U200	
390277-01	68881 FPU 16MHZ	U201	
390434-01	MC68882 FPU 25MHZ	U201	
901521-16	74LS138	U602	
390404-02	PAL BUFFER CNTRL	U500	
390410-02	PAL BYTE SELECT	U603	
390413-02	PAL CLOCK GEN	U708	
390407-02	PAL 68000 MACH STATE	U505	
390406-02	PAL COUNTER/RESET	U504	
390408-02	PAL 68000 MACH STATE	U506	
390409-02	PAL REFRESH MACH STATE	U601	
390400-02	PAL AUTOCONFIG	U301	
390401-02	PAL CHIP SELECT	U304	
390405-03	PAL 68000 INTERFACE	U501	
390402-02	PAL MEMORY SELECT	U305	
390403-02	PAL COPROCESSOR CNTRL	U306	
390411-02	PAL RAS/BURST	U600	
390411-03	PAL RAS/BURST	U600	
390282-04	ROM UNIX BOOT LOW	U102	
390283-04	ROM UNIX BOOT HIGH	U103	
OSCILLATORS			CAPACITORS
325566-10	16.000 MHZ, USE ON -01, -02 ASSY	U202	900019-24 .33 PF, MLC, RADIAL 251318-06 .01 UF, MLC, RADIAL 900022-03 .1 UF, MLC, RADIAL
325566-22	25 MHZ, USE ON -03, -04, -05, -06 ASSY	U202	900022-01 .22 UF, MLC, RADIAL
324667-03	DELAY LINE, 20 NS TAPS	U604,605	900022-05 .33 UF, MLC, RADIAL 390101-06 10 UF, 16V, ELEC, RADIAL 390101-01 47 UF, 16V, ELEC, RADIAL
IC SOCKETS			900462-21 .22 PF, MLC, AXIAL COG 900462-49 .330 PF, MLC, AXIAL, COG 390082-02 .01 UF, MLC, AXIAL, ZSU 390082-01 .10 UF, MLC, AXIAL, ZSU 390082-05 .22 UF, MLC, AXIAL, ZSU 390082-04 .33 UF, MLC, AXIAL, ZSU 900402-09 10 UF, 16V, TANTALUM, RADIAL 900402-19 47 UF, 16V, TANTALUM, RADIAL
904150-08	20P 0.300	U500,504-506,601,603, 708	900480-01 EUROCARD RECEPT W/O EARS 64 POS 390055-01 SUB 903326-02 HEADER 2 PIN, SIL, .100 903326-03 HEADER 3 PIN, SIL, .100 390043-01 SHUNT, FEMALE, 2 POS
390060-01	24P 0.600	U301,304-306,501,600	903326-02 HEADER 2 PIN, SIL, .100 903326-03 HEADER 3 PIN, SIL, .100 390043-01 SHUNT, FEMALE 2 POS
904150-05	28P 0.600	U102,103	
390296-01	68P PGA	U201	
390296-05	128P PGA	U200	
RESISTOR NETWORKS			CONNECTORS
326149-01	22 OHM, 4 X 8	RP401-404	906800-05 SCREW, PAN HEAD, M3X6 QTY=2
390227-03	22 OHM, 5 X 10	RP400,700	312724-01 BRACKET, MOUNTING
902410-10	1K, 9 X 10	RP201	312294-01 SHIELD, RF COVER
902442-29	3.3K, 7 X 8	RP300	312295-01 SHIELD, RF FENCE
902410-06	3.3K, 9 X 10	RP200	
902412-14	1K, 8 X 9	RP100-107	
326146-04	47 OHM, 4 X 8	RP401-404	
390227-06	47 OHM, 5 X 10	RP202,400,700	
MISCELLANEOUS			

A2630 BOARD LAYOUT #312288 (-01 & -03)

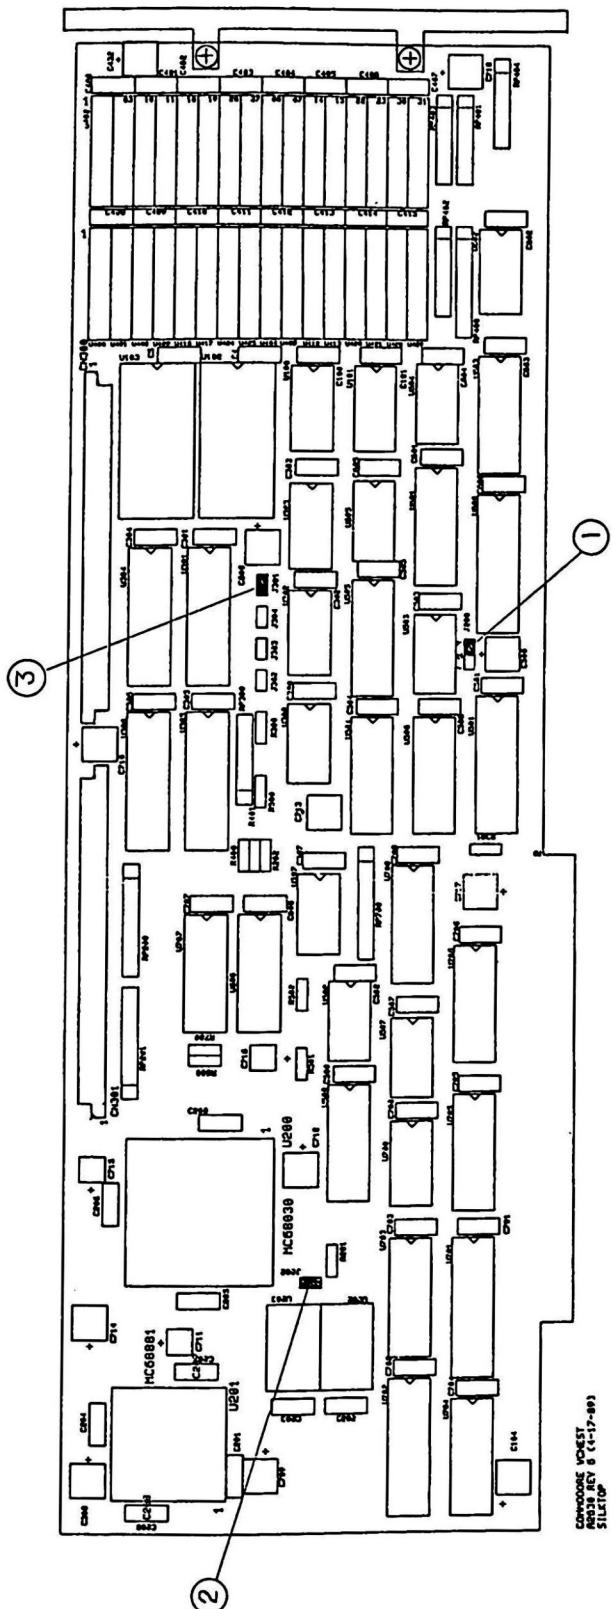


JUMPER SETTING FOR PCB ASSY., A2630 (2M RAM)

- 1) J200 SHORTED BETWEEN PINS 2 AND 3 (USE-AS)
 - 2) J202 SHORTED (USE SAME CLOCK FOR U200 AND U201)
 - 3) J301 SHORTED (2 MEG OF RAM)


A2630 SYSTEM SCHEMATICS


A2630 BOARD LAYOUT #312288 (-02 & -04)

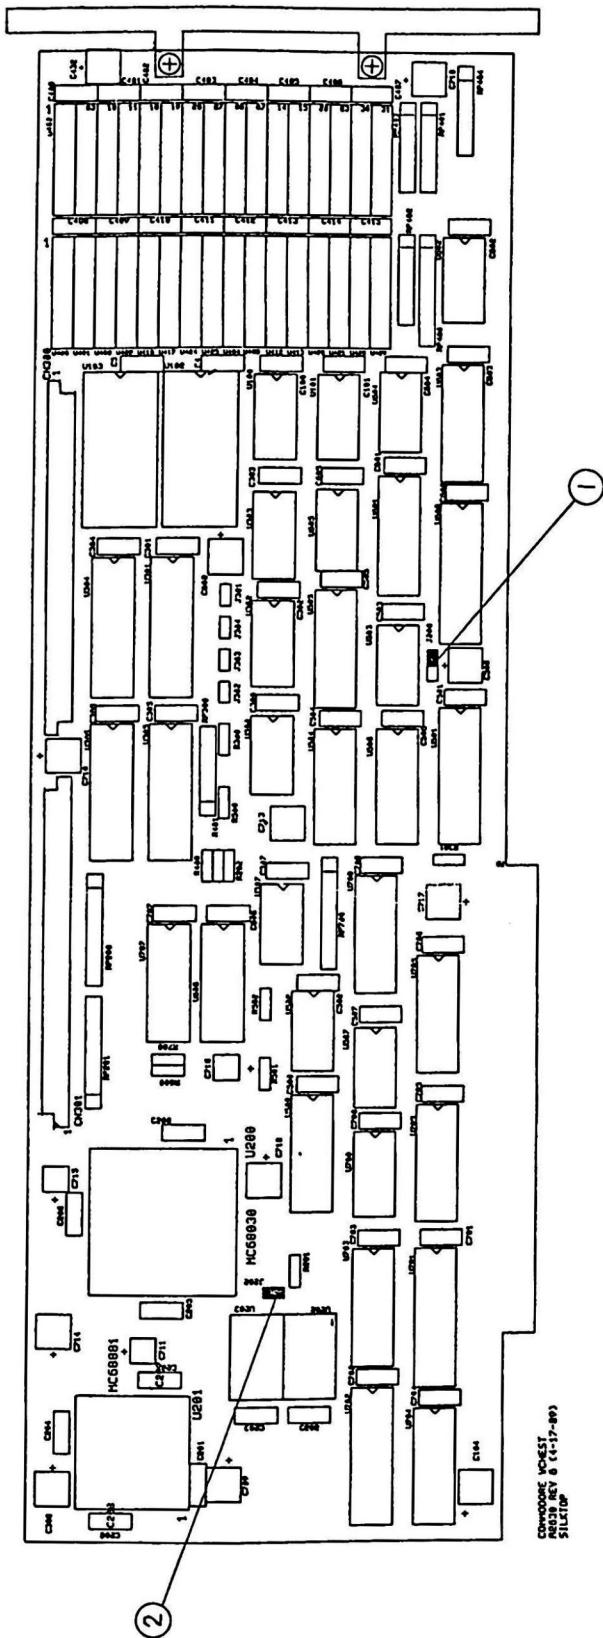




JUMPER SETTING FOR PCB ASSY.: A2630 (4M RAM)



- 1) J200 SHORTED BETWEEN PINS 2 AND 3 (USE-AS)
2) J202 SHORTED (USE SAME CLOCK FOR U200 AND U201)**

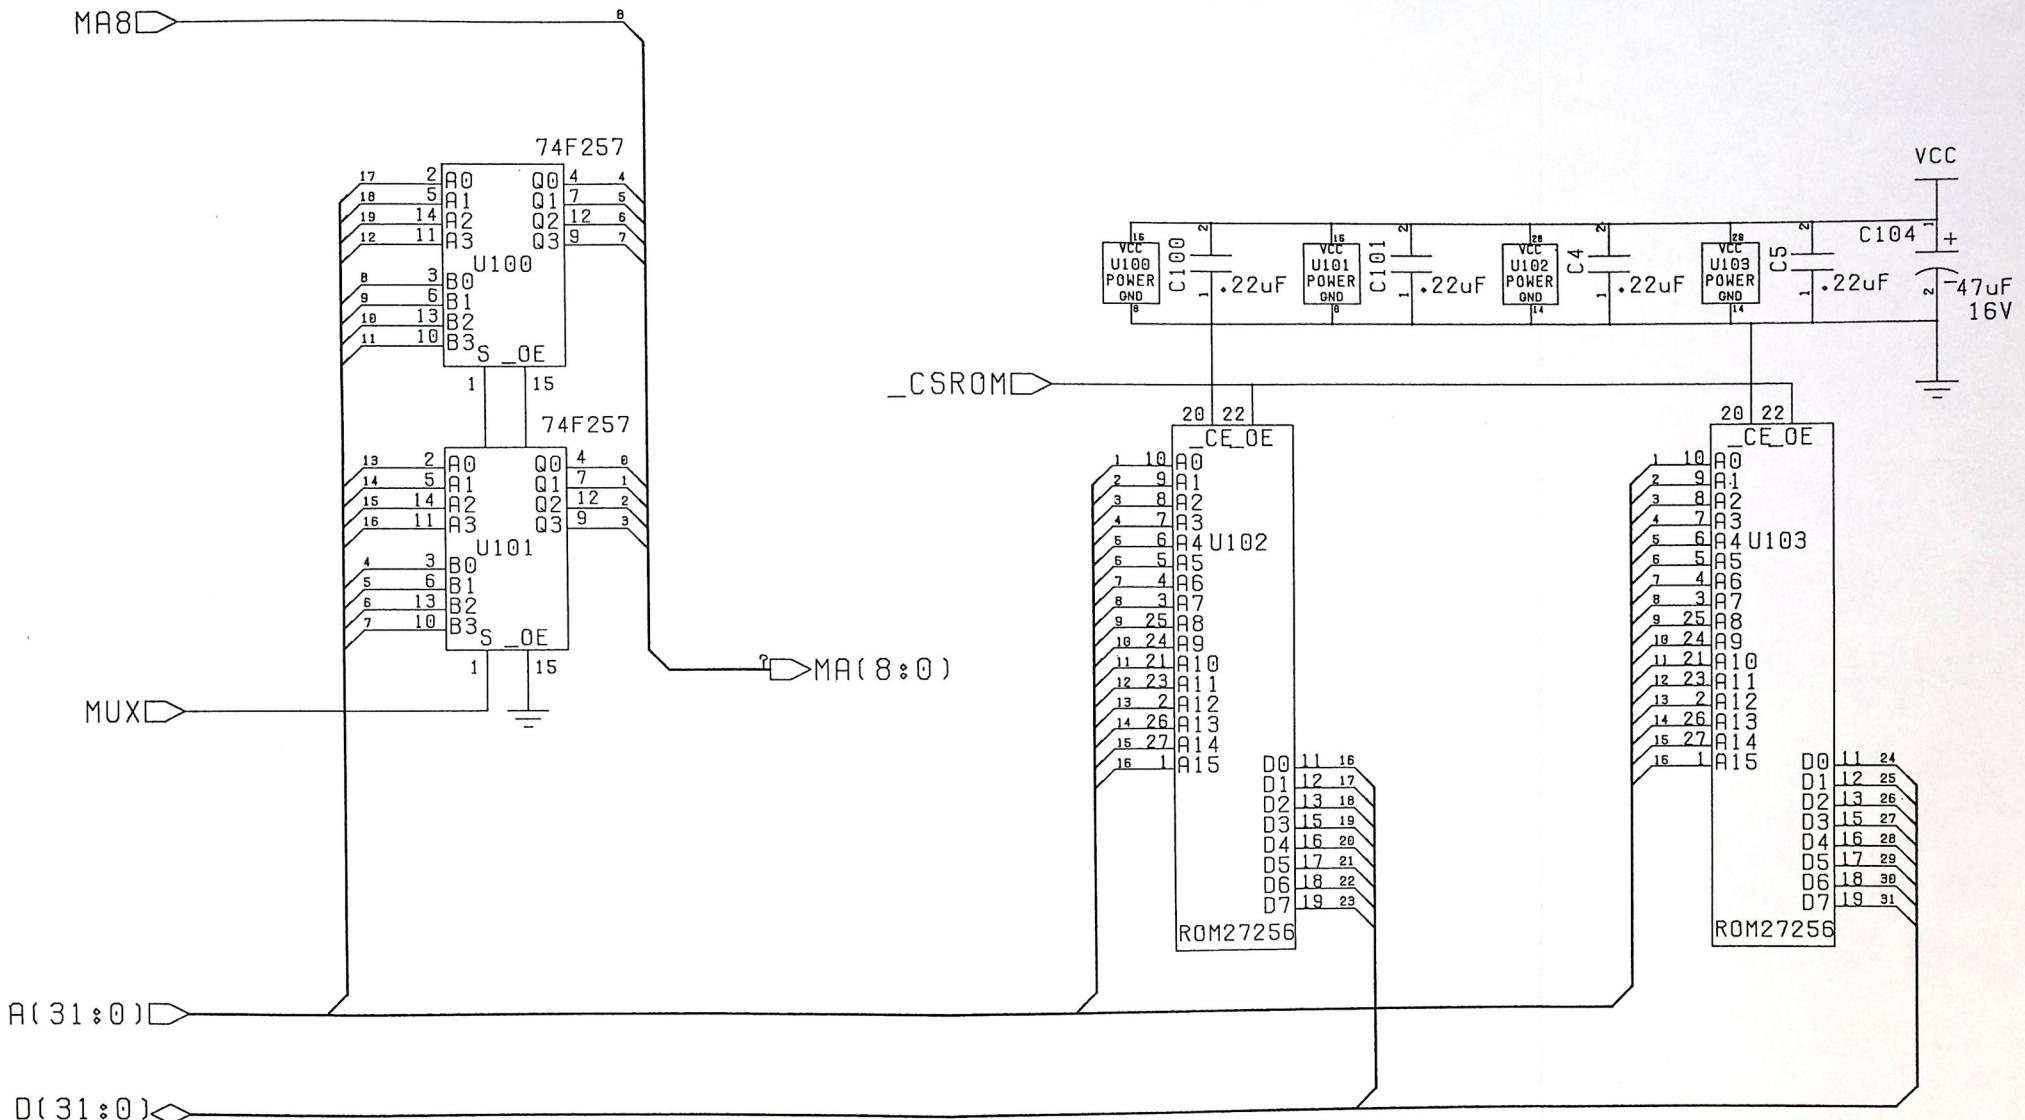


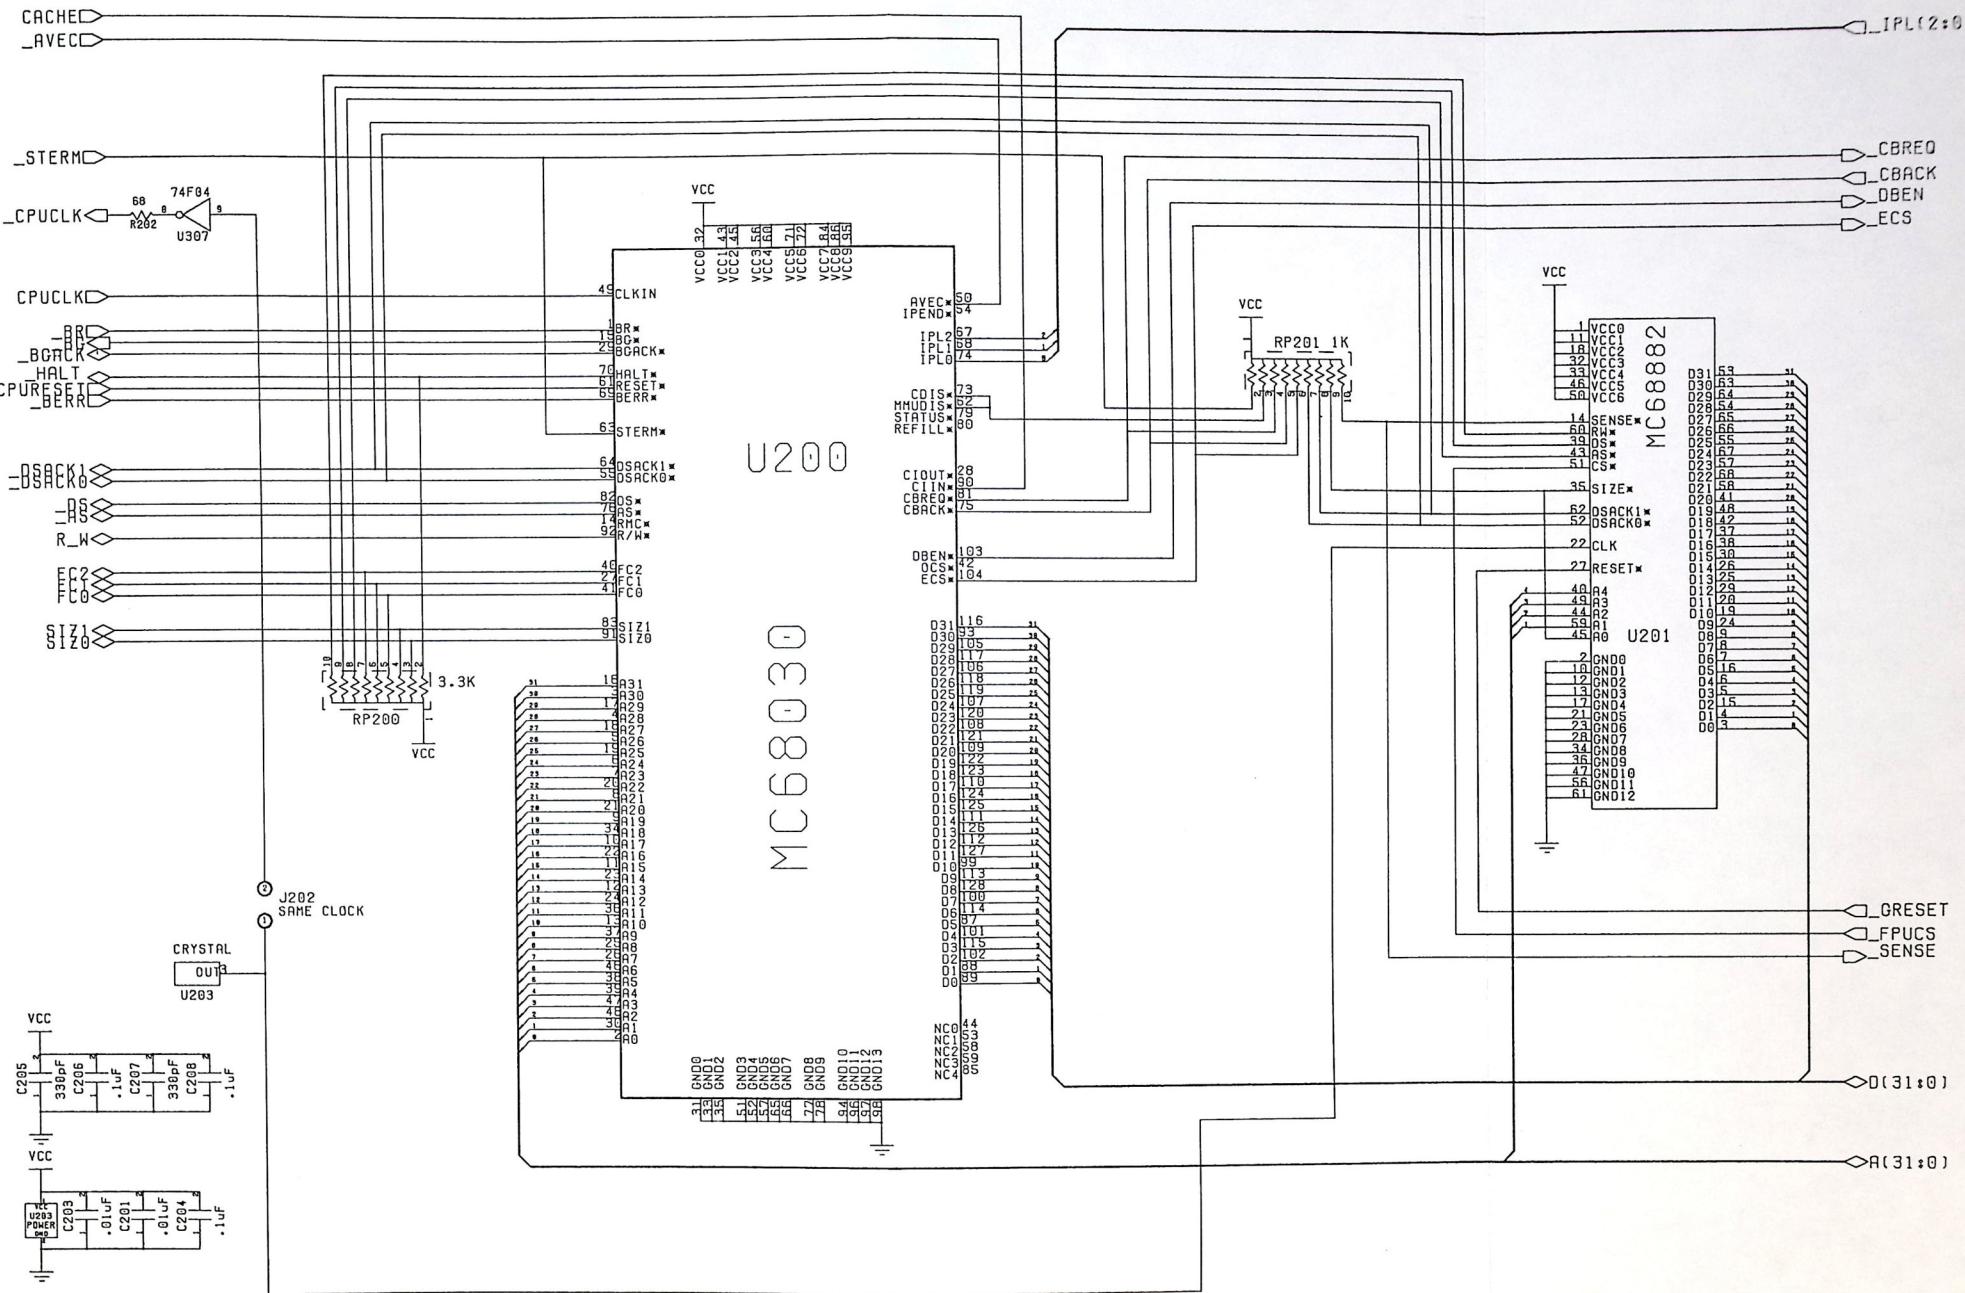


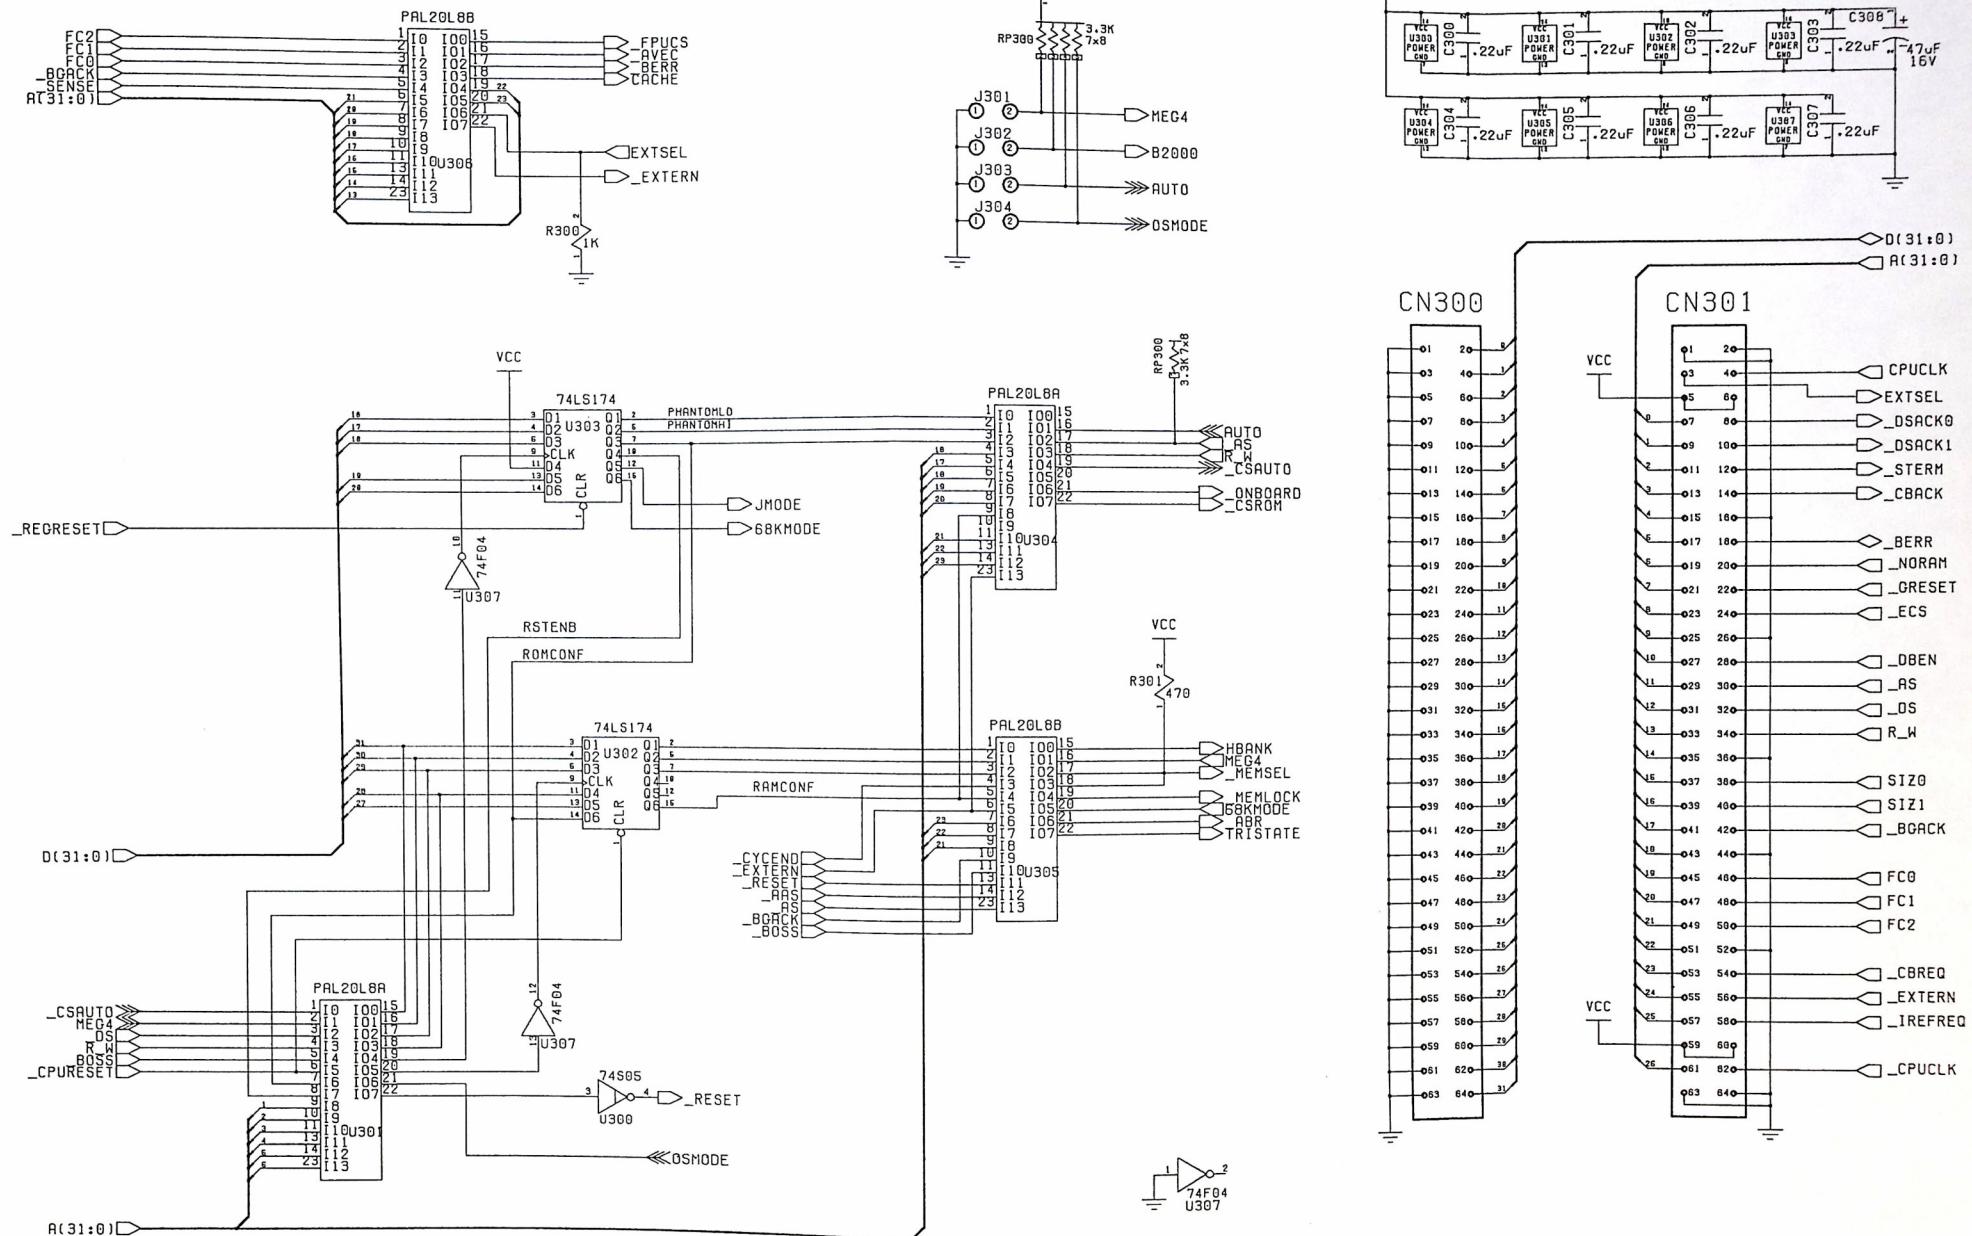

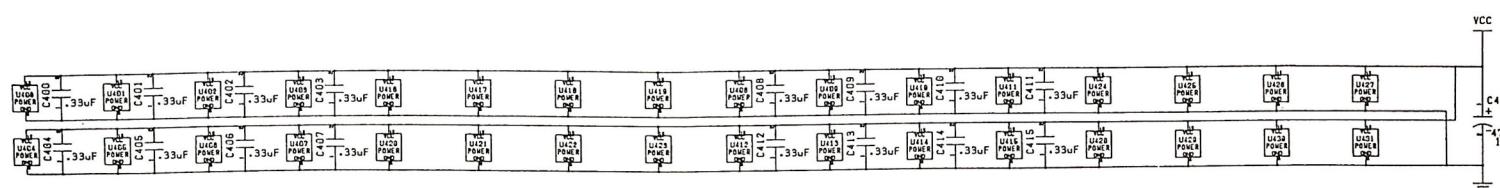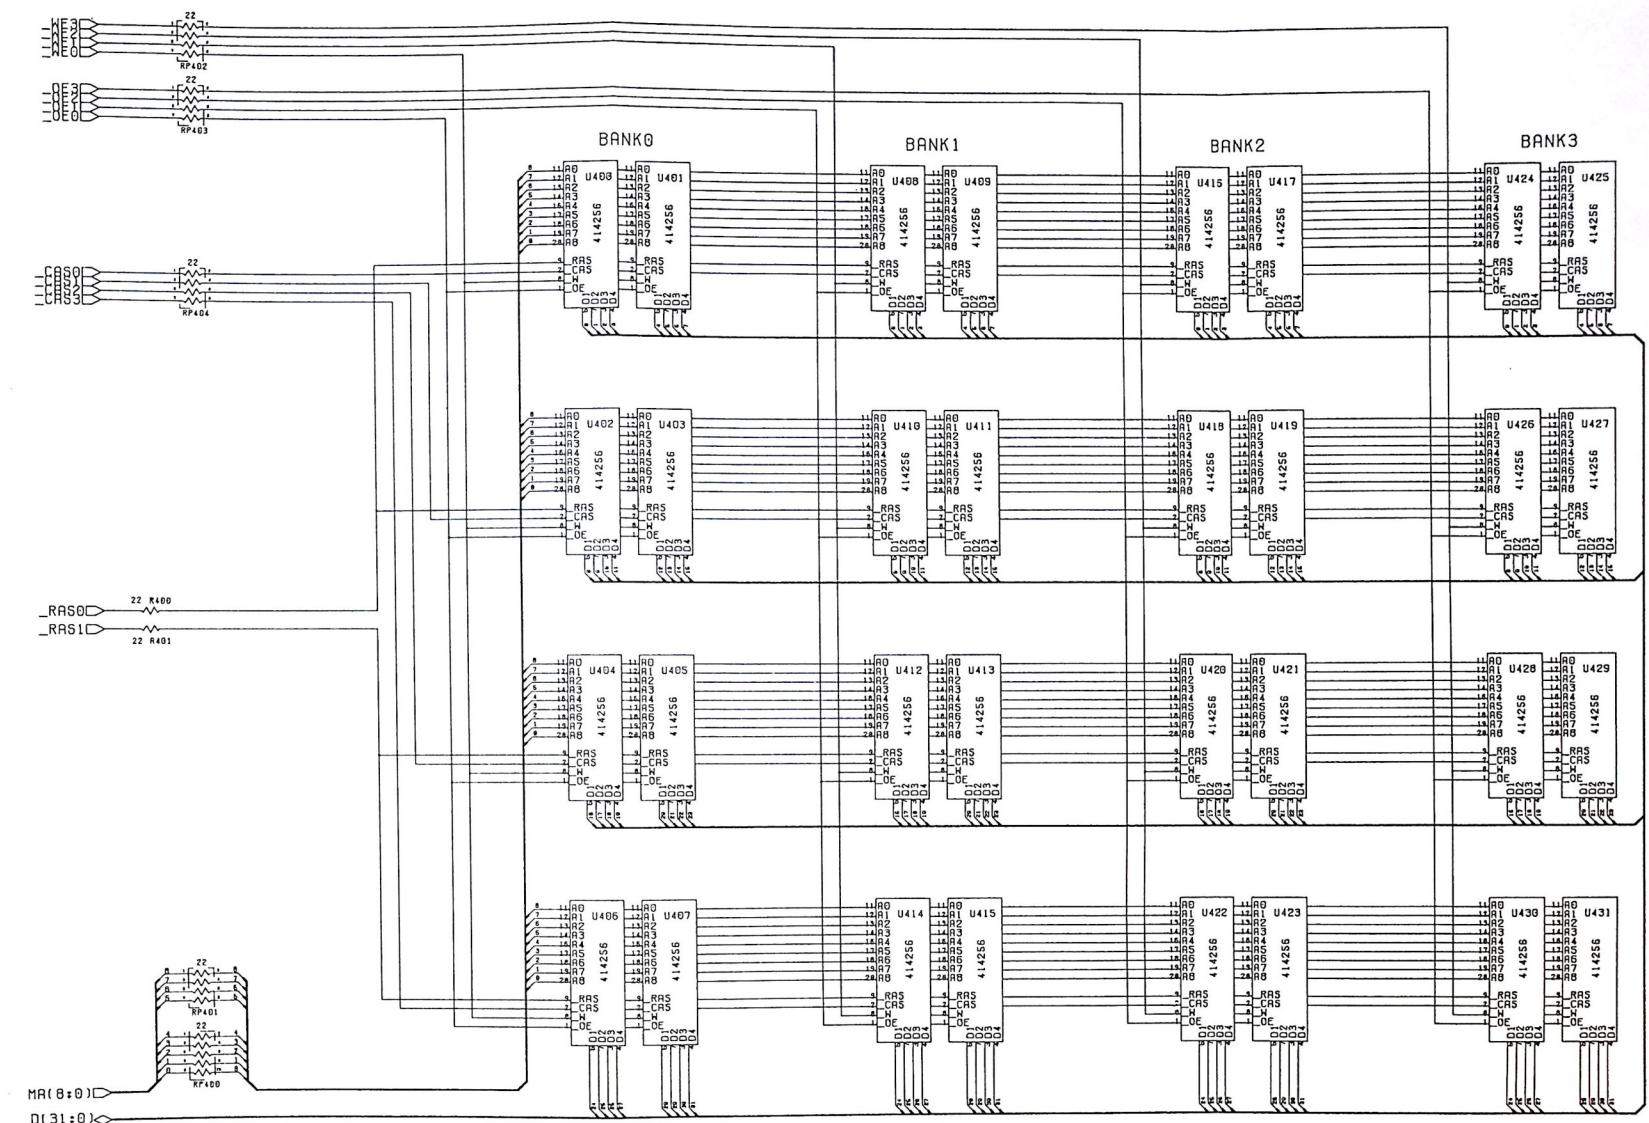

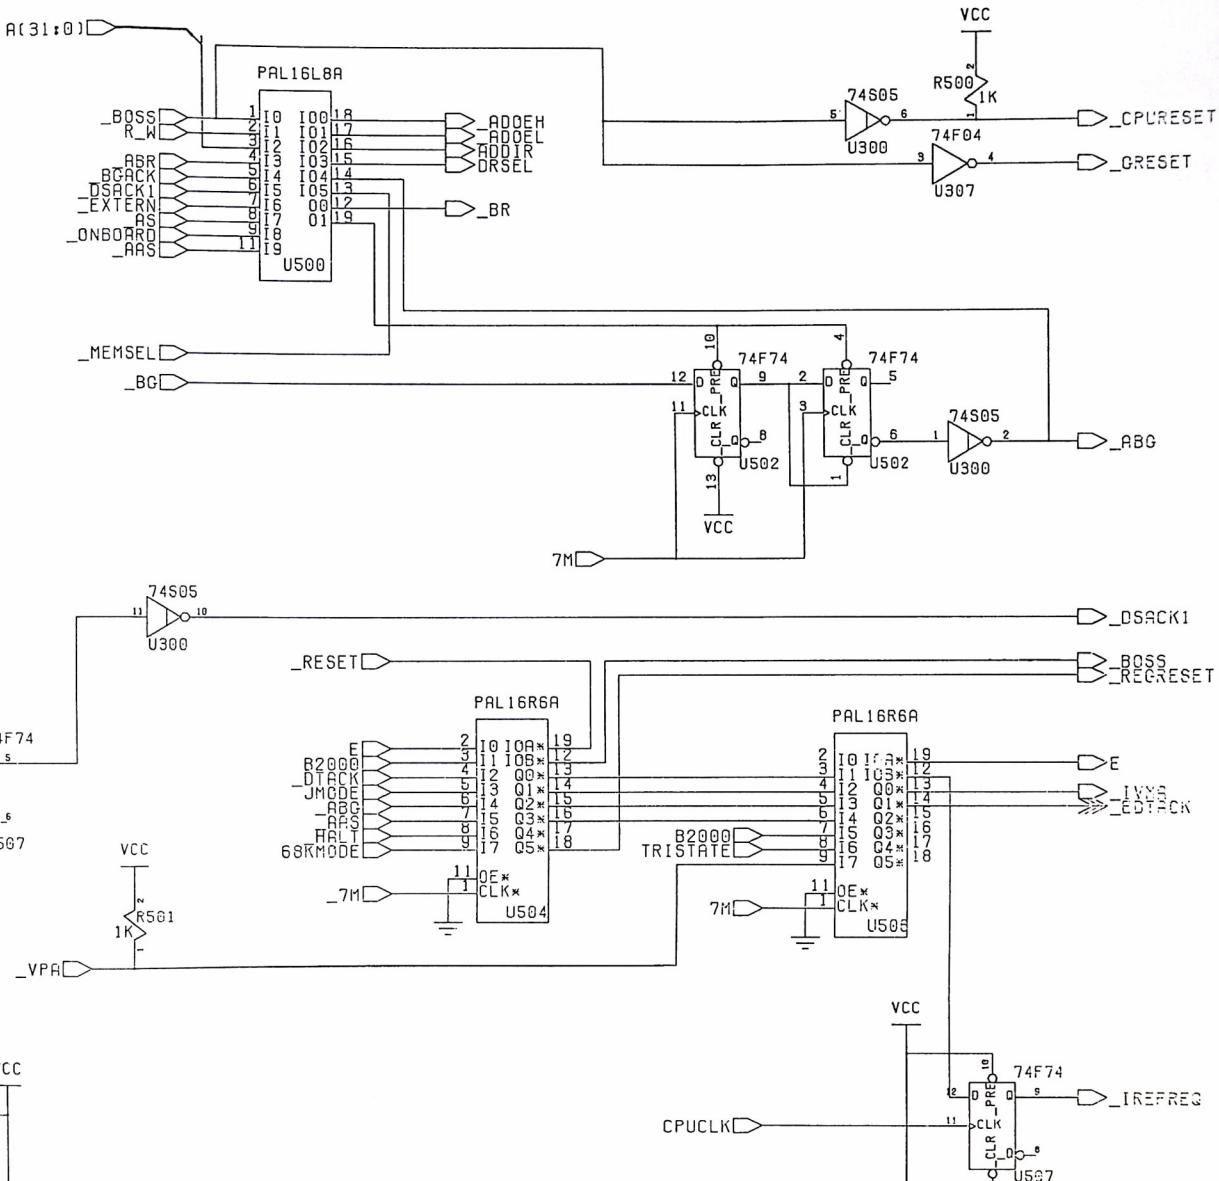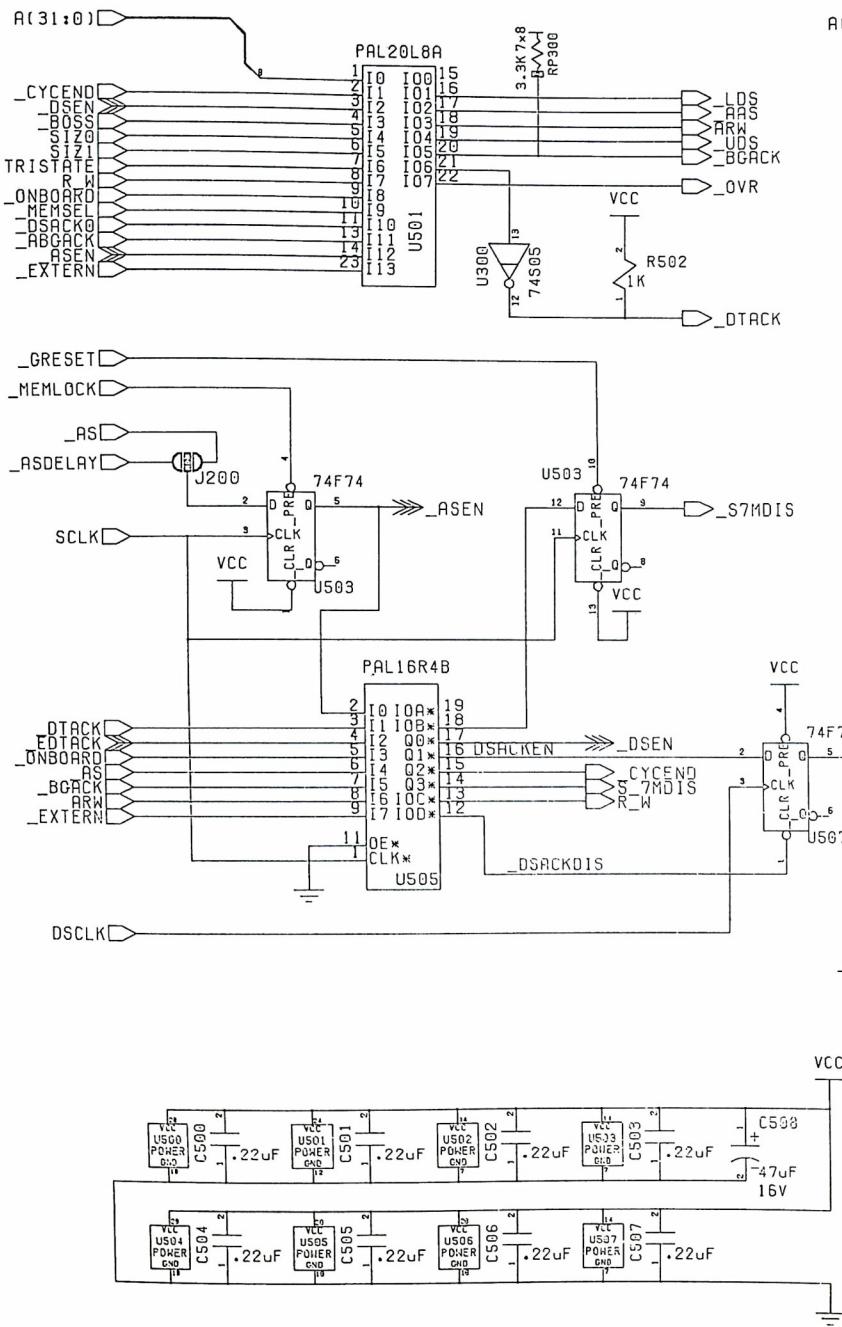

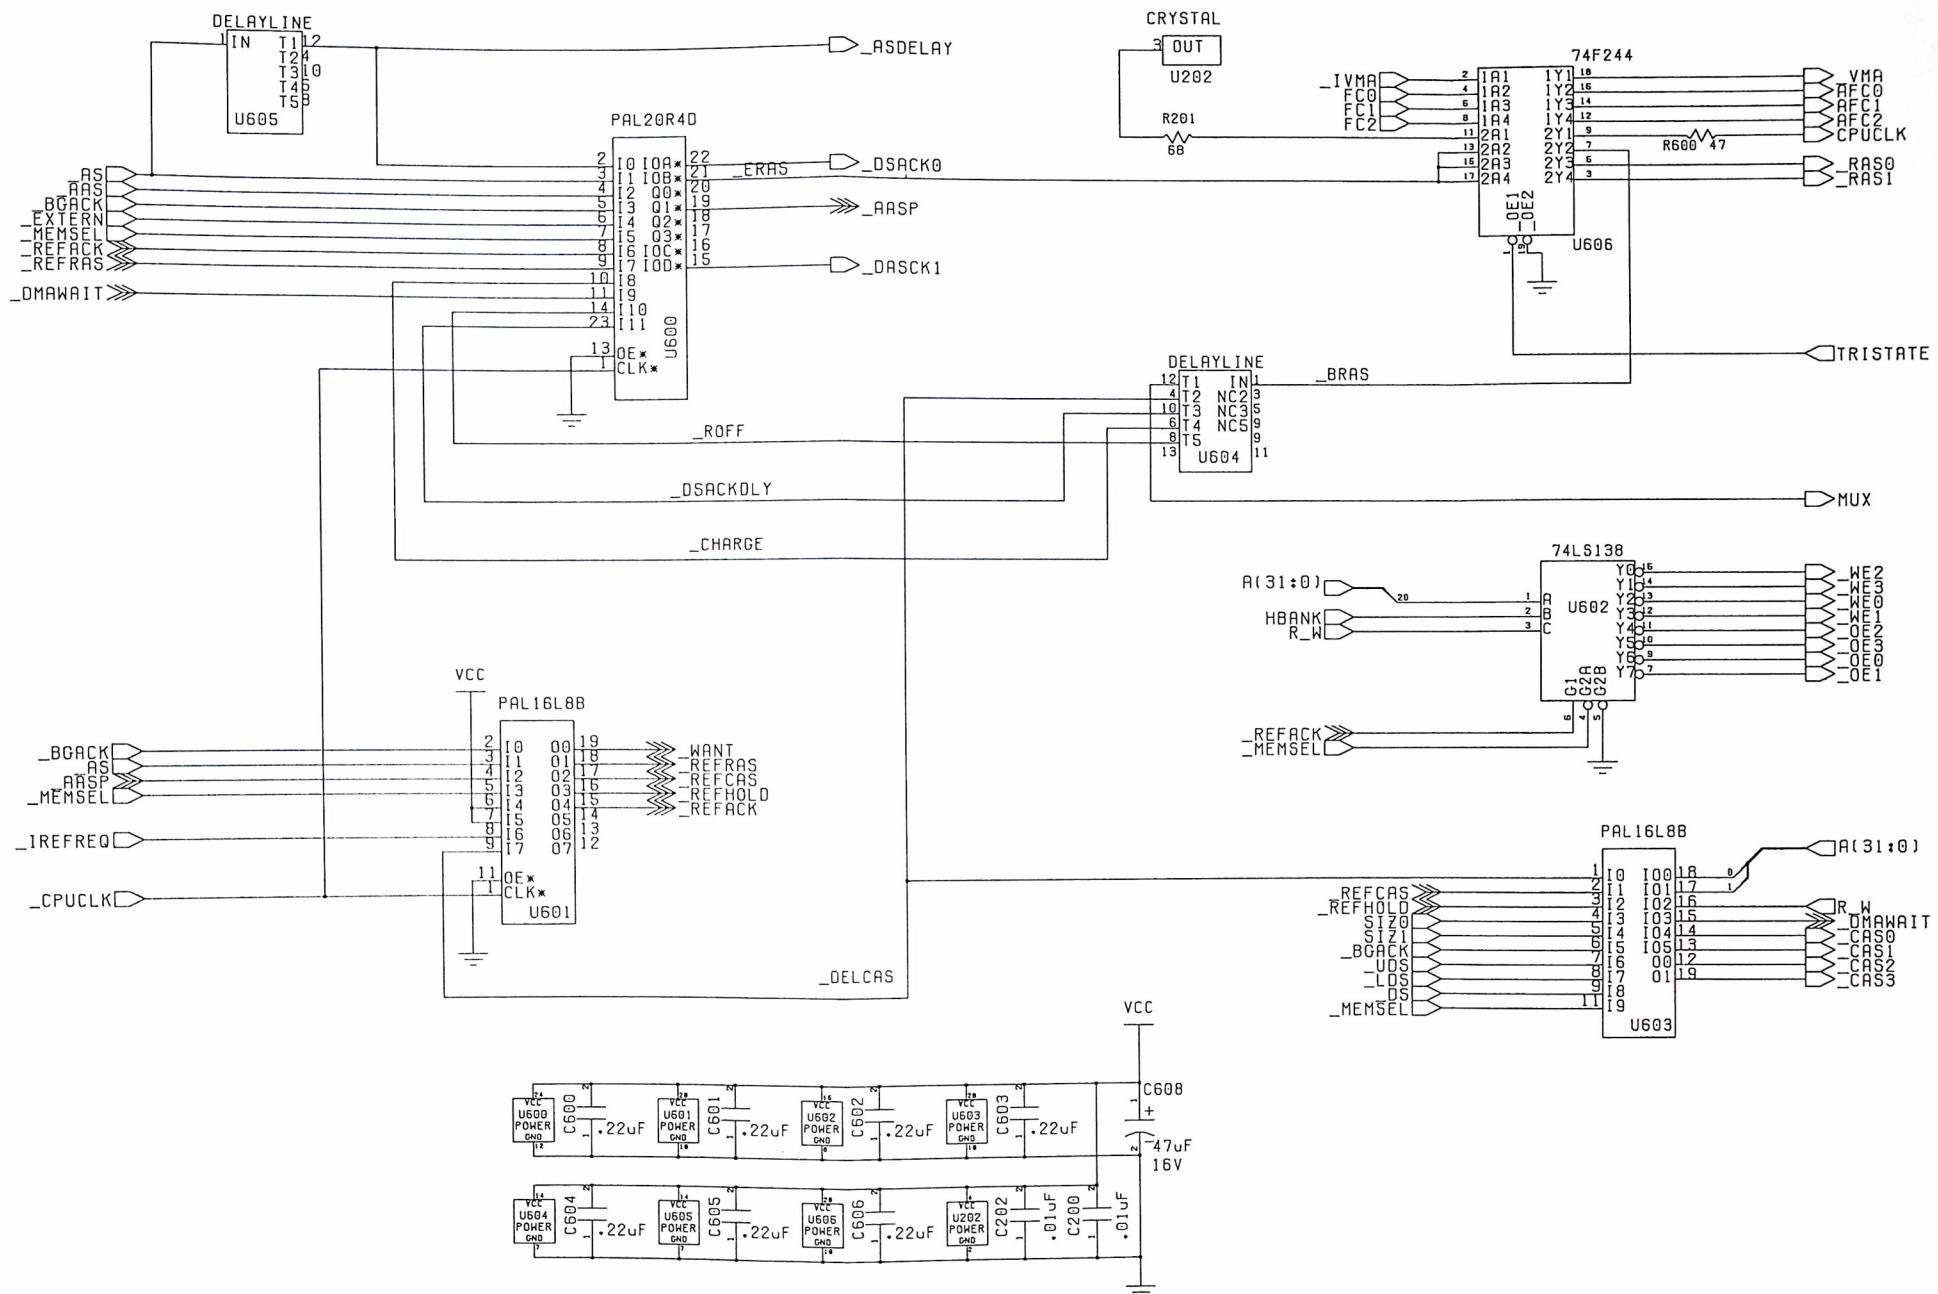

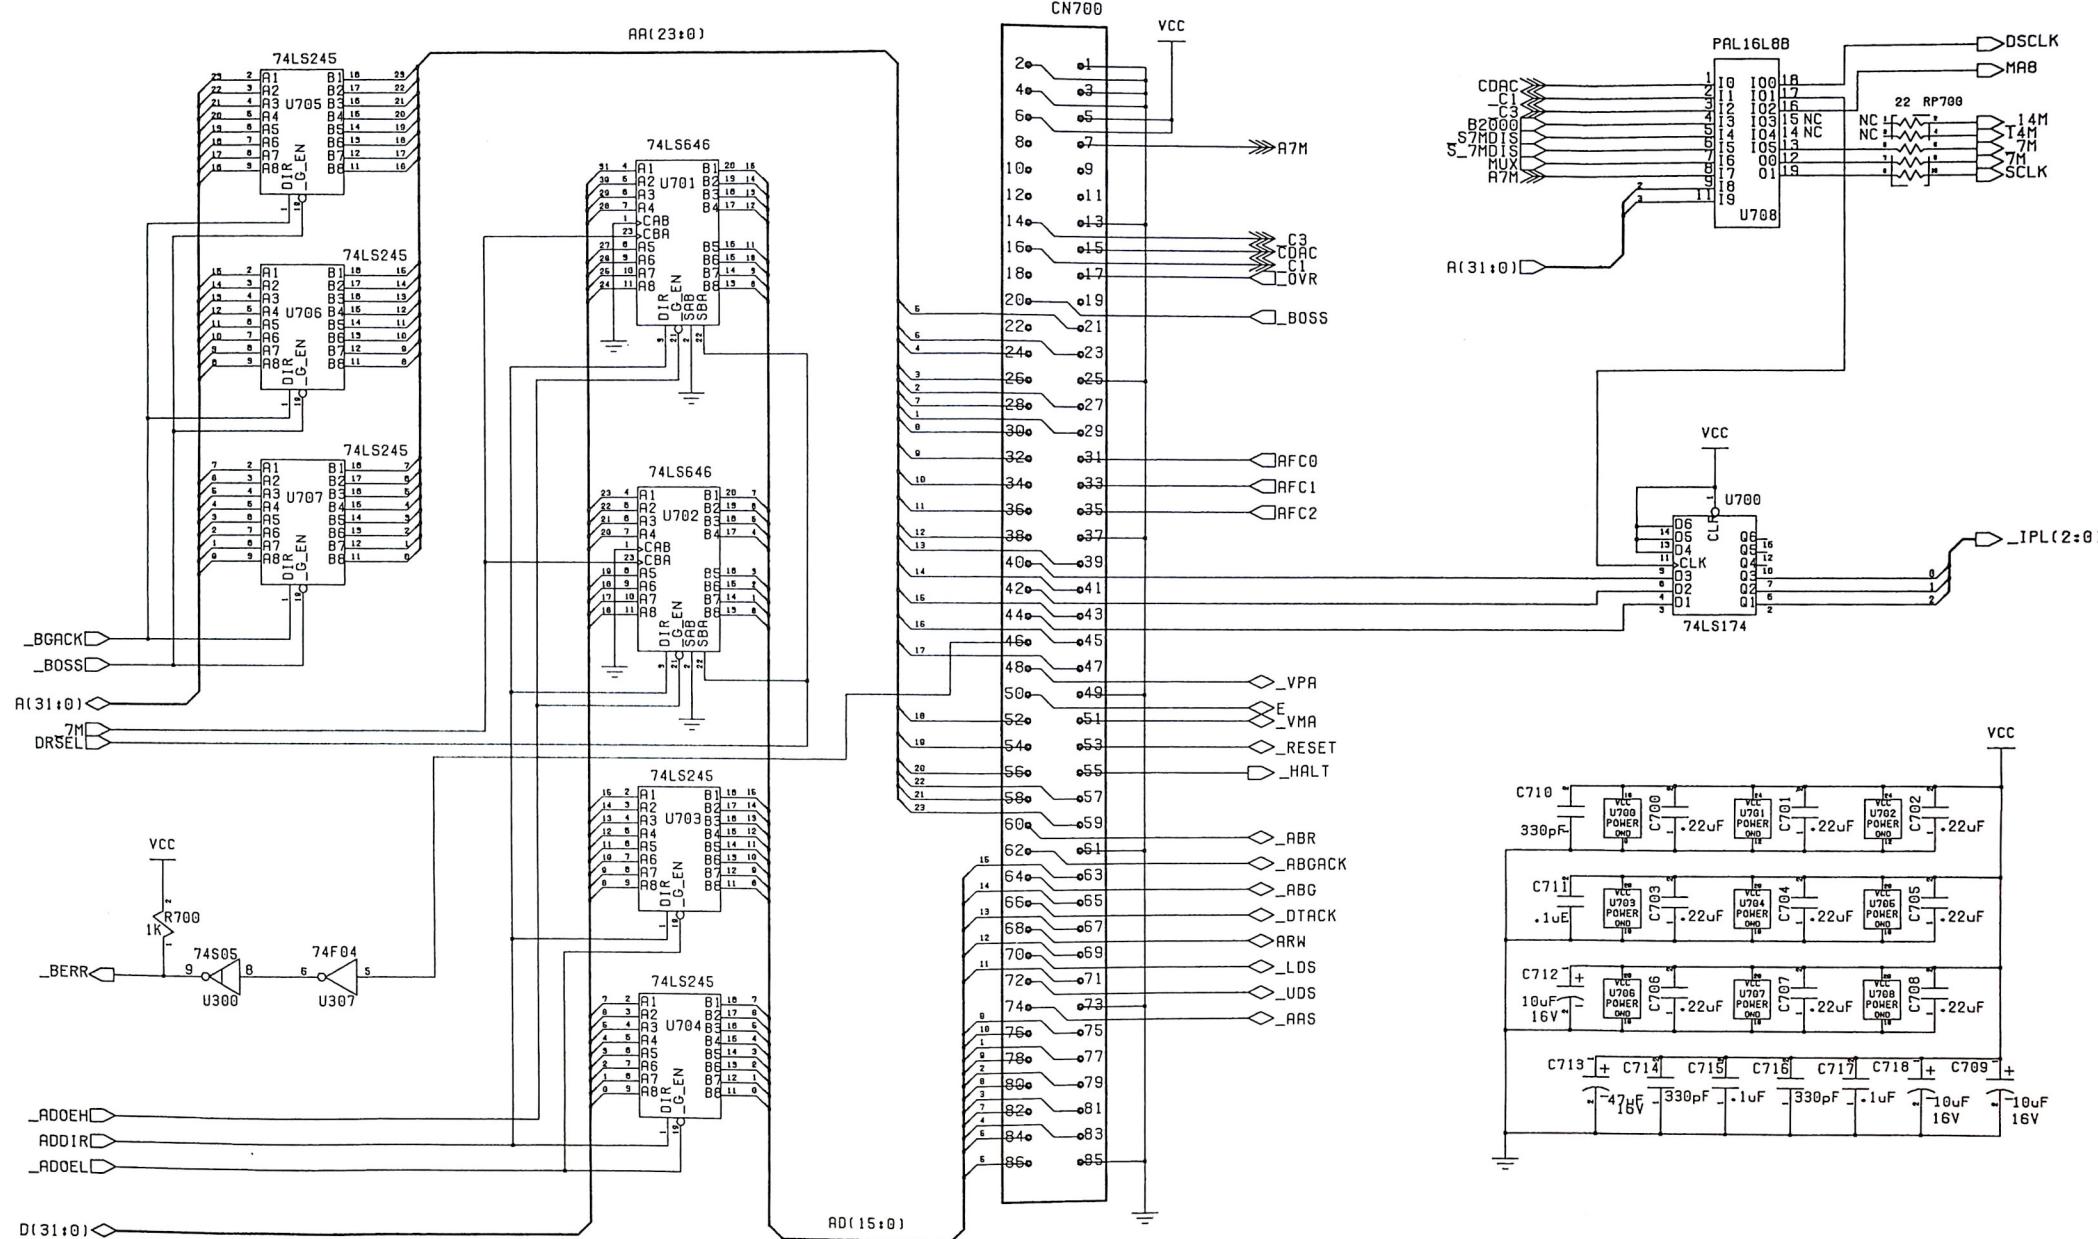



Computer Systems Division
1200 Wilson Drive
West Chester, PA 19380