Xprinter install Guide

Driver Install

- https://www.dropbox.com/scl/fi/rbswtyh7lv30heb6xaoes/80-V2.1R.exe?rlkey=qoqk784n30o41qz71tqgea5wo&st=euf3daig&dl=0

Install via USB

- Open driver installer
- Connected printer via USB with POS
- It will show if the printer is not connected with POS

- If is connected it will auto detect the USB port
- Click Installing the printer driver

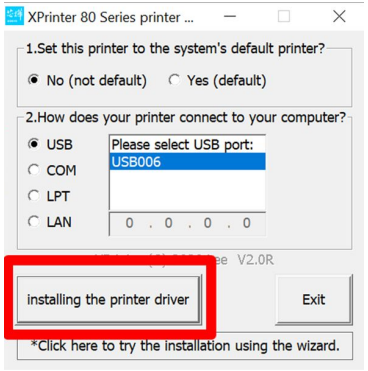

Receipt RPT for X-printer

- To fix the alignment issue
- https://www.dropbox.com/scl/fi/li6ntau39kcqmtbg2lz4p/QIJI-Receipt-v5.rpt?rlkey=1okx56nt9515ftw81zzoagtnr&st=newarkz6&dl=0

IP address Updater Tools

- https://www.dropbox.com/scl/fi/k5a1bn952b5q9x5zexxv4/X80-IP-updater-tools.zip?rlkey=wi797tqme18ofqz5081mg3g4d&st=m1cii9ad&dl=0

XP80 IP address updater tool

- Open XPrinter.exe
- Click English

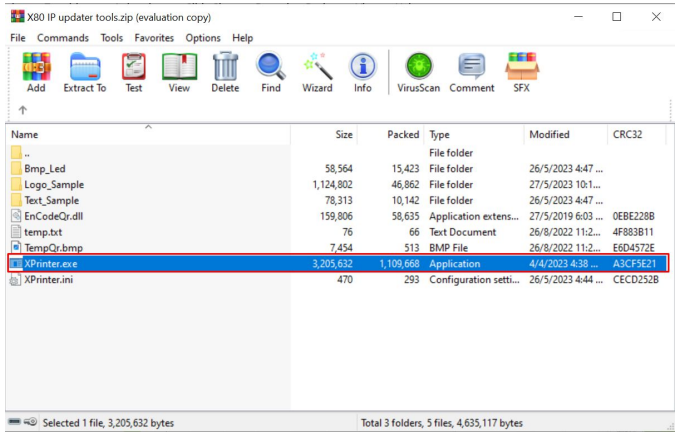

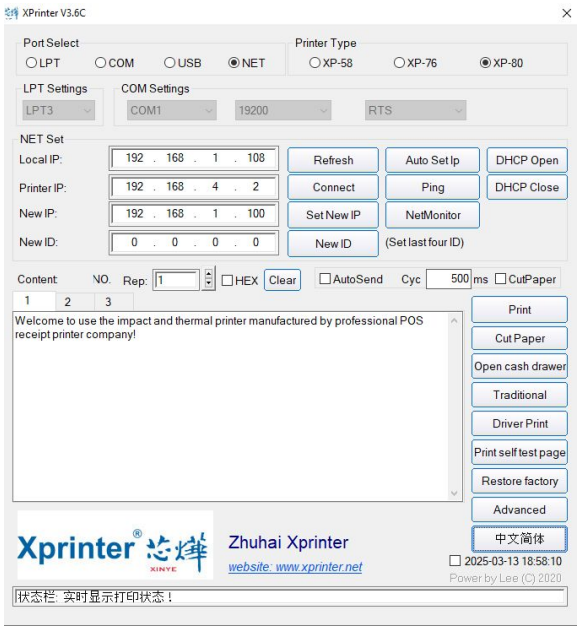

2 ways to check Kitchen printer IP address

- From POS > Kitchen Printer Setup > Printer

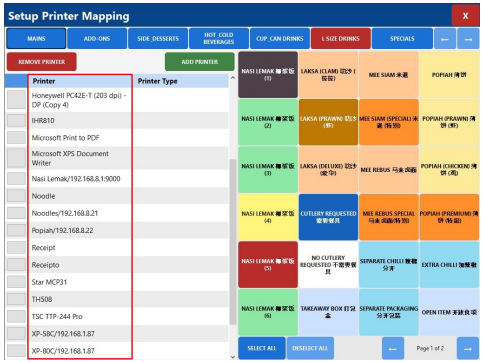

- From Notepad > Right click properties on kitchen printer > Ports

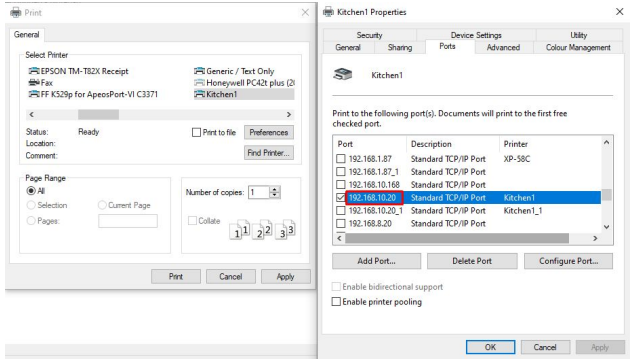

Set new IP address by USB

- Port Select : USB
- New IP rows > Fill in the new IP address > Click Set New IP

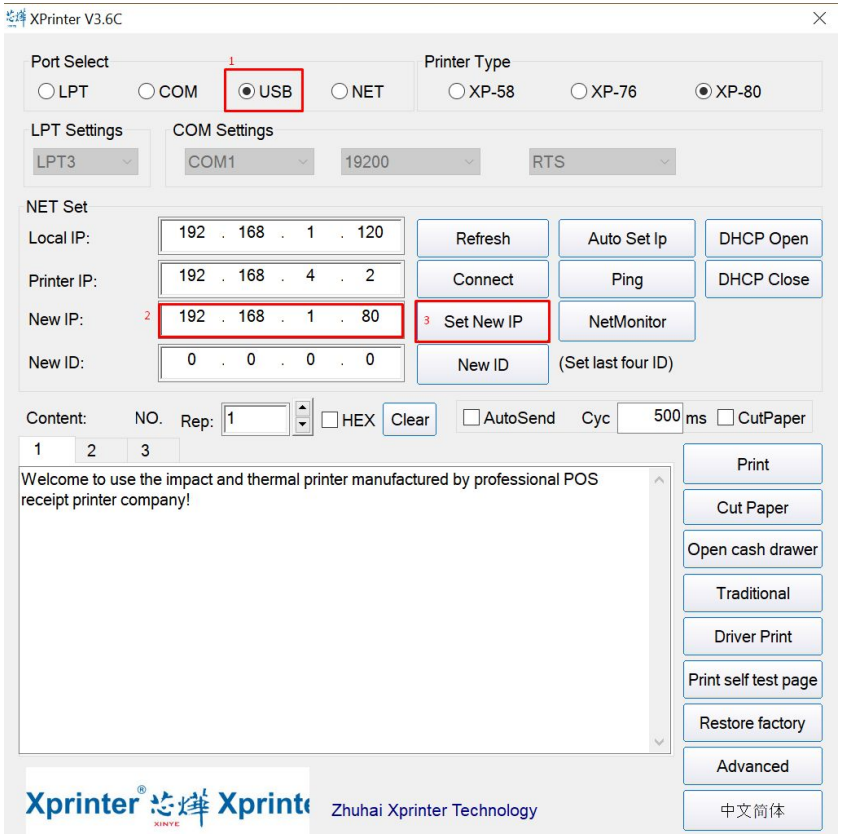

Install driver after set new IP address by USB

- After set new IP address by USB remain this IP address Updater Tools open.
- Install driver via LAN

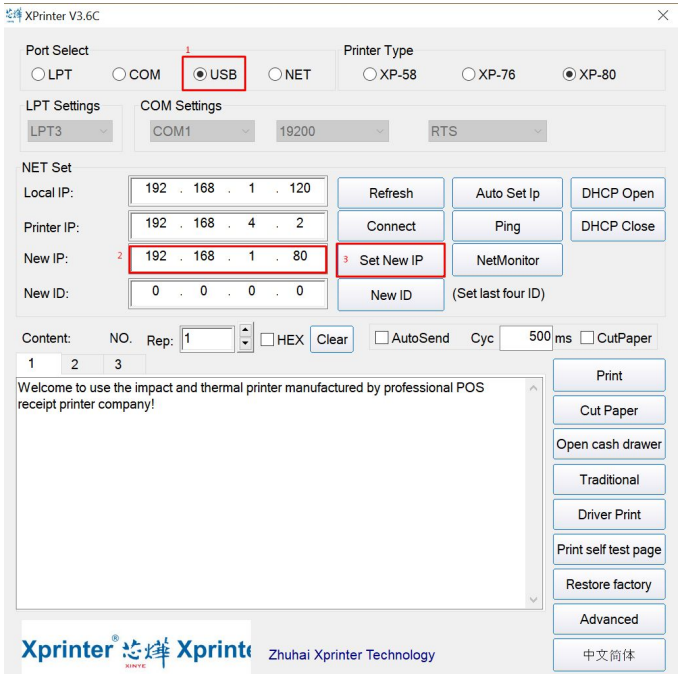

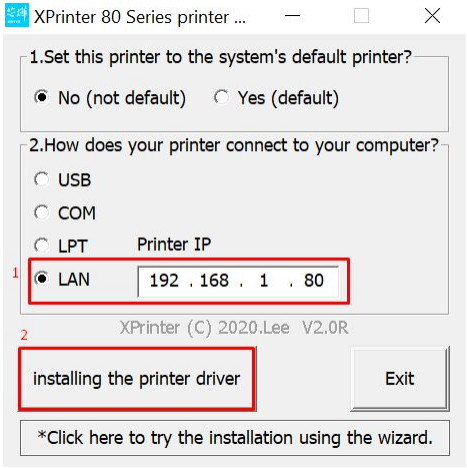

Set new IP address by LAN

- There will be ***DOWNTIME*** for the other **kitchen printers** and **KDS** during this period.
- Default IP address for the X-printer is **192.168.123.100**
- Set the POS IPV4 to **192.168.123.10**
- Enter the default Printer IP address **192.168.123.100** in **Printer IP**
- Enter the new IP address you want to assign, then click **Set New IP**
- After change IP from tools need to wait about **1 min** to get printer update the new IP

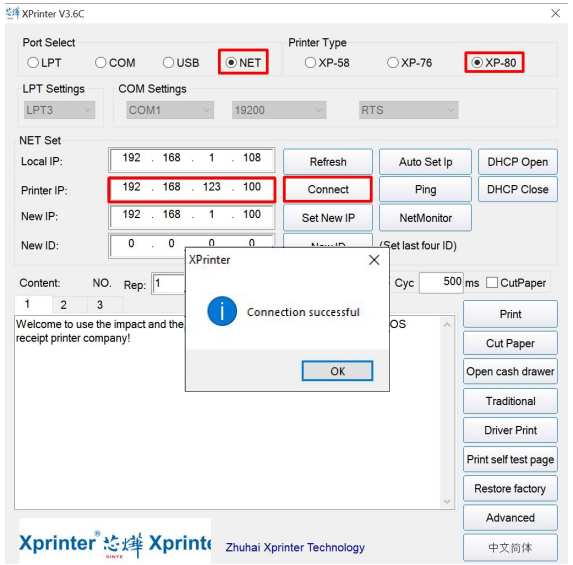

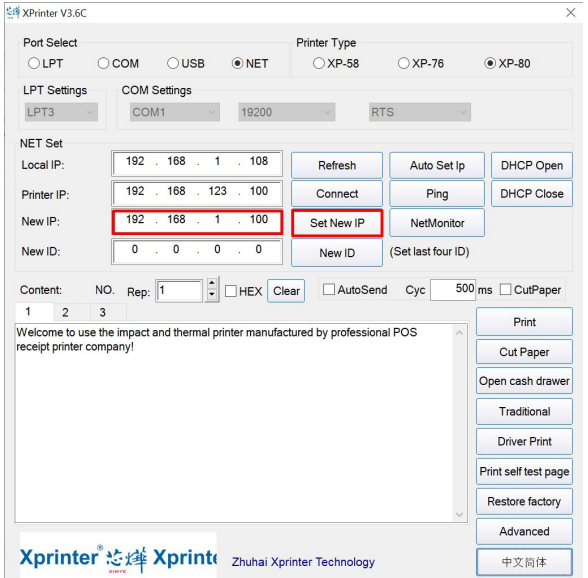

Install driver for LAN network

- Open the driver tools

- Option 2 Choose LAN > Fill in the IP address > Click Installing the printer driver

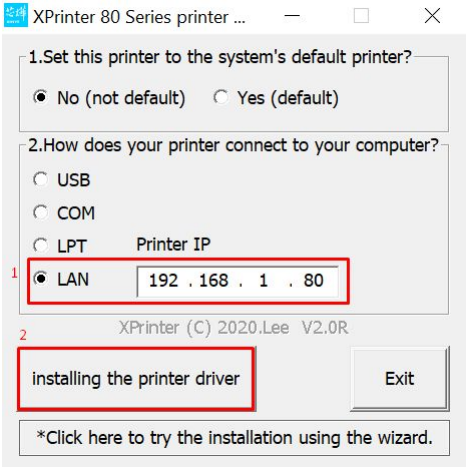

Replace RPT

- Replace the RPT if the setup and test print from Notepad are successful but the POS fails to print orders from the new printer.
- https://www.dropbox.com/scl/fi/u345dqjsmwyv8nhcai4p0/QIJI-Kitchen-v5.rpt?rlkey=s1dmgu9d0zeyc29brc0zg3w3k&st=p7xix6ya&dl=0

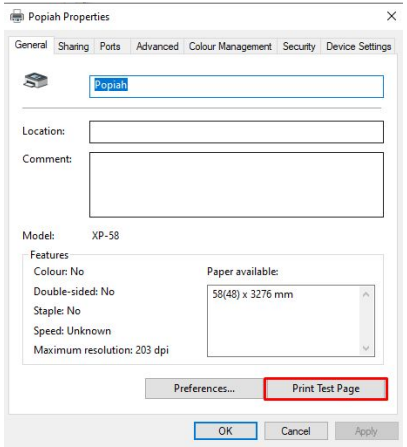

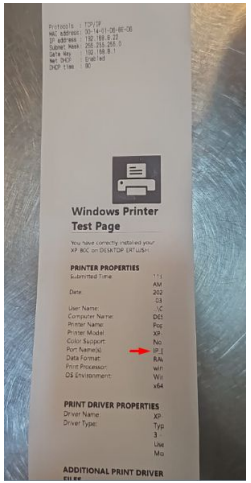

END SLIDE