


Frame upgrade on Boots


1. Take critical console data backup to nim server from hmc
2. take mksysb of server
3. take profile backup
4. Run Pre-checks script
5. Take managed system profile backup of frame


Inform Application and Database team to stop their services on the server
run bosboot, set bootlist and reboot the server
Shutdown the server

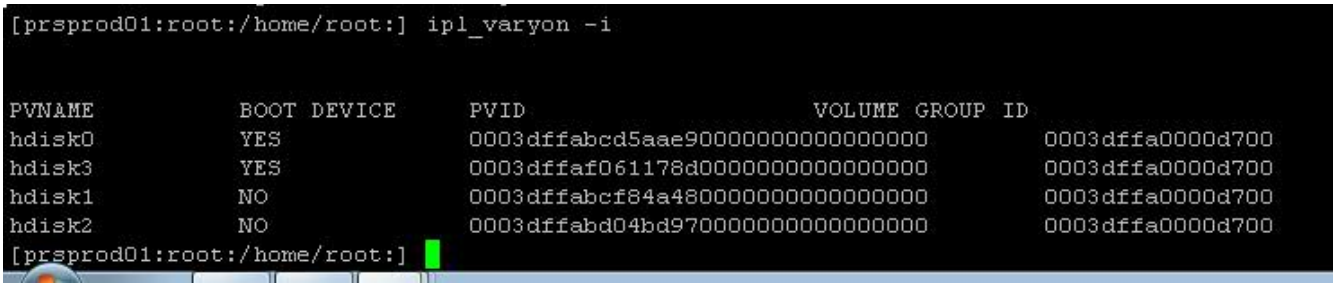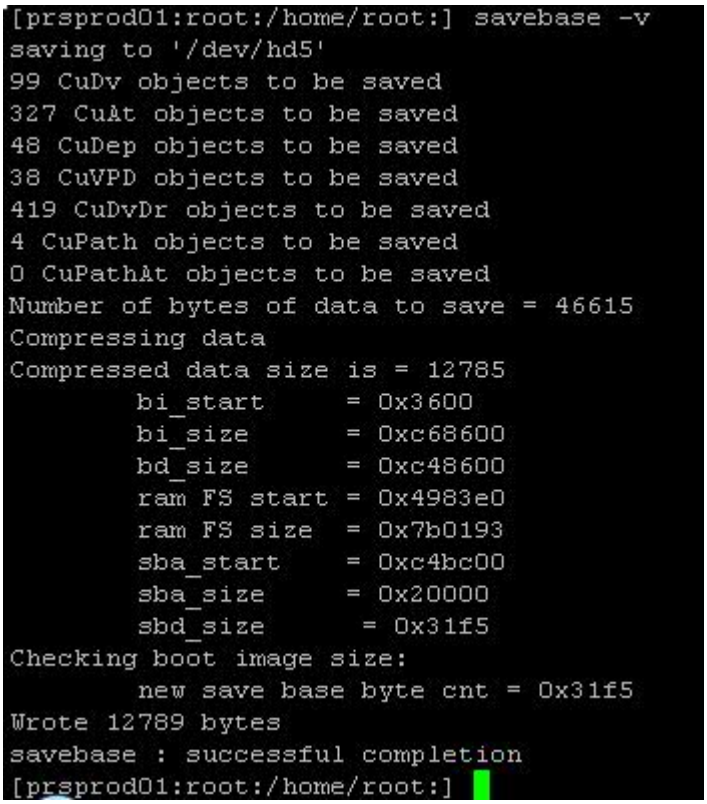


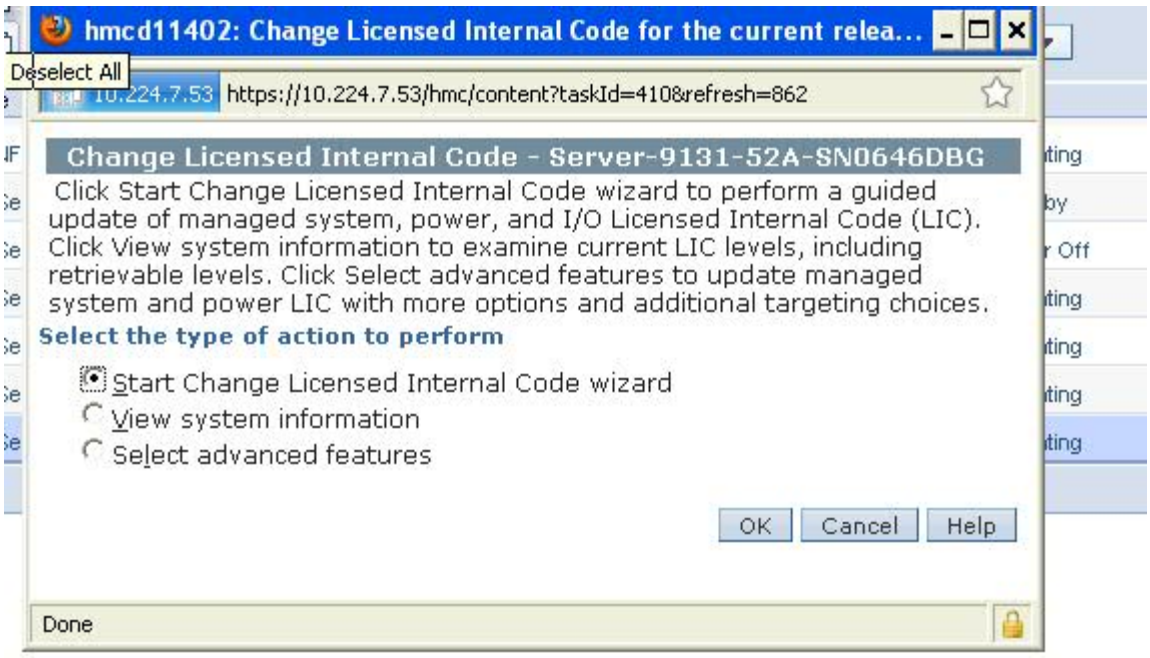



hmcd11402: Change Licensed Internal Code for the current relea...
Deselect All
10.224.7.53
https://10.224.7.53/hmc/content?taskId=410&refresh=862
Change Licensed Internal Code - Server-9131-52A-SN0646DBG
Click Start Change Licensed Internal Code wizard to perform a guided update of managed system, power, and I/O Licensed Internal Code (LIC). Click View system information to examine current LIC levels, including retrievable levels. Click Select advanced features to update managed system and power LIC with more options and additional targeting choices.
Select the type of action to perform
Start Change Licensed Internal Code wizard
View system information
Select advanced features
OK
Cancel
Help
Done

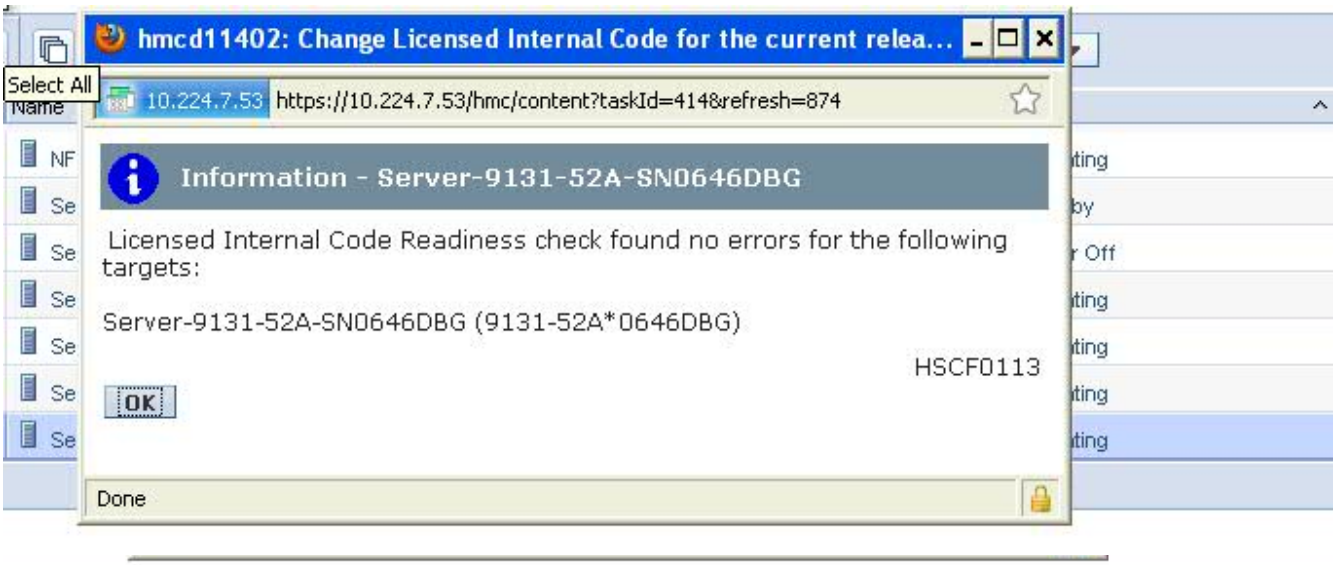

hmcd11402: Change Licensed Internal Code for the current relea...
Select All
Name
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=874
Information - Server-9131-52A-SN0646DBG
Licensed Internal Code Readiness check found no errors for the following targets:
Server-9131-52A-SN0646DBG (9131-52A*0646DBG)
HSCF0113
OK
Done

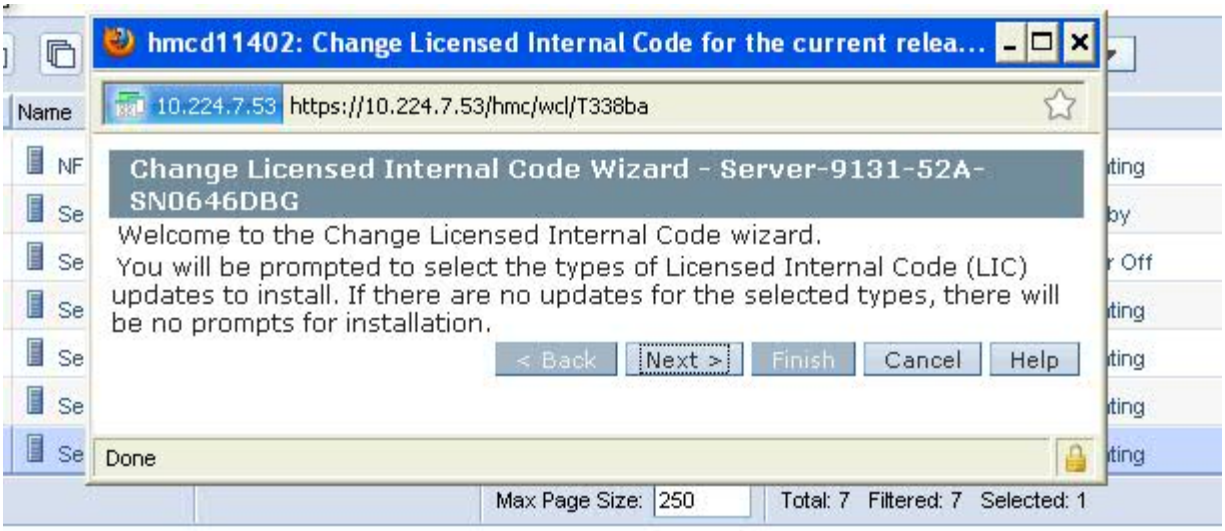
hmcd11402: Change Licensed Internal Code for the current relea...
10.224.7.53
https://10.224.7.53/hmc/wcl/T338ba
Change Licensed Internal Code Wizard - Server-9131-52A-SN0646DBG
Welcome to the Change Licensed Internal Code wizard.
You will be prompted to select the types of Licensed Internal Code (LIC) updates to install. If there are no updates for the selected types, there will be no prompts for installation.
< Back
Next >
Finish
Cancel
Help
Done
Name
Max Page Size: 250
Total: 7 Filtered: 7 Selected: 1

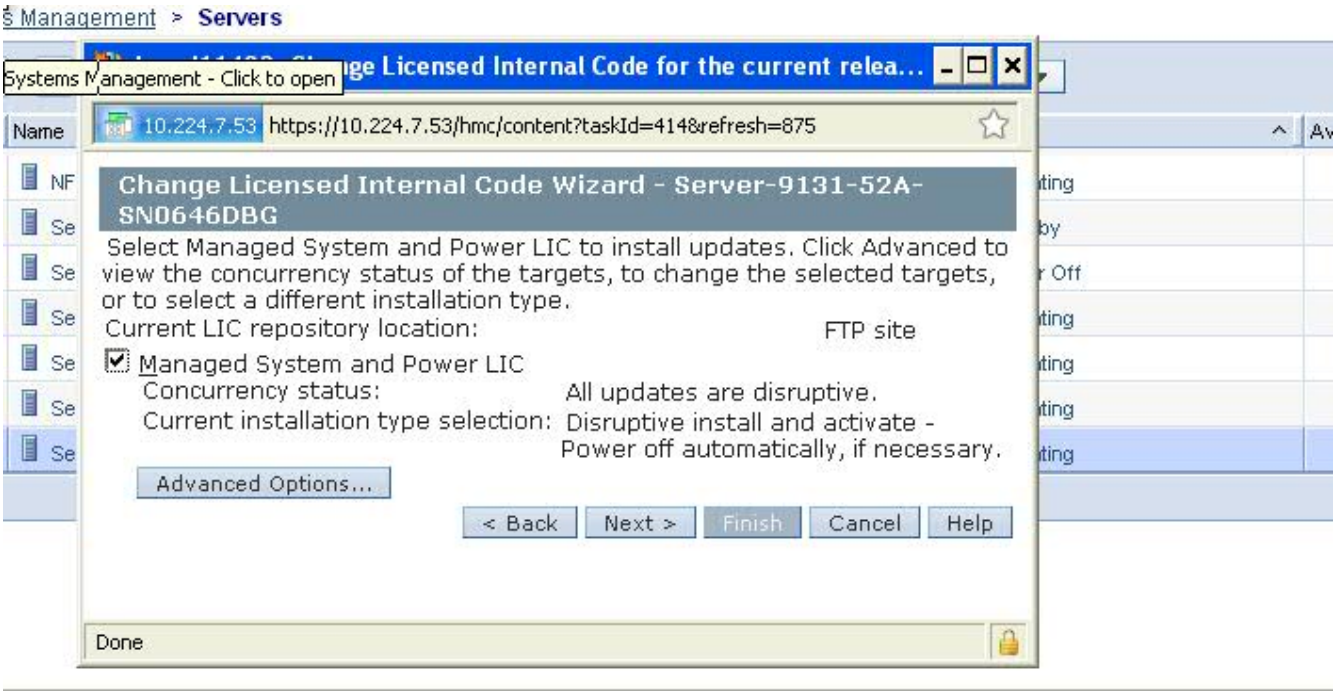

s Management > Servers
Systems Management - Click to open
Change Licensed Internal Code for the current relea...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=875
Change Licensed Internal Code Wizard - Server-9131-52A-SN0646DBG
Select Managed System and Power LIC to install updates. Click Advanced to view the concurrency status of the targets, to change the selected targets, or to select a different installation type.
Current LIC repository location: FTP site
Managed System and Power LIC
Concurrency status: All updates are disruptive.
Current installation type selection: Disruptive install and activate - Power off automatically, if necessary.
Advanced Options...
< Back
Next >
Finish
Cancel
Help
Done
Name

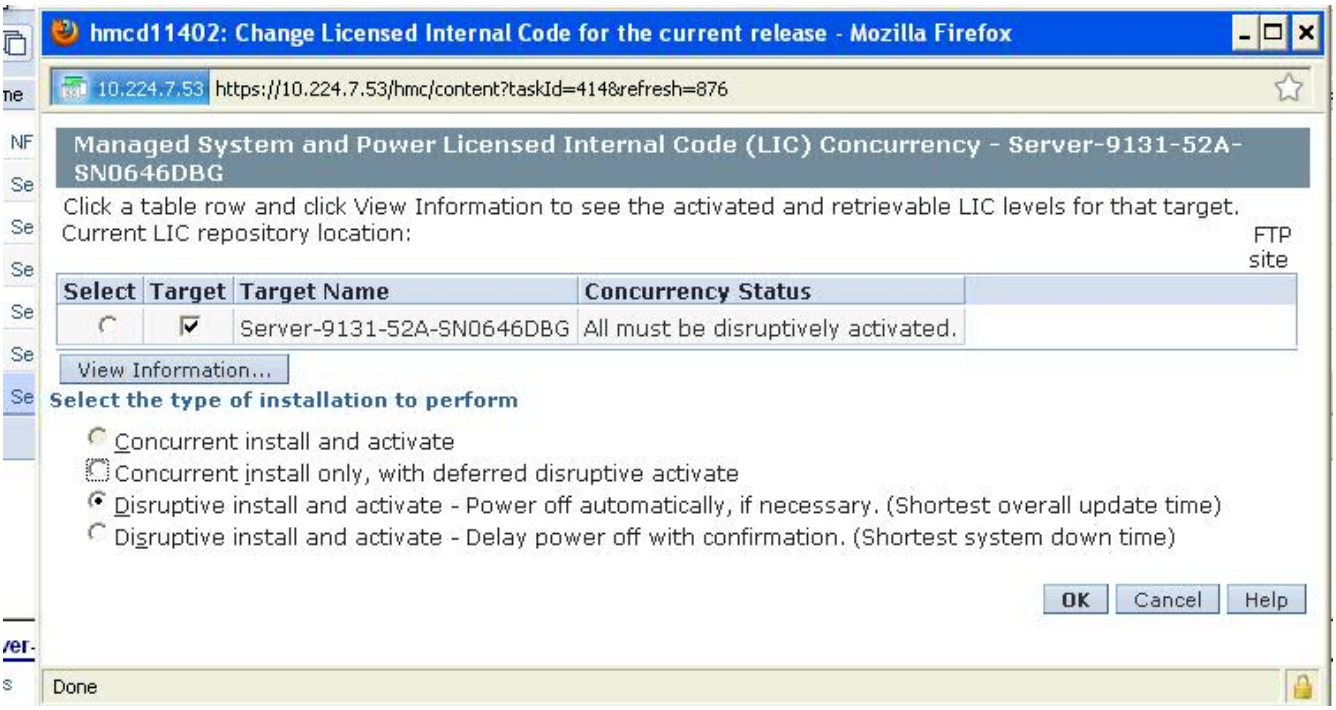

hmcd11402: Change Licensed Internal Code for the current release - Mozilla Firefox
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=876
Managed System and Power Licensed Internal Code (LIC) Concurrency - Server-9131-52A-SN0646DBG
Click a table row and click View Information to see the activated and retrievable LIC levels for that target.
Current LIC repository location:
FTP site
Select
Target
Target Name
Concurrency Status
Server-9131-52A-SN0646DBG
All must be disruptively activated.
View Information...
Select the type of installation to perform
Concurrent install and activate
Concurrent install only, with deferred disruptive activate
Disruptive install and activate - Power off automatically, if necessary. (Shortest overall update time)
Disruptive install and activate - Delay power off with confirmation. (Shortest system down time)
OK
Cancel
Help
Done



Change Licensed Internal Code for the current release
Console License Agreement -...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=415&refresh=878
IBM License Agreement for Machine Code
You accept the terms of this IBM License Agreement for Machine Code ("Agreement") by your initial use of a Machine that contains Machine Code.
The term "Machine Code" means microcode, basic input/output system code (called "BIOS"), utility programs,
Some third party code ("Separately Licensed Code") is provided to you under the specific terms of different license agreements. Such license agreements and any notices or information associated with them may be found in a README file titled "/opt/hsc/data/browser /en_US/hsc_license_readme.html". Future updates or fixpacks may also contain such code components. Your use of each listed third party component is subject solely to the terms and conditions of such other license agreement. By using or not uninstalling such third party code you acknowledge and agree to all such license agreements, notices and information, including those provided only in the English language. IBM provides the Separately Licensed Code on an "AS IS" basis. IBM AND THIRD PARTIES DISCLAIM ANY AND ALL EXPRESS AND IMPLIED WARRANTIES AND CONDITIONS.
Usage of the Hardware Management Console is subject to the terms and conditions of the following license agreement.
Accept
Do Not Accept
Done

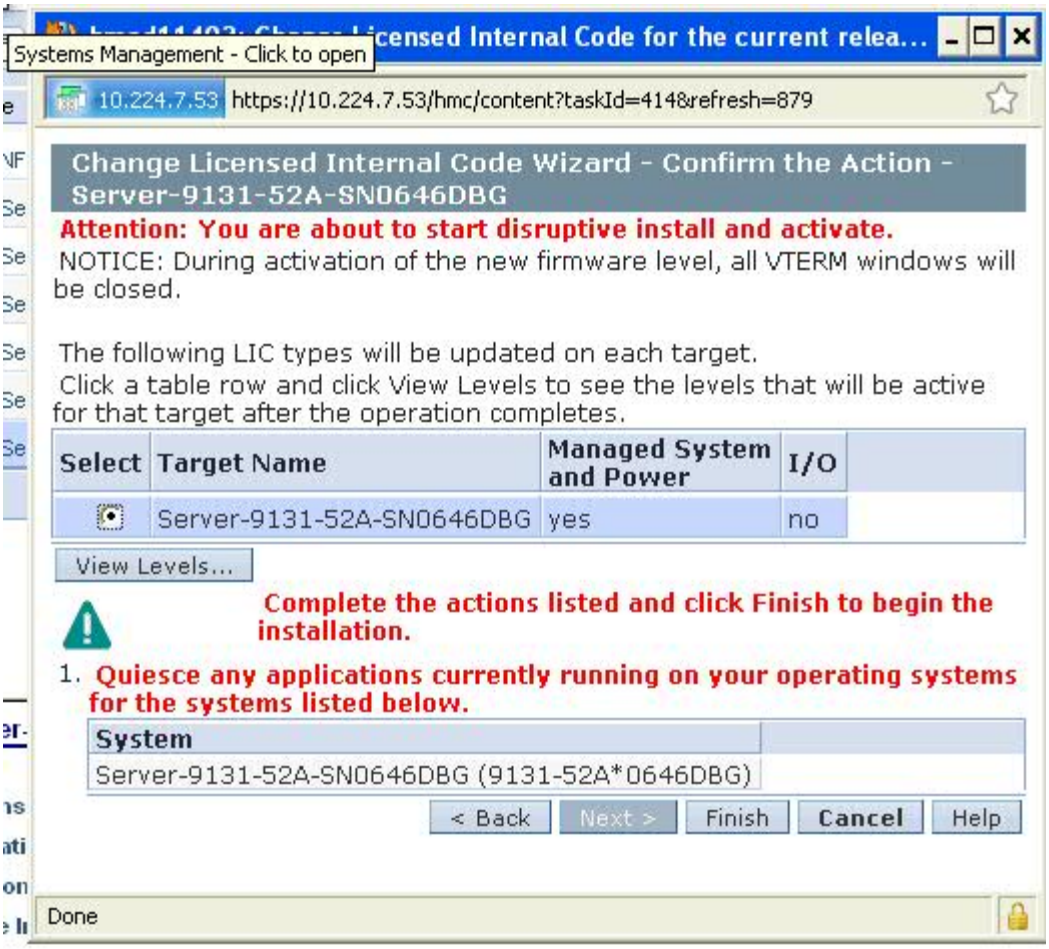



To check Current level which we are going to update → click on View levels

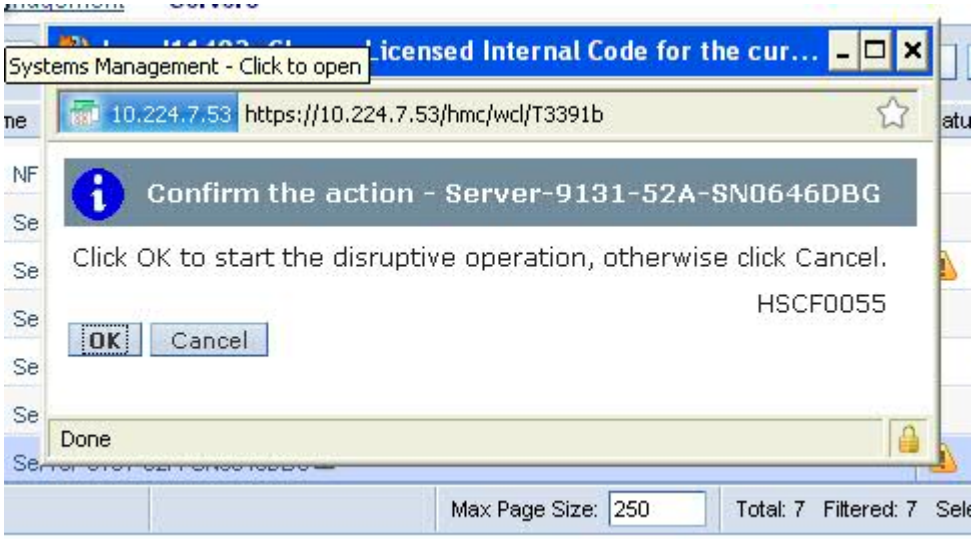

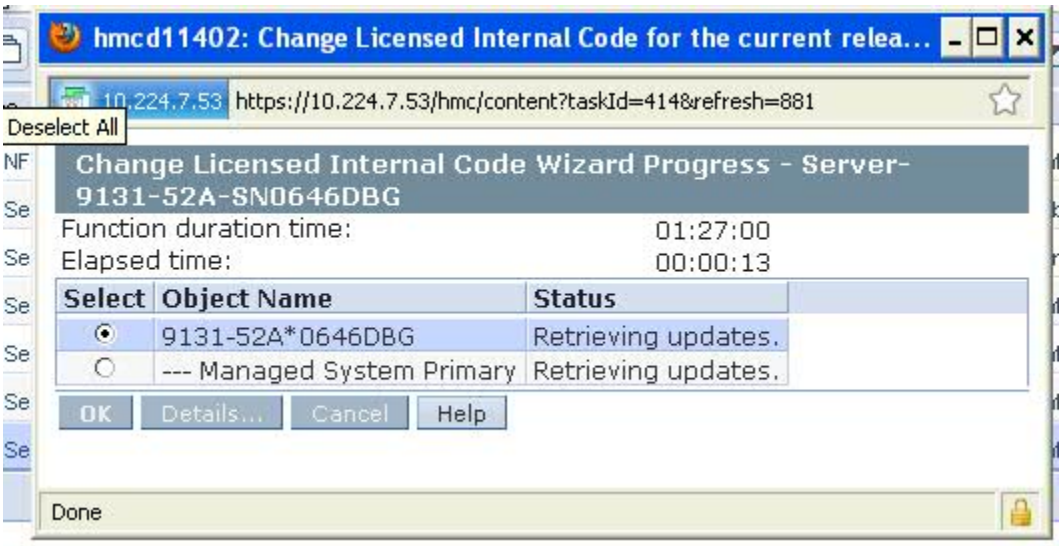

hmcd11402: Change Licensed Internal Code for the current relea...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=881
Deselect All
Change Licensed Internal Code Wizard Progress - Server-9131-52A-SN0646DBG
Function duration time: 01:27:00
Elapsed time: 00:00:13
Select
Object Name
Status
9131-52A*0646DBG
Retrieving updates.
--- Managed System Primary
Retrieving updates.
OK
Details...
Cancel
Help
Done

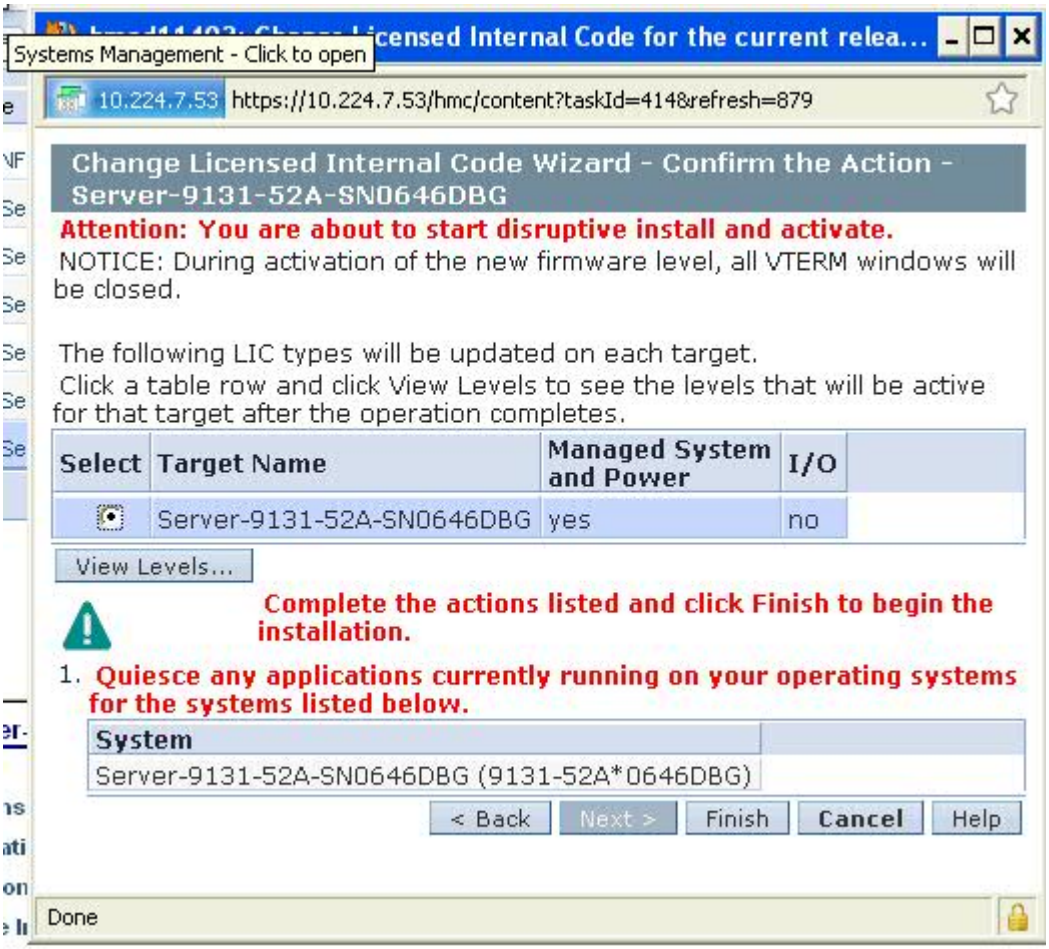

Systems Management - Click to open
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=879
Change Licensed Internal Code Wizard - Confirm the Action - Server-9131-52A-SN0646DBG
Attention: You are about to start disruptive install and activate.
NOTICE: During activation of the new firmware level, all VTERM windows will be closed.
The following LIC types will be updated on each target.
Click a table row and click View Levels to see the levels that will be active for that target after the operation completes.
Select
Target Name
Managed System and Power
I/O
Server-9131-52A-SN0646DBG
yes
no
View Levels...
Complete the actions listed and click Finish to begin the installation.
1. Quiesce any applications currently running on your operating systems for the systems listed below.
System
Server-9131-52A-SN0646DBG (9131-52A*0646DBG)
< Back
Next >
Finish
Cancel
Help
Done

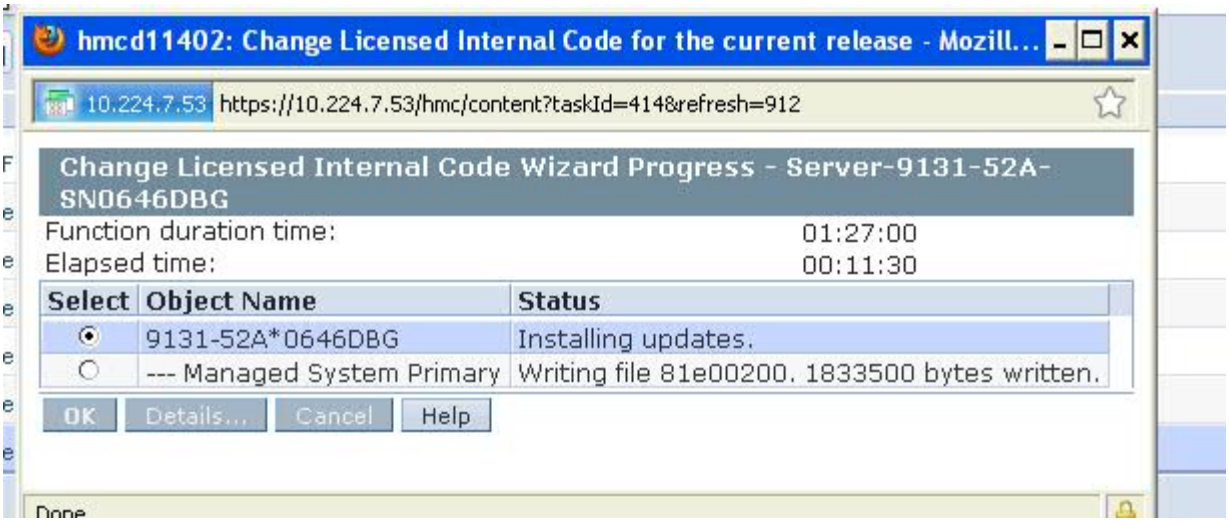
hmcd11402: Change Licensed Internal Code for the current release - Mozill...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=912
Change Licensed Internal Code Wizard Progress - Server-9131-52A-SN0646DBG
Function duration time: 01:27:00
Elapsed time: 00:11:30
Select
Object Name
Status
9131-52A*0646DBG
Installing updates.
--- Managed System Primary
Writing file 81e00200. 1833500 bytes written.
OK
Details...
Cancel
Help
Done

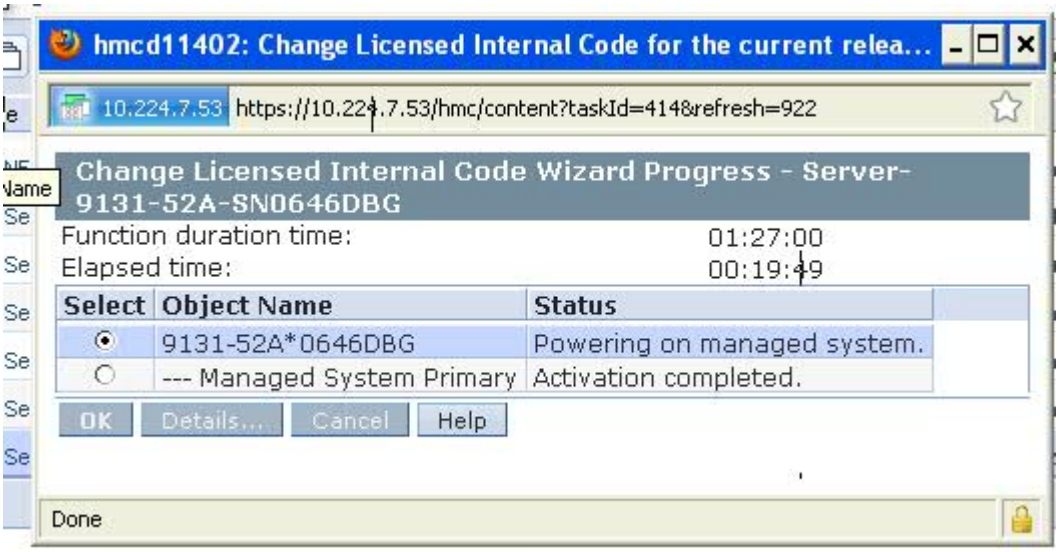
hmcd11402: Change Licensed Internal Code for the current relea...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=922
Change Licensed Internal Code Wizard Progress - Server-9131-52A-SN0646DBG
Function duration time: 01:27:00
Elapsed time: 00:19:49
Select
Object Name
Status
9131-52A*0646DBG
Powering on managed system.
--- Managed System Primary
Activation completed.
OK
Details...
Cancel
Help
Done


hmcd11402: Change Licensed Internal Code for the current relea...
10.224.7.53
https://10.224.7.53/hmc/content?taskId=414&refresh=923
Change Licensed Internal Code Wizard Progress - Server-9131-52A-SN0646DBG
Function duration time: 01:27:00
Elapsed time: 00:21:46
Select
Object Name
Status
9131-52A*0646DBG
Completed All Updates.
--- Managed System Primary
Completed All Updates.
OK
Details...
Cancel
Help
Done

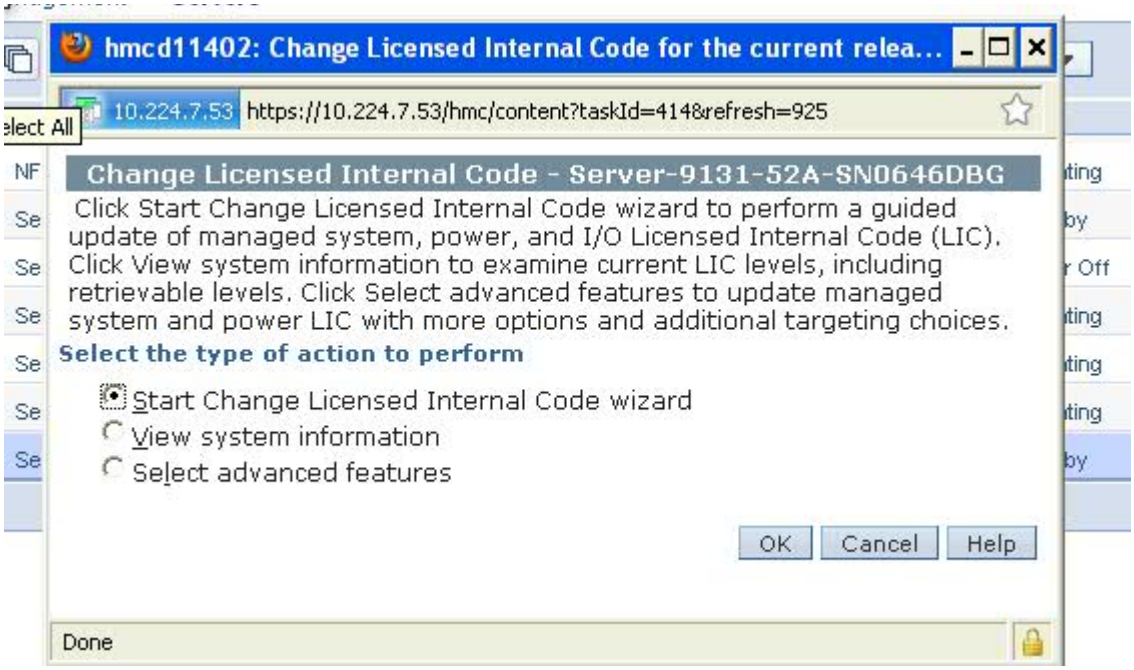

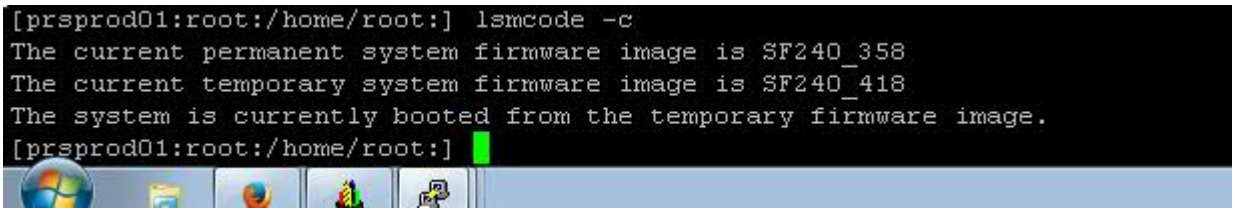


```
[prsprod01:root:/home/root:] lsmcode -c
The current permanent system firmware image is SF240_358
The current temporary system firmware image is SF240_418
The system is currently booted from the temporary firmware image.
[prsprod01:root:/home/root:] date
Sat 27 Jun 07:15:44 2015
[prsprod01:root:/home/root:] uname -a
AIX prsprod01 3 5 0003DFFAD700
[prsprod01:root:/home/root:]
```

```
[prsprod01:root:/home/root:] prtconf |more
System Model: IBM,9131-52A
Machine Serial Number: 0646DBG
Processor Type: PowerPC_POWER5
Number Of Processors: 1
Processor Clock Speed: 1648 MHz
CPU Type: 64-bit
Kernel Type: 64-bit
LPAR Info: 1 prsprod01
Memory Size: 896 MB
Good Memory Size: 896 MB
Platform Firmware level: Not Available
Firmware Version: IBM,SF240_418
Console Login: enable
Auto Restart: true
Full Core: false

Network Information
        Host Name: prsprod01
        IP Address: 10.214.2.49
        Sub Netmask: 255.255.255.0
        Gateway: 10.214.2.1
        Name Server: 10.215.3.57
        Domain Name: centre1.uk.boots.com

Paging Space Information
        Total Paging Space: 1792MB
        Percent Used: 16%


Volume Groups Information
==============================================================================
rootvg:
PV_NAME           PV STATE          TOTAL PPs   FREE PPs    FREE DISTRIBUTION
hdisk3            active            546         432         109..57..48..109..109
==============================================================================

datavg:
PV_NAME           PV STATE          TOTAL PPs   FREE PPs    FREE DISTRIBUTION
hdisk1            active            546         409         110..00..81..109..109
hdisk2            active            546         409         88..00..103..109..109
==============================================================================

INSTALLED RESOURCE LIST

The following resources are installed on the machine.
+/- = Added or deleted from Resource List.
*   = Diagnostic support not available.
```

rename /etc/niminfo file and then run below on client lpar

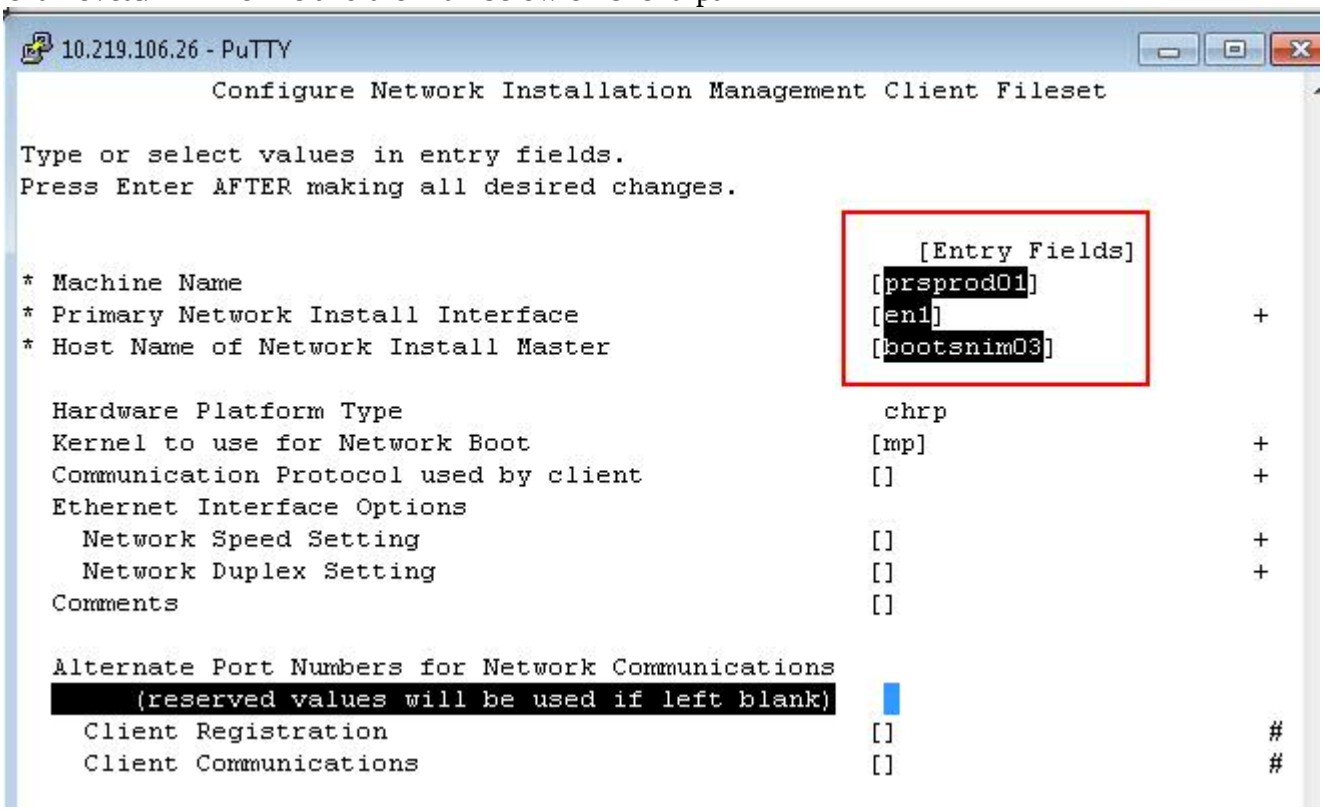

take backup of /etc/sendmail.cf and /etc/motd file to nim server

```
[prsprod01:root:/home/root:] prtconf |more
System Model: IBM,9131-52A
Machine Serial Number: 0646DBG
Processor Type: PowerPC_POWER5
Number Of Processors: 1
Processor Clock Speed: 1648 MHz
CPU Type: 64-bit
Kernel Type: 64-bit
LPAR Info: 1 prsprod01
Memory Size: 896 MB
Good Memory Size: 896 MB
Platform Firmware level: Not Available
Firmware Version: IBM,SF240_418
Console Login: enable
Auto Restart: true
Full Core: false

Network Information
        Host Name: prsprod01
        IP Address: 10.214.2.49
        Sub Netmask: 255.255.255.0
        Gateway: 10.214.2.1
        Name Server: 10.215.3.57
        Domain Name: centre1.uk.boots.com

Paging Space Information
        Total Paging Space: 1792MB
        Percent Used: 16%

Volume Groups Information
==============================================================================
rootvg:
PV_NAME           PV STATE          TOTAL PPs   FREE PPs    FREE DISTRIBUTION
hdisk3            active            546         432         109..57..48..109..109
==============================================================================

datavg:
PV_NAME           PV STATE          TOTAL PPs   FREE PPs    FREE DISTRIBUTION
hdisk1            active            546         409         110..00..81..109..109
hdisk2            active            546         409         88..00..103..109..109
==============================================================================

INSTALLED RESOURCE LIST

The following resources are installed on the machine.
+/- = Added or deleted from Resource List.
*   = Diagnostic support not available.
```

Nimadm pre checks on Master

```
[bootsnim03:root:/home/root:] grep rsh /etc/inetd.conf
shell   stream  tcp6    nowait  root    /usr/sbin/rshd          rshd
#kshell  stream  tcp     nowait  root    /usr/sbin/krshd         krshd
[bootsnim03:root:/home/root:] rsh prsprod01 date
Sat 27 Jun 07:18:50 2015
[bootsnim03:root:/home/root:] rsh prsprod01 uname -a
AIX prsprod01 3 5 0003DFFAD700
[bootsnim03:root:/home/root:] grep telnet /etc/inetd.conf
telnet  stream  tcp6    nowait  root    /usr/sbin/telnetd       telnetd -a
[bootsnim03:root:/home/root:] lssrc -s sshd
Subsystem         Group            PID          Status
 sshd             ssh              6422708      active
[bootsnim03:root:/home/root:]
```

```
[bootsnim03:root:/home/root:] nim -o showres aix61tl8sp1-lpp |grep -i bos.alt_disk_install.rte
  bos.alt_disk_install.rte    6.1.2.1                  I  N usr
  bos.alt_disk_install.rte    6.1.8.0                  S  N usr,root
[bootsnim03:root:/home/root:]  nim -o showres aix61tl8sp1-sport |grep -i bos.alt_disk_install.rte
0042-053 nim: there is no NIM object named "aix61tl8sp1-sport"
[bootsnim03:root:/home/root:] nim -o showres aix61tl8sp1-spot |grep -i bos.alt_disk_install.rte
[bootsnim03:root:/home/root:]  nim -o showres aix61tl8sp1-lpp |grep -i bos.alt_disk_install.rte
  bos.alt_disk_install.rte    6.1.2.1                  I  N usr
  bos.alt_disk_install.rte    6.1.8.0                  S  N usr,root
[bootsnim03:root:/home/root:] lslpp -l bos.alt_disk_install.rte
  Fileset                     Level  State      Description
  ----------------------------------------------------------------------------
Path: /usr/lib/objrepos
  bos.alt_disk_install.rte   6.1.8.0  APPLIED    Alternate Disk Installation
                                                 Runtime

Path: /etc/objrepos
  bos.alt_disk_install.rte   6.1.8.0  APPLIED    Alternate Disk Installation
                                                 Runtime
[bootsnim03:root:/home/root:] nim -o cust nim -o cust -a fil
[bootsnim03:root:/home/root:] nim -o cust -a filesets = bos.alt_disk_install.rte  -a lpp_source =
[bootsnim03:root:/home/root:] nim -o cust -a filesets=bos.alt_disk_install.rte -a lpp_source=aix61tl8sp1-lpp aix61tl8sp1-spot
 Installing filesets ...

 Be sure to check the output from the SPOT installation
 to verify that all the expected software was successfully
 installed.  You can use the NIM "showlog" operation to
 view the installation log file for the SPOT.


+-----------------------------------------------------------------------------+
                  Pre-installation Verification...
+-----------------------------------------------------------------------------+
Verifying selections...done
Verifying requisites...done
Results...

WARNINGS
--------
  Problems described in this section are not likely to be the source of any
  immediate or serious failures, but further actions may be necessary or
  desired.

  Multiple install types for same fileset
  ---------------------------------------
  The following filesets have both a base-level and an update fileset on the
```

```
nim -o showres aix61tl8sp1-lpp |grep -i bos.alt_disk_install.rte
nim -o showres aix61tl8sp1-spot |grep -i bos.alt_disk_install.rte

nim -o cust -a filesets=bos.alt_disk_install.rte -a lpp_source=aix61tl8sp1-lpp aix61tl8sp1-spot

nohup nimadm -j nimadm -c prsprod01 -s aix61tl8sp1-spot -l aix61tl8sp1-lpp -d hdisk0 -Y >>
/tmp/nimadm.op_27JUNE15 &
```