Instruction Level Parallelism Pipeline Hazards and LL Pipeline


Indian Institute of Technology Tirupati

Jaynarayan T Tudu [jtt@iittp.ac.in]

Pipeline Architecture

Review of the basic pipeline architecture

The stages are being shown with the corresponding resources

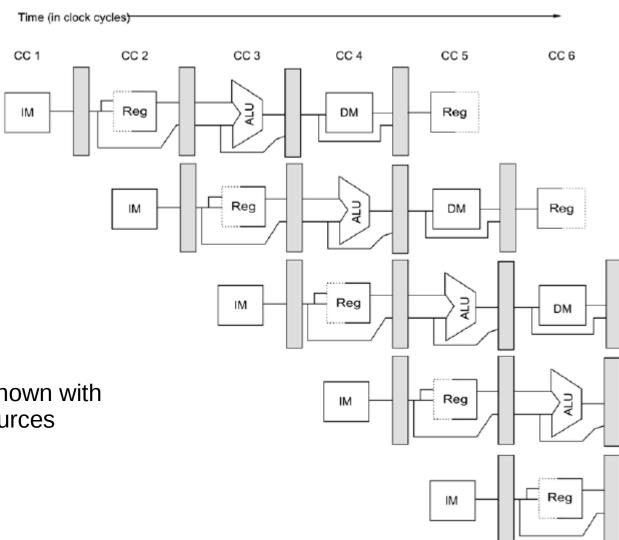

Program Execution Scenario

DADD R1 R2 R3

DSUB R4 R1 R5

AND R6 R1 R7

OR R8 R1 R9

XOR R10 R1 R11


BEQ R1 R4 offset

XOR R1 R4 R11

NOR R10 R4 R11 **▼**

JMP 100(offset)

.....

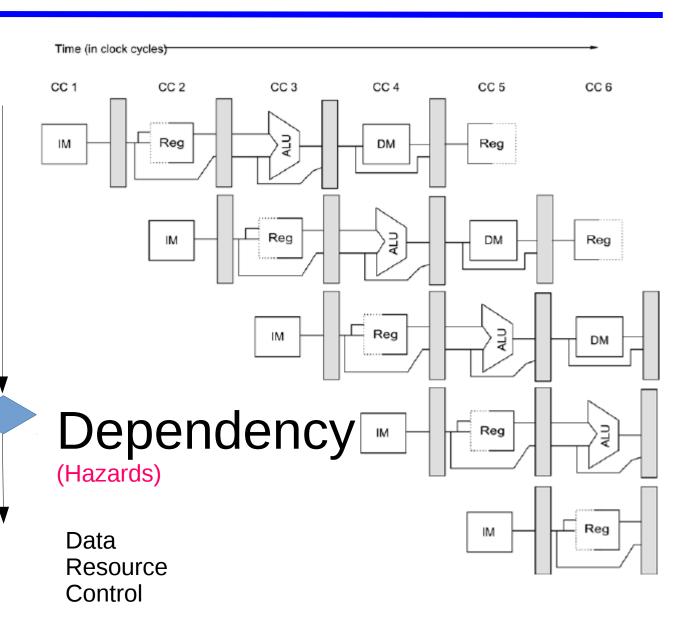


Data Dependency

Time (in clock cycles) CC 1 CC 2 CC 3 CC 4 CC 5 CC 6 Program execution order (in instructions) DADD R1, R2, R3 Reg IM DM Reg IM Reg Reg DSUB R4, R1, R5 IM Reg AND R6, R1, R7 Data Hazards RAW WAR IM OR R8, R1, R9 RAR WAW XOR R10, R1, R11 IM Reg

The challenges of data sharing (Hazards)

Data Dependency: Solutions

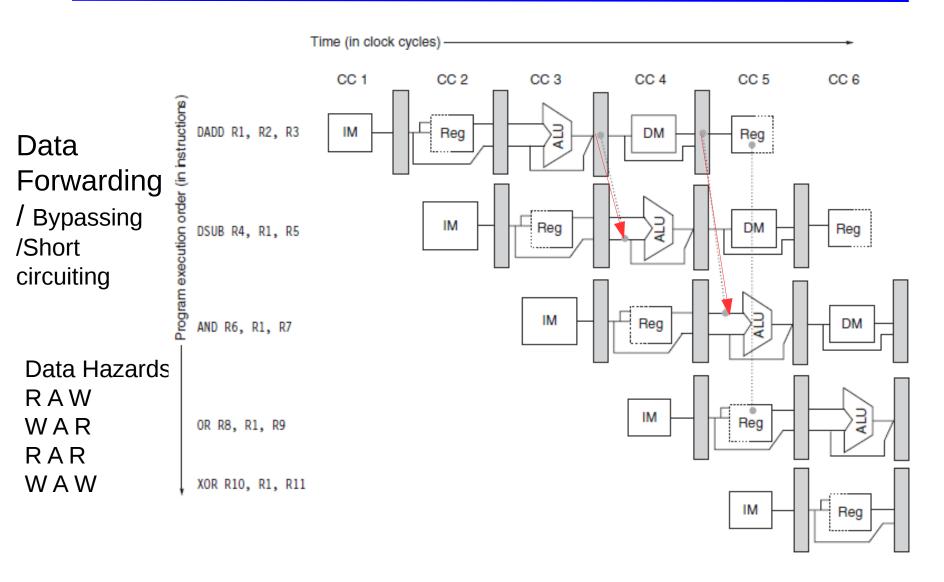

More solutions will be discussed in detail during LL pipeline and superscalar!

Resource Dependency

DADD R1 R2 R3

DSUB R4 R1 R5

AND R6 R1 R7

OR R8 R1 R9


XOR R10 R1 R11

BEQ R1 R4 offset

XOR R1 R4 R11

NOR R10 R4 R11 **↓**

JMP 100(offset)

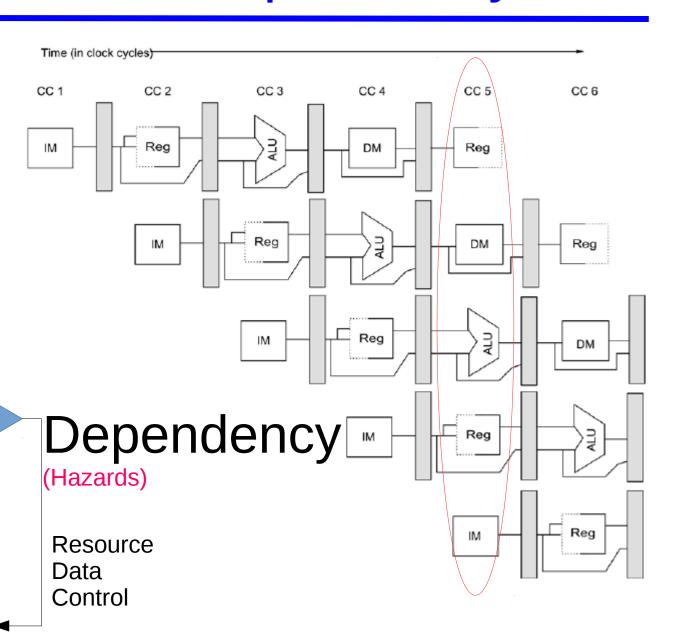

Resource Dependency

DADD R1 R2 R3

DSUB R4 R1 R5

AND R6 R1 R7

OR R8 R1 R9

XOR R10 R1 R11


BEQ R1 R4 offset

XOR R1 R4 R11

NOR R10 R4 R11 **↓**

JMP 100(offset)

.

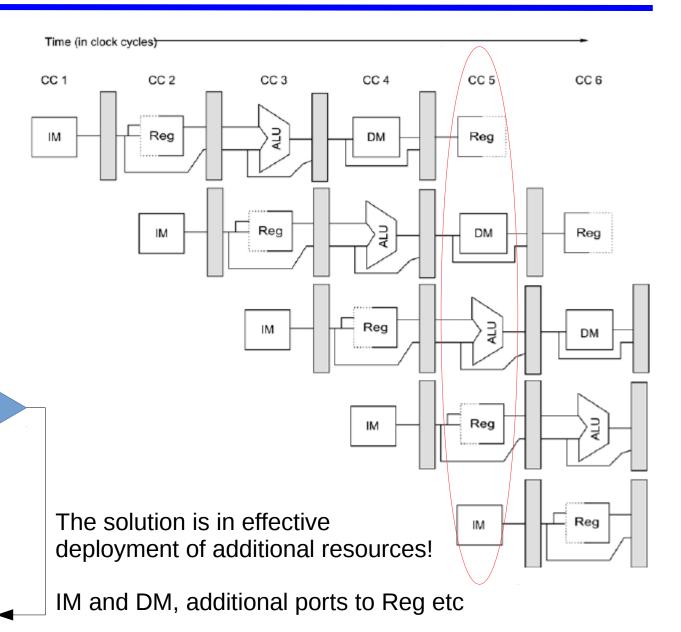

Control Dependency

PC = 00: DADD R1 R2 R3

PC = 04: DSUB R4 R1 R5

PC = 08: AND R6 R1 R7

PC = 16: OR R8 R1 R9

PC = 20: XOR R10 R1 R11

PC = 24: BEQ R1 R4 offset


PC = 28: XOR R1 R4 R11

PC = 32: NOR R10 R4 R11


PC = 36: JMP 100(offset)

.

PC = 24 + offset:

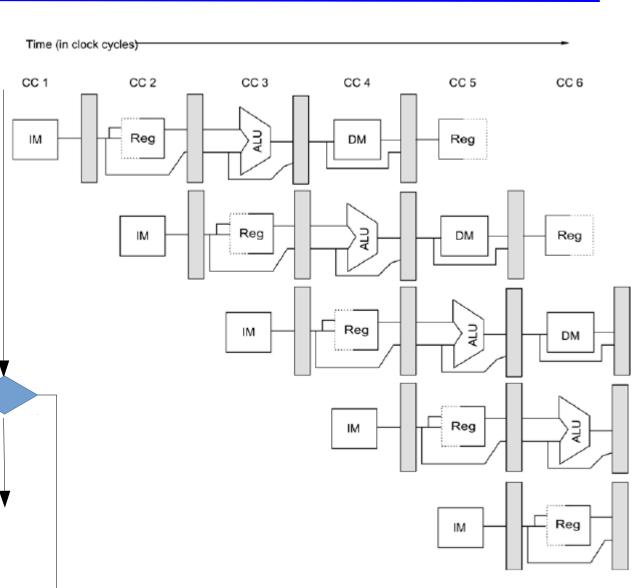

Branch Prediction: Control Dependency

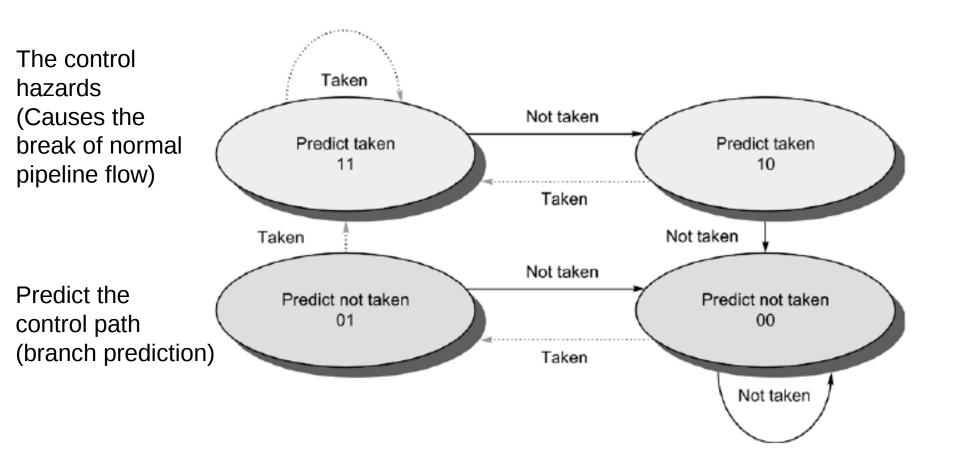


^{*} Advanced branch predictors will be covered during Super-scalar architecture

Branch Prediction: Control Dependency

This requires two things:

- Branching decision (taken or Not taken)
- Branch target address (effective address)

Both have been moved to ID, Just we don't want to wait!

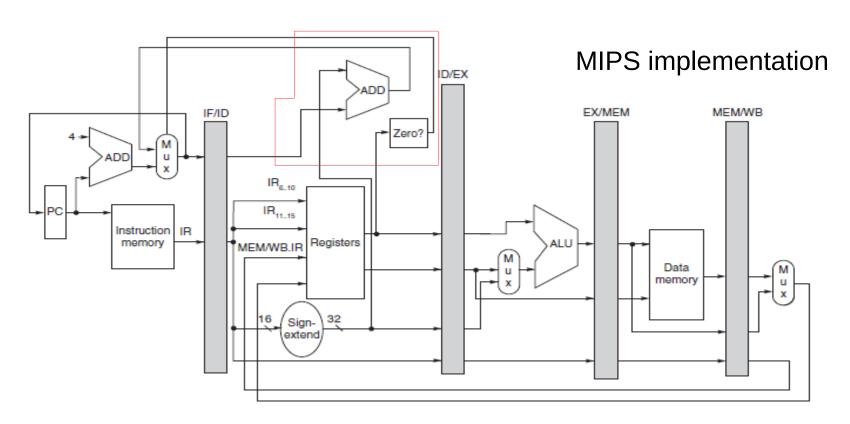


* Advanced branch predictors will be covered during Super-scalar architecture

Branch Prediction: Control Dependency

This requires two things:

- Branching decision (taken or Not taken)
- Branch target address (effective address)

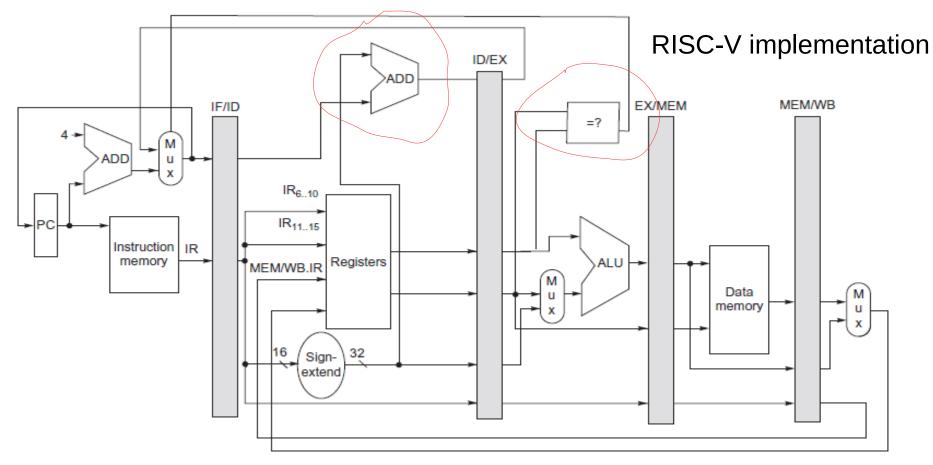

^{*} Advanced branch predictors will be covered during Super-scalar architecture

Performance with Hazards


Hazards are causing pipeline to stall – extra cycle penalty!

In ideal pipeline: cycle per instruction = 1.

Therefore, with hazards, the cycle per instruction = 1 + stall cycles per instruction

The above equation could be expressed also as follow:

Deep Pipeline Architecture

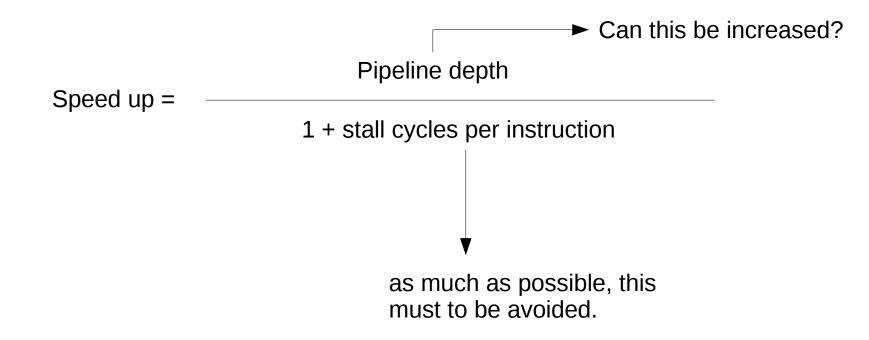

The question is how to increase pipeline depth without increasing stall cycles?

Analyzing the Execution stage!


Long Latency Pipeline

Multiple units in EX stage

Integer Unit
Floating point/Integer multiply
FP Adder
FP/Integer Divider

Assumption:

Each of the execution unit is non-pipeline.

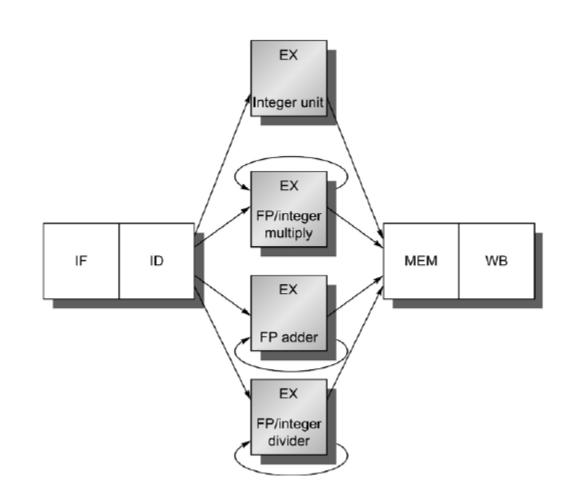

How to decide on which unit or where do a deeper pipeline is needed?

FP Pipeline Architecture

To decide which unit to be pipelined for performance gain, we use the following specification.

Functional unit	Latency	Initiation interval
Integer ALU	0	1
Data memory (integer and FP loads)	1	1
FP add	3	1
FP multiply (also integer multiply)	6	1
FP divide (also integer divide)	24	25

Latency: number of cycles between the production and the consumption of the results (it helps designer to decide on reducing stalls).

Initiation interval: elapsed number of cycle between issuing of two operations of a given type

(For pipeline this would be always 1, for multi-cycle it may not be)

.

FP Pipeline Architecture


Block diagram of deeper pipeline based on the given specification.

Integer ALU: only **one** stage

FP/Integer Multiply: fully pipelined with **seven** stages.

FP adder: fully pipelined with **four** stages.

Floating-point division is **not fully pipelined** but multicycle (24 cycles).

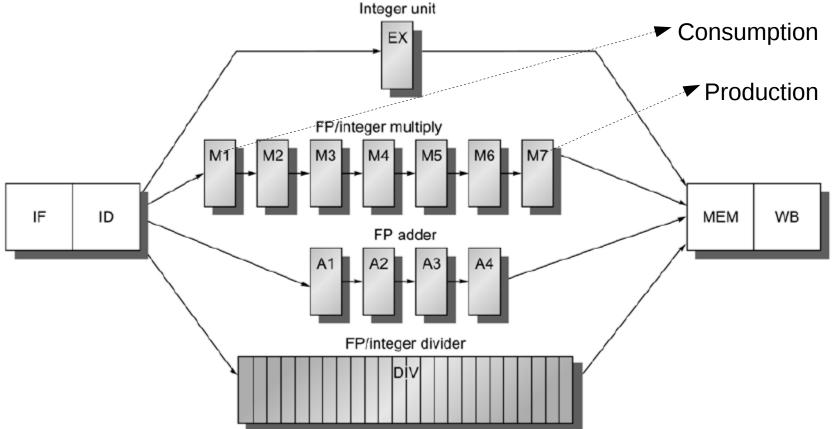

FP Pipeline Architecture

Latency and Initiation interval for each of the pipeline units. Note that in case of FP divider the initiation interval is 25 instead of 1.

Functional unit	Latency	Initiation interval
Integer ALU	0 (= 1 - 1)	1
Data memory (integer and FP loads)	1 (= 2 - 1)	1
FP add	₃ (= 4 - 1)	1
FP multiply (also integer multiply)	6 (= 7 - 1)	1
FP divide (also integer divide)	24 (= 25 - 1) 25

Latency: number of cycles between production of results and the consumption of results

Initiation interval: elapsed number of cycles between issuing of two operations/instructions of a given type.

FP Pipeline Architecture: Timing

Timing of independent set of instructions.

Progress of time (clock cycle)											
fmul.d	IF	ID	MI	M2	М3	M4	M5	M6	M7	MEM	WB
fadd.d		IF	ID	A1	A2	A3	(A4)	MEM	WB		
fadd.d			IF	ID	EX	(MEM)	WB				
fsd				IF	ID	EX	MEM	WB			

Data is required at this stage

Results are available at this stages

Figure is from 6th edition of the text book, however, for your reading you may take 5th edition, There are some printing bugs in 6th edition.

FP Pipeline Architecture: Hazards


Hazards and forwarding in long latency pipeline:

Data dependency (Consumer must get the updated data)
Control (Unpredictable control path)
Structural hazards (No two stages can access a single resources at a time)

- 1) Because the divide unit is non-pipeline, structural hazard can occur. This needs to be detected and the issuing instructions need to be stalled.
- 2) Due to varying running time of each of the instruction, the number of register writes required in a cycle is more than 1.
- 3) WAW hazards are possible, because instruction no longer reach WB in order. Note that WAR hazards shall never occur since the read happens in ID stage and the write at WB stage.
- 4) Instruction can complete in different order that they were issued (issued in order but completed in out-of-order), this may leads to imprecise exception handling.
- 5) Because of longer latency of operations, the stalls due to RAW hazards will be more frequent.

FP Pipeline Architecture: Hazards


Hazards and forwarding in long latency pipeline:

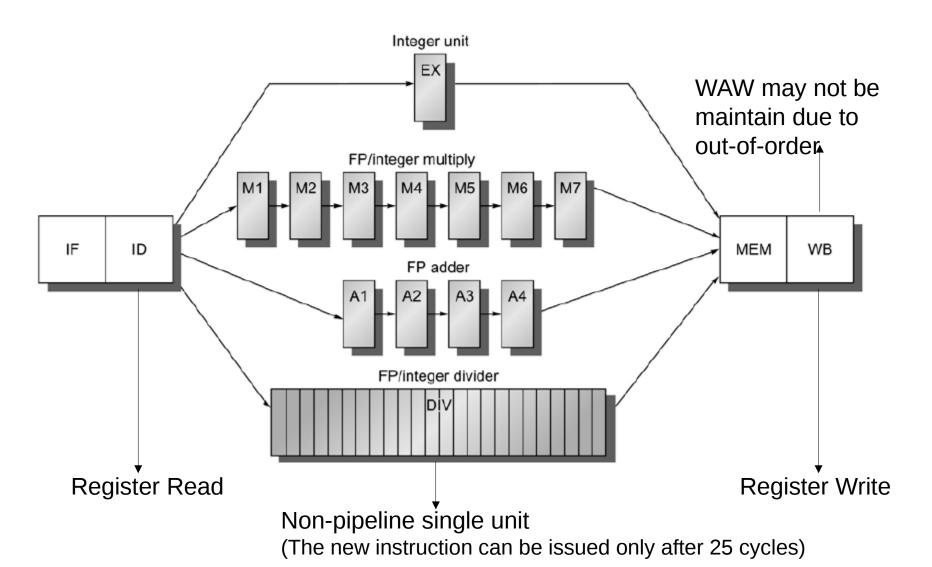

FP Pipeline Architecture: Hazards

Pipeline stalls due to data dependency hazards.

Solution: stall and forwarding

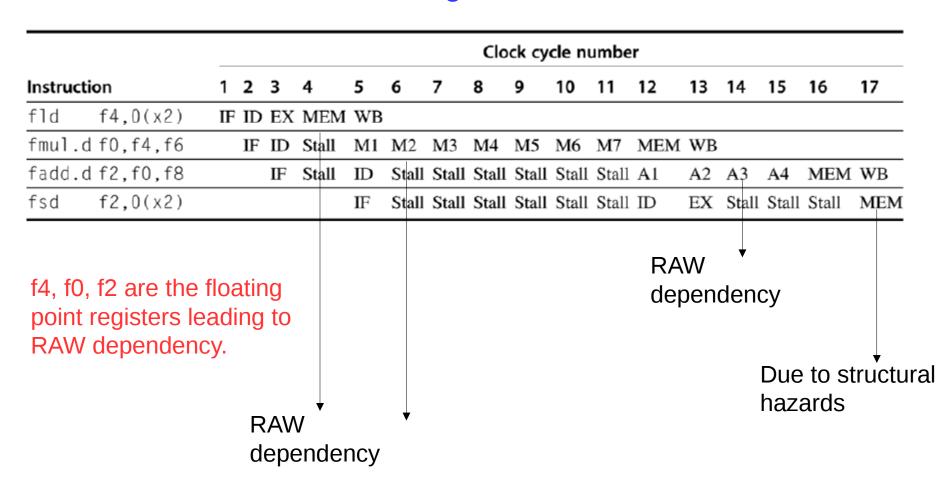

FP Pipeline Architecture: Solutions

Solutions to hazards.

Two data dependency hazards: RAW and WAW are of interest And the structural hazards.

Structural hazards

M/AM

		Clock cycle number									
Instruction	1	2	3	4	5	6	7	8	9	10	11
fmul.d f0,f4,f6	IF	ID	M 1	M2	М3	M4	M5	M6	M7	MEM	WB
		IF	ID	EX	MEM	WB					
			IF	ID	EX	MEM	WB				****
fadd.d f2,f4,f6				IF	ID	A 1	A2	A3	A4	MEM	WB
					IF	ID	EX	MEM	WB		
						IF	ID	EX	MEM	WB	
fld f2,0(x2)							IF	ID	EX	MEM	WB

Situation for WAW to cause issue: if fld f2, 0(x2) would have been issued a cycle before. fld f2, 0(x2) and fadd.d f2, f4, f6 would cause WAW.

FP Pipeline Architecture: Solutions

Solutions to hazards.

Structural hazards due to WB and MEM:

- detect hazards and stall
- detection can be done at ID stage or at MEM stage
- stall the issue at ID stage or stall before entering to MEM or WB

Solving the WAW hazards:

- delay the issue of fld instruction unitl fadd.d enters to MEM stage
- stop fadd.d to write back its result, and then issue the fld as usual.
- WAW is very rare situation in code.

Hazards among FP and Integer units:

- Hazards can occur among FP instructions or between FP and Integer instruction.
- Having separate register file for FP and Integer unit is a good solution
- Detection of hazards among FP
 - Check for structural hazards
 - Check for RAW hazard
 - Check for WAW hazards

Pipeline Architecture: Exception

The problem due to longer pipeline and out-of-order completion:

```
DIV.D F0, F2, F4
ADD.D F10, F10, F8
SUB.D F12, F12, F14

Exception or interrupts
```

Where should program returns after handling exception? To DIV.D or to SUB.D.

How to maintain precise program state?

Can't afford to lose value of any register!

Pipeline Architecture: Exception

Different situations which are Exception!

- I/O device request
- System Call (invoking OS kernel from user mode)
- Tracing instruction execution
- Break points (like gdb break)
- Integer arithmetic overflow (when a number can't be represented)
- FP arithmetic anomaly (such as NaN)
- Divide by zero
- Page fault (OS intervention is called for)
- Misaligned memory access (you have to do memory alignment)
- Memory protection violation
- Using an undefine instruction
- Hardware malfunction
- Power failure, Reset, Restart etc.

Beyond Pipeline

Question of interest:

How to increase IPC? IPC >= 1 or CPI <= 1.0

Processor Performance revisit:

```
Performance = time/program
```

= Instruction/Program x Cycle/Instruction x Time/Cycle


- In the 1980's (decade of pipelining):
 - CPI: between 5.0 to 1.15
- In the 1990's (decade of superscalar):
 - CPI: between 1.15 to 0.5 (best case)
- In the 2000's (decade of multicore):
 - Focus on thread-level parallelism, CPI near to 0.33 (best case)

Amdhal's Law

Speed up = P1/P2

P1: Performance for entire task using the enhancement


P2: Performance for entire task without enhancement

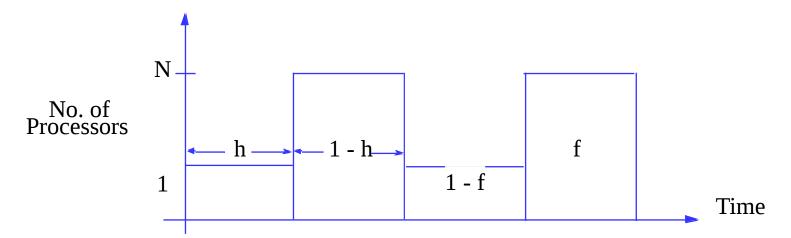

- h = fraction of time in serial code
- f = fraction that is vectorizable
- v = speedup for f
- Overall speedup:

$$Speedup = \frac{1}{1 - f + \frac{f}{v}}$$


Amdhal's

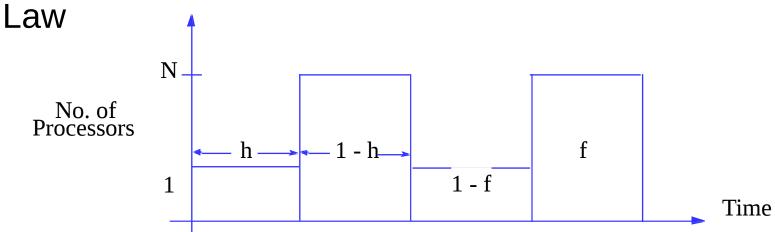

- Sequential bottle neck
- Even if v is infinite, the performance is limited by non-vectorizable code i.e 1-f


$$\lim_{v \to \infty} \frac{1}{1 - f + \frac{f}{v}} = \frac{1}{1 - f}$$

Pipeline Performance Model:

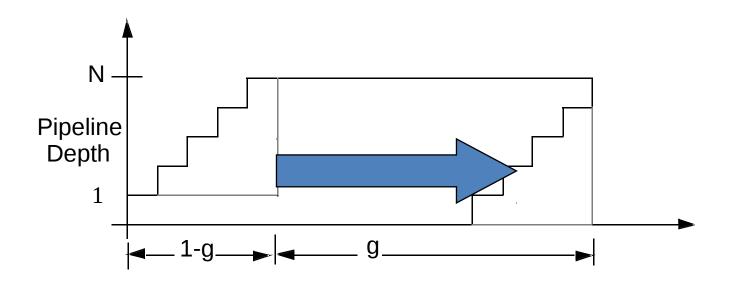

- g = fraction of time pipeline is filled
- 1-g = fraction of time pipeline is not filled (stalled)


Pipeline Performance Model:

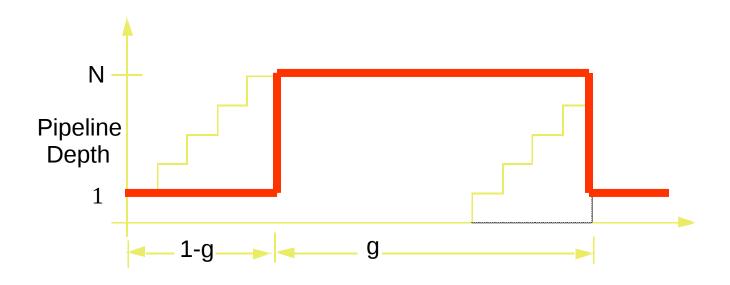

- g = fraction of time pipeline is filled
- 1-g = fraction of time pipeline is not filled (stalled)

Beyond Scalar Pipeline

n = pipeline stages
f = fraction of
 Vectorizable code
s = scalar size
 (for base pipeline
 s = 1)

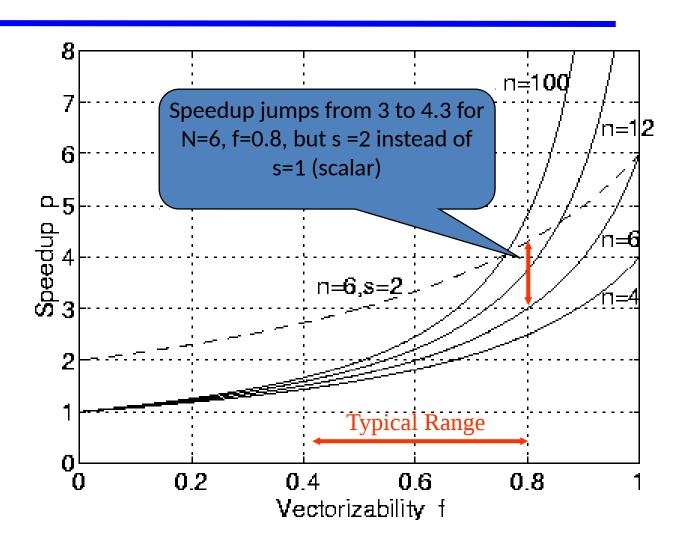


Speedup(N) =
$$\frac{1}{(1-f) + f/N}$$

f - fraction vectorizableN - number of processors

The challenge of

Amdhal's Law

Look at the 90% and 95%

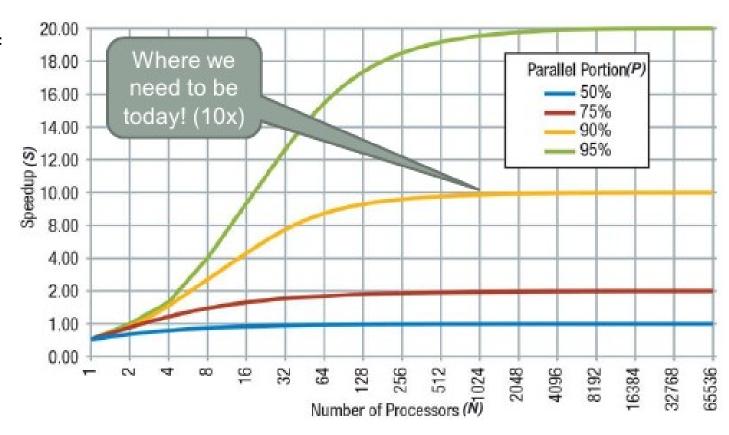


- IBM RISC Experience
 - Control and data dependencies add 15%
 - Best case CPI of 1.15, IPC of 0.87
 - Deeper pipelines (higher frequency) magnify dependence penalties
- This analysis assumes 100% cache hit rates
 - Hit rates approach 100% for some programs
 - Many important programs have much worse hit rates

Classifying ILP Machines

Baseline scalar RISC:

- Issue parallelism = IP = 1 [only one instruction]
- Operation latency = OP = 1
- Peak IPC = 1

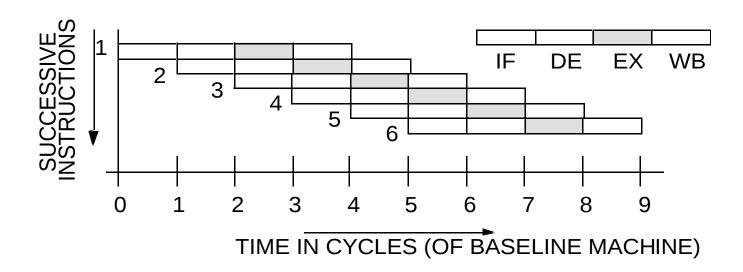


- Jouppi, WRL Reserch Report 89/7, 1989

Classifying ILP Machines

Super-pipelined:

- Cycle time (minor cycle) = 1/m of baseline
- Issue parallelism = IP = 1 inst/minor cycle
- Operation latency = OP = m minor cycles
- Peak IPC = m instr / major cycle (m x speedup?)

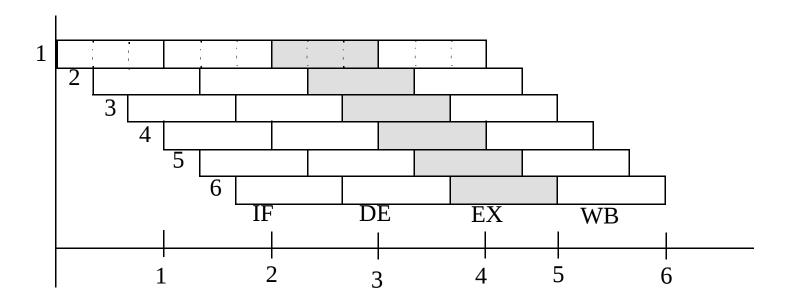

- Jouppi, WRL Reserch Report 89/7, 1989

Limits on Instruction Level Parallelism (ILP)

Ideas

IPC achieved

Weiss and Smith [1984]	1.58
Sohi and Vajapeyam [1987]	1.81
Tjaden and Flynn [1970]	1.86 (Flynn's bottleneck)
Tjaden and Flynn [1973]	1.96
Uht [1986]	2.00
Smith et al. [1989]	2.00
Jouppi and Wall [1988]	2.40
Johnson [1991]	2.50
Acosta et al. [1986]	2.79
Wedig [1982]	3.00
Butler et al. [1991]	5.8
Melvin and Patt [1991]	6
Wall [1991]	7 (Jouppi disagreed)
Kuck et al. [1972]	8
Riseman and Foster [1972]	51 (no control dependences)
Nicolau and Fisher [1984]	90 (Fisher's optimism)


Beyond Scalar Limit

- Go beyond single instruction pipeline, achieve IPC > 1
- Dispatch multiple instructions per cycle
- Provide more generally applicable form of concurrency (not just vectors)
- Geared for sequential code that is hard to parallelize otherwise
- Exploit fine-grained or instruction-level parallelism (ILP)

Classifying ILP Machines

Super-scalar pipeline:

- Issue parallelism = IP = n inst / cycle
- Operation latency = OP = 1 cycle
- Peak IPC = n instr / cycle (n x speedup?)

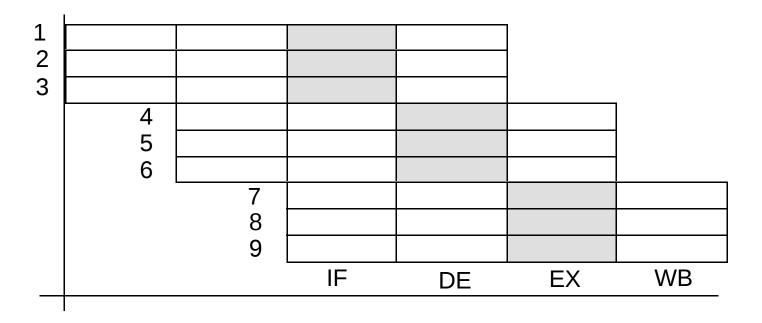


- Jouppi, WRL Reserch Report 89/7, 1989

Classifying ILP Machines

VLIW: Very Long Instruction Word:

- Issue parallelism = IP = n inst / cycle
- Operation latency = OP = 1 cycle
- Peak IPC = n instr / cycle = 1 VLIW / cycle

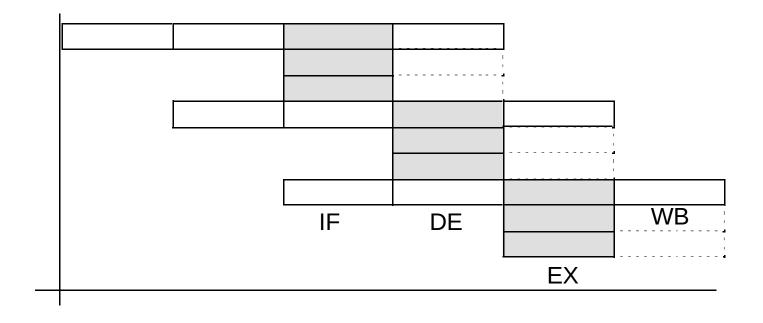


- Jouppi, WRL Reserch Report 89/7, 1989

Very Long Instruction Word Processor

VLIW: Idea and Motivation

- To overcome the difficulty of finding parallelism in machine-level object code.
- In a VLIW processor, multiple instructions are packed together and issued in parallel to an equal number of execution units.
- The compiler (not the processor) checks that there are only independent instructions executed in parallel.

VLIW: Very Long Instruction Word

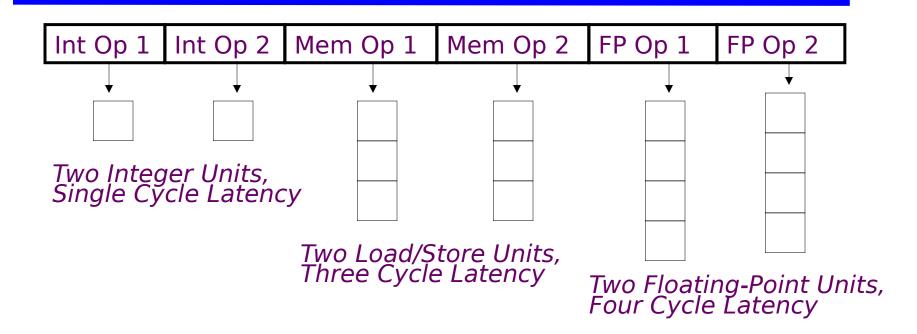

- Multiple operations packed into one instruction
- Each operation slot is for a fixed function
- Constant operation latencies are specified
- Architecture requires guarantee of:
 - Parallelism within an instruction => no x-operation RAW check
 - No data use before data ready => no data interlocks

VLIW Compiler Responsibilities


The compiler:

- Schedules to maximize parallel execution
- Guarantees intra-instruction parallelism
- Schedules to avoid data hazards (no interlocks)
 - Typically separates operations with explicit NOPs

Early VLIW Machines

- FPS AP120B (1976)
 - scientific attached array processor
 - first commercial wide instruction machine
 - hand-coded vector math libraries using software pipelining and loop unrolling
- Multiflow Trace (1987)
 - commercialization of ideas from Fisher's Yale group including "trace scheduling"
 - available in configurations with 7, 14, or 28 operations/instruction
 - 28 operations packed into a 1024-bit instruction word
- Cydrome Cydra-5 (1987)
 - 7 operations encoded in 256-bit instruction word
 - rotating register file

Loop Execution

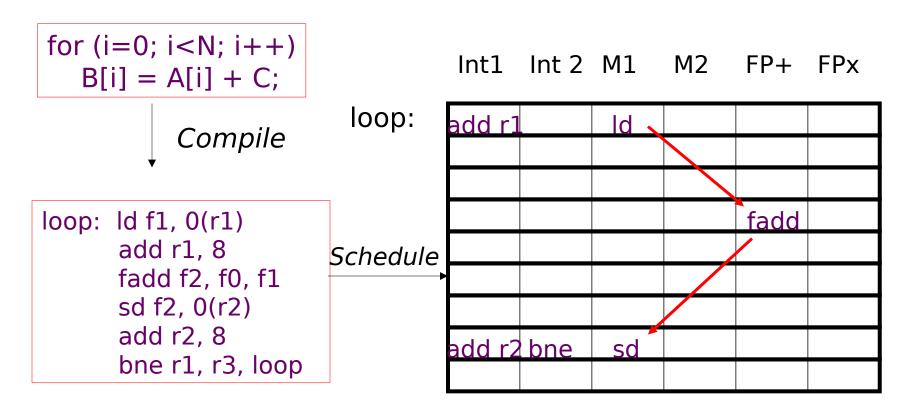

How many FP ops/cycle?

IPC = 1 fadd / 8 cycles = 0.125

Loop Unrolling

```
for (i=0; i<N; i++)

B[i] = A[i] + C;
```


Unroll inner loop to perform 4 iterations at once

```
for (i=0; i<N; i+=4)
{
    B[i] = A[i] + C;
    B[i+1] = A[i+1] + C;
    B[i+2] = A[i+2] + C;
    B[i+3] = A[i+3] + C;
}
```

Need to handle values of N that are not multiples of unrolling factor with final cleanup loop

Scheduling Loop Unrolled Code


Unroll 4 ways

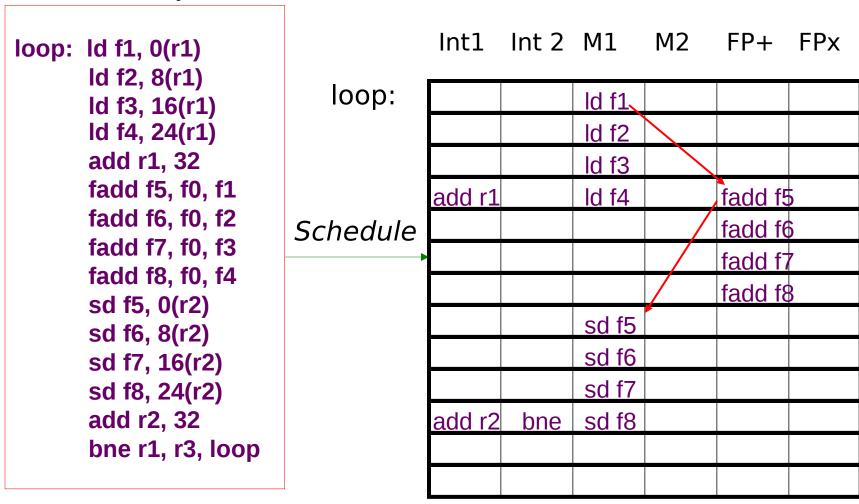

How many FLOPS/cycle?

IPC= 4 fadds / 11 cycles = 0.36


Software Pipelining

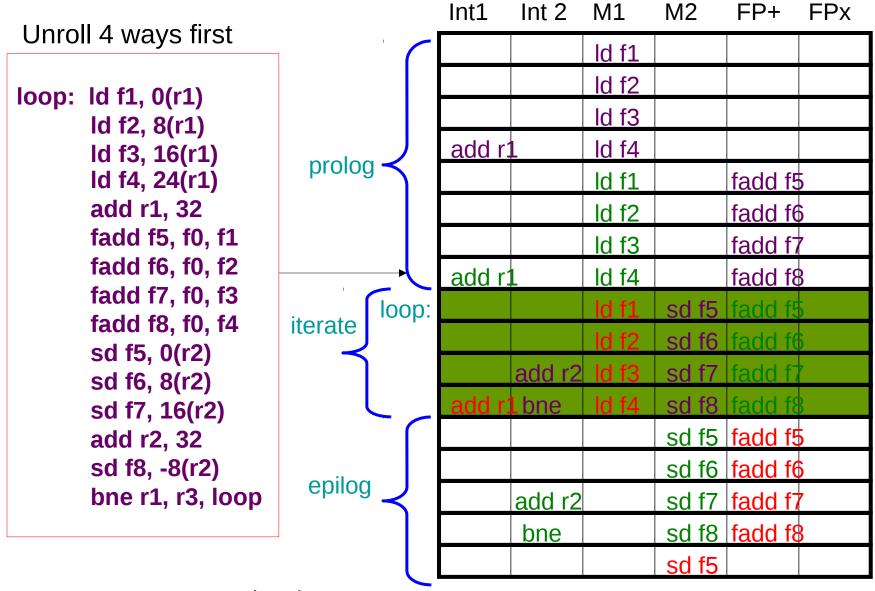

How many FLOPS/cycle?

4 fadds / 4 cycles = 1

Software Pipelining vs. Loop Unrolling

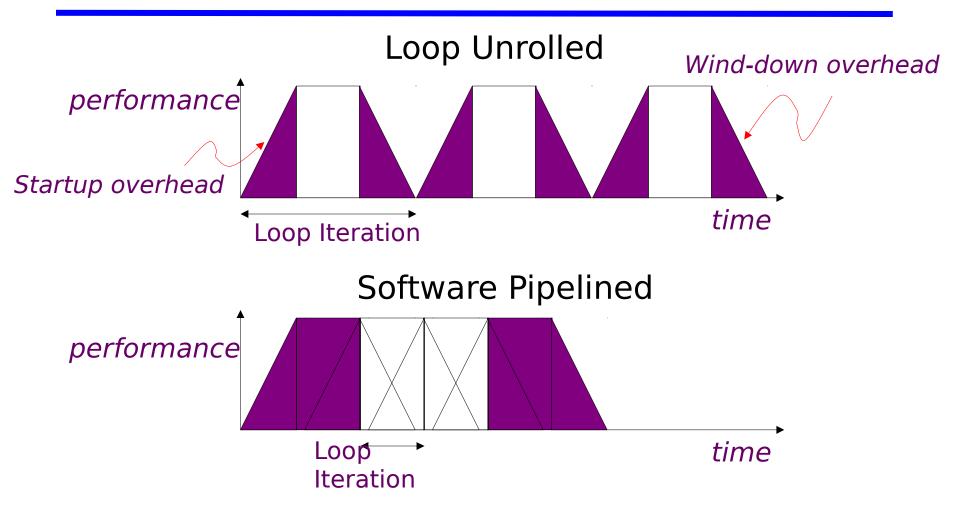

Software pipelining pays startup/wind-down costs only once per loop, not once per iteration

Reference:

- Jouppi, WRL Reserch Report 89/7, 1989
- Appendix C: Computer Architecture Quantitative Approach, 5th Edition. (Pipeline: Basic and Intermediate Concepts)

Next Lecture

Pipeline to continue...