
Process Name/ Title: WI-QAD-QAC-262 Document No: PACKING INSTRUCTION WORK INSTRUCTION Effective Date: July 2, 2024 Customer Code/ Customer: Product Code/Name: 1 Page 1 of 1 Rev. No.: Page No.: 7R0123 TRMX Records/Remarks/ No. Work Procedure/ Illustration **Quality Pointers** 1 Qty/bo 50pcs* 400 8bdls

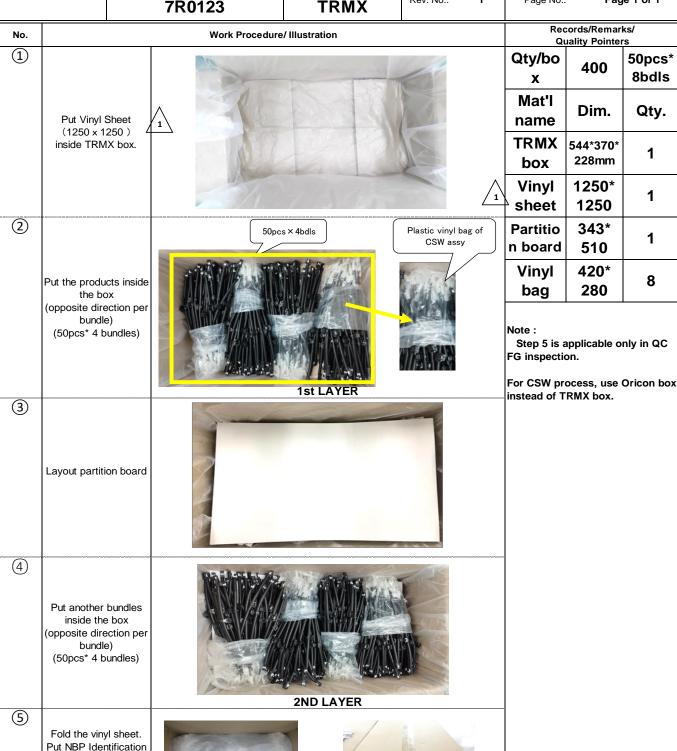

Fold the vinyl sheet.
Put NBP Identification
tag at the top and
tape the flaps (two
side and top portion).
Then Warehouse
Identification tag at





Note : If need to attach 4M tag
Put 4M tag at the left side of the box

							Prepared by	Checked by	Approved by	Noted by	
							ā	1. /	(/		
07/02/24	1	Change vinyl sheet to 1250 x 1250. Transfer from WI-ENG-PDE-570	S. Malabuyoc	R. Pascua	O. Merin	n/a	madern	ML	14		
07/29/22	0	Initial Issue	M. Ariola	J. Loterte	C. Villanueva	A. Arañes		R. Pascua	Q. Merin	N/A	
Eff. Date	Rev. No.	Details of change	Prepared	Checked	Approved	Noted	Establish Date:	July	29, 2022		

right side of the box.