



(50pcs* 2 bundles)

Layout partition board

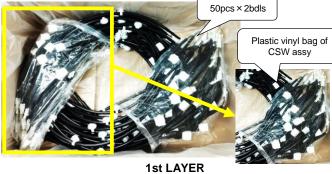

Step 5 is applicable only in QC FG inspection.

For CSW process, use Oricon box instead of TRMX box.

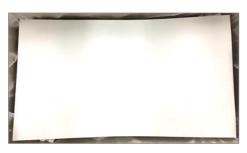

4

(3)

Put another bundles inside the box (opposite direction per bundle) (50pcs* 2 bundles)



2ND LAYER

(5)

Fold the vinyl sheet. Put NBP Identification tag at the top and tape the flaps (two side and top portion). Then Warehouse Identification tag at

right side of the box.





Note : If need to attach 4M tag
Put 4M tag at the left side of the box

Prepared by Reviewed by Approved by 06/21/2024 Change vinyl sheet size to 1250 x 1250. S. Malabuyoc R. Pascua O. Merin malden 08/12/2022 0 J. Loterte C. Villanueva A. Arañes Initial Issue (S) Malabuy Eff. Date Rev. No Details of change