


			WORK INSTRUCTION						Effectivity Date: May 30, 2024			
			Process Name/Title:	OFFLII	NE ASSEMBLY PRO	CESS		Validity Date:		n/a		
			Model code/Part number:	700B / 7N0038-7020B	Customer: TRJ	Car Model: TO	YOTA LAND-CRUISER	Document No.:		WI-ENG-PDE-	385	
			Purpose:	PROTOTYPE	PRE-LAUNCH	MASSPRO		Revision No.:	1	Page No.:	1 of 8	
			nector 6098-3802 (W) Sf 0.3 wires G-B-V L=752±	3mm				JIG:	2. Insertion	Insertion jig A with swtch cover Insertion jig B Locking jig		
N	NO. PROCESS NAME			WORK I	PROCEDURE/ ILLUSTF	RATION		TOOLS/PPE QUALITY POINTERS				
TABLE LAY-OUT Connector 6098-3802 (W) Connector Tray Insertion jig A with swiich cover G-wire L=752±3mm V-wire L=752±3mm Insertion jig B							Safety Instruction Be sure to wear required personal protective equipment during operation (gloves, finger cots, etc.) Housekeeping 1. Maintain and always practice 5's. 2. Personal things on the workplace is prohibited. Keep it in your locker. Alert level For any trouble, inform the Assembly Assistant Supervisor or Line Leader for immediate corrective action.	Be sure to wear required personal protective equipment during operation (gloves, finger cots, etc.) Housekeeping 1. Maintain and always practice 5's. 2. Personal things on the workplace is prohibited. Keep it in your locker. Alert level For any trouble, inform the Assembly Assistant Supervisor or Line Leader for immediate				
				Revision History				Prepared by	Reviewed by	Approved by	Noted by	
05/30/24	1 0	Change p	ore-launch to mass pro.					Olivica A.Hernandez	forf form C.Villanueva	S. A.	n/a	
Eff. Date	Rev. No			Details of Change		Revised Rev			/ 09, 2024			

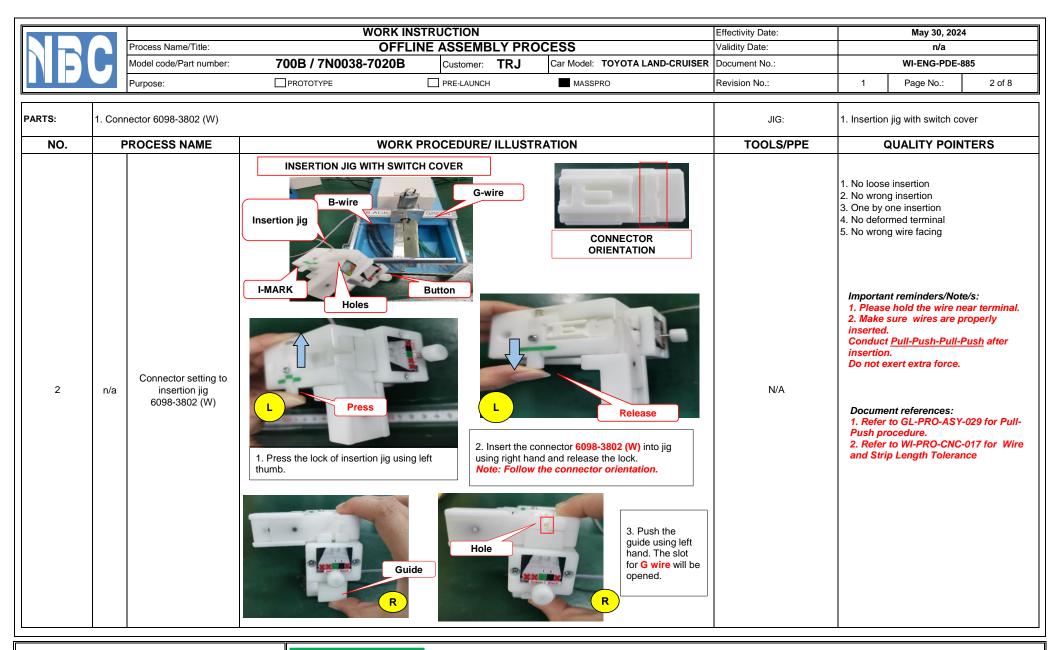


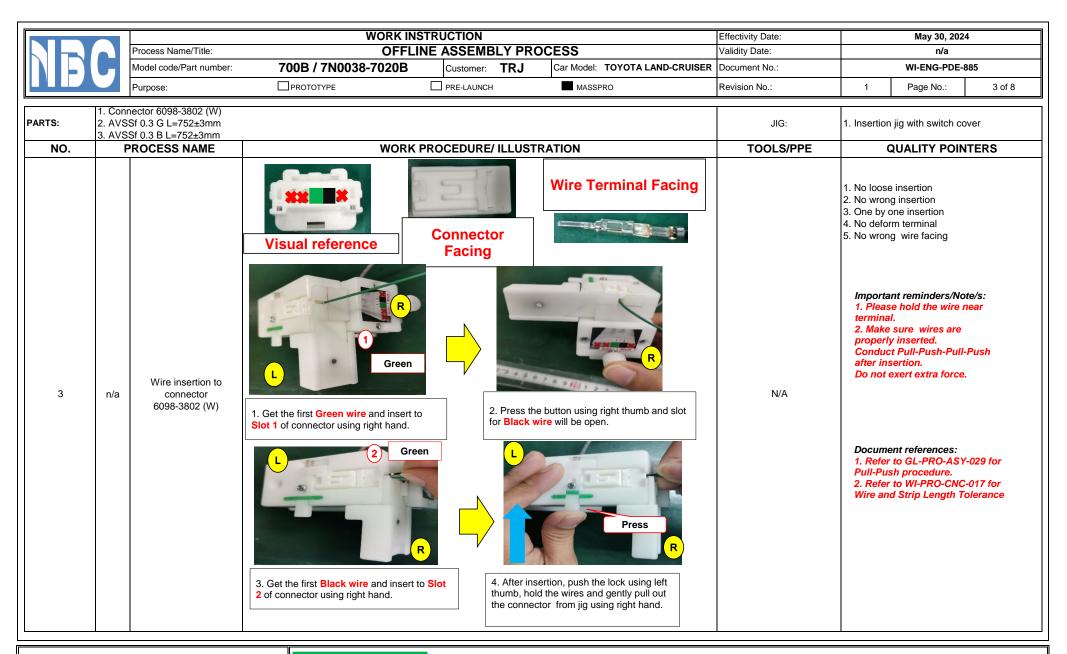

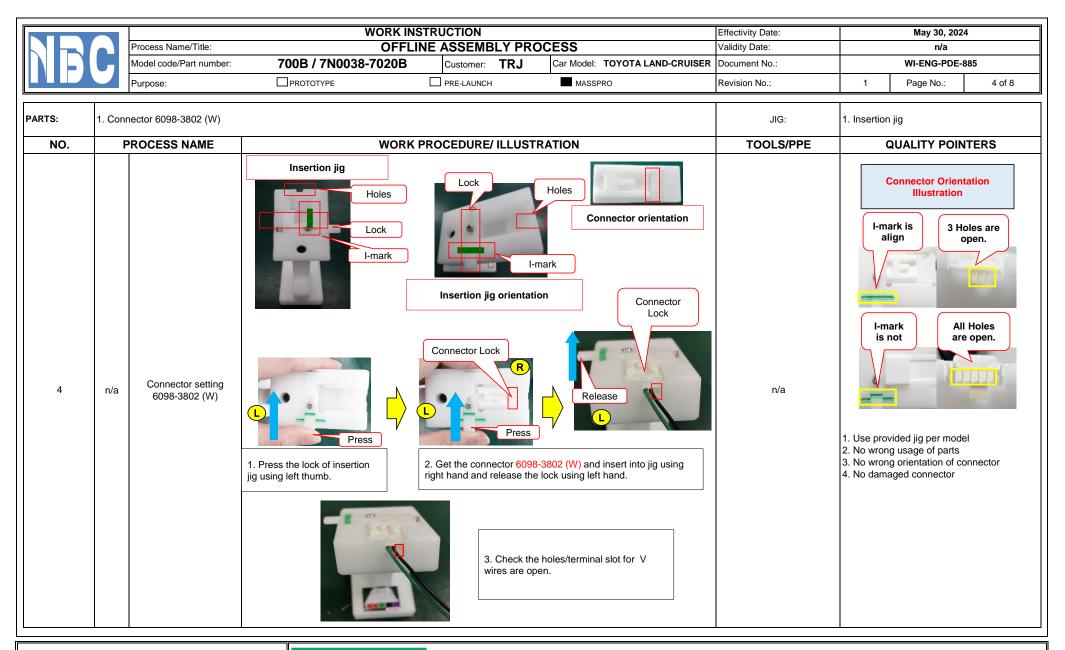

WORK INSTRUCTION Effectivity Date: May 30, 2024									
		Process Name/Title:			ncess	Validity Date:	n/a		
		Model code/Part number:	OFFLINE ASSEMBLY PROCESS 700B / 7N0038-7020B		· ·	WI-ENG-PDE-885		10E	
	7	woder code/Part number:		Customer: TRJ		Document No.:			
		Purpose:	PROTOTYPE	PRE-LAUNCH	MASSPRO	Revision No.:	1	Page No.:	5 of 8
PARTS:	1. Assy	parts Sf 0.3 V L=752±3mm				JIG:	n/a		
	PROCESS NAME		WORK PROCEDURE/ ILLUSTRATION			TOOLS/PPE	OHALITY POINTERS		
NO.	PROCESS NAME		WORK PROCEDURE/ ILLUSTRATION			TOOLS/PPE	QUALITY POINTERS 1. No wrong orientation of connector		
			Visual reference	Connector Facing	Wire Terminal Facing		2. No wrong use of connector 3. No damaged connector 4. No wrong insertion of wires 5. No loose insertion 6. No wrong insertion 7. One by one insertion 8. No deformed terminal 9. No wrong wire facing Important reminders/Note/s: 1. Make sure wires are properly inserted. Conduct Pull-Push-Pull-Push after insertion. Do not exert extra force. 2. Please hold the wire near terminal Document references: 1. Refer to WI-PRO-CNC-017 for Wire and Strip length tolerance.		
5	n/a	Wire insertion to Connector 6098-3802 (W)	Hold the insertion jig using left hand	d. Get the Violet wire and i	insert to connector using right hand.	N/A			
				2. After in pull out thand.	insertion, hold the wires and gently the connector from jig using right				


			WORK INS	Effectivity Date:	May 30, 2024					
		Process Name/Title:	Validity Date:	n/a						
		Model code/Part number:	700B / 7N0038-7020B Customer: TRJ Car Mode		Car Model: TOYOTA LAND-CRUISER	Document No.:	WI-ENG-PDE-885			
		Purpose:	☐PROTOTYPE	PRE-LAUNCH	MASSPRO	Revision No.:	1	Page No.:	6 of 8	
PARTS:	1. Assy	parts				JIG:	1. Locking	jig		
NO.	F	PROCESS NAME	WORK PROCEDURE/ ILLUSTRATION			TOOLS/PPE	(QUALITY POINTERS		
6	n/a	Connector lock	1. Load the connector into the jig holding both side of the connector tip first. Right thumb-Lower Left thumb-middle 3. Press the lower parts of connector using right hand while left hand hold the middle. Right thumb-middle Left thumb-middle 5. Lift then press the connector in the middle using left and right hand.	or ling 1 6. Ensure th	2. Press the lower part of connector to fully insert into the locking jig. Right thumb-upper Left thumb-middle 4. Press the upper part of connector using right hand while left hand holding the middle.	LOCKING JIG	Impor 1. Mar damag	vided locking jig p ck/half-locked con tant reminder/No nual locking may yed connector loc OOD	nector. te/s: cause	

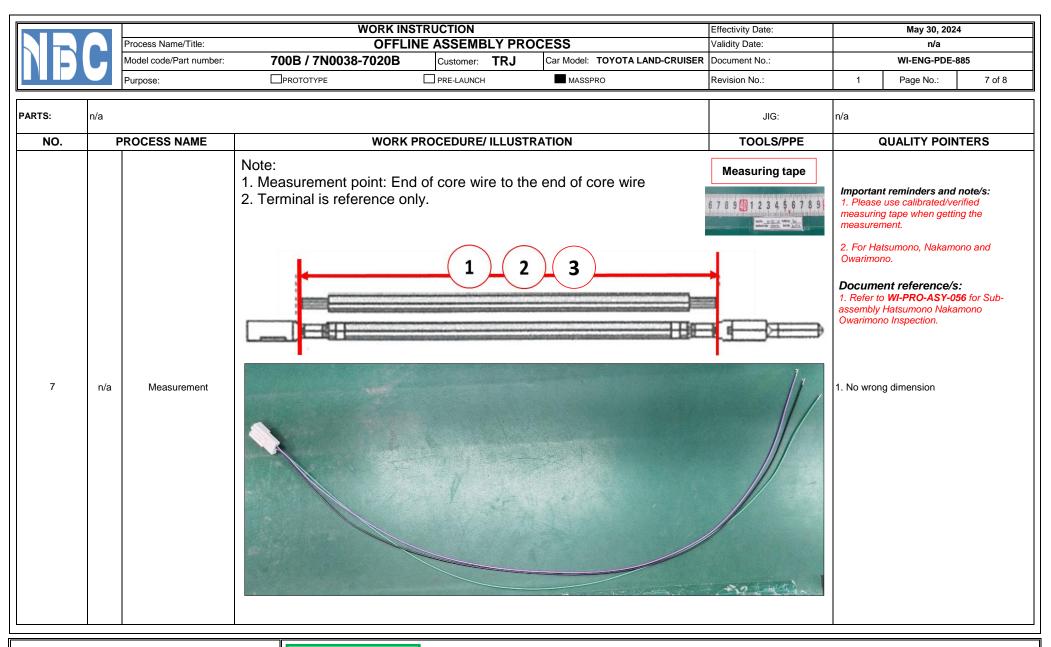

			Effectivity Date: May 30, 2024			4			
		Process Name/Title:	Validity Date:		n/a	ı/a			
		Model code/Part number:	700B / 7N0038-7020B	Customer: TRJ	Car Model: TOYOTA LAND-CRUISER	Document No.:		WI-ENG-PDE-8	385
		Purpose:	PROTOTYPE	PRE-LAUNCH	MASSPRO	Revision No.:	1	Page No.:	8 of 8
PARTS:	n/a					JIG:	n/a		
VISUAL INSPCETION/QUALITY CHECKPOINTS									

OFFLINE

7N0038-7020B

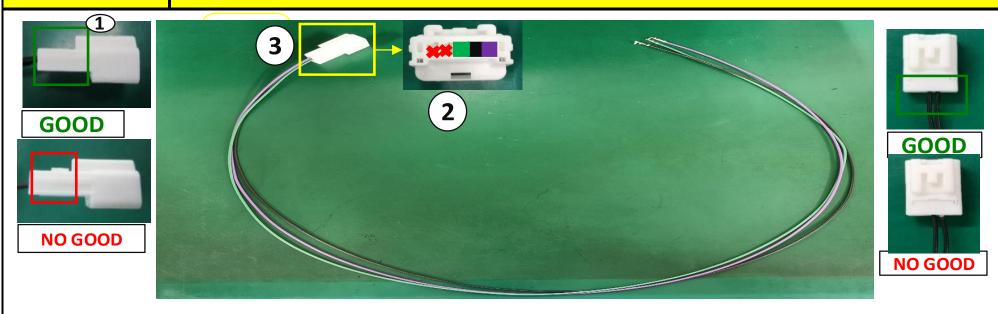

1 No Unlock/
Halflocked Connector

2 No Wrong Insert

3 No Deformed terminal

CONFIDENTIAL: Any misuse or misappropriation, including unauthorized copying, reproduction in any form, disclosure or publishing of this document or any information herein is strictly prohibited.