

No.

Process Name/ Title:
PACKING INSTRUCTION

INSTRUCTION Document No:

Effective Date:

0

WI-ENG-PDE-1275

May 15, 2025

Records/Remarks/

WORK INSTRUCTION
Product Code/Name:

7L0165

Work Procedure/ Illustration

Customer Code: TRQSS

Rev. No.:

Page No.:

Page 1 of 1

Put Vinyl
Sheet (1250 x 1250)
inside carton box.



Quality Pointers									
Qty/box	64	32pcs *2bdls							
Mat'l name	Dim.	Qty.							
DC carton	1131*781	1							
Vinyl sheet	1250*1250	1							
Vinyl bag	420*280	2							


Put first bundle of products. (32pcs/bundle)



Note:
Step number 4 is applicable only in QC FG Inspection.

Put second bundles of products in opposite direction. (32pcs/bundle)



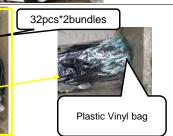

Fold the vinyl sheet then close the flaps and put ID tag (Inner tag at the top of the plastic and Outer tag at the right side of the front of the box).







Note: If need to attach 4M tag Put 4M tag at the left side

							Prepared	Reviewed	Approved	Noted
							$\cap$	Month ittour	4	
05/15/25	0	Initial issue	A.Hernandez	C. Villanueva	A. Arañes	n/a	Okuw Conduy A.Hernandez	C. Villanueva	A. Arañes	n/a
Eff./Rev. Date	Rev. no.	Details of change	Prepared	Reviewed	Approved	Noted	Established. d	ate:	May 15, 202	25

CONFIDENTIAL: ©2017 NBC; all rights reserved. Any misuse or misappropriation, including unauthorized copying, reproduction in any form, disclosure or publishing of this document or any information herein is strictly prohibited.

NBC (Philippines)

MASTER COPY