Process Name/ Title: PACKING INSTRUCTION		Document No:	WI-ENG-PDE-1186
WORK INSTRUCTION		Effective Date:	January 22, 2025
Product Code/Name: 75V076-7011	Customer Code: TRJ	Rev. No.: 0	Page No.: Page 1 of 1

No.	Work Procedure/ Illustration	Records/Remarks/ Quality Pointers
①	Prepare empty oricon box in the "after inspection area"	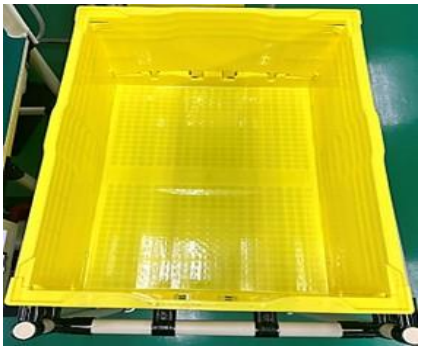
②	Get the vinyl (plastic) bag then put the 100 pcs harness. Insert products in same direction. Put the ID tag inside then fold the plastic bag.	
③	Put products on standing position and partition board vertically & alternately with the products. (100pcs* 4 Bundles with I.D tag inside)	PBVP connectors must be on top position.
④	Put NBP Identification tag at the top.Then warehouse Identification tag at lower right side of the box	Note : If need to attach 4M tag Put 4M tag at the left side of the box

Qty/box	400	100pcs*4bdls
Mat'l name	Dim.	Qty.
Partition board	343*510	3
Vinyl bag	545*450	4

Eff. Date	Rev. No.	Details of change	Prepared	Checked	Approved
1/22/2025	0	Initial issue	M. Ariola	C.Villanueva	A. Arañes

Prepared	Checked	Approved
M. Ariola	C.Villanueva	A. Arañes

Establish Date: January 22, 2025

CONFIDENTIAL: ©2017 NBC; all rights reserved. Any misuse or misappropriation, including unauthorized copying, reproduction in any form, disclosure or publishing of this document or any information herein is strictly prohibited.

NBC (Philippines)
MASTER COPY

DCC Stamp