

## **PACKING INSTRUCTION**

Work Procedure/ Illustration

Document No:

WI-QAD-QAC-261

WORK INSTRUCTION Product Code/Name:

Customer Code/ Customer:

Effective Date:

June 27, 2024

Records/Remarks/

7R0111

TRMX

Rev. No.:

Page No.:

Page 1 of 1


No. 1 Put Vinyl Sheet (1250 x 1250) inside TRMX box. 2



**Quality Pointers** 50pcs\*4 Qty/box 200 bdls Mat'l Dim. Qty. name **TRMX** 544\*370\* 1 228mm box Vinyl 1250\* 1 1250 sheet **Partition** 343\* 1 board 510 Vinyl 420\*280 4 bag

Put the products inside the box. (50pcs\* 2 bundles)



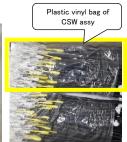

Note:

Step 4 is applicable only in QC FG inspection.

For CSW process, use Oricon box instead of TRMX box.

**1ST LAYER** 

3

Layout partition board Put the products (50pcs\* 2 bundles) on the 2nd layer in opposite direction





## 2ND LAYER

4

Fold the vinyl sheet. Put NBP Identification tag at the top and tape the flaps (two side and top portion). Then Warehouse Identification tag at right side of the box.





Note : If need to attach 4M tag
Put 4M tag at the left side of the box

							Prepared	Checked	Approved	Noted
								1 /		
06/27/24	1	Change vinyl sheet to 1250 x 1250. Transferred from WI-ENG-PDE-330	S. Malabuyoc	R. Pascua	O. Merin	A. Arañes	C	ML	146	
08/21/21	0	Initial Issue	J. Loterte	C. Villanueva	A. Shimamura	A. Arañes	S Malabuyoc	R. Pascua	O Merin	
Eff. Date	Rev. No.	Details of change	Prepared	Checked	Approved	Noted	Establish Date:	Augus	21, 2021	