



3/ MONTAJE SALPICADERO PLÁSTICO Y PANELES

ITCN 4	OTV	DART MUMARER	DESCRIPTION	
ITEM	UIY	PART NUMBER	DESCRIPTION	ID REF
1	1	3470 UFR 100 P62 - NEGRA	RUEDA TENTE SIN FRENO 3470 UFR 100 P62 - NEGRA	
11	121	DIN 125 - A 6,4	Washer	
13	8	DIN 127 - A 3	Spring Washer	
19	8	DIN 7991 - M3 x 10	Countersunk Screw	
21	8	DIN 9021 - 3,2	Washer	
28	23	DIN 912 - M6 x 16	Cylinder Head Cap Screw	
34	8	DIN 934 - M3	Hex Nut	
35	12	DIN 985 - M5	Hex Nut	
38	27	Grapillas de sujección	Grapillas de sujección M6 WURTH	2349
57	1	SIL-027-SLPANEL-02	Botonera izquierda SILVER V027	
59	1	SIL-027-SRPANEL-01	Botonera derecha SILVER V027	
70	1	SIL-028-PLA-PCPC-01	Carcasa cubre pedales plastico Silver V028	
72	1	SIL-028-PLA-SFS-01	Salpicadero partes pegadas plástico SILVER V028	2917

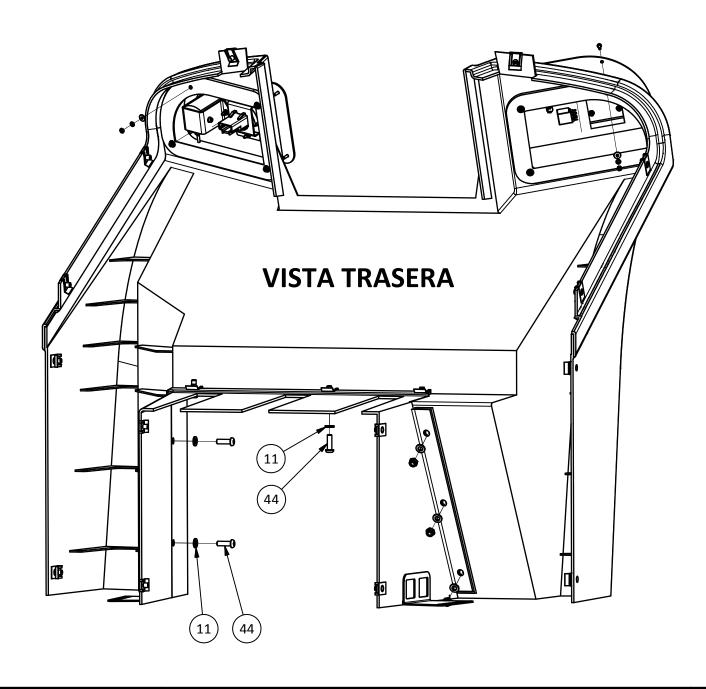

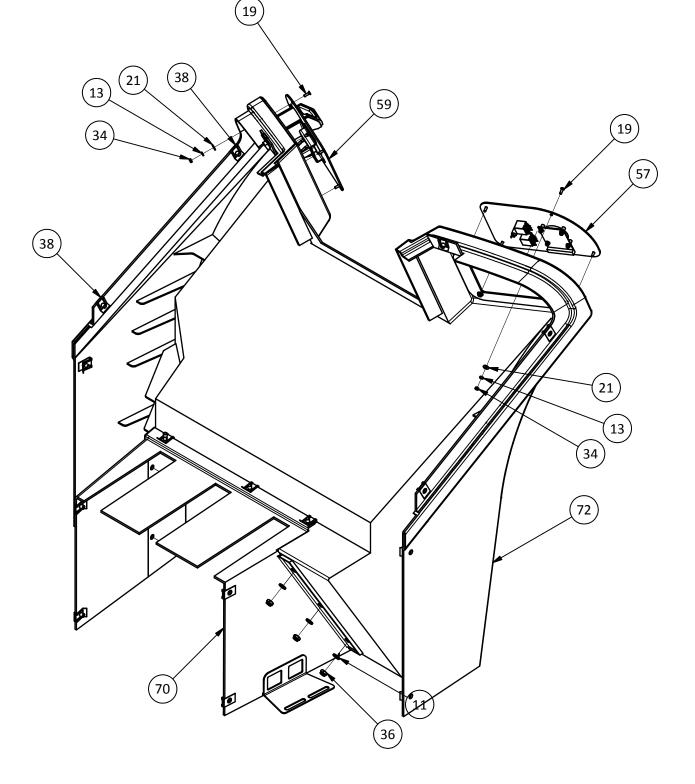

Toda la tornillería visible debe ir en pavonado

SCALE:	Plano de montaje parte	DRAWN: Carlos Ruiz Madrigal		27/10/2016
		CHECKED: Antonio garcia		27/10/2016
	delantera SIEVEN VOZO	DWG NO: SIL-028-DELT-01-ENS02		
	mumak	REV	SIZE	CULET
SI Simul	02	A3	SHEET 6/10	

