
## **ENSAMBLAJE COMPTRAY SIMESBIKE**

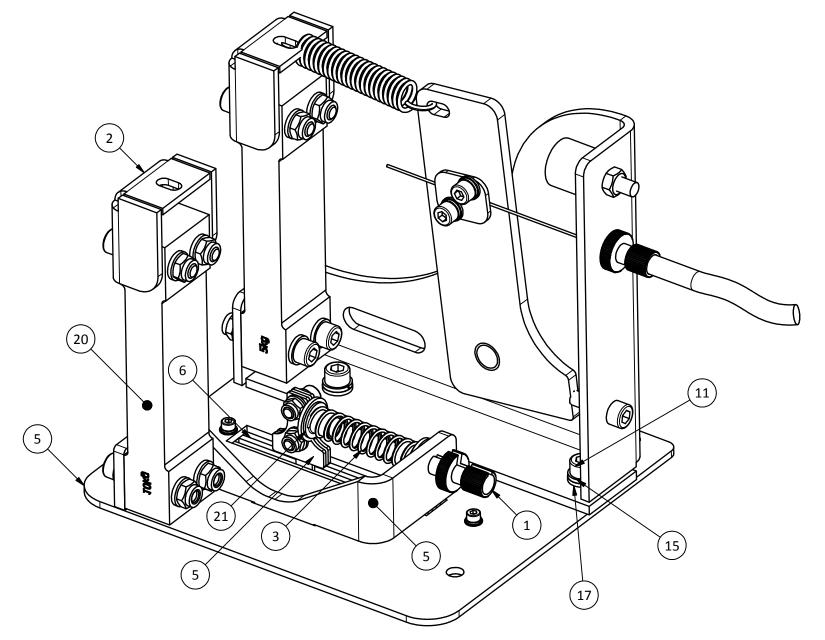

-				ID Ref		
ITEM	QTY	PART NUMBER	DESCRIPTION			
1	1	Tensor cable moto M8	Tensor cable M8			
2	1	SMB-01-TIRCE-01	Tirador célula de carga. Chapa 3 mm			
3	1	SMB-01-MUECE-01	Muelle compresión acelerador			
4	2	SMB-01-CIEC-02	Cierre cable embrague Simesbike. Chapa 1,5 mm.			
5	1	SMB-01-BAPES-03	Conjunto soldado bandeja de perifericos			
6	1	Potenciometro lineal 100 mm	Ref Fabricante: RSA0N11S9002			
7	1	FD-SMB-01-01	Freno delantero Simesbike			
8	4	DIN 985 - M6	Hex Nut			
9	2	DIN 985 - M5	Hex Nut			
10	4	DIN 912 - M6 x 35	Cylinder Head Cap Screw			
11	2	DIN 912 - M6 x 20	Cylinder Head Cap Screw			
12	2	DIN 912 - M5 x 12	Cylinder Head Cap Screw			
13	2	DIN 912 - M3 x 6	Cylinder Head Cap Screw			
14	2	DIN 9021 - 6,4	Washer			
15	2	DIN 127 - A 6	Spring Washer			
16	2	DIN 127 - A 3	Spring Washer			
17	10	DIN 125 - A 6,4	Washer			
18	4	DIN 125 - A 5,3	Washer			
19	2	DIN 125 - A 3,2	Washer			
20	1	Célula de carga 10 kg	Célula de carga 10 kg	3126		
21	2	Cojinete IGUS GFM_0810_10	Cojinete IGUS GFM_0810_10			

**NOTA:** El cable y la funda se conectarán durante la incorporación del periférico al chásis de la moto.

SCALE:		ENSAMBLAJE	DRAWN: Adrian Parro		30/12/2016
	1		CHECKED: A.Garcia		30/12/2016
	<u> </u>		DWG NO: SMK_GLDSMB_COMPTRAY_01_ENS01		
		mumak ation & training solutions	REV	SIZE A3	SHEET 1/3
		7		1	

6

3

